

ESPRI Manual

Engineering Assistance Package
(93 reference and calculation modules)

Kiev (Ukraine) 2020

Contents

General notes	6
Mathematics for engineer.....	7
Mathematics for engineer	7
Areas and volumes	8
Diagram multiplication.....	9
Linear algebra.....	11
Polynomial roots	15
Function interpolation.....	17
Advanced calculator ESPRI	18
Sections	22
Sections.....	22
Parametric sections	22
Parametric thin-walled sections	23
Separate sections as single unit	27
Moment of inertia in torsion.....	33
Static/Dynamic analysis, stability	37
Static and dynamic analyses, stability.....	37
Continuous beam.....	38
Truss.....	40
Parametric plane frame.....	43
Arbitrary plane frame	47
Arbitrary plane frame	47
Step 1. Generate model geometry	49
Step 2. Define boundary conditions (restraints) and hinges	50
Step 3. Define cross-sections for bars.....	51
Step 4. Define loads on design model.....	52
Options to edit and visualize the model.....	56
Output data	57
Sign conventions for displacements and forces	58
Rectangular slab on elastic foundation	58
Rectangular slab.....	62
Wall-beam.....	66
Shell on rectangular plan	70
Shell on circular plan.....	74
Mode shapes and frequencies of natural vibrations in cantilever.....	78
Stability factors and buckling modes in cantilever.....	80
Mode shapes and frequencies of natural vibrations in continuous beam.....	82
Cable and string.....	85
Cable and string	85
Cable and string. Input data	88
Cable and string. Output data	89
Cable and string. Notation.....	90
Influence lines in continuous beam	91
Steel Structures	94

Steel structures	94
Steel table	94
Analysis of steel elements	97
Principal and equivalent stresses in steel structures.....	104
Effective lengths of steel structure elements.....	106
Parametric joints of steel structures.....	109
Analysis of welds	114
Bolted connections.....	124
Cold-formed shapes.....	133
Critical temperature of section	138
Reinforced concrete (RC) structures.....	141
Reinforced concrete (RC) structures.....	141
Properties of concrete.....	142
Table of reinforcement.....	143
Anchorage of reinforcement by DSTU 3760-07	144
Sections of RC elements	146
Reinforced concrete shell	148
Reinforced concrete wall-beam	149
Reinforced concrete slab	152
Principal and equivalent stresses in reinforced concrete structures	154
Strengthening with composite materials	156
Strength of reinforced concrete butt joint in shear	159
Concrete sections with fibre-reinforced polymer (FRP) bars.....	161
Concrete pipe sections	164
Composite steel and concrete columns	168
Column strengthened with composed materials	171
Composite steel and concrete slabs	174
Masonry and masonry reinforcing.....	179
Masonry and masonry reinforcing.....	179
Design compression strength in masonry.....	179
Brick pier.....	180
Masonry in local compression.....	184
Brick pier in tension.....	187
Brick pier by DBN V.2.6-162:2010	189
Timber structures	207
Timber structures.....	207
Sections of solid timber	207
Sections of glued timber	209
Sections of composite timber	211
Foundations and beddings	214
Foundations and beddings.....	214
Moduli of subgrade reaction C1, C2.....	215
Single pile	226
Pile under combined action of loads	230
Settlement of equivalent footing.....	233
Principal and equivalent stresses in soil	235
Slope stability.....	238

Stability of multi-layer slope	241
Bearing capacity of piles by field test results	245
Combined piled-raft foundation	246
Disregard for soil resistance in earthquake analysis	248
Properties of rubber metal damper	252
Classification of seismic blocks	252
Structures of SB	253
Main parameters of SB	255
Stiffness analysis of SB (moduli of subgrade reaction)	255
SB tests	256
Dynamic modulus of elasticity and factor of energy dissipation	257
Ultimate state of SB	257
Soil subsidence	258
Soil subsidence	258
Special aspects of calculation procedure	258
Input data	259
Results (Output data)	262
Settlement of a single pile by DBN	263
Loads and actions	269
Loads and actions	269
Load factors	269
Dead weight of multi-layer coating	271
Snow loads	274
Wind loads	276
Ice loads	278
Climatic thermal loads	280
Hazardous energy combinations of forces (EnergyCF)	283
Resonance check for wind turbulence	287
Deflections	290
Deflections	290
Analysis of inelastic deflections	290
Ellipsoid	294
Ellipsoid	294
Ellipsoid. Bearing capacity of RC elements	294
Sheet piling	299
Sheet piling (chapter)	299
Sheet piling (module)	300
Diaphragm	308
Diaphragm	308
Strength of RC diaphragm in earthquake loads	308
Punching shear	318
Punching shear	318
Punching shear for arbitrary contour	319
Punching shear for rectangular contour	322
Punching shear analysis (Eurocode)	327
Punching shear analysis (Belarus)	332

Punching shear for circular contour (Eurocode).....	336
Toster	342
TOSTER (Chapter)	342
TOSTER - General notes.....	342
Input data.....	344
Options to edit the model.....	359
Options to visualize the model	359
Circular arc	360
Output data	362
Sign convention	373
Prestressing	374
Prestressing (Chapter).....	374
Prestressing.....	374
Analysis of RC support sections (posts)	379
Soil.....	382
Soil (Chapter).....	382
Soil.....	382
Input data.....	383
Visualization of soil model.....	388
Analysis parameters	389
Output data	390
Calculation of subgrade moduli C1, C2 (summary)	396
Design resistance of soil	398
Bibliography.....	400
Index.....	402

General notes

ESPRI 2016 (Engineering Assistance Package) is a set of reference and calculation programs for the day-to-day needs of civil and structural engineers.

ESPRI software contains programs (modules) that enable you to carry out computer-aided analyses for a wide range of tasks in design, engineering and research fields of construction.

Since all modules of the package are very user-friendly and calculation procedure requires minimum amount of time, ESPRI may be successfully applied for different purposes, such as: generating design model of the structure, evaluation of analysis results, expert appraisal of projects and technical supervision during erection of the structure.

ESPRI may be essential in many situations that require evaluation of real structures behaviour during erection, reconstruction, design procedure and supervision for their maintenance.

ESPRI helps the user in the routine work and provides the user with support to come up with an optimal solution. Modules of ESPRI program are significant supplement to the more powerful software for civil and structural engineering – LIRA-SAPR and MONOMAKH-SAPR.

The software package contains 85 reference and calculation programs (modules) that are organized in the following chapters:

[Mathematics for engineer](#)

[Sections](#)

[Static/Dynamic analysis, stability](#)

[Steel structures](#)

[Reinforced concrete \(RC\) structures](#)

[Masonry and masonry reinforcing](#)

[Timber structures](#)

[Foundations and beddings](#)

[Loads and actions](#)

[Deflections](#)

[Ellipsoid](#)

[Sheet piling](#)

[Diaphragm](#)

[Punching shear](#)

[TOSTER](#)

[Prestressing](#)

[Soil](#)

Mathematics for engineer

Mathematics for engineer

This chapter contains the following modules:

1. [Areas and volumes](#)
2. [Diagram multiplication](#)
3. [Linear algebra](#):
 - inverting a matrix,
 - determining eigenvalues and eigenvectors;
 - solving a set of linear equations;
 - multiplying matrix by matrix (vector),
 - computing the determinant of a matrix.
4. [Polynomial roots](#)
5. [Function interpolation](#)
6. [Advanced calculator ESPRI](#)
 - Calculator;
 - Conversion of measurement units;
 - Computing definite integral.



Figure 1.1

Areas and volumes

The module contains considerable set of frequently used plane figures and solids, for which with appropriate formulas it is possible to determine areas, volumes and surface areas respectively.

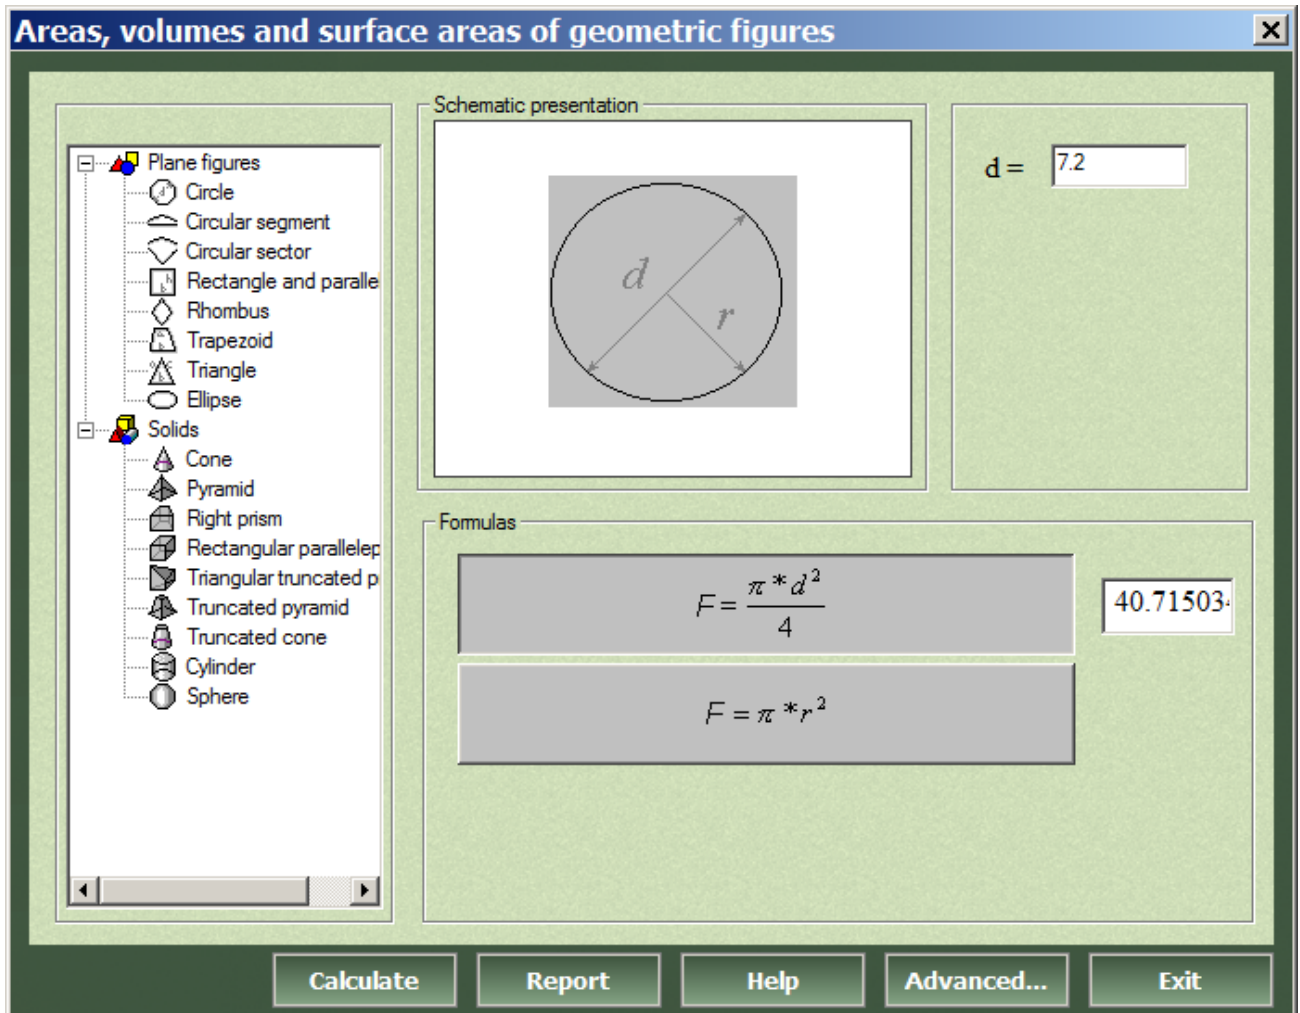


Figure 1.2

To define input data, follow these steps:

- In the **Areas, volumes and surface areas of geometric figures** dialog box, click appropriate plane figure or solid.
- Define input data in the appropriate boxes.
- Select formula for calculation.
- Click **Calculate**.

Input data for plane figures:

d – diameter of circle;

r – radius of circle;

α – opening angle of circular segment or sector;

a – height of rhombus, side of trapezoid or triangle, semi-axis of ellipse;

b – side of rectangle, parallelogram, trapezoid or triangle, height of rhombus, semi-axis of ellipse;

h – height of rectangle, parallelogram, trapezoid or triangle.

Output data for plane figures:

F – area.

Input data for solids:

r – base radius of cone, top base radius of truncated cone, radius of cylinder, radius of sphere;

g – bottom base radius of truncated cone;

d – diameter of sphere;

a, b, c – sides of rectangular parallelepiped or truncated triangular prism;

h – height of cone, pyramid, right prism, truncated pyramid, truncated cone, cylinder;

F – base area of pyramid, right prism, truncated triangular prism;

F1, F2 – top and bottom base area of truncated pyramid respectively.

Output data for solids:

V – volume;

S – surface area of solid.

Diagram multiplication

The module is intended to multiply unit and load diagrams of internal forces of various shape for solving statically indeterminate systems by force method. Computation is made by three methods: Vereshchagin formula, Mohr integral and universal numerical method.


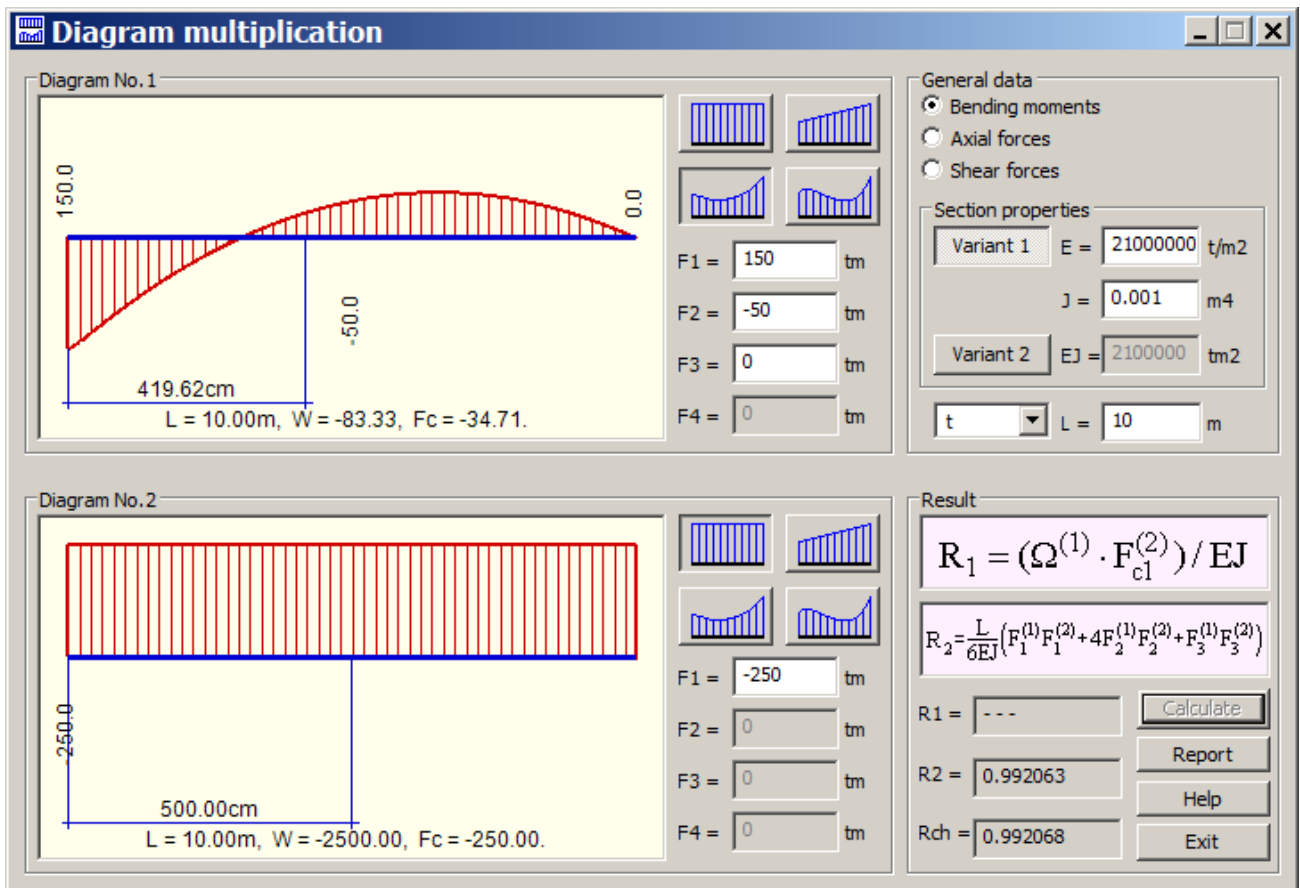


Figure 1.3

To define input data, follow these steps:

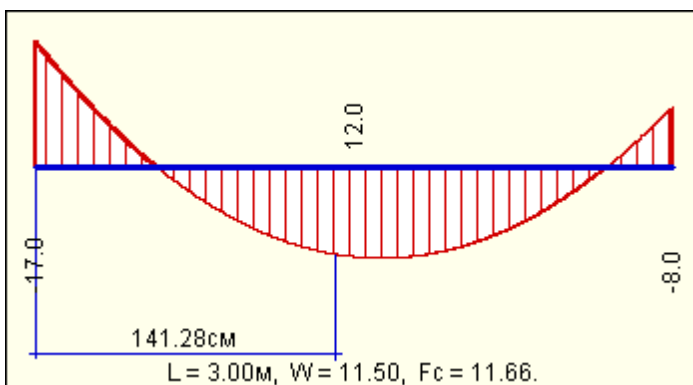- Select appropriate diagram No.1 and diagram No.2 with the pointer.
- Define ordinates for characteristic points of diagrams F_1, F_2, F_3, F_4 .
- Define type of internal forces for calculation – **bending moments, axial forces, shear forces**.
- Define section properties for **Variant 1** or **Variant 2**: E, G, I, A, EI, EA, GA – modulus of elasticity, shear modulus, geometric properties of section, stiffness properties of section;
- In the appropriate list box, select measurement units – **t** or **kN**;
- Define length of the line **L** (m);
- Click **Calculate**.



Notation for the scheme above:

L – length of line (m),

W – area of diagram (with account of sign),

Fc – value of ordinate at gravity centre of the diagram,

141.28 – location of gravity centre (cm).

Calculation of Mohr integral

General formula for multiplication of diagrams for 3D bar systems:

$$\Delta pi = \sum \int_s \left[\frac{M_x^P M_x^i}{GJ_x} + \frac{M_y^P M_y^i}{GJ_y} + \frac{M_z^P M_z^i}{GJ_z} + \frac{N^P N^i}{EA} + K_y \frac{Q_y^P Q_y^i}{GA} + K_z \frac{Q_z^P Q_z^i}{GA} \right] ds.$$

R1 – Calculation by Vereshchagin formula.

R2 – Calculation by Simpson-Kornoukhov formula.

Rch – For any kind of diagrams, the result is calculated by numerical methods.

Linear algebra

The module is intended to solve main problems of linear algebra:

- multiplying matrix by matrix (vector),
- computing the determinant of a matrix,
- solving a set of linear equations;
- inverting a matrix,
- determining eigenvalues and eigenvectors.

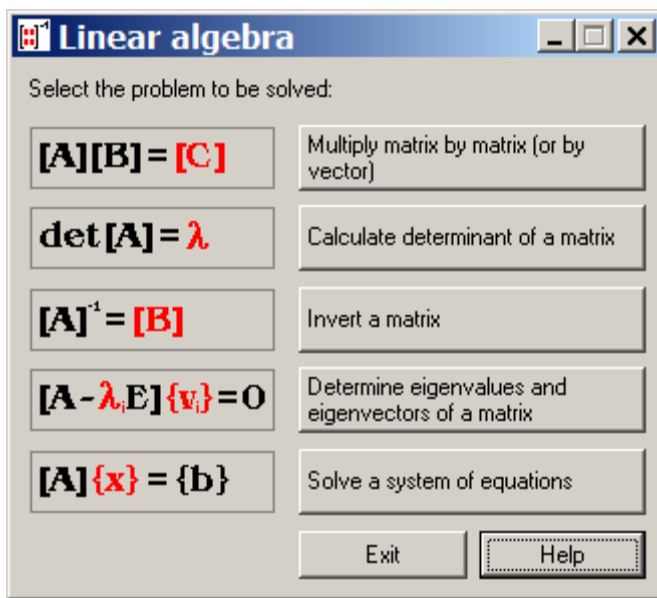


Figure 1.4

To define input data, follow these steps:

- Define necessary procedure with the pointer or use the TAB key to move through a dialog box.
- In another dialog box, define the matrix type with the option button:
 - Arbitrary matrix;
 - Symmetric matrix;
 - Tridiagonal matrix.
- Click **Generate a matrix (vector)**.
- Define dimension for input matrix by moving the pointer diagonally from the left upper corner (see Fig. 1.5).

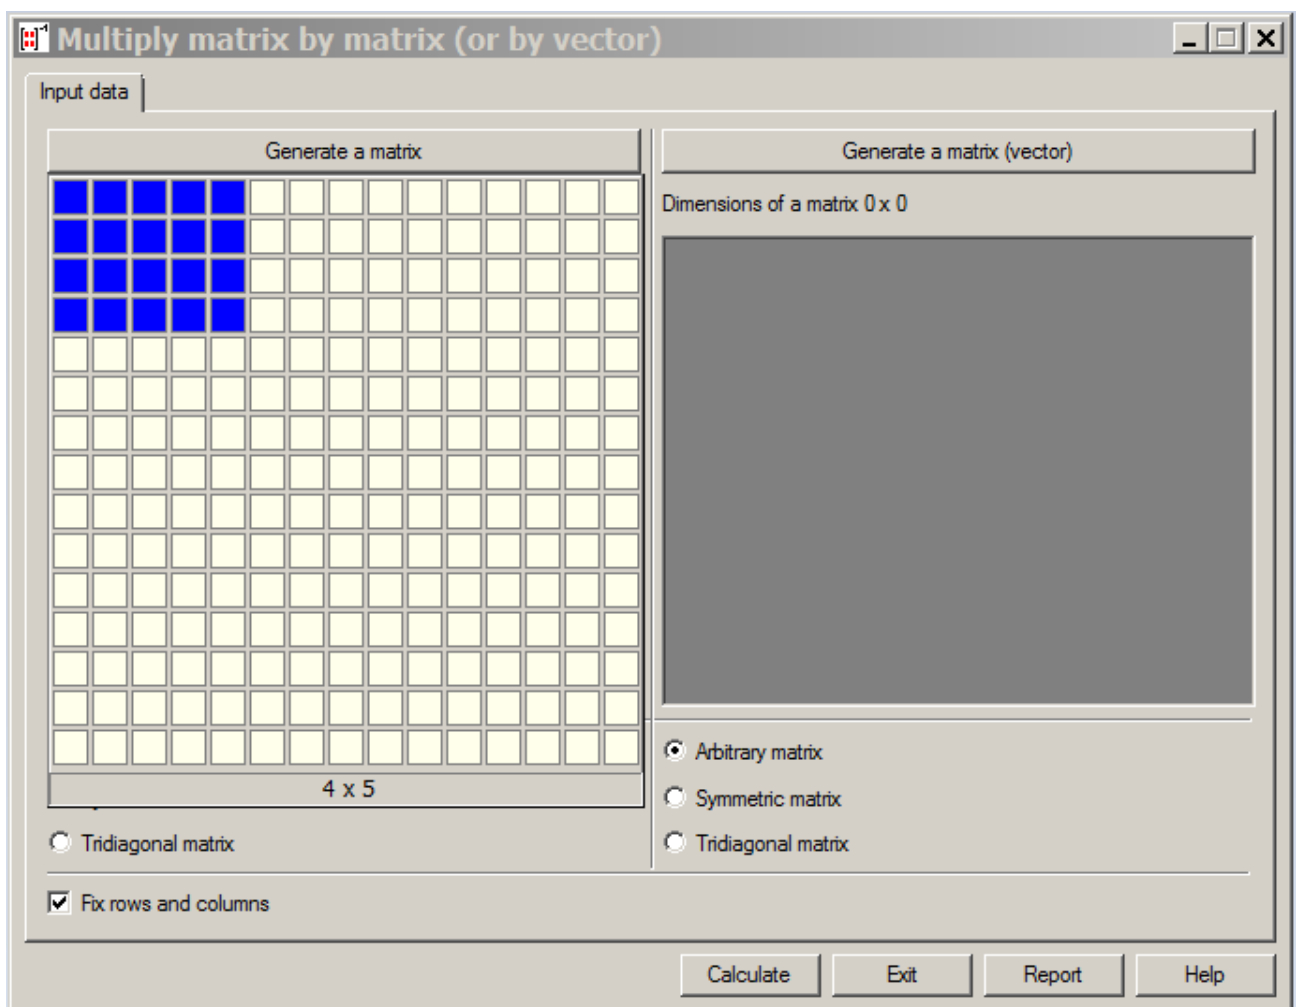


Figure 1.5 a)

Multiply matrix by matrix (or by vector)

Input data

Generate a matrix

Dimensions of a matrix 4 x 5

	1	2	3	4	5
1	1	0	1	1	1
2	1	1	0	0	1
3	0	1	1	0	0
4	1	0	0	1	1

Generate a matrix (vector)

Dimensions of a matrix 5 x 3

	1	2	3
1	1	1	1
2	1	0	1
3	1	1	0
4	0	1	1
5	1	0	1

☒ Arbitrary matrix

☐ Symmetric matrix

☐ Tridiagonal matrix

☒ Fix rows and columns

☒ Arbitrary matrix

☐ Symmetric matrix

☐ Tridiagonal matrix

Calculate Exit Report Help

Figure 1.5 b)

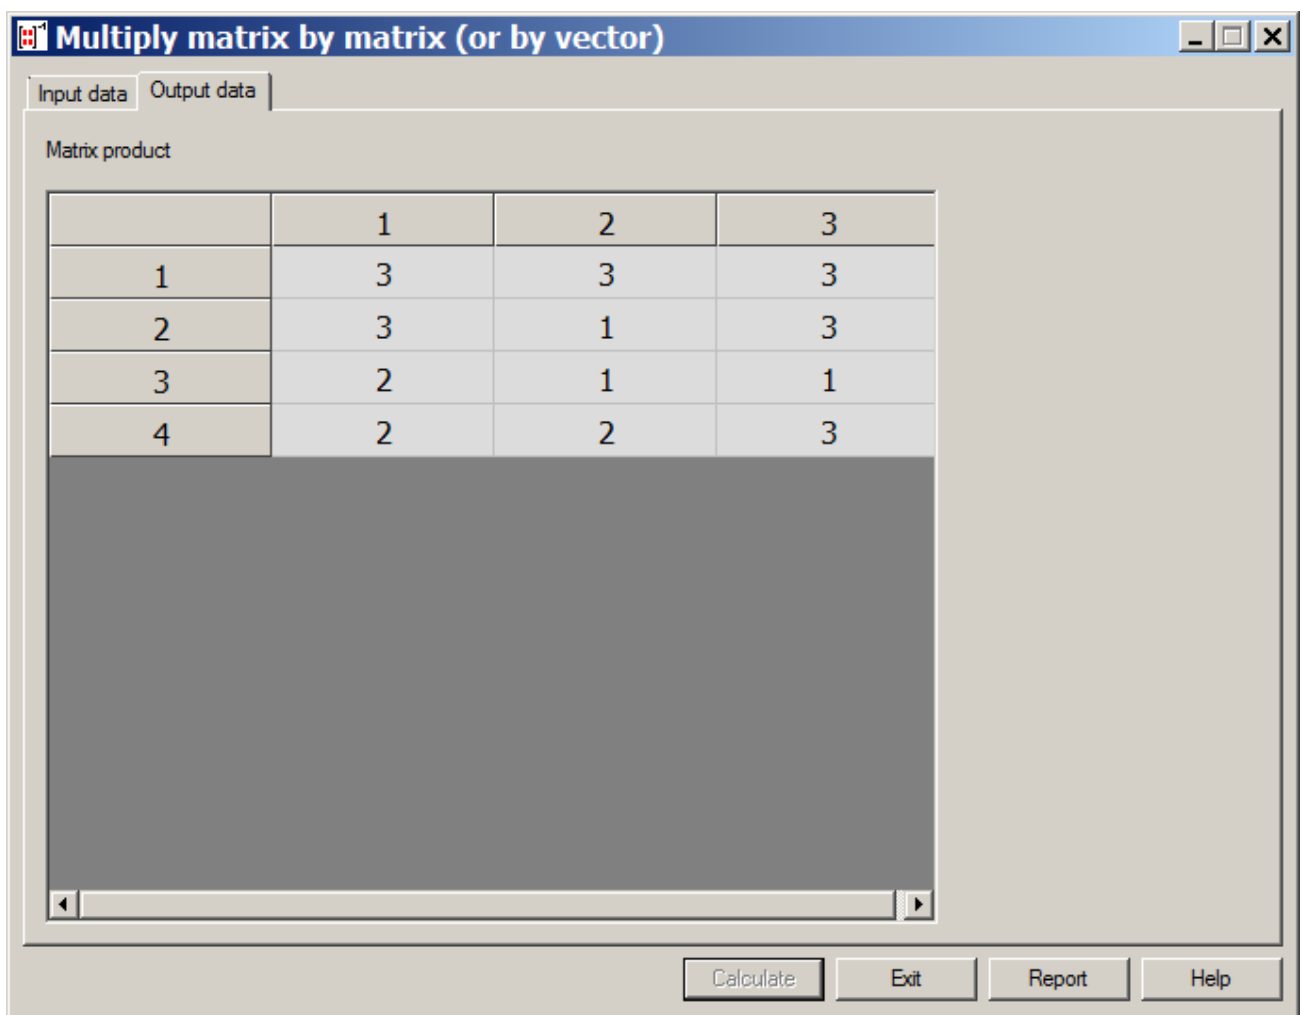


Figure 1.5 c)

- To define numerical values for matrix elements, just click appropriate cells in the table.
- Define the second matrix in the same way (see Fig. 1.5).
- Click **Calculate**.

On the **Output data** tab you will see results according to the procedure you selected.

Limitation to the order of problems is equal to 15.

Polynomial roots

The module is intended to determine complex root of polynomial that consists of real and imaginary components.

$$a_0 + a_1 x + a_2 x^2 + \dots + a_{n-1} x^{n-1} + a_n x^n = 0.$$

Polynomial order **n** is limited up to 36.

Input data.

Polynomial roots

Coefficients of polynomial

$$a_0 + a_1x + a_2x^2 + \dots + a_{n-1}x^{n-1} + a_nx^n = 0$$

Specify degree of polynomial (n) for which it is necessary to find roots. 7

17	+	3	x	+	5	x^2	+	7	x^3	+	
9	x^4	+	11	x^5	+	13	x^6	+	15	x^7	+
0	x^8	+	0	x^9	+	0	x^{10}	+	0	x^{11}	+
0	x^{12}	+	0	x^{13}	+	0	x^{14}	+	0	x^{15}	+
0	x^{16}	+	0	x^{17}	+	0	x^{18}	+	0	x^{19}	+
0	x^{20}	+	0	x^{21}	+	0	x^{22}	+	0	x^{23}	+
0	x^{24}	+	0	x^{25}	+	0	x^{26}	+	0	x^{27}	+
0	x^{28}	+	0	x^{29}	+	0	x^{30}	+	0	x^{31}	+
0	x^{32}	+	0	x^{33}	+	0	x^{34}	+	0	x^{35}	+
0	x^{36}	$= 0$									

☐ All roots
 *Criterion for selection 1e-005

☒ With real part only*
 Number of decimal places 7

☐ With imaginary part only*
 Find >>

Report
Exit
Help

Figure 1.6

To define input data, follow these steps:

- Specify degree of polynomial in the appropriate box at the right part of the dialog box.
- Define values for coefficients.
- Specify one of the options:
 - all roots;
 - with real part only;
 - with imaginary part only.
- For the last two options, define **Criterion for selection**, that is, appropriate parts of the root that are less than this value will be considered as zero ones.
- Define the **Number of decimal places** for the output data.
- To calculate roots, click **Find**.

Output data.

Values for roots:

Re(Xi) – real part,

Im(Xi) – imaginary part.

CABS[P(X)] – result of root substitution in the polynomial (to evaluate solution accuracy).

Note. When finding roots of polynomial, an overflow may occur sometimes. Then the 1.#IND symbols will appear in appropriate cells. It is not recommended to use such roots.

Function interpolation

This module is intended to interpolate on nonuniform mesh the function defined in tabular form and to calculate values of interpolation function from arbitrary defined arguments.

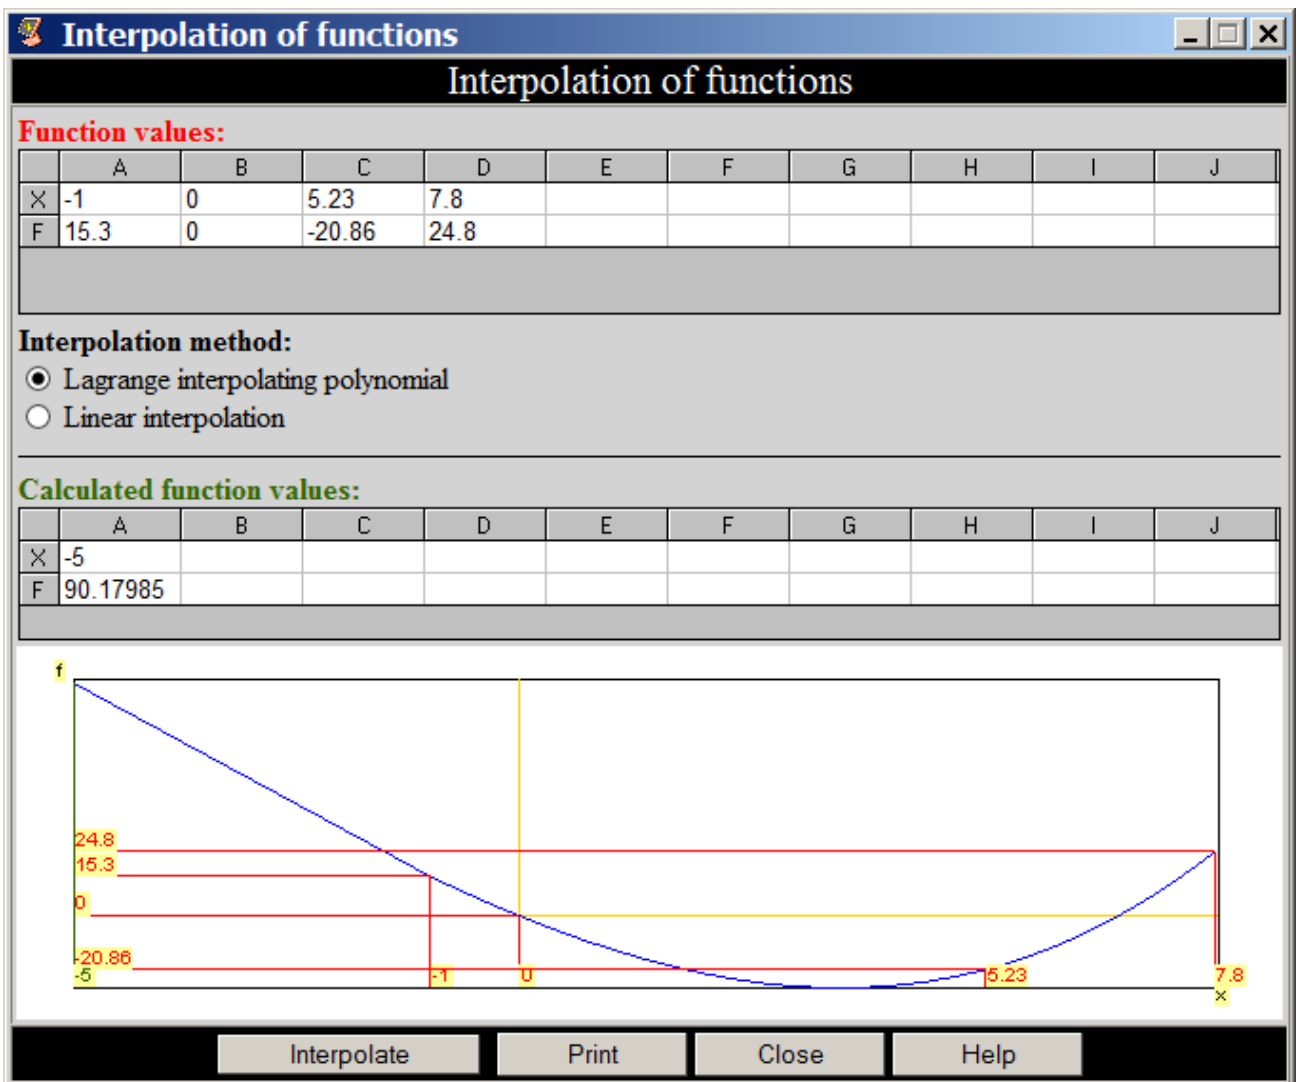


Figure 1.7

To define input data, follow these steps:

- In the **Interpolation of functions** table, define (in arbitrary order) ordinate values and corresponding function values.
- Define **Interpolation method** with appropriate option button:
 - **Linear interpolation** - interpolation only within defined values of **X**;
 - **Largange polynomial** - minor departure of input points from defined range of **X**.

Lagrange polynomial

$$L_n(x) = \sum_{i=0}^n F_i \left(\frac{(x - x_0) \dots (x - x_{i-1})(x - x_{i+1}) \dots (x - x_n)}{(x_i - x_0) \dots (x_i - x_{i-1})(x_i - x_{i+1}) \dots (x_i - x_n)} \right)$$

- In the **Calculated function values** table, input values of **X** for which it is necessary to calculate function values.
- Click **Interpolate**.

In the **Calculated function values** table, under appropriate **X** values you will see function values. The function will be sketched on the **f(x)** graph below.

Advanced calculator ESPRI

The module Advanced Calculator ESPRI presents advanced set of mathematical functions and options, such as:

- to calculate expressions defined by the user as formulas;
- to convert different units of measurement;
- to compute definite integral for arbitrary defined function within the range from *a* to *b*.

The dialog box contains three tabs: **Calculator**, **Convert units of measurement** and **Definite integral**.

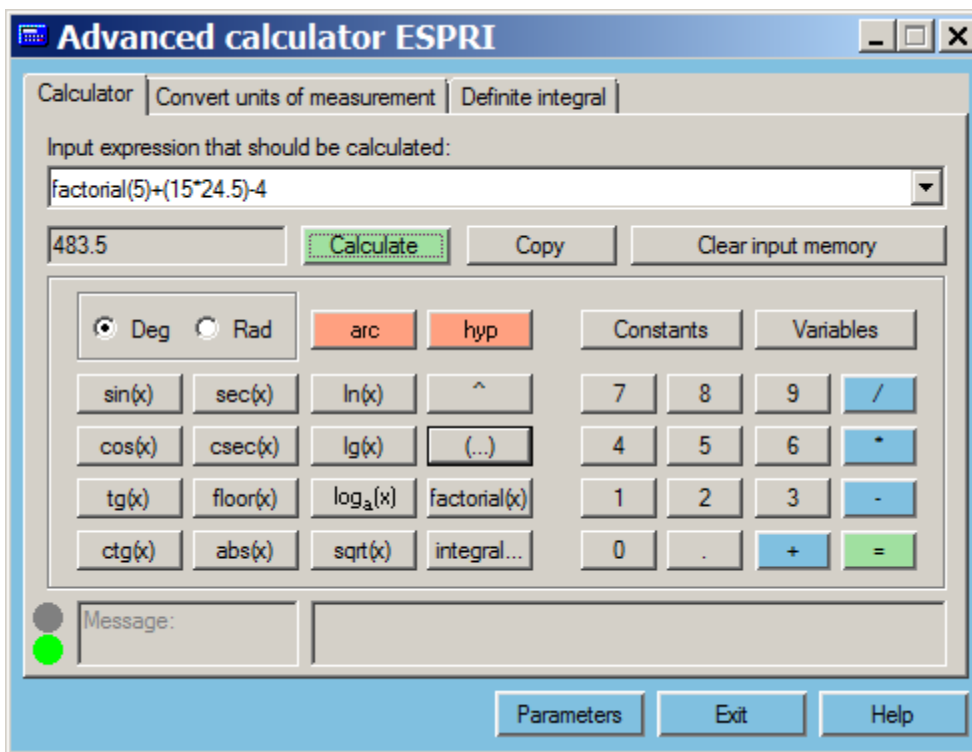


Figure 1.8 a)

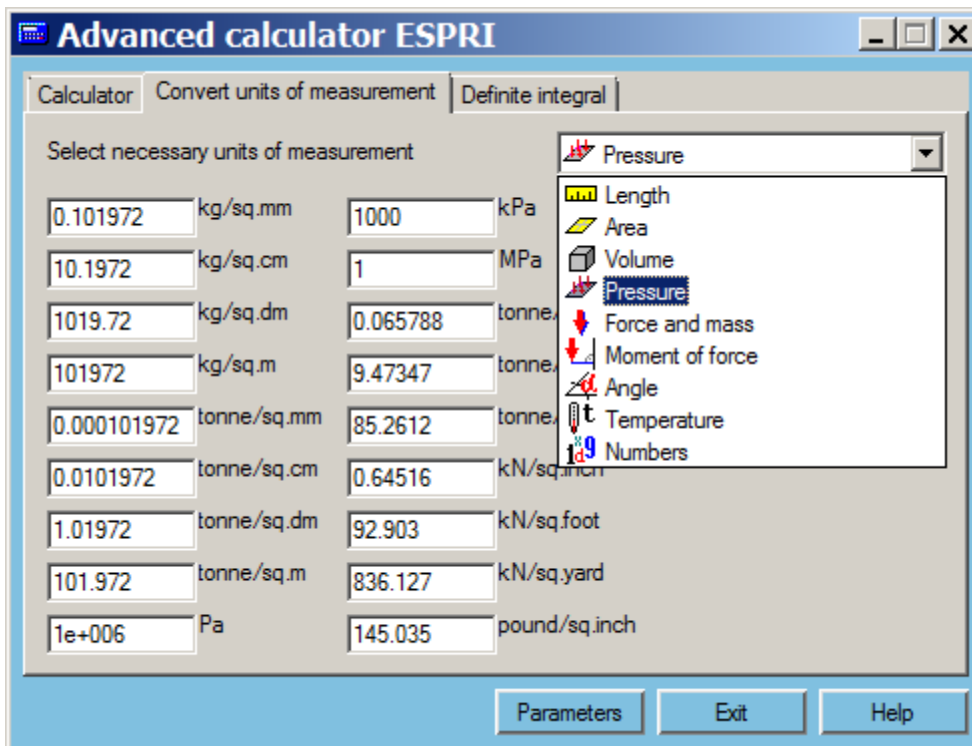


Figure 1.8 b)

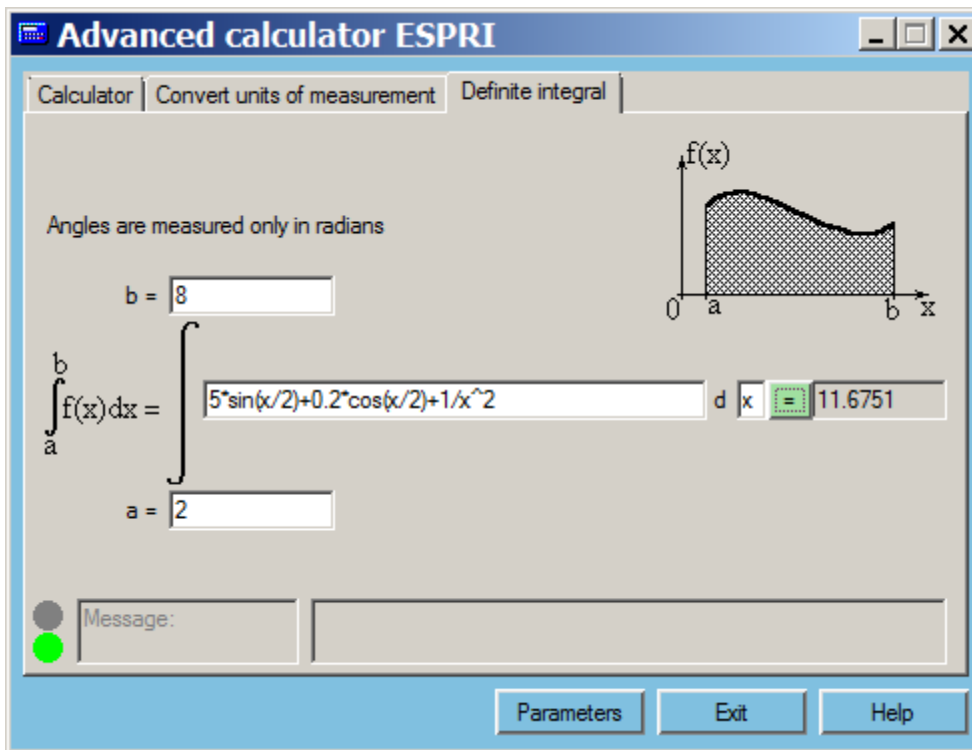


Figure 1.8 c)

To input expressions in the **Calculator** program, use appropriate buttons for algebraic and trigonometric functions or the keyboard. Complete guide on 'How to input formulas and functions' you will find in the Help system for the program. To calculate the value of expression, click **Calculate**.

When you click the **Constants** or **Variables** buttons, the dialog box is expanded to display the **Value** window with two appropriate tabs.

With the **Constants** button, it is possible to select a constant from the set and input its value to the line of expression beginning from the pointer location. To do this, select appropriate constant and click **Apply**.

With the **Variables** button, you could save and apply values for calculation results. To define value for a variable, you could simply type the value in the appropriate cell or (if it is result of calculation) copy it with the **Copy** button and paste into appropriate cell with SHIFT+INSERT or CTRL+V shortcut keys. To use variable in the line of expression, just indicate the name of variable.

On the **Convert units of measurement** tab you can convert different types of measurement units.

The program enables you to convert measurement units for the following categories:


- Length
- Area
- Volume
- Pressure
- Force and mass
- Moment of force
- Angle

- Temperature
- Number.

On the **Definite integral** tab, it is possible to compute definite integral (from function within the range from a to b) for the expression defined by the user. Instructions for the defined expression remain the same as for the formulas in **Calculator**. Any variable from the **Variables** dialog box may be considered as integration variable. The rest of variables (except the selected one) included into expression are considered as constants. To compute definite integral for the function, click [=] button.

In case of any error, you will see an error message in the lower part of **Calculator** tab.

In the **Parameters** dialog box you could select language for the program, define number of expressions that will be saved in **Calculator** (the most recent ones that were defined), define several parameters for calculator itself:

- to **start up with Windows**. When this option is selected, the  icon will be displayed in notification area on the taskbar. To start the **Calculator** module, just double-click this icon. When you right-click the icon, it is possible to display context menu with options to present the dialog box with copyright information or to close the program (only **Calculator** module will be closed; if **ESPRI** software is active at the moment, it will remain active);

- to **allow multiple document interface**. If this check box is selected, you will be able to start one more copy of the **Calculator** module and vice versa.

Sections

Sections

With modules of this chapter you could compute stiffness parameters of solid, thin-walled sections and separate sections considered as single unit.

The chapter contains the following modules:

- [Parametric sections](#);
- [Parametric thin-walled sections](#);
- [Separate sections as single unit](#);
- [Moment of inertia in torsion](#).

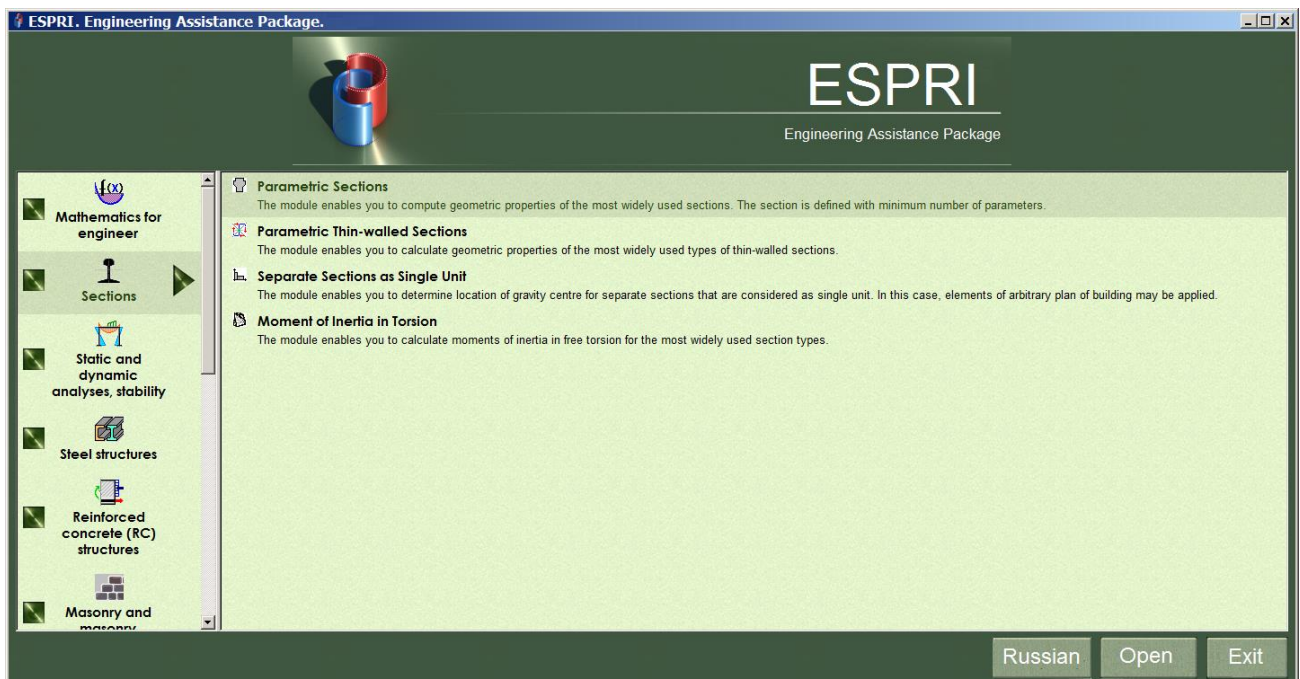


Figure 2.1

Parametric sections

The module enables you to compute geometric properties of the most widely used sections (22 types). The section is defined with minimum number of parameters.

Input data.

To define input data, follow these steps:

- click the section you would like to compute;
- select measurement units for input and output data;
- define necessary parameters of the section (see schematic presentation);

– click **Calculate** (this button becomes available only when parameters that describe selected section are defined correctly).

Figure 2.2

Output data.

Calculated geometric properties of the section:

Y_c, Z_c – coordinates of gravity centre in initial axes;
 F_i – slope angle of principal axes of inertia;
 F – area of section;
 J_y, J_z – principal moments of inertia;
 i_y, i_z – radii of inertia;
 W_y, W_z – section moduli.

Parametric thin-walled sections

The module enables you to calculate geometric and sectorial stiffness properties of thin-walled sections.


Thin-walled section

Input data

Available templates

- ☐ C-shaped section
- ☐ Z-shaped section
- ☒ Omega-shaped section
- ☐ I-section
- ☐ Built-up open II section
- ☐ Cruciform section

	Value, cm	Thickness, mm
b1	15	1
h1	30	1
h2	30	1
c1	5	1
c2	5	1
r1	3	1
r2	3	1
r3	3	1
r4	3	1

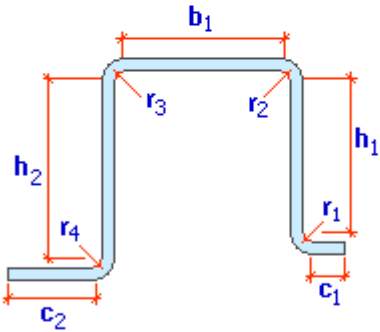

Modulus of elasticity: 206000 MPa

Shear modulus: 79400 MPa

Mesh step: 0.1 cm

Calculate

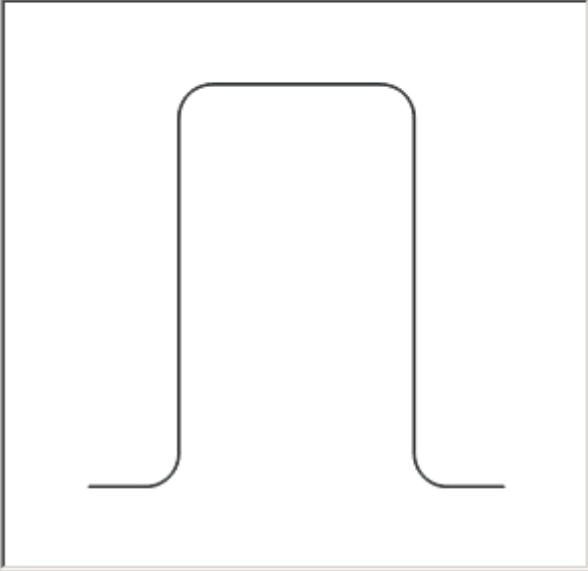


Figure 2.3

In this dialog box, on the **Input data** tab, select with the pointer the type of shape, define its dimensions and thickness according to schematic presentation and define modulus of elasticity, shear modulus and step for interior division of the section (for calculation). Click **Calculate**. In the window below (see Fig. 2.4) you will see the stages of computation and its statistics.

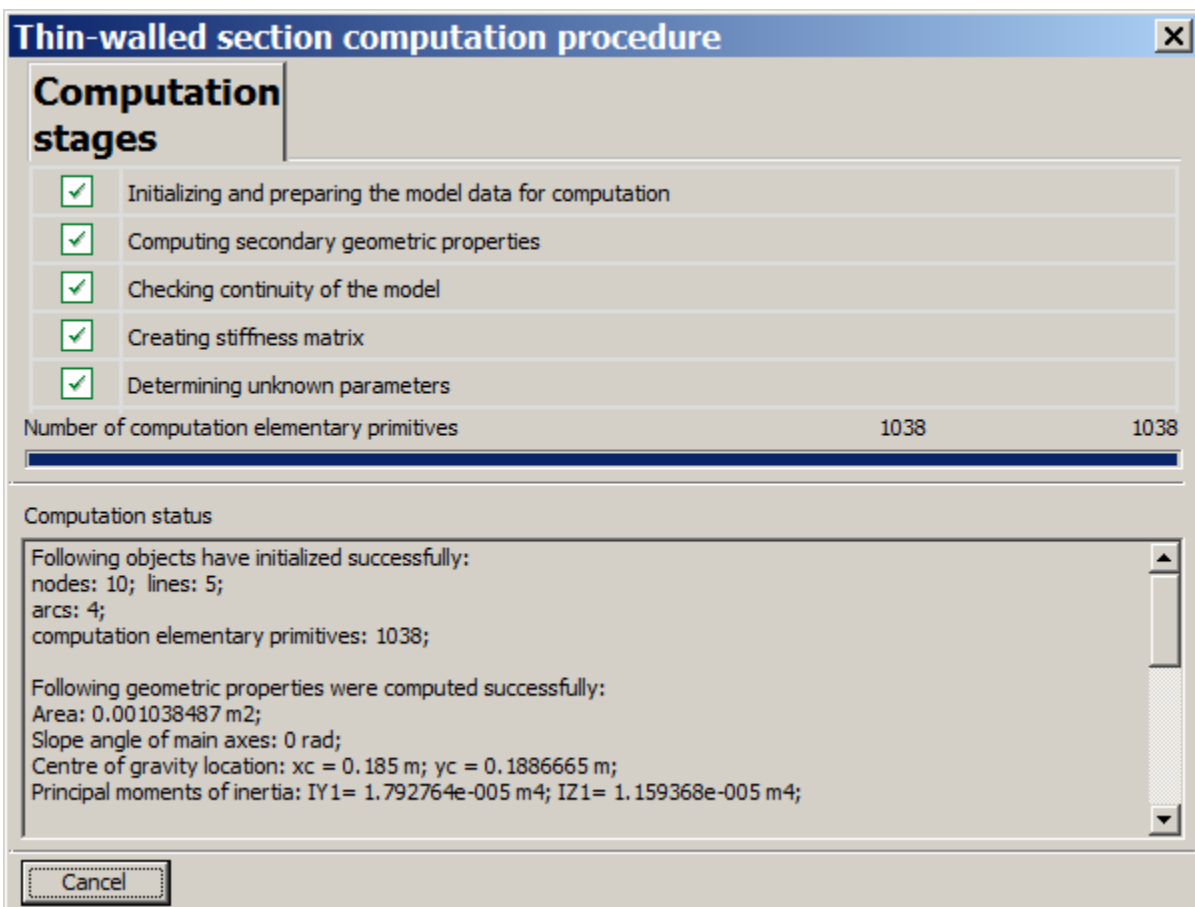


Figure 2.4

Click **Cancel** (see Fig. 2.4). The **Thin-walled section** window will be displayed automatically.

Output data.

After computation, you will obtain geometric and sectorial properties for the section. Diagrams of axes' coordinates, diagram of warping coordinate and stress diagrams (when forces at the section are defined) are also available. To display the diagrams, in the **Thin-walled section** window, in the drop-down list, select appropriate diagram.

To define forces for the thin-walled section, on the **Actions** menu, click **Modify forces**

(button  on the toolbar).

Forces ✕

n	N, kN	Qz, kN	Qy, kN	My, kN*m	Mz, kN*m	Mx, kN*m	B, kN*m*m
1	-10	0	0	15	0	1	2
2	0	0	0	0	0	0	0

1

Figure 2.5

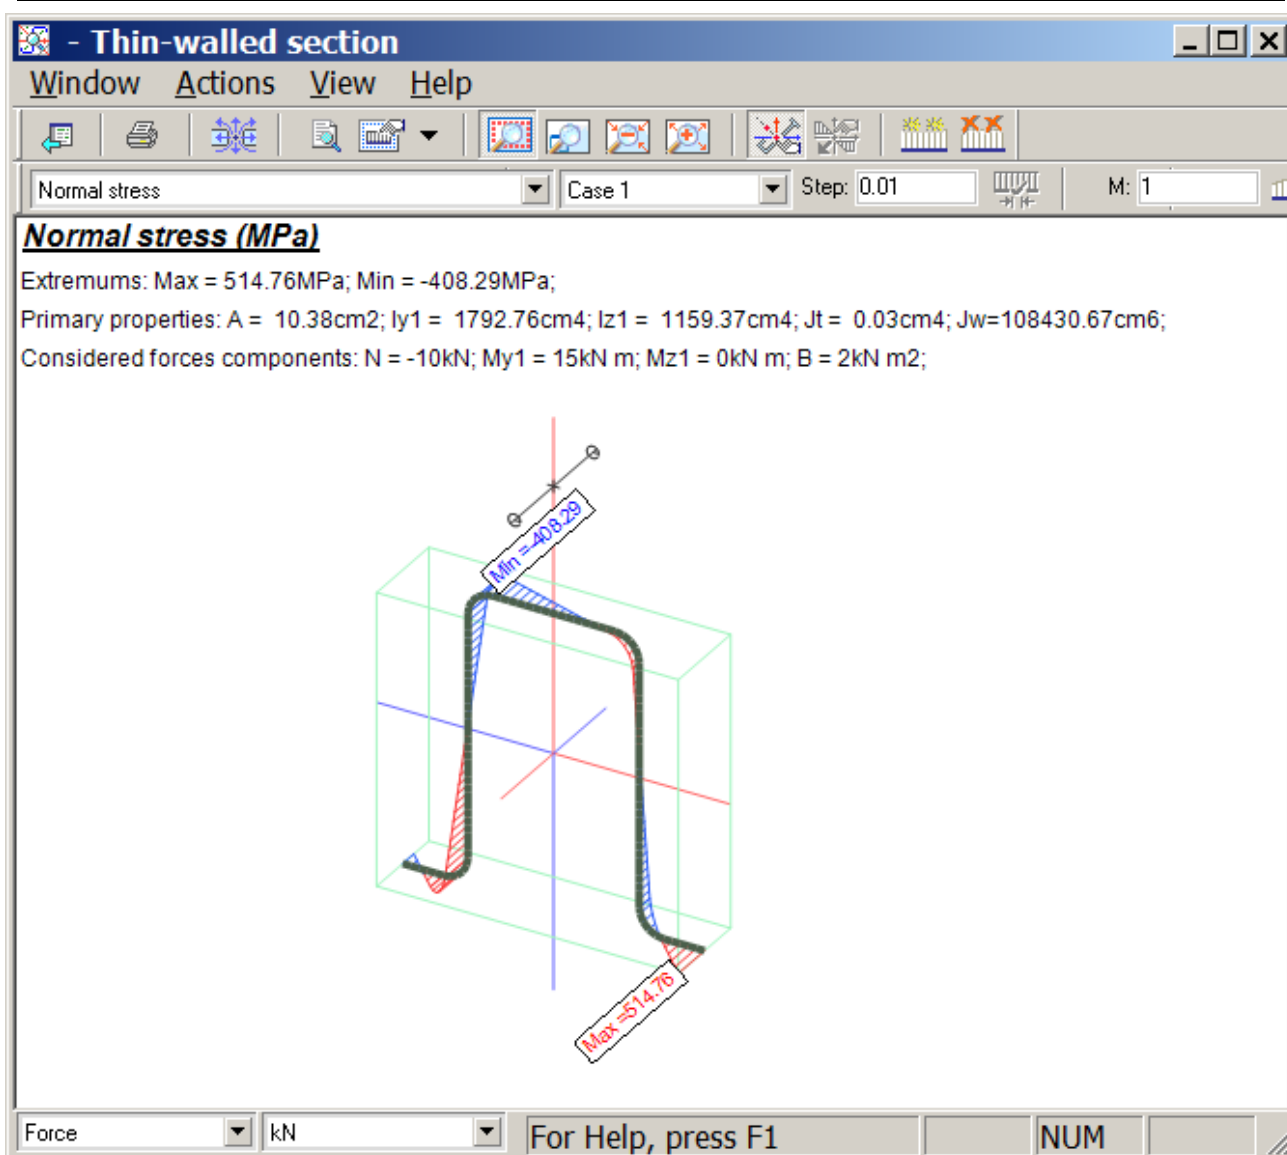



Figure 2.6

To paste the diagrams to report (completely or as a fragment), use the **Add current view**

to report and **Select region and add to report** (button  on the toolbar) commands on the **Actions** menu.

To preview all output data for analysis of geometric properties, on the **Actions** menu, click **Show report** command (button  on the toolbar).

There are also additional tools with enhanced options to visualize objects.

Separate sections as single unit

The module enables you to determine location of rigidity centre for separate sections that are considered as single unit. In this case, elements of arbitrary plan of building may be applied.

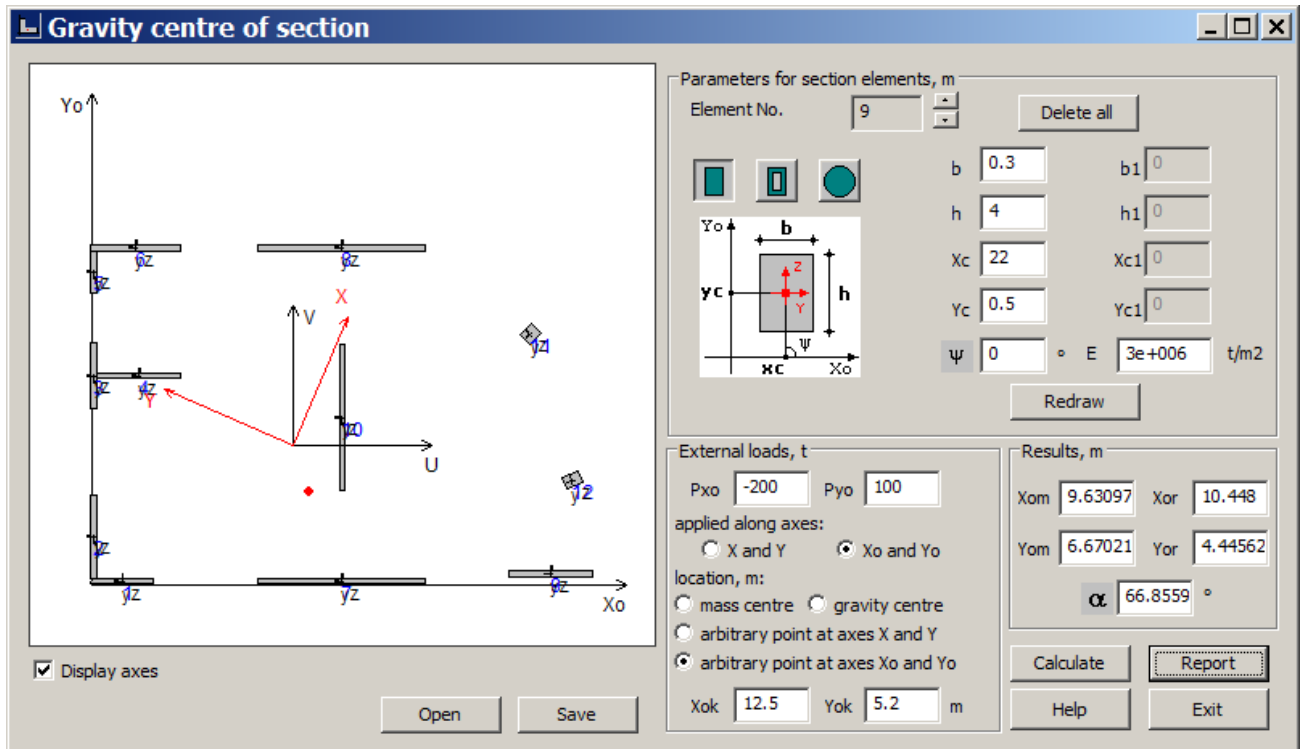


Figure 2.7

Plan of a building (section as a whole unit) consists of elements. Sections of columns (rectangular, circle and box) and walls (rectangular) are considered as elements of building plan.

Coordinates of the centre of rigidity (CR) are calculated based on the assumption that all elements of plan (section as a whole unit) have the same displacement in horizontal plane and the same rotation angle (linearly dependent on displacement) about vertical axis.

This module enables you to determine forces in elements of section from external loads. Loads may be applied at centre of mass (CM), at centre of rigidity (CR) and at the point with arbitrary coordinates.

External loads may be defined in initial or in principal axes. Location of load application may be also defined either in initial or in principal axes.

External loads P_x and P_y are considered positive if they coincide with direction of principal axes X and Y .

Positive twisting moment M_Z caused by external loads is acting anti-clockwise if you look from the end of the Z -axis.

Forces are not calculated in the section that consists of the single element.

Input data.

Every defined element is located at the first quarter of initial coordinate system X_o, Y_o .

By default, local system of principal axes of inertia Y, Z is assigned to every element.

The serial number is assigned to every element.

In the appropriate boxes, define the following data:

- modulus of elasticity for material of an element E ;
- dimensions of rectangular or box sections b and h , that are parallel to principal axes of inertia in an element Y, Z respectively; for ring section it is outside and inside diameters respectively;
- web thicknesses for box section b_1 and h_1 ;
- distances X_c, Y_c from gravity centre of an element to the axes X_o, Y_o ;
- slope angle Ψ between principal axes of inertia Z of an element and the X_o -axis.

In the appropriate boxes define external loads, coordinates of the point where they are applied and direction of load.

To display elements on schematic presentation area, click **Redraw**.

If the **Display axes** check box is selected, then for every element you will see location of its principal axes of inertia Y, Z .

To make calculation, click **Calculate**.

Output data.

Output data is presented in appropriate boxes as the following values:

- X_{om}, Y_{om} coordinates of centre of mass (CM) (gravity centre) of a plan in initial axes X_o, Y_o ;
- X_{or}, Y_{or} coordinates of centre of rigidity (CR) in the system of axes X_o, Y_o ;
- slope angle α of principal axes X, Y of a plan.

Location of rigidity centre on the plan is indicated with the red point.

If the **Display axes** check box is selected, then location of centre of mass (CM) is presented as well as principal axes X, Y .

To save the problem to a file, click **Save**.

All above-mentioned data as well as forces in elements of the section from external loads and intermediate calculations are presented in the **Report**.

Below you will see the fragment of the report (table of total forces in elements).

Nº	QYi	QZi	QXoi	QYoi
1	0.0180413	5.75392	5.75392	-0.0180413
2	0.0818408	-3.70471	0.081841	-3.70471
3	0.0801473	-1.89681	0.0801474	-1.89681
4	0.0021634	1.48421	1.48421	-0.0021634
5	0.0560477	-0.463089	0.0560477	-0.463089
6	0.0275237	25.3616	25.3616	-0.0275237
7	0.0981373	109.111	109.111	-0.0981373
8	0.0261699	43.5522	43.5522	-0.0261699
9	0.0728911	13.7872	13.7872	-0.0728911
10	0.333969	-93.503	0.333973	-93.503
11	0.198507	0.0692695	0.189347	-0.091385
12	0.16148	0.162715	0.208131	-0.0960898
Σ			200	-100

Notation system accepted for the report:

b – dimension of the i-th element along its own Y-axis;

h – dimension of the i-th element along its own Z-axis;

Xc, Yc – coordinates of the gravity centre of the i-th element in initial axes Xo, Yo;

F – area of the i-th element.

Xom, Yom – coordinates of gravity centre of a plan in initial axes Xo, Yo.

Jy – moment of inertia of the i-th element relative to its own principal Y-axis;

Jz – moment of inertia of the i-th element relative to its own principal Z-axis.

ψ – angle between axes Z and Xo for the i-th element; measured anti-clockwise from the Xo-axis to the Z-axis.

Axes U, V – central (not principal) axes that are parallel to the axes Xo, Yo respectively.

Ui = Xoi – Xom; Vi = Yoi – Yom – coordinates of gravity centre of the i-th element in U, V axes.

Jui – moment of inertia of the i-th element relative to the U-axis;

Jvi – moment of inertia of the i-th element relative to the V-axis;

Juvi – product of inertia of the i-th element in axes U, V.

ui, vi – coordinates of gravity centre of the i-th element in axes U, V.

$J_u = \sum (J_{ui} + F_i \cdot v_i^2);$

$J_v = \sum (J_{vi} + F_i \cdot u_i^2);$

$J_{uv} = \sum (J_{uvi} + F_i \cdot u_i \cdot v_i).$

Ju – total moment of inertia relative to the U-axis;

Jv – total moment of inertia relative to the Vaxis;

J_{uv} – total product of inertia in axes U, V.

$$K_1 = (J_u + J_v)/2;$$

$$K_2 = (J_u - J_v)/2;$$

$$K_3 = \sqrt{K_2^2 + J_{uv}^2}.$$

$$J_x = J_{\max} = K_1 + K_3;$$

$$J_y = J_{\min} = K_1 - K_3.$$

J_x, J_y – principal moments of inertia of a plan.

$$\alpha = \arctg((J_{uv} / (J_{\min} - J_u)) .$$

α – rotation angle of principal central axes X, Y of a plan; measured anti-clockwise from the X_o -axis to the X-axis (angle between axes X_o and X).

A_i – moment of inertia of the i-th element relative to the principal X-axis;

B_i – moment of inertia of the i-th element relative to the principal Y-axis;

D_i – product of inertia of the i-th element in principal axes.

Numerical parameters:

$$A = \sum A_i; \quad B = \sum B_i; \quad D = \sum D_i;$$

$$A_y = \sum (A_i * Y_i); \quad B_x = \sum (B_i * X_i); \quad D_x = \sum (D_i * X_i); \quad D_y = \sum (D_i * Y_i);$$

$$E = A*B - D^2; \quad E_1 = D_y - B_x; \quad E_2 = D_x - A_y.$$

Coordinates of rigidity centre (CR) in principal axes X, Y:

$$X_r = - (E_1 * A + E_2 * D) / E;$$

$$Y_r = - (E_2 * B + E_1 * D) / E.$$

Coordinates of rigidity centre (CR) in initial axes X_o, Y_o :

$$X_{or} = X_{om} + X_r * \cos(\alpha) - Y_r * \sin(\alpha);$$

$$Y_{or} = Y_{om} + X_r * \sin(\alpha) + Y_r * \cos(\alpha).$$

Algorithm for calculation of forces in elements

1. Calculation of displacements and forces in elements of a plan from external loads P_x and P_y applied at the centre of mass (CM) along the direction (positive) of principal axes X and Y.

Displacements in principal axes:

$$\Delta X = (- P_x * B + P_y * D) / E;$$

$$\Delta Y = (P_x * D - P_y * A) / E.$$

Displacements in initial axes:

$$\Delta X_o = \Delta X * \cos(\alpha) - \Delta Y * \sin(\alpha);$$

$$\Delta Y_o = \Delta X * \sin(\alpha) + \Delta Y * \cos(\alpha).$$

Let's define: $S_i, C_i = \sin(\psi_i - \alpha)$ and $\cos(\psi_i - \alpha)$ respectively.

Displacements in local axes of the i -th element:

$$\Delta Y_i = \Delta X * S_i - \Delta Y * C_i;$$

$$\Delta Z_i = \Delta X * C_i + \Delta Y * S_i.$$

Forces in local axes of the i -th element:

$$Q_{Yi}(P) = J_{Zi} * \Delta Y_i;$$

$$Q_{Zi}(P) = J_{Yi} * \Delta Z_i.$$

Positive moment M_Z acts **anti-clockwise**.

Moment $M_Z = M_{Zx} + M_{Zy}$, where $M_{Zx} = P_x * b_i$ and $M_{Zy} = -P_y * a_i$.

More notations:

$$\chi_i = X_i - a; \quad \gamma_i = Y_i - b.$$

$$A_\beta = \sum (A_i * \gamma_i^2); \quad B_\beta = \sum (B_i * \chi_i^2); \quad D_\beta = \sum (D_i * \chi_i * \gamma_i);$$

$$J_t = A_\beta - 2 * D_\beta + B_\beta; \quad \beta = M_z / J_t;$$

Displacements of the i -th element in local axes caused by moment M_Z :

$$\Delta Y_i (M) = \beta * (\chi_i * C_i + \gamma_i * S_i);$$

$$\Delta Z_i (M) = \beta * (-\chi_i * S_i + \gamma_i * C_i).$$

Forces in local axes of the i -th element from moment M_Z :

$$Q_{Yi}(M) = J_{Zi} * \Delta Y_i (M);$$

$$Q_{Zi}(M) = J_{Yi} * \Delta Z_i (M).$$

Total forces in local axes of the i -th element:

$$Q_{Yi} = Q_{Yi}(P) + Q_{Yi}(M_Z);$$

$$Q_{Zi} = Q_{Zi}(P) + Q_{Zi}(M_Z).$$

Forces in the i -th element in initial axes X_o, Y_o :

$$Q_{Xoi} = Q_{Yi} * \sin(\Psi_i) + Q_{Zi} * \cos(\Psi_i);$$

$$Q_{Yoi} = -Q_{Yi} * \cos(\Psi_i) + Q_{Zi} * \sin(\Psi_i).$$

2. If external loads P_{xo} and P_{yo} applied at the centre of mass (CM) are oriented relative to initial axes X_o and Y_o , then they are transformed into loads P_x and P_y (relative to the principal axes):

$$P_x = P_{xo} * \cos(\alpha) + P_{yo} * \sin(\alpha);$$

$$P_y = -P_{xo} * \sin(\alpha) + P_{yo} * \cos(\alpha).$$

Moment $MZ = MZx + MZy$, where $MZx = Px * b$ and $MZy = -Py * a$.

If external loads Pxo and Pyo applied at the centre of rigidity (CR) are oriented relative to initial axes Xo and Yo , then they are transformed into loads Px and Py (relative to the principal axes):

$$\begin{aligned} Px &= Pxo * \cos(\alpha) + Pyo * \sin(\alpha); \\ Py &= -Pxo * \sin(\alpha) + Pyo * \cos(\alpha). \end{aligned}$$

In this case, there is no moment ($MZ=0$).

3. If external loads Pxk and Pyk are applied at arbitrary point K of a plan and oriented relative to the principal axes X and Y, then the moment will appear.

In this case, external moment MZ may be calculated by formula:

$$MZ = -Px * (Yk - Yr) + Py * (Xk - Xr).$$

4. If external loads $Pxok$ and $Pyok$ are applied at arbitrary point K with coordinates Xok , Yok in initial axes Xo and Yo , then coordinates of point K should be recalculated into principal axes X and Y, while loads are transformed into loads Px and Py (relative to principal axes):

$$\begin{aligned} Xk &= (Xok - Xom) * \cos(\alpha) + (Yok - Yom) * \sin(\alpha); \\ Yk &= -(Xok - Xom) * \sin(\alpha) + (Yok - Yom) * \cos(\alpha). \end{aligned}$$

$$\begin{aligned} Px &= Pxok * \cos(\alpha) + Pyok * \sin(\alpha); \\ Py &= -Pxok * \sin(\alpha) + Pyok * \cos(\alpha). \end{aligned}$$

In this case, external moment MZ may be calculated by formula:

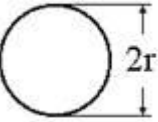
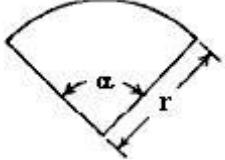
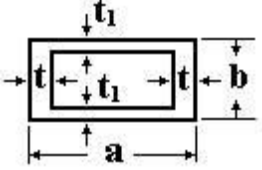
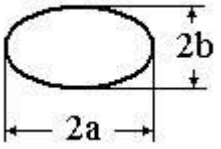
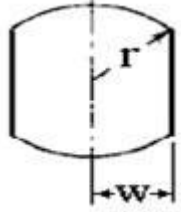


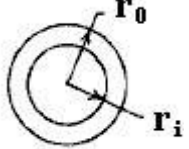

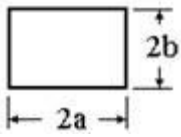
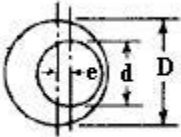
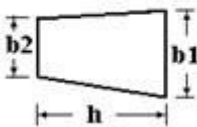
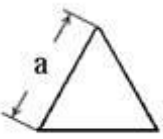
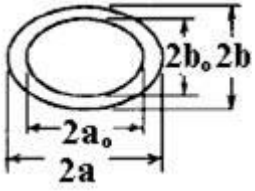
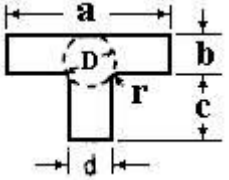
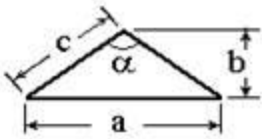
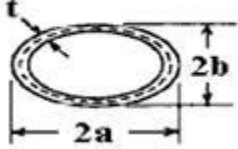
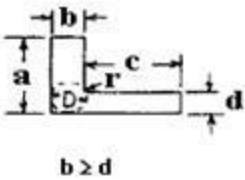
$$MZ = -Px * (Yk - Yr) + Py * (Xk - Xr).$$

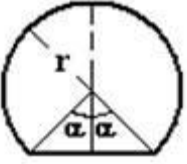

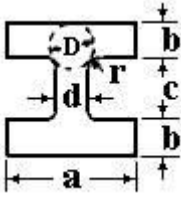
Forces are considered positive if they coincide with direction of appropriate axes.

Moment of inertia in torsion

The module enables you to calculate moments of inertia in free torsion for the most widely used section types. The calculation is made according to formulas from [1, 2]. Section moduli are also calculated for several types of sections.

Realized types of sections are presented in the table below.

No.	Shape of section	No.	Shape of section	No.	Shape of section
1	Circle 	8	Sector 	15	Box 
2	Ellipse 	9	Rectangular bar  with 2 or 4 parallel cuts	16	Thin-walled open ring of uniform thickness 
3	Square 	10	Ring 	17	Arbitrary convex open section of uniform thickness 
4	Rectangle 	11	Off-centre ring 	18	Trapezium 
5	Equilateral triangle 	12	Hollow ellipse 	19	T-section 
6	Isosceles triangle 	13	Thin-walled hollow ellipse 	20	Angle section  $b \geq d$

7	Segment	14	Arbitrary convex hollow section of uniform thickness	21	I-section
					

Input data.

Define necessary dimensions for the section in appropriate boxes and click **Calculate**.

Moment of inertia in torsion

$\alpha = \frac{d}{b} (0.07 + 0.076 \frac{r}{b})$
 $D = 2[d + b + 3r - \sqrt{2(2r+b)(2r+d)}]$
 $b < 2(d+r)$

21

$t = b \text{ ecmr } b < d;$
 $t = d \text{ ecmr } d < b;$
 $t1 = b \text{ ecmr } b > d;$
 $t1 = d \text{ ecmr } d > b;$

$J_t = 2K1 + K2 + 2\alpha D^4$
 $K1 = ab^3 [\frac{1}{3} - 0.21 \frac{b}{a} (1 - \frac{b^4}{12a^4})]$
 $K2 = \frac{1}{3} cd^3$
 $\alpha = \frac{t}{t1} (0.15 + 0.10 \frac{r}{b})$
 $D = \frac{(b+r)^2 + rd + d^2/4}{(2r+b)}$

a cm
 b cm
 c cm
 d cm
 r cm

k1
 k2

Jt cm⁴

Calculate

Exit Help


Figure 2.8

Output data.

In the appropriate boxes you will see calculated moments of inertia in torsion **J_t**, section moduli **W_t** and some additional parameters.

Moment of inertia in torsion

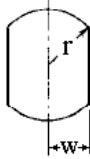9



$h=r-w$

$J_t = 2Cr^4$
 For two flat sides where
 $0 \leq h/r \leq 0.8$
 $C = 0.7854 - 0.4053(h/r) - 3.5810(h/r)^2 + 5.2708(h/r)^3 - 2.0772(h/r)^4$
 For four flat sides where
 $0 \leq h/r \leq 0.293$
 $C = 0.7854 - 0.7(h/r) - 7.7982(h/r)^2 + 14.578(h/r)^3$

$W_t = r^3 / B$
 For two flat sides where
 $0 \leq h/r \leq 0.6$
 $B = 0.6366 + 2.5303(h/r) - 11.157(h/r)^2 + 49.568(h/r)^3 - 85.886(h/r)^4 + 69.849(h/r)^5$
 For four flat sides where
 $0 \leq h/r \leq 0.293$
 $B = 0.6366 + 2.6298(h/r) - 5.6147(h/r)^2 + 30.856(h/r)^3$

10

r cm

w cm

number of direct sides in contour

C B h/r

Jt cm⁴ Wt cm³

Figure 2.9

Static/Dynamic analysis, stability

Static and dynamic analyses, stability

This chapter contains modules for analysis of the most frequent problems in statics, dynamics and stability of structures.

[Continuous beam](#)

[Influence lines in continuous beam](#)

[Truss](#)

[Parametric plane frame](#)

[Arbitrary plane frame](#)

[Rectangular slab on elastic foundation](#)

[Rectangular slab](#)

[Wall-beam](#)

[Shell on rectangular plan](#)

[Shell on circular plan](#)

[Mode shapes and frequencies of natural vibrations in cantilever](#)

[Stability factors and buckling modes in cantilever](#)

[Mode shapes and frequencies of natural vibrations in continuous beam](#)

[Cable and string](#)



Figure 3.1

Continuous beam

The module enables you to carry out static analysis of multispan continuous beam (up to five spans with two cantilevers).

Input data.

Static analysis of continuous beam

Input data | Output data

Parameters

Number of spans:

☐ Left cantilever m tm2 t/m

1st span m tm2 t/m

2nd span m tm2 t/m

3rd span m tm2 t/m

4th span m tm2 t/m

5th span m tm2 t/m

☒ Right cantilever m tm2 t/m

Options

Units of measurement:

☒ Uniform beam

Supports

Type

Current support:

Stiffness for translation t/m

for rotation tm

Loads

Current span:

Load type ☒ Force ☐ Moment

P = t/m

P1 = t/m

a = m

b = m

Edit load

Load case No.

Name

Delete load

☒ Account of dead weight in load case

Table of specified loads for the current load case

Load type	Span	P	P1	a	b
trapez. load	1	0	4	0	6.5
concentr. load	6	1	0	1.8	0
distrib. load	2	4	0	0	0

Figure 3.2

- Select number of spans in the appropriate list box and, if necessary, define left and right cantilever (to do this, just select appropriate check boxes).
- Select measurement units for load and stiffness - **t** or **kN**.
- Define length of span (cantilever) in **m** and flexural stiffness (if all spans and cantilevers have the same flexural stiffness, select the **Uniform beam** check box).
- Select the support for which it is necessary to apply boundary conditions. You could select the support in the **Current support** list box or by clicking directly on schematic presentation.
- Select the type of boundary condition with the **Type** buttons (the type will be displayed on schematic presentation) and, if required, in the **Stiffness** area, define the stiffness values for translation and rotation.
- Select number for the current load case (up to 3 load cases).

- Select spans where the load should be applied to. You could select the span in the **Current span** list box or by clicking directly on schematic presentation (it will be displayed there).
- Define the type of load with one of the 4 buttons, then define the load type (**force** or **moment**).
- Input load value (**P**, **P1**), distance to the beginning/end of the load (**a**, **b**) (if required) and click **Add**.
- To modify parameters of load, select certain load with the pointer in the table of specified loads, modify necessary parameters and click **Edit**.
- To delete load, select certain load with the pointer in the table of specified loads. In the **Delete load** area, click **current**. To delete all loads from the current span, click **from span**.
- To add dead weight to the current load case, select the **Account of dead weight in load case** check box.
- When you define input data, click **Calculate**.
- If required, it is possible to save the problem.

Output data.

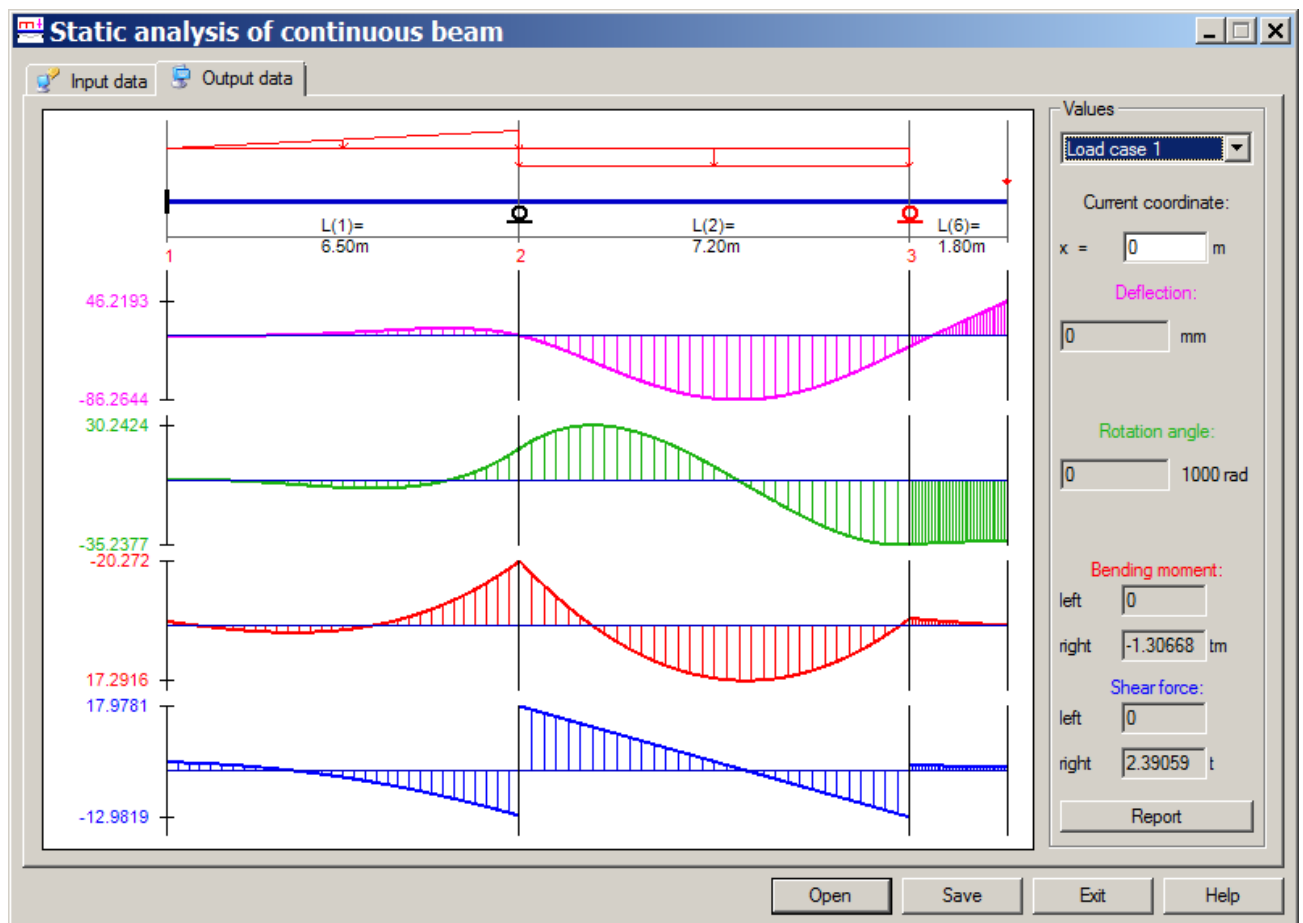


Figure 3.3

On the **Output data** tab you will see the diagrams of displacements, rotation angles, bending moments and shear forces. To find out ordinates of diagrams at any point of beam, drag the pointer across the diagram and view the ordinate at appropriate box.

Colour of the diagram corresponds to the colour of diagram name at the right part of the dialog box.

To present a report document in HTML format, click **Report**.

Truss

This module enables you to determine nodal displacements and forces in elements of plane trusses of various shapes that are most widely used in practice.

Input data.

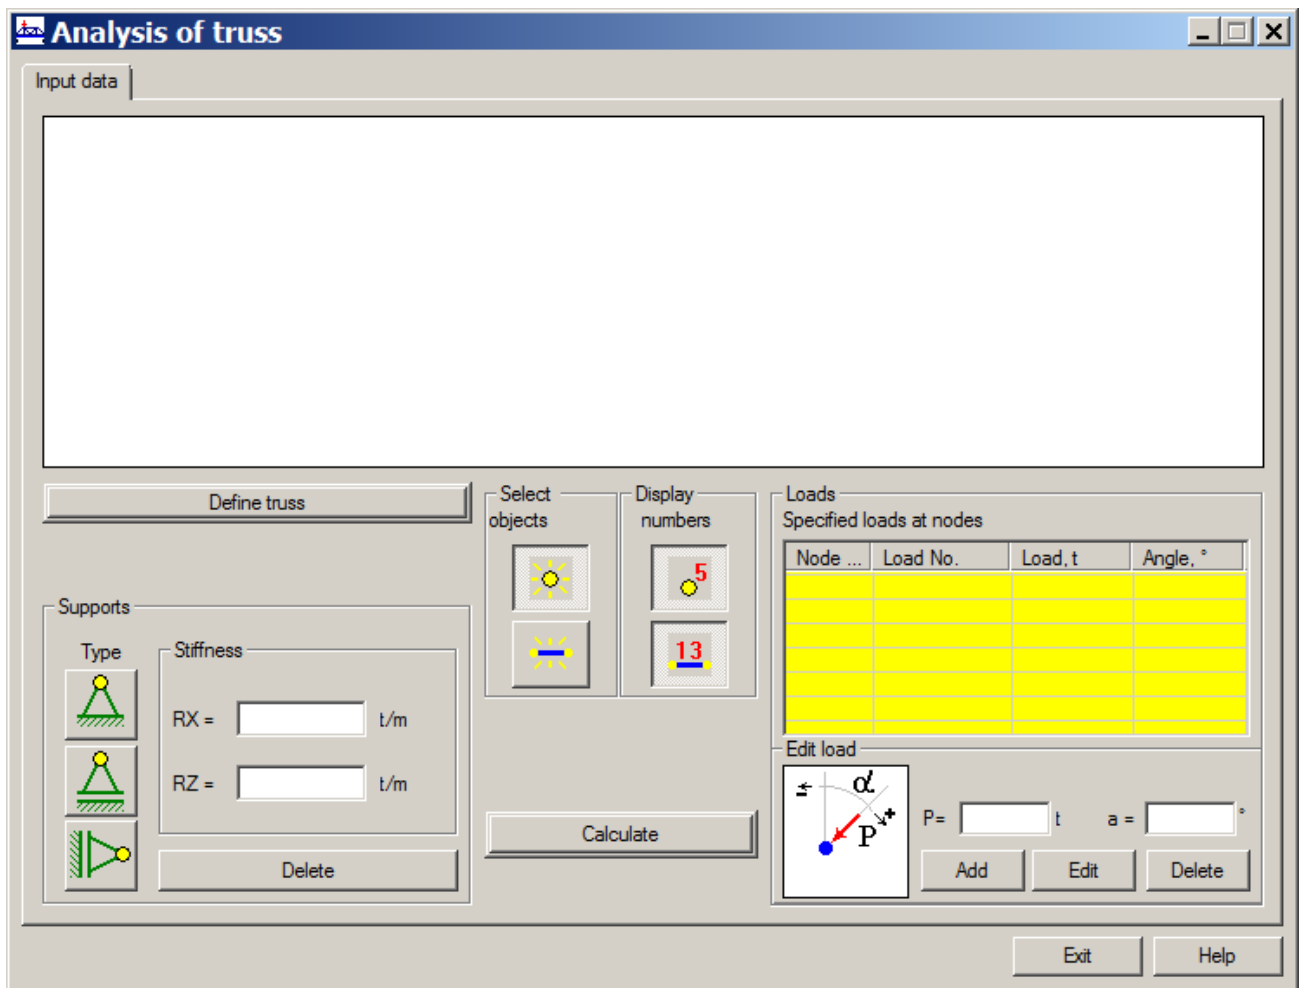


Figure 3.4

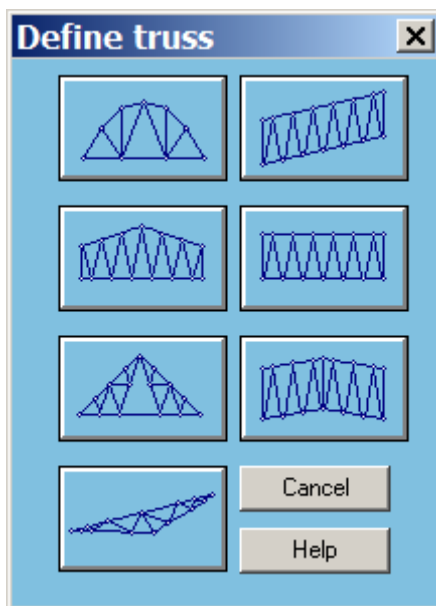


Figure 3.5

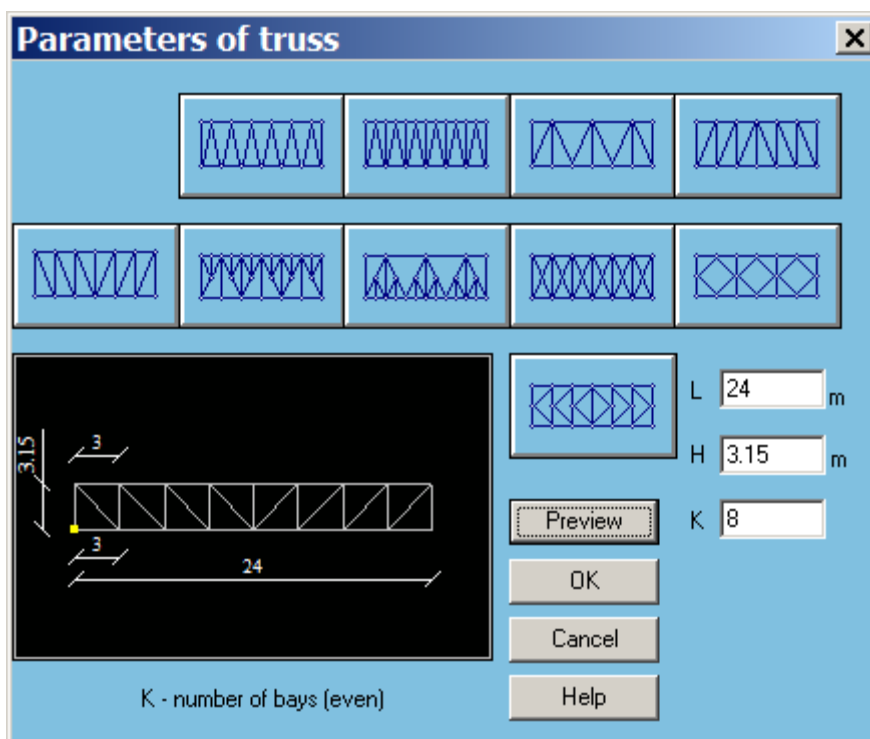



Figure 3.6

To define input data, follow these steps:



- Click the **Define truss** button.

In the **Define truss** dialog box, select the truss by shape of the chord. To do this, press the button with the corresponding icon:

In the **Parameters of truss** dialog box, select the web of truss. Then define appropriate parameters (see the Tip at the bottom of the dialog box). To check whether parameters are defined correctly, click **Preview**. Then click **OK**.


– In the **Select objects** area, click the **Nodes** button  and select necessary nodes with the pointer on schematic presentation. In the **Supports** area, define boundary conditions (just click appropriate icon). If required, define stiffness of restraints.

– To delete restraints at any node, select this node with a pointer and click the **Delete** button in the **Supports** area.

– To display numbers of nodes and elements on schematic presentation, in the **Display numbers** area, click **Nodes**  or **Elements** .

– To define load at node, select appropriate node with the pointer, then in the **Edit load** area, define the load value (**P**) and angle of load application (**α**). Click **Add**.

– To modify or delete nodal load, click appropriate load in the **Specified loads at nodes** table. Modify values of (**P**) and (**α**), click **Edit** or click **Delete**.

– To assign stiffness to elements, in the **Select objects** area, click **Elements** . Select appropriate elements either on schematic presentation or in the table of elements, define **EA** value and click **Apply**.

– Click **Calculate**.

Output data.

On the **Output data** tab you will see deformed shape, tables of forces in bars and nodal displacements. When you select node or element on schematic presentation, the row that corresponds to this node or element in appropriate table will be selected in the list.

To present a report document in HTML format, click **Report**.

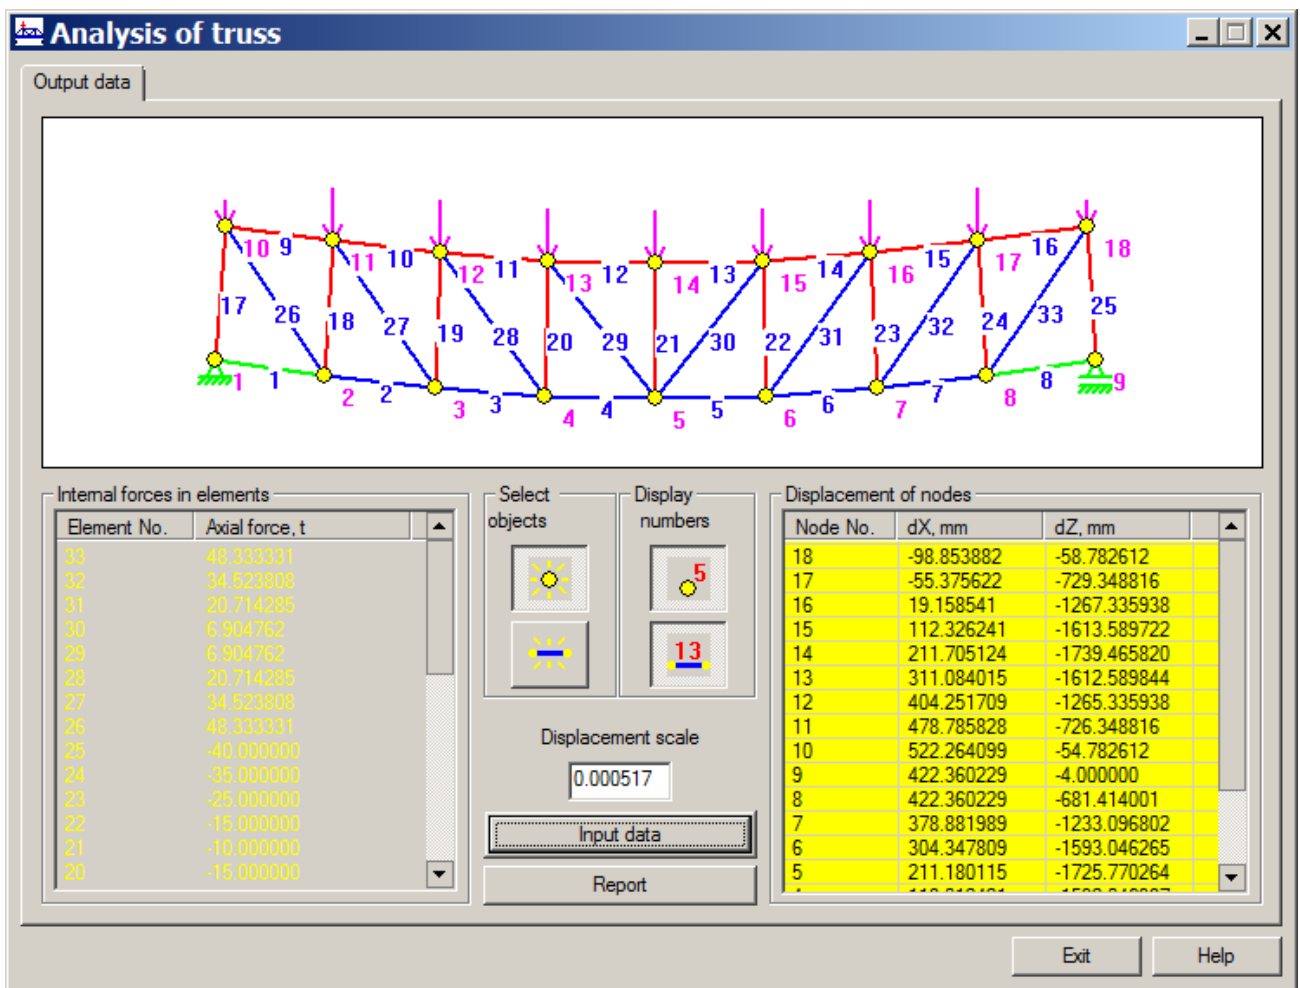


Figure 3.7

Parametric plane frame

The module enables you to carry out static analysis of plane frames of various shapes that are most widely used in practice.

Input data.

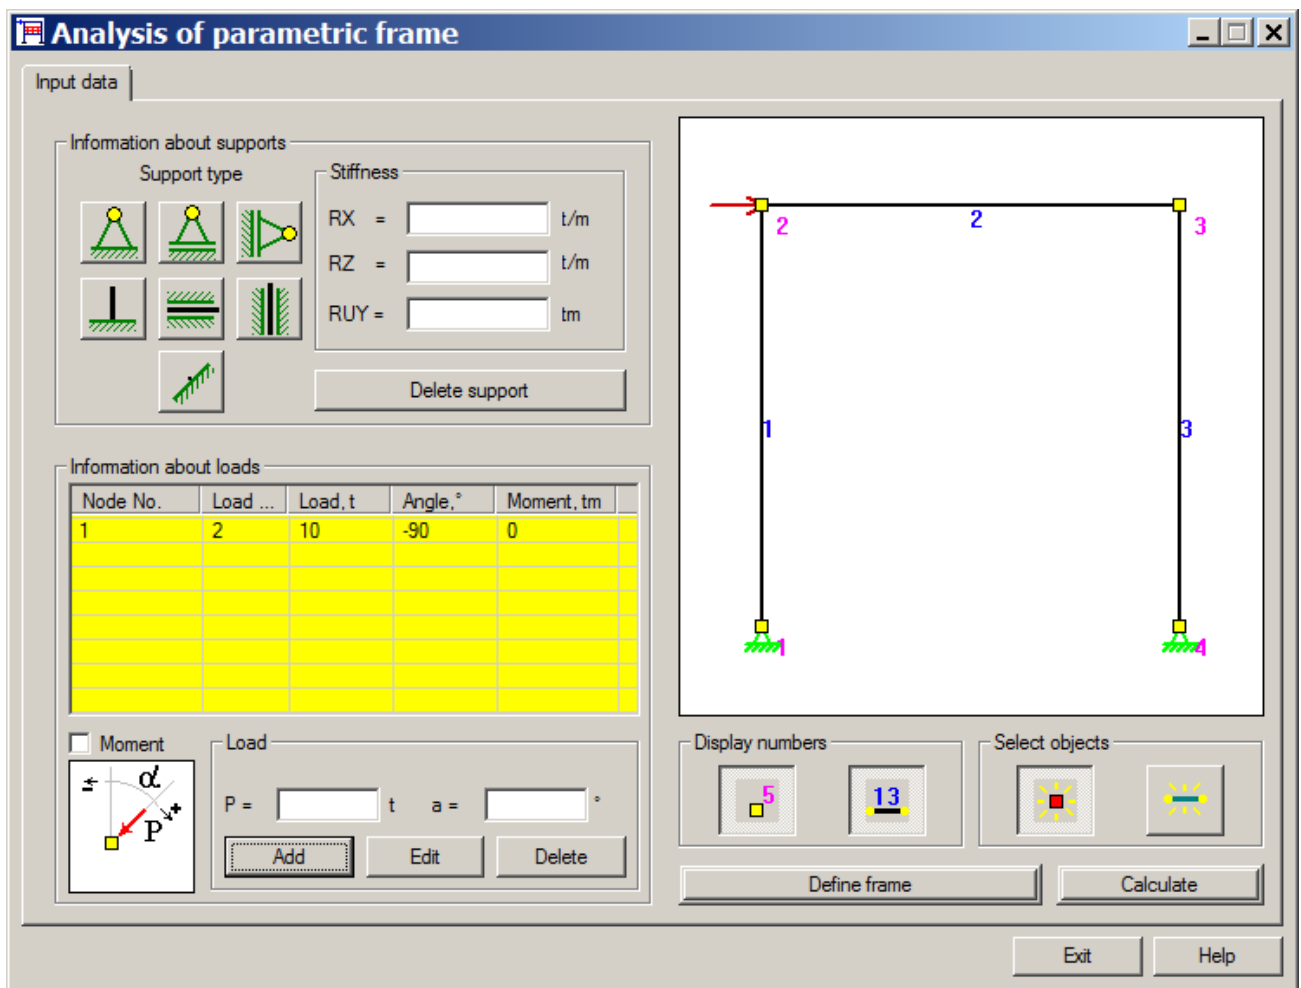


Figure 3.8

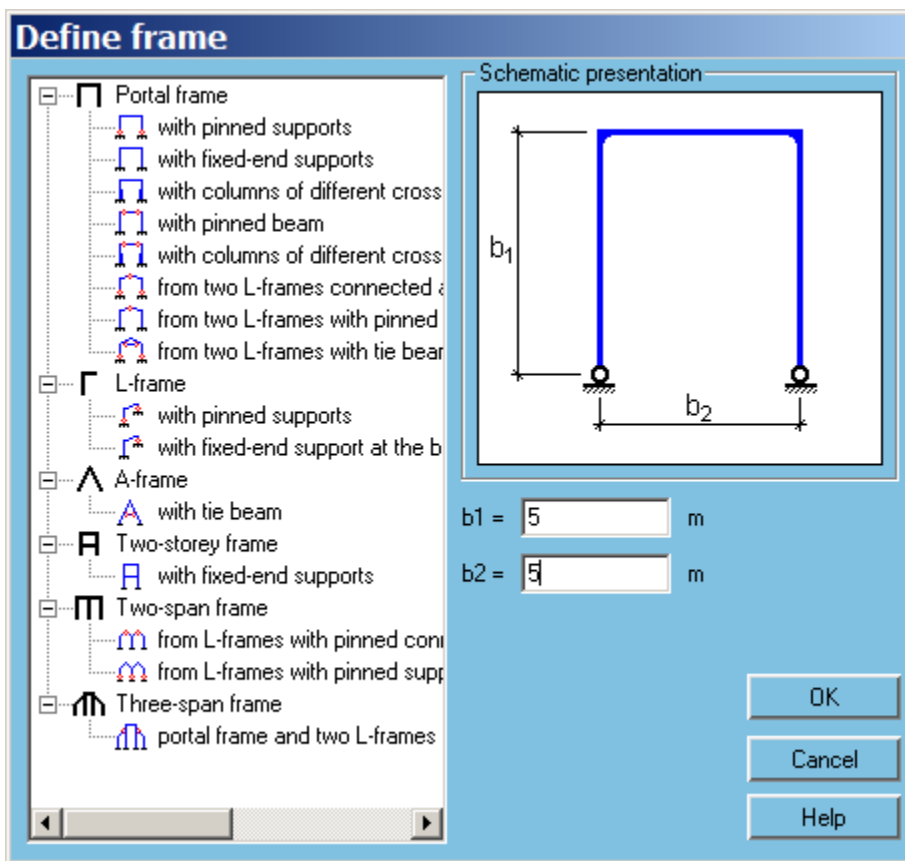



Figure 3.9

To define input data, follow these steps:

- Click the **Define frame** button. In the **Define frame** dialog box, select necessary frame from the list of main types of parametric frames. Define geometric properties of selected frame and then click **OK**.

- In the **Select objects** area, click the **Nodes** button  and select necessary nodes with the pointer on schematic presentation. In the **Information about supports** area, define boundary conditions (just click appropriate icon). If required, define stiffness of restraints.

- To delete restraints at any node, select this node with a pointer and click the **Delete support** button in the **Information about supports** area.

- To display numbers of nodes and elements on schematic presentation, in the **Display**


numbers area, click **Nodes**  or **Elements**  .

- To define load at node, select appropriate node with the pointer, then in the **Load** area, define the load value (**P**) and angle of load application (**α**). Click **Add**.

- To modify or delete nodal load, click appropriate load in the table with specified loads at nodes. Modify values of (**P**) and (**α**), click **Edit** or click **Delete**.



– To define load on element, in the **Select objects** area, click the **Elements** button and select necessary elements either with the pointer on schematic presentation or in the **Information about stiffness** table. Then select appropriate type of load (just click appropriate icon), in another dialog box define parameters of load and click **OK**.

– If it is required to define additional hinges in bars of frames, select appropriate element and click **Define hinges** button . In the **Define hinges** dialog box, select define where to place hinges and click **OK**.



– To assign stiffness to elements, in the **Select objects** area, click **Elements** . Select appropriate elements either on schematic presentation or in the **Information about stiffness** table. In the **Stiffness** area, define axial and flexural stiffness values (EA and EI), then click **Apply**.

– Click **Calculate**.

Output data.

On the **Output data** tab you will see deformed shape, tables of forces in bars and nodal displacements. When you select node or element on schematic presentation, the row that corresponds to this node or element in appropriate table will be selected in the list.

To display force diagrams in elements, click appropriate buttons. If required, it is also possible to display applied loads together with diagrams.

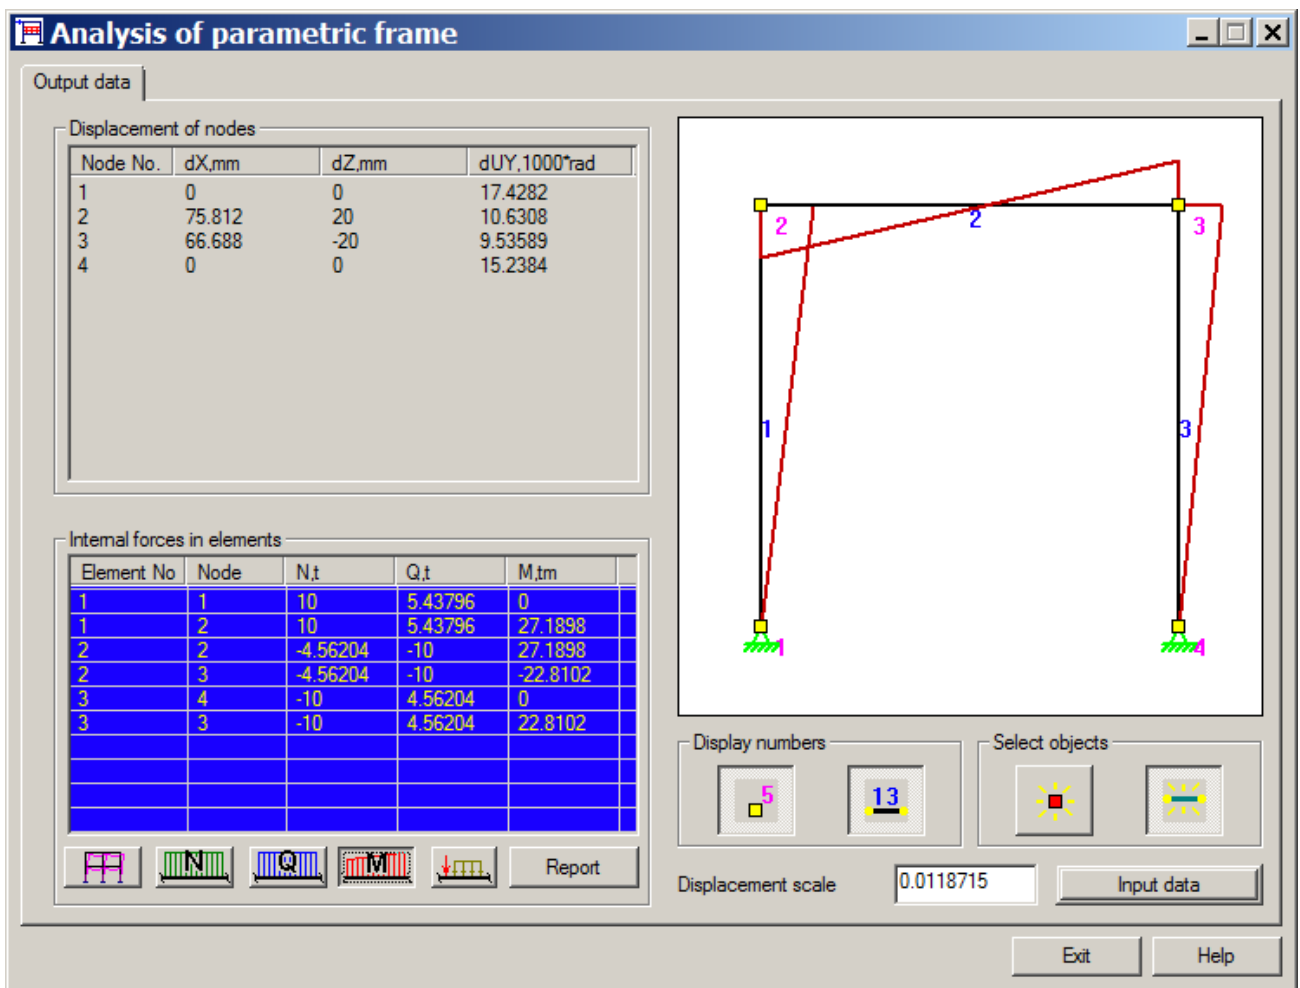


Figure 3.10

To present a report document in HTML format, click **Report**.

Arbitrary plane frame

This module enables you to carry out static analysis of plane frames and trusses of various shapes.

Model of the frame is located in the XOZ-plane. X-axis is horizontal while Z-axis is vertical. Y-axis is directed out of the plane and generates the right Cartesian coordinate system with the X and Z-axes. Let us refer this coordinate system as global or principal one.

Every node of the frame has three degrees of freedom (DOF) – two translations (X, Z) and rotation (UY).

Nodal loads – forces and moments are directed relative to the global coordinate system. Force is considered to be positive if it is directed opposite appropriate axis. Moment is

considered to be positive if it is directed clockwise when you look from the end of appropriate axis.

Initial translation is considered to be positive if it acts along direction of appropriate axis.

Initial rotation is considered to be positive if it is directed anti-clockwise when you look from the end of appropriate axis.

Restraints imposed at support nodes are directed relative to the global coordinate system.

Local coordinate system of every bar is also right Cartesian coordinate system. X1-axis is longitudinal axis of the bar; it passes from the beginning of the bar up to its end through the gravity centre of the section. As a rule, node of the model with the smaller number is considered as beginning of the bar while node of the model with the greater number is considered as the end of the bar.

Y1-axis and Z1-axis – principal central axes that also pass through the gravity centre.

Local axes are generated according to the rules below.

For vertical bars:

- if the X1-axis is directed upward, then the Y1-axis is horizontal and directed out of the plane at us and the Z1-axis is directed left-to-right;
- if the X1-axis is directed downward, then the Y1-axis is horizontal and directed out of the plane at us and Z1-axis is directed right-to-left.

For arbitrary oriented bars:

- the Z1-axis is always directed to the upper half-space;
- if the X1-axis is directed left-to-right, then the Y1-axis is horizontal and directed out of the plane from us;
- if the X1-axis is directed right-to-left, then the Y1-axis is horizontal and directed out of the plane at us.

Local load is oriented relative to local coordinate axes. Sign convention for the local load is similar to the sign convention for the nodal load.

The work with the program will be illustrated at example of two-storey frame with two spans.

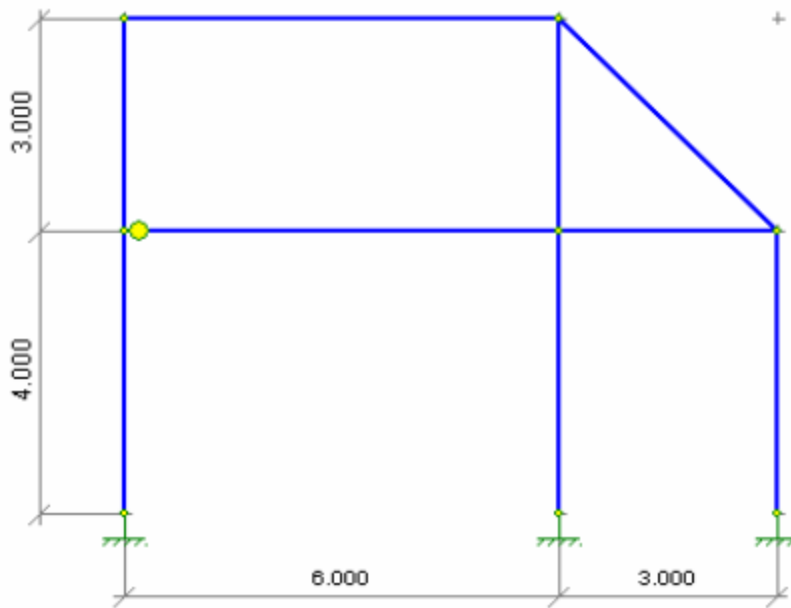


Figure 3.11

[Step 1. Generate model geometry](#)

[Step 2. Define boundary conditions \(restraints\) and hinges](#)

[Step 3. Define cross-sections for bars](#)


[Step 4. Define loads on design model](#)

[Options to edit and visualize the model](#)

[Output data](#)

[Sign conventions for displacements and forces](#)

Step 1. Generate model geometry

To start, on the MODEL menu, click **Grid** (button  on the toolbar). In the **Grid generation** dialog box, define steps along axis 1 (horizontal axis) 6 and 3 metres and steps along axis 2 (vertical axis) 4 and 3 metres. Number of steps for all cases define as equal to 1.

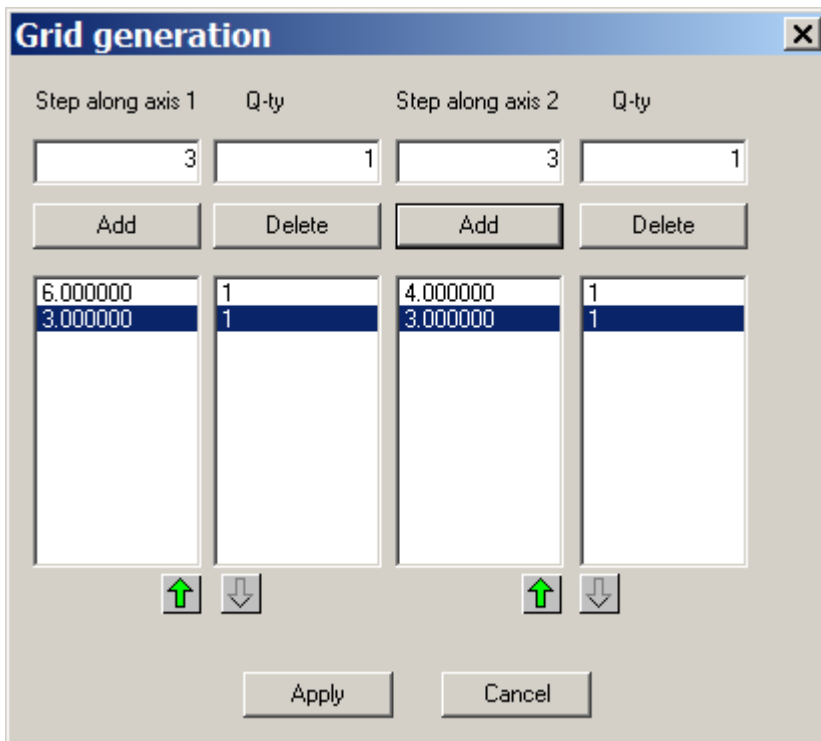


Figure 3.12

Click **Apply**. Nodes of the grid will be displayed on the screen. They are denoted with grey cross symbols.

To define bars, on the MODEL menu, click **Bars** (button  on the toolbar) and connect nodes of the grid.


When you define bars, the mouse buttons work in the following way.

Left mouse button: the first click – to select the first node, the second click – to select the second node. Right mouse button: to unselect the first node.


When model geometry is generated, click the **Bars** button  once again in order to make this command (mode) not active.

Step 2. Define boundary conditions (restraints) and hinges


To define the type of restraint, on the MODEL menu, point to **Add restraint** and click appropriate command from the list or click necessary button on the toolbar.



Define the nodes where the restraint should be imposed on.

In this example, select **Restrain all** option (button  on the toolbar) and define three bottom nodes.

Then click this button once again in order to make this command (mode) not active.

To define hinges (connections between bars and nodes), on the MODEL menu, click **Add hinge** (button  on the toolbar). Then click appropriate end of the bar. If there are hinges at both ends of the bar, place the pointer (and click) at the middle of the bar.

The hinges will be marked with yellow circle on the screen.

Click **Add hinge** button once again in order to make this command not active.

Step 3. Define cross-sections for bars

To define sections for bars, on the MODEL menu, point to **Section** and click **Select section** (button  on the toolbar).

In the **Cross-section** dialog box, click **Add**.

In the **Cross-section type** dialog box, select **Rectangular bar** option and define necessary properties: rectangular bar with dimensions 40x40cm, modulus of elasticity 3000000 t/m² and material density 2.75t/m³. Click **Apply**. Other types of sections are defined in the same way.

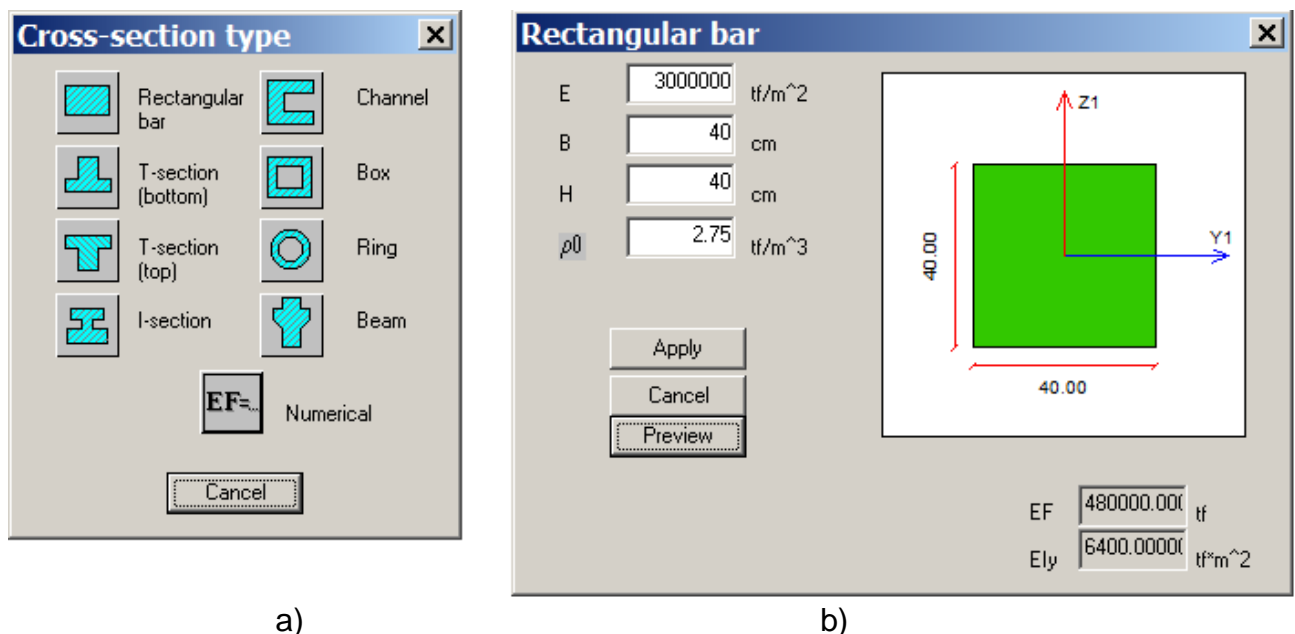



Figure 3.13


In the **Cross-section** dialog box, select the section and click **Set as current**. Then click **Apply**.


To assign current section to bars of design model, follow one of these methods:

1) on the EDIT menu, click **Select bars** (button  on the toolbar).


Select necessary bars with the pointer.

Then on the MODEL menu, point to **Section** and click **Assign section** (button  on the toolbar).

On the MODEL menu, point to **Section** and click **Apply to selected bars** (button  on the toolbar);

2) On the MODEL menu, point to **Section** and click **Assign section** (button  on the toolbar).

Select necessary bars and assign the section to them.

Click **Assign section** button  once again in order to make this command not active.

Note. The first method is helpful when you define section to large number of bars. Otherwise, when you define sections to separate bars, use the second method.

Step 4. Define loads on design model

Let us define two load cases: the first one is the dead weight and the second one is the load on nodes and bars of design model.

Dead weight may be defined if material density was specified for all sections or unit weight (if the section has numerical description). To define dead weight, on the MODEL menu, point to **Load case** and click **Add dead weight**. If material density or unit weight were not defined, then you will see appropriate message and dead weight is not added.

Load for the first load case is presented in the figure below.

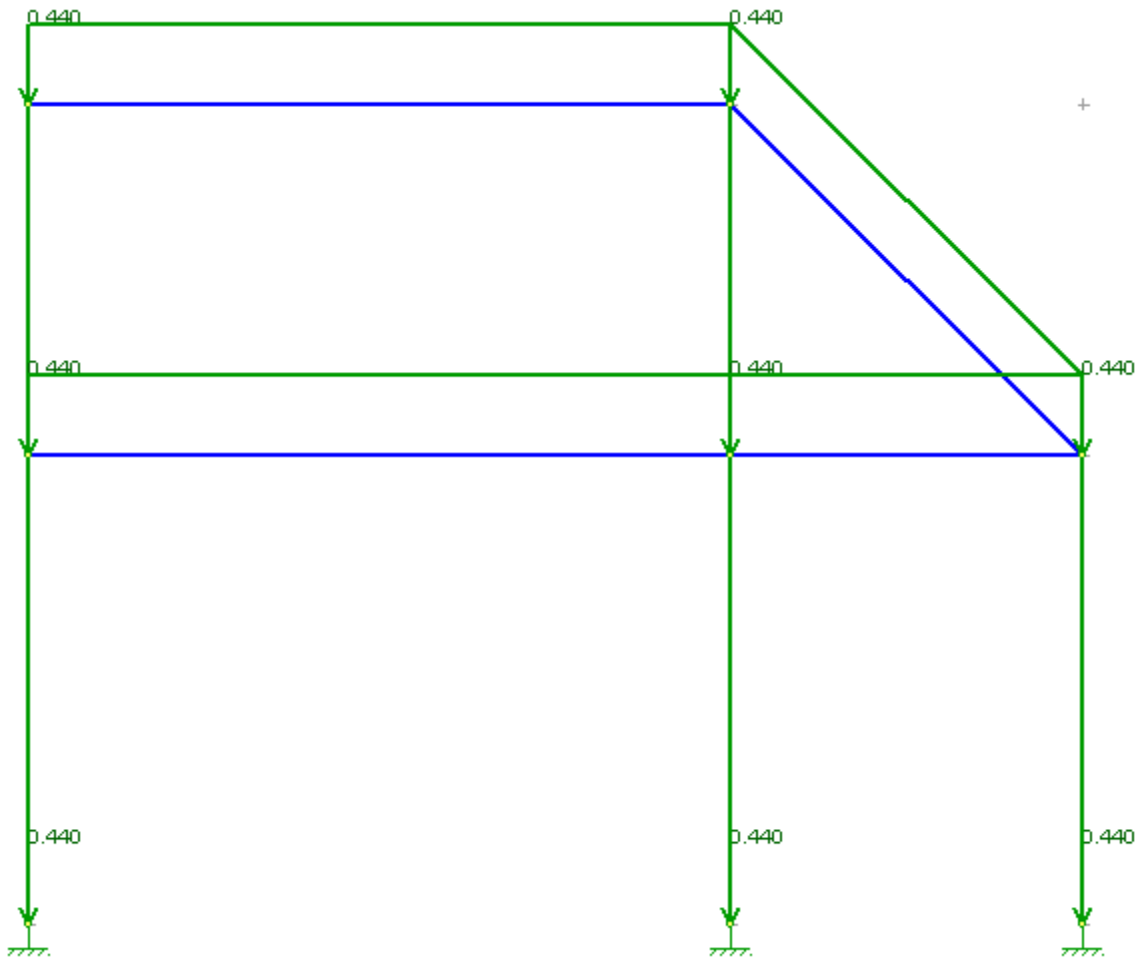





Figure 3.14

To define the second (and the following) load cases, on the MODEL menu, point to **Load case** and click **Current load case** (button  on the toolbar).


Specify number of the load case in the **Current load case** dialog box.

To define nodal loads, on the MODEL menu, point to **Load case** and click **Define at node** (button  on the toolbar).

In the **Load at nodes** dialog box, define horizontal force $P = -10$ tf and click **Apply**.

On the MODEL menu, point to **Load case** and click **Apply load** (button  on the toolbar). Then specify the node where the load should be applied to (in this example, it is the upper left node).

In the **Load at nodes** dialog box, buttons with green arrows correspond to force relative to appropriate axis in the global coordinate system while buttons with yellow arrows - to cinematic load (initial translation of nodes). Initial translations may be defined only to nodes where there are no supports.

To define local loads on bars, on the MODEL menu, point to **Load case** and click **Define on bar** (button  on the toolbar).

In the **Load on bars** dialog box, specify uniformly distributed load (5 tf/m) on inclined bar along the whole length of bar in local coordinate system along the Z-axis.

It is possible to define the following types of load:

1) Concentrated load in span in global or local coordinate system along the X-axis or Z-axis;

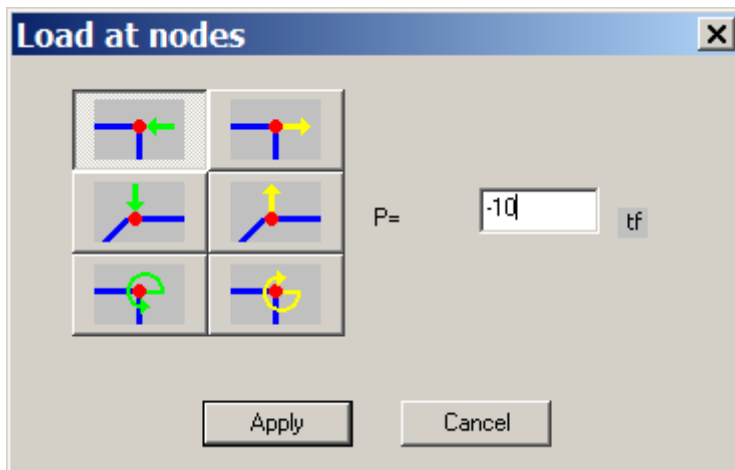


Figure 3.15

- 2) Concentrated moment in span;
- 3) Uniformly distributed load in span in global or local coordinate system along the X-axis or Z-axis;
- 4) Trapezoidal distributed load in span in global or local coordinate system along the X-axis or Z-axis;
- 5) Uniform heating along the local X-axis of the bar;
- 6) Non-uniform heating of the upper and lower fibre of the bar.

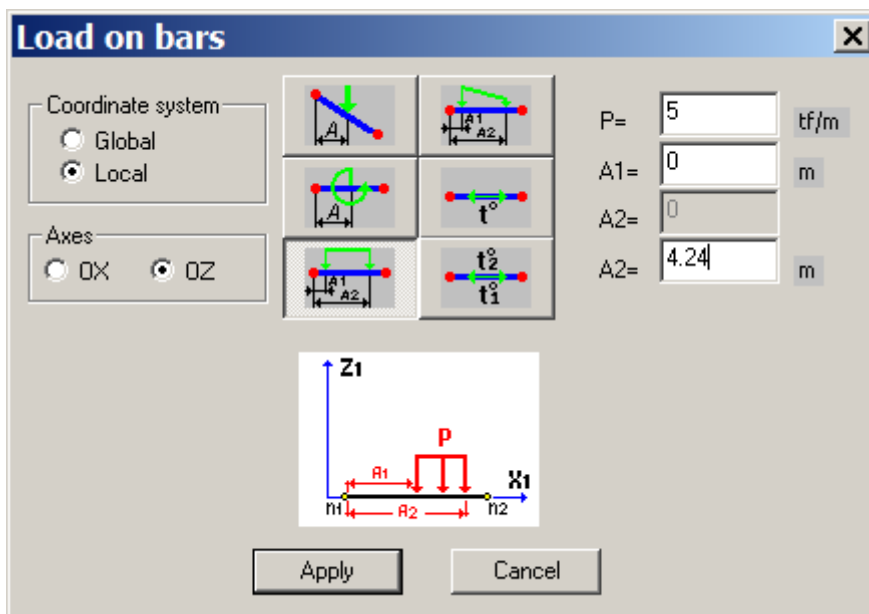



Figure 3.16

When the load is specified, click **Apply**.

On the MODEL menu, point to **Load case** and click **Apply load** (button  on the toolbar).

Design model for the second load case is presented in the figure below.

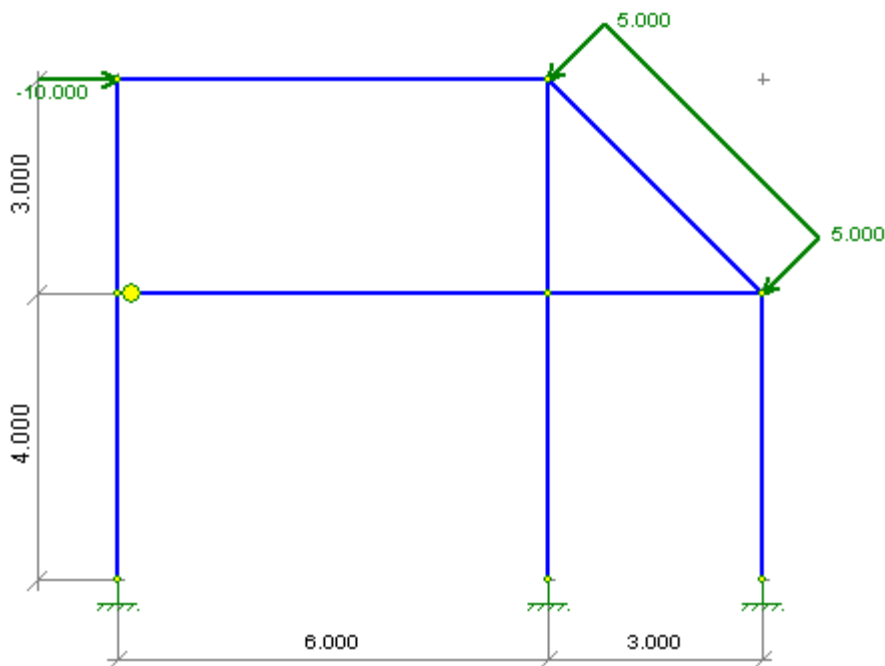



Figure 3.17

To start calculation, on the MODEL menu, point to **Calculation** and click **Analyse problem** (button  on the toolbar).

When you see the message '*Calculation is complete*', you could evaluate analysis results.

Options to edit and visualize the model

Options to edit the model

Principal commands (modes) to edit the model are presented on the EDIT menu.



Undo



Select nodes



Select bars



Delete nodes



Delete bars



Remove restraint



Delete hinge



Delete load (MODEL menu / **Load case**)

Options to visualize the model

All commands to visualize the model are presented on the VISUALIZE menu. With the help of these commands you could show or hide the following data:



Numbers of nodes



Numbers of bars



Dimensions of the specified grid



Restraints



Hinges



Loads



Load values

Tools



Length between two nodes



Angle by three nodes .



Information about bar



Information about node




Zoom - to enlarge the model fragment



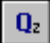





Fit in window - to display all objects on the screen

Output data

Define the number of the load case that you would like to evaluate (button  on the toolbar).

To display the output data, on the MODEL menu, point to **Calculation** and click one of the following commands to display appropriate data on the screen:

-  Deformed shape;
-  Axial force diagram N;
-  Shear force diagram Qz ;
-  Moment diagram My .

To display numerical values of nodal displacements and forces in bars, on the MODEL menu, point to **Calculation / Tables** and click **Nodal displacements**  or **Internal forces at bar ends**  .

Displacements/Load case 2			
File			
Node ...	X (mm)	Z (mm)	Uy (rad.x1000)
9	-3.31636	0.00755124	0.090772
10	-3.41715	-0.11866	0.590335
11	-3.37513	-0.0604073	-1.20252
12	0	0	0
13	0	0	0
14	-3.29009	0.00329099	-0.562206
15	0	0	0


a)


Forces/Load case 2				
File				
Element No.	Section	N (tf)	My (tf*m)	Qz (tf)
9	1	-8.06329	1.51205	-0.681639
9	2	-8.06329	-2.57778	-0.681639
10	1	-1.29823	-7.41465	11.8413
10	2	-1.29823	-2.1763	-9.35871
11	1	-7.24887	-0.404172	1.1641
11	2	-7.24887	4.25224	1.1641
12	1	-8.13671	-4.83687	1.22775
12	2	-8.13671	3.7574	1.22775
13	1	0.681639	1.51205	-1.93671
13	2	0.681639	-4.29809	-1.93671
14	1	0.394919	-4.29809	2.59881
14	2	0.394919	6.09715	2.59881
15	1	-4.53552	2.58048	-0.28672
15	2	-4.53552	-0.28672	-0.28672

b)

Figure 3.18

To save calculation results to a certain file, in the **Nodal displacements (Forces)** window, on the FILE menu, click **Save**.

To display information about certain bar (such as forces, diagrams of axial and shear forces, moments and displacements), click the  **Information about bar** button.

To display information about certain node (such as nodal displacements), click the  **Information about node** button.

Sign conventions for displacements and forces

Sign convention for displacements

Linear translations (X, Z) are considered positive if they are directed left-to right or upward along appropriate axes.

Rotation (UY) is considered positive if it rotates clockwise when you look at the screen.

Sign convention for forces

Axial forces (N) is considered positive if the bar is in tension.

Sign convention for other forces relates to the bar section that belongs to its end:

- positive bending moment (My) rotates anti-clockwise when you look from the end of the Y1-axis;
- positive shear force (Qz) acts along the Z1-axis.

Rectangular slab on elastic foundation

This module enables you to carry out static analysis of rectangular slab on elastic foundation. There may be one rectangular opening or a cutout in a slab.

Input data.

Static analysis of rectangular slab on elastic foundation

Input data

Slab
 Length (L) 10 m
 Width (H) 8 m
 Thickness 150 cm

Stiffness
 E 3.e6 t/m2
 Nu 0.2

Opening
 Length (c) 2.5 m
 Width (d) 3 m
 Origin
 ao 5 m
 bo 2.2 m

Subgrade moduli
 C1 1000 t/m3
 C2 10000 t/m

Loads

Diagram showing a rectangular slab with dimensions a , b , $a1$, $b1$ and a load P .

$P = 2$ t/m

$a = 6.5$ m, $a1 = 3.1$ m
 $b = 1.1$ m, $b1 = 2.8$ m

Table of defined loads

Load type	P	a	b	a1	b1
concentr. (t)	1.2	1.5	1.6	0.0	0.0
distribut. (t/m2)	13.1	0.0	0.0	0.0	0.0
rectangul. (t/...)	4.8	2	4	2.2	2.2
linear (t/m)	2	6.5	1.1	3.1	2.8

Table of restraints on the current side

Type of restraint	From	To
along Uy	0	8

Restraints
 Side: left
 Direction of restraint
☐ Z ☐ Ux ☒ Uy
 From 0 m
 To 8 m
 Add Edit
 Remove restraints
 Current On side

Dimensions m Calculate

Exit Help

Figure 3.19

Slab

In the appropriate boxes define the following values:

- dimensions of slab — length, width, thickness;
- stiffness parameters — modulus of elasticity and Poisson's ratio;
- parameters of opening — length of opening, width of opening and distances from the opening to the nearest left corner of the slab. If there is no opening, you could define its dimensions as equal to zero.

Parameters of elastic foundation

In the appropriate boxes define moduli of subgrade reaction (also called subgrade modulus):

- C1 — subgrade modulus in compression;
- C2 — subgrade modulus in shear.

Loads

It is possible to define vertical concentrated and uniformly distributed loads. Uniformly distributed loads may be distributed across the whole slab, across arbitrary rectangular area or along the line on a slab.

- In the **Loads** area, select certain type of load from the four available types (just click appropriate icon), define necessary parameters — load value and other parameters depending on the load type and then click **Add**;
- To modify parameters of load, in the **Table of defined loads** select the row for appropriate load, input new parameters and click **Edit**;
- To delete load, in the **Table of defined loads** select the row for appropriate load, under **Delete loads** click **Current**. To delete all loads, click **All**.

Boundary conditions

Define line segments with certain types of boundary conditions on one side of a slab or on several sides of a slab, that is, restraints should be imposed. The following types of restraints are allowed:

- Z — linear restraint along the axis that is orthogonal to the slab surface;
 - Ux — restraint against rotation about the axis that is parallel to the slab length;
 - Uy — restraint against rotation about the axis that is parallel to the slab width.
-
- In the **Restraints** area, in the drop-down list, define the side of the slab where boundary conditions should be applied.
 - With an option button, define direction along which displacements should not be allowed. In the **From** and **To** boxes, define distances to restraints, then click **Add**. If the values in the **From** and **To** boxes coincide, restraint is supposed at this point.
 - To modify distances to restraint, select appropriate row in the **Table of restraints on the current side** table, define new parameters and click **Edit**.
 - To remove restraints, in the **Table of restraints on the current side** table, select appropriate row and click **Current**. To remove all restraints on the current side of a slab, click **On side**.

When all input data is defined, click **Calculate**.

Output data.

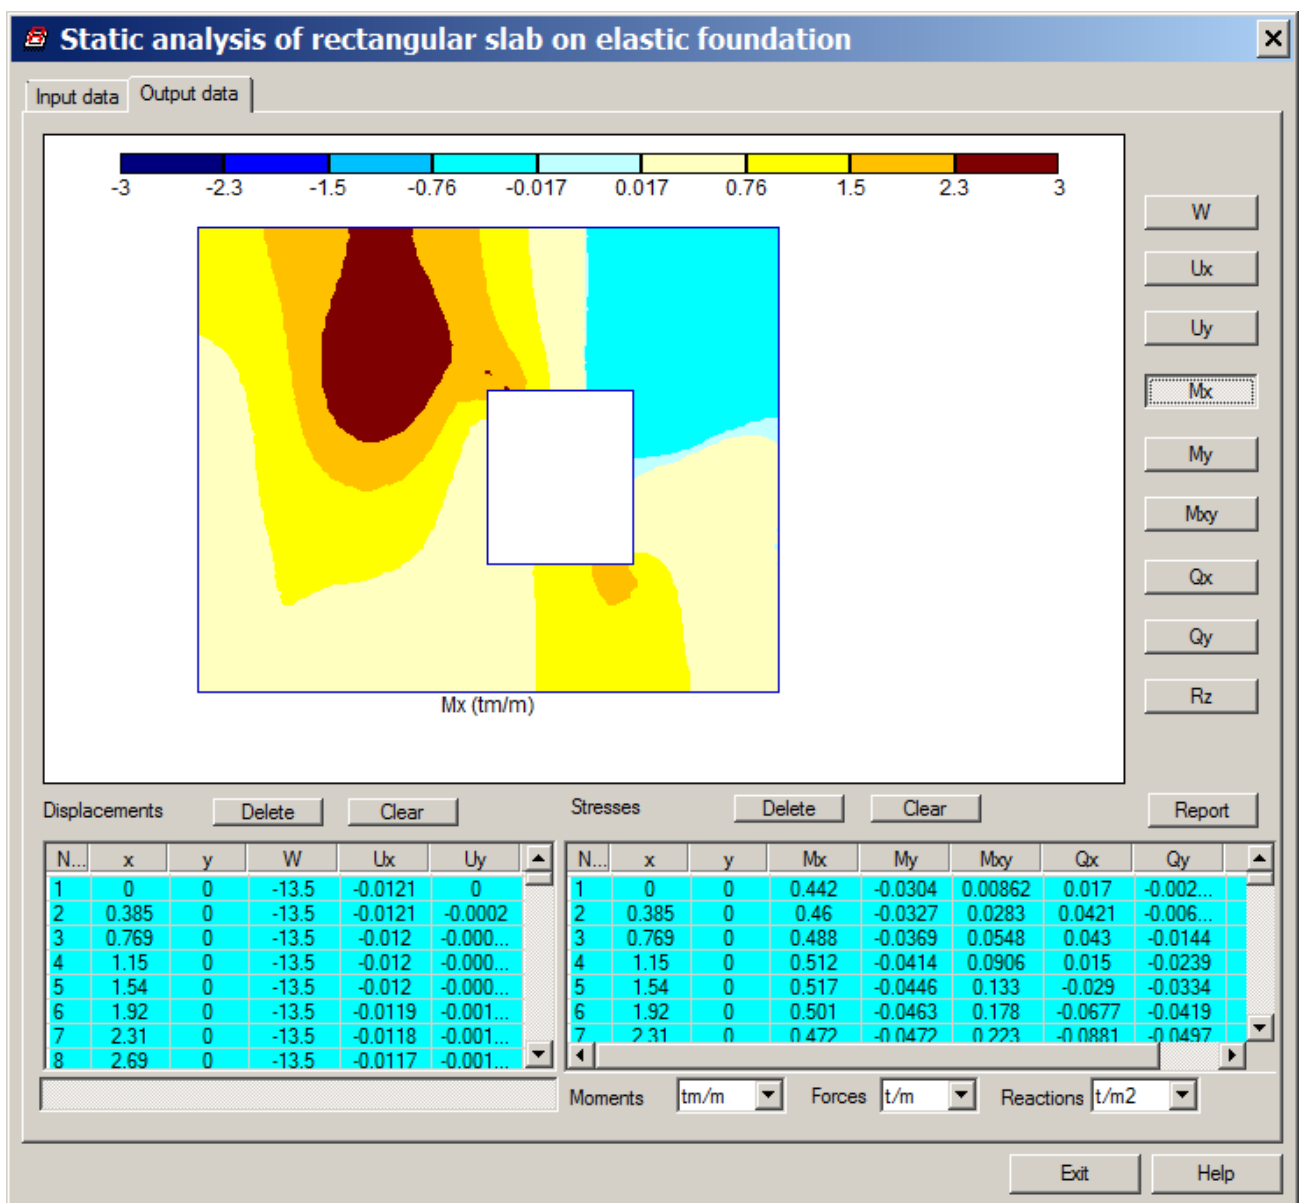


Figure 3.20

Calculation is made by finite element method in displacements. When calculation procedure is complete, the **Output data** tab will be displayed in the dialog box. The following data is calculated:

- vertical displacements **W** and rotation angles **Ux**, **Uy**;
- bending moments **Mx**, **My** и **Mxy**;
- shear forces **Qx**, **Qy**;
- reaction of foundation **Rz**.

This data is presented as contour plots, the values are presented in the table.

– To generate and view certain results, just click appropriate button. All images presented on the screen are automatically placed to the report. When you move the pointer across the contour plot on the image, at the bottom of the dialog box you will see information

about location of the pointer and the value of appropriate contour plot. When you click at any point on the contour plot image, the value of this contour plot will be added to the table.

– **Displacements** and **Stresses** tables for all elements of the model are presented after calculation. To delete all rows in the table, click **Clear** button above the table. Then you could input values of contour plots at certain points (with the help of the pointer), it will reduce the report. It is possible to vary measurement units for moments and reaction of foundation.

– To delete one row from the table, select the row with the pointer and click **Delete** button above the table.

To generate the report file in HTML format, click **Report**.

Rectangular slab

This module enables you to carry out static analysis of rectangular roof slabs and floor slabs. There may be one rectangular opening or a cutout in a slab.

Input data.

Static analysis of rectangular slab

Input data

Slab
 Length (L) 8 m
 Width (H) 6 m
 Thickness 100 cm

Stiffness
 E 2.5e6 t/m2
 Nu 0.2

Opening
 Length (c) 0 m
 Width (d) 0 m
 Origin
 ao 0 m
 bo 0 m

Loads

Diagram showing a rectangular slab with dimensions a and b , and a load P applied at a point. The load is defined by parameters a_1 and b_1 .

$P = 2.1$ t/m

$a = 6$ m, $a_1 = 1.5$ m
 $b = 0.5$ m, $b_1 = 5.5$ m

Add Edit
 Delete loads
 Current All

Table of defined loads

Load type	P	a	b	a1	b1
concentr. (t)	10	1.5	1.6	0.0	0.0
distribut. (t/m2)	2	0.0	0.0	0.0	0.0
rectangul. (t/...)	1.84	1	1	5	4
linear (t/m)	2.1	6	0.5	1.5	5.5

Table of restraints on the current side

Type of restraint	From	To
along Uy	0	6
along Ux	0	6
along Z	0	6

Dimensions m Calculate

Restraints
 Side: left
 Direction of restraint
☐ Z ☐ Ux ☒ Uy
 From 0 m
 To 6 m
 Add Edit
 Remove restraints
 Current On side

Exit Help

Figure 3.21

Slab

In the appropriate boxes define the following values:

- dimensions of slab — length, width, thickness;
- stiffness parameters — modulus of elasticity and Poisson's ratio;
- parameters of opening — length of opening, width of opening and distances from the opening to the nearest left corner of the slab. If there is no opening, you could define its dimensions as equal to zero.

Loads

It is possible to define vertical concentrated and uniformly distributed loads. Uniformly distributed loads may be distributed across the whole slab, across arbitrary rectangular area or along the line on a slab.

- In the **Loads** area, select certain type of load from the four available types (just click appropriate icon), define necessary parameters — load value and other parameters depending on the load type and then click **Add**;
- To modify parameters of load, in the **Table of defined loads** select the row for appropriate load, input new parameters and click **Edit**;
- To delete load, in the **Table of defined loads** select the row for appropriate load, under **Delete loads** click **Current**. To delete all loads, click **All**.

Boundary conditions

Define line segments with certain types of boundary conditions on one side of a slab or on several sides of a slab, that is, restraints should be imposed. The following types of restraints are allowed:

- Z — linear restraint along the axis that is orthogonal to the slab surface;
 - Ux — restraint against rotation about the axis that is parallel to the slab length;
 - Uy — restraint against rotation about the axis that is parallel to the slab width.
-
- In the **Restraints** area, in the drop-down list, define the side of the slab where boundary conditions should be applied.
 - With an option button, define direction along which displacements should not be allowed. In the **From** and **To** boxes, define distances to restraints, then click **Add**. If the values in the **From** and **To** boxes coincide, restraint is supposed at this point.
 - To modify distances to restraint, select appropriate row in the **Table of restraints on the current side** table, define new parameters and click **Edit**.
 - To remove restraints, in the **Table of restraints on the current side** table, select appropriate row and click **Current**. To remove all restraints on the current side of a slab, click **On side**.

When all input data is defined, click **Calculate**.

Output data.

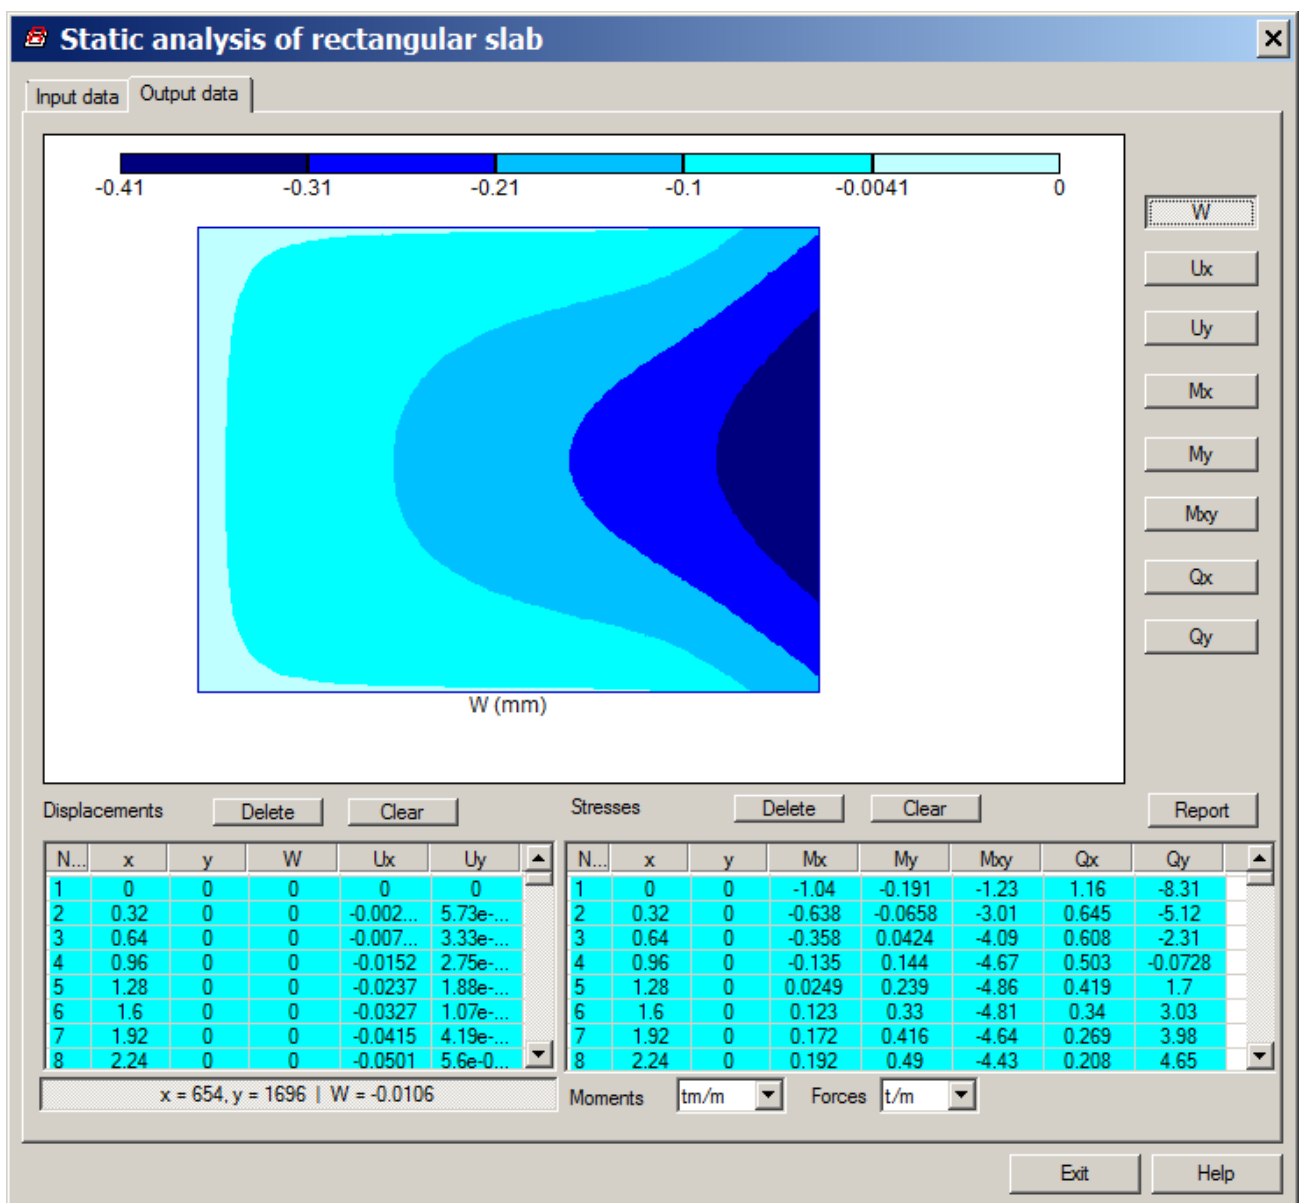


Figure 3.22

Calculation is made by finite element method in displacements. When calculation procedure is complete, the **Output data** tab will be displayed in the dialog box. The following data is calculated:

- vertical displacements **W** and rotation angles **Ux**, **Uy**;
- bending moments **Mx**, **My** and **Mxy**;
- shear forces **Qx**, **Qy**.

This data is presented as contour plots, the values are presented in the table.

– To generate and view certain results, just click appropriate button. All images presented on the screen are automatically placed to the report. When you move the pointer across the contour plot on the image, at the bottom of the dialog box you will see information about location of the pointer and the value of appropriate contour plot. When you click at any point on the contour plot image, the value of this contour plot will be added to the table.

– **Displacements** and **Stresses** tables for all elements of the model are presented after calculation. To delete all rows in the table, click **Clear** button above the table. Then you could input values of contour plots at certain points (with the help of the pointer), it will reduce the report. It is possible to vary measurement units.

– To delete one row from the table, select the row with the pointer and click **Delete** button above the table.

To generate the report file in HTML format, click **Report**.

Wall-beam

This module enables you to carry out static analysis of rectangular wall-beam. There may be one rectangular opening or a cutout.

Input data.

Static analysis of rectangular wall-beam

Input data

Dimensions
 Width (L) m
 Height (H) m
 Thickness cm

Stiffness
 E t/m2
 Nu
☒ Ro t/m3

Opening
 Width (c) m
 Height (d) m

Origin
 ao m
 bo m

Loads
 Direction of load
☒ Y ☐ X

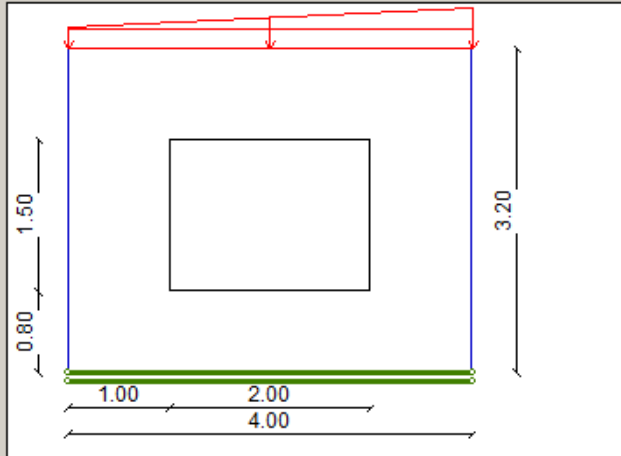


Table of defined loads

Load type	P	P1	a	b
trapez. (t/m)	2	3.8	0	4
distribut. (t/m)	1.2	0.0	0.0	0.0

Table of restraints on the current side

Type of restraint	From	To
along X	0	4
along Y	0	4

Restraints
 Side:
 Direction of restraint
☒ X ☐ Y
 From m
 To m
 Add Edit
 Delete restraints
 Current On side

Units Force Load density

Calculate

Exit Help

Figure 3.23

Wall-beam

In the appropriate boxes define the following values:

- dimensions of wall-beam — length, width, thickness;
- stiffness parameters — modulus of elasticity and Poisson's ratio; material density (to automatically take account of dead weight);
- parameters of opening — length of opening, width of opening and distances from the opening to the bottom left corner of the wall-beam. If there is no opening, you could define its dimensions as equal to zero.

Loads

- In the **Loads** area, define direction of load, then select certain type of load from the four available types (just click appropriate icon), define necessary parameters — load value and other parameters depending on the load type and then click **Add**;
- To modify parameters of load, in the **Table of defined loads** select the row for appropriate load, input new parameters and click **Edit**;

– To delete load, in the **Table of defined loads** select the row for appropriate load, under **Delete loads** click **Current**. To delete all loads, click **All**.

Boundary conditions

- In the **Restraints** area, in the drop-down list, define the side of the wall-beam where boundary conditions should be applied.
- With an option button, define direction along which displacements should not be allowed (X — linear restraint along the horizontal axis, Y — linear restraint along the vertical axis). In the **From** and **To** boxes, define distances to restraints, then click **Add**. If the values in the **From** and **To** boxes coincide, restraint is supposed at this point.
- To modify distances to restraint, select appropriate row in the **Table of restraints on the current side** table, define new parameters and click **Edit**.
- To remove restraints, in the **Table of restraints on the current side** table, select appropriate row or click **Current**. To remove all restraints on the current side of a slab, click **On side**.

When all input data is defined, click **Calculate**.

Output data.

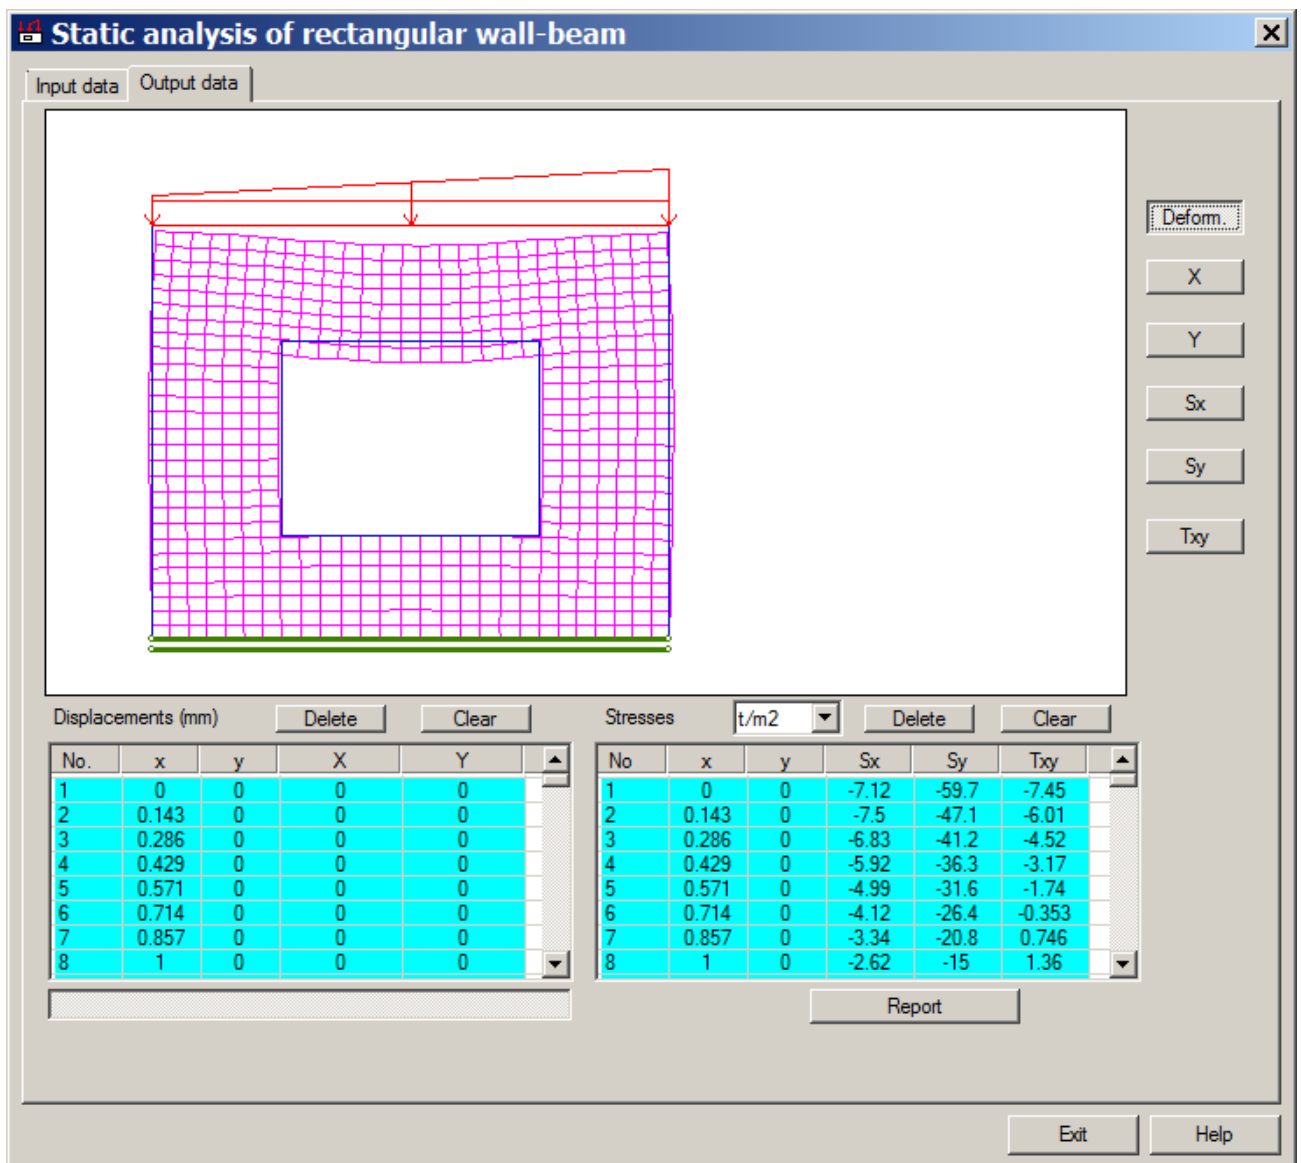


Figure 3.24

– To generate and view certain results (such as deformed shape, contour plots of vertical Y and horizontal X displacements, contour plots of normal Sx, Sy and shear Txy stresses), just click appropriate button. All images presented on the screen are automatically placed to the report. When you move the pointer across the contour plot on the image, at the bottom of the dialog box you will see information about location of the pointer and the value of appropriate contour plot. When you click at any point on the contour plot image, the value of this contour plot will be added to the table.

– **Displacements** and **Stresses** tables for all elements of the model are presented after calculation. To delete all rows in the table, click **Clear** button above the table. Then you could input values of contour plots at certain points (with the help of the pointer), it will reduce the report. It is also possible to vary measurement units.

– To delete one row from the table, select the row with the pointer and click **Delete** button above the table.

To generate the report file in HTML format, click **Report**.

Shell on rectangular plan

This module enables you to carry out static analysis of convex parabolic and spherical shells that are rectangular in plan.

Input data.

Static analysis of shell on rectangular plan

Input data

Shape: ☒ parabolic ☐ spherical

Dimensions:

Length (L): 4 m f1: 1.5 f2: 0.5 m

Width (H): 2 m ☐ R1: 0.0 ☐ R2: 0.0 m

Thickness: 2.5 cm

Stiffness:

E: 3.e6 t/m2 Nu: 0.2

Parameters of support contour:

☐ section dimensions ☒ numerical

by length by width by length by width

Es, t/m2: 0.0 0.0 EF: 10000 20000

Bs, m: 0.0 0.0 EI: 260000 380000

Hs, m: 0.0 0.0

Loads

Direction of load: ☒ orthogonally ☐ vertically

Diagram showing a shell on a rectangular plan with a load P applied.

P = 2 t/m2

a = 0.0 a1 = 0.0 m

b = 0.0 b1 = 0.0 m

Add Edit

Delete loads: Current All

Table of defined loads

Load type	T...	P	a	b	a1	b1
concentr. (t)	0	10	1.5	0.6		
distribut. (t/m2)	0	2				

Table of restraints on the current side

Type of restraint	From	To
along Z	0	0
along X	0	0
along Y	0	0
along Z	4	4

Dimensions: m Calculate

Restraints

Side: front

Direction of restraint: ☒ Z ☐ X ☐ Y

From: 0 m To: 0 m

Add Edit

Delete restraints: Current On side

Exit Help

Figure 3.25

Shell

In the appropriate boxes define the following values:

- dimensions in plan (length, width), thickness of shell;
- stiffness parameters — modulus of elasticity and Poisson's ratio;
- parameters for the surface — shape of the surface, rise and radius for left and right sides (f2, R2) or for front and back sides (f1, R1).

If there is a support contour, define its stiffness properties – modulus of elasticity, width and height or numerical stiffness.

Loads

- In the **Loads** area, define direction of load, then select certain type of load from the three available types (just click appropriate icon), define necessary parameters — load value and other parameters depending on the load type and then click **Add**;
- To modify parameters of load, in the **Table of defined loads** select the row for appropriate load, input new parameters and click **Edit**;
- To delete load, in the **Table of defined loads** select the row for appropriate load, under **Delete loads** click **Current**. To delete all loads, click **All**.

Boundary conditions

Define line segments with certain types of boundary conditions on one side or on several sides, that is, restraints should be imposed. The following types of restraints are allowed:

- Z — linear restraint along the vertical axis;
- X, Y — linear restraints along appropriate horizontal axis.

- In the **Restraints** area, in the drop-down list, define the side where boundary conditions should be applied.
- With an option button, define direction along which displacements should not be allowed. In the **From** and **To** boxes, define distances to restraints, then click **Add**. If the values in the **From** and **To** boxes coincide, restraint is supposed at this point.
- To modify distances to restraint, select appropriate row in the **Table of restraints on the current side** table, define new parameters and click **Edit**.
- To remove restraints, in the **Table of restraints on the current side** table, select appropriate row or click **Current**. To remove all restraints on the current side of a slab, click **On side**.

When all input data is defined, click **Calculate**.

Output data.

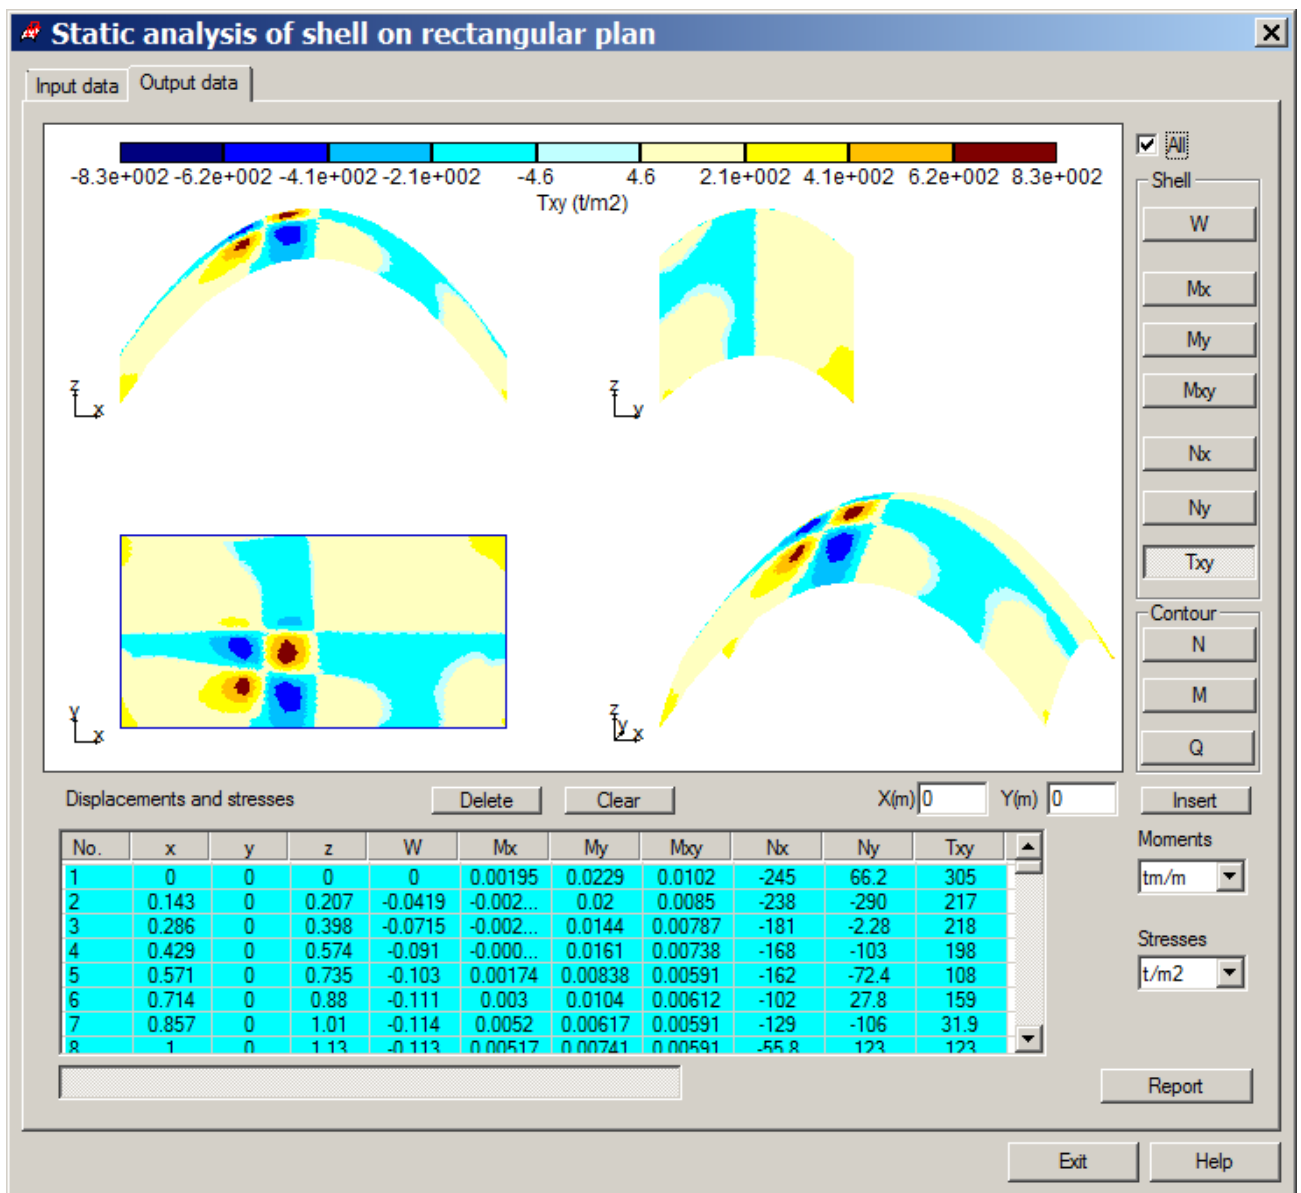


Figure 3.26 a)

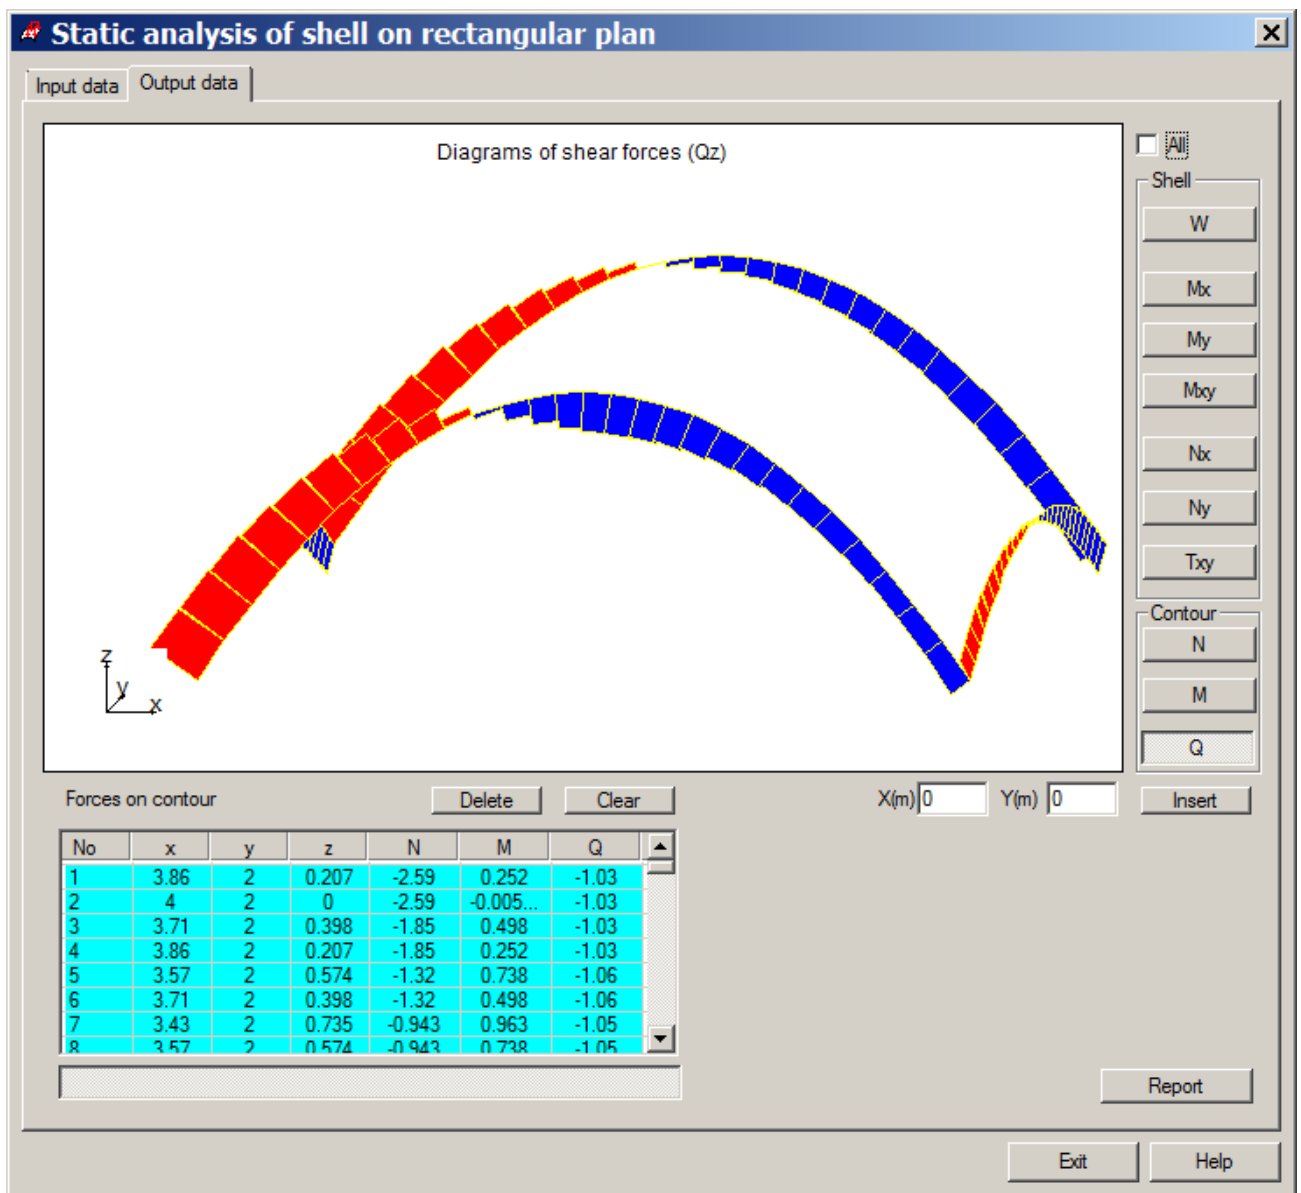


Figure 3.26 b)

Calculation is made by finite element method in displacements. When calculation procedure is complete, the **Output data** tab will be displayed in the dialog box. The following data is calculated:

- vertical displacements W ;
- bending moments M_x , M_y and torsion moment M_{xy} ;
- normal stresses N_x , N_y and shear stresses T_{xy} ;
- forces N , M , Q in support contour.

This data is presented as contour plots (W , M_x , M_y , M_{xy} , N_x , N_y , T_{xy}) or diagrams (N , M , Q), the values are presented in the table.

– Contour plots may be presented in different ways (it depends on the **All** check box status - on/off): 1) one by one in certain projection (XOY , XOZ , YOZ) or in dimetric projection; 2) all contour plots together. To generate certain contour plot, just click

appropriate button. If the **All** check box is not selected, then when you click any button for a certain contour plot, the plots will change each other. To simultaneously display contour plots or diagrams in all three planes and in dimetric projection, select the **All** check box. The data may be added to the table only from projection on the XOY-plane (in plan). In this mode when you move the pointer across the contour plot on the image, at the bottom of the dialog box you will see information about location of the pointer and the value of appropriate contour plot. When you click at any point on the contour plot image, the value of this contour plot will be added to the table. To add result values to the table, you could also define coordinates of a point in appropriate boxes and click **Insert**. The report file contains only one projection for every contour plot or diagram, that is, the latest image visualized on the screen for the certain parameter.

– **Displacements and stresses** and **Forces on contour** tables for all elements of the model are presented after calculation. To delete all rows in the table, click **Clear** button above the table. Then you could input values of contour plots at certain points (with the help of the pointer), it will reduce the report. It is possible to vary measurement units for moments and stresses.

– To delete one row from the table, select the row with the pointer and click **Delete** button above the table.

To generate the report file in HTML format, click **Report**.

Shell on circular plan

This module enables you to carry out static analysis of convex parabolic, spherical and conic shells that are circular in plan.

Input data.

In this dialog box, on the **Input data** tab, you could define information about geometric properties, physical properties of a shell and support contour, boundary conditions along the contour, type and direction of load, load value and location. Data about defined loads and boundary conditions will be displayed in appropriate tables and on schematic presentation. To define measurement units, select them from appropriate lists. According to defined data, the area is divided into rectangular finite elements and design model is generated.

Calculation with account of geometrically nonlinear deformations is available. A simple step-type method is implemented.

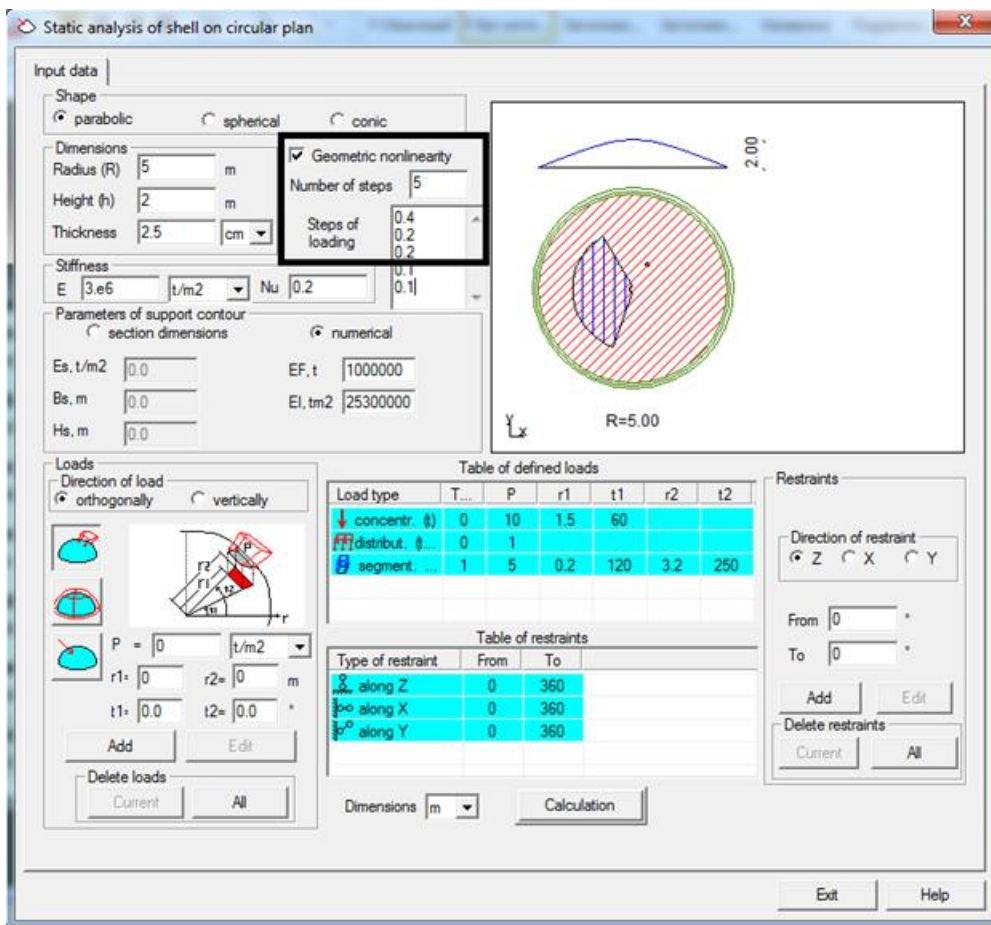


Figure 3.27

Shell

In the appropriate boxes define the following values:

- dimensions — radius in plan, rise (height), thickness of shell;
- stiffness parameters — modulus of elasticity and Poisson's ratio;
- parameters for the surface — shape of the surface (parabolic, spherical, conical).

If there is a support contour, define its stiffness properties — modulus of elasticity, width and height or numerical stiffness.

Loads

- In the **Loads** area, define direction of load, then select certain type of load from the three available types (just click appropriate icon), define necessary parameters — load value and other parameters depending on the load type and then click **Add**;
- To modify parameters of load, in the **Table of defined loads** select the row for appropriate load, input new parameters and click **Edit**;
- To delete load, in the **Table of defined loads** select the row for appropriate load, under **Delete loads** click **Current**. To delete all loads, click **All**.

Boundary conditions

Define segments with certain types of boundary conditions, that is, restraints should be imposed. The following types of restraints are allowed:

- Z — linear restraint along the vertical axis;
- X, Y — linear restraints along appropriate horizontal axis.

- With an option button, define direction along which displacements should not be allowed. In the **From** and **To** boxes, define distances to restraints, then click **Add**. If the values in the **From** and **To** boxes coincide, restraint is supposed at this point.
- To modify distances to restraint, select appropriate row in the **Table of restraints on the current side** table, define new parameters and click **Edit**.
- To remove restraints, in the **Table of restraints on the current side** table, select appropriate row or click **Current**. To remove all restraints on the current side of a slab, click **On side**.

When all input data is defined, click **Calculate**.

Output data.

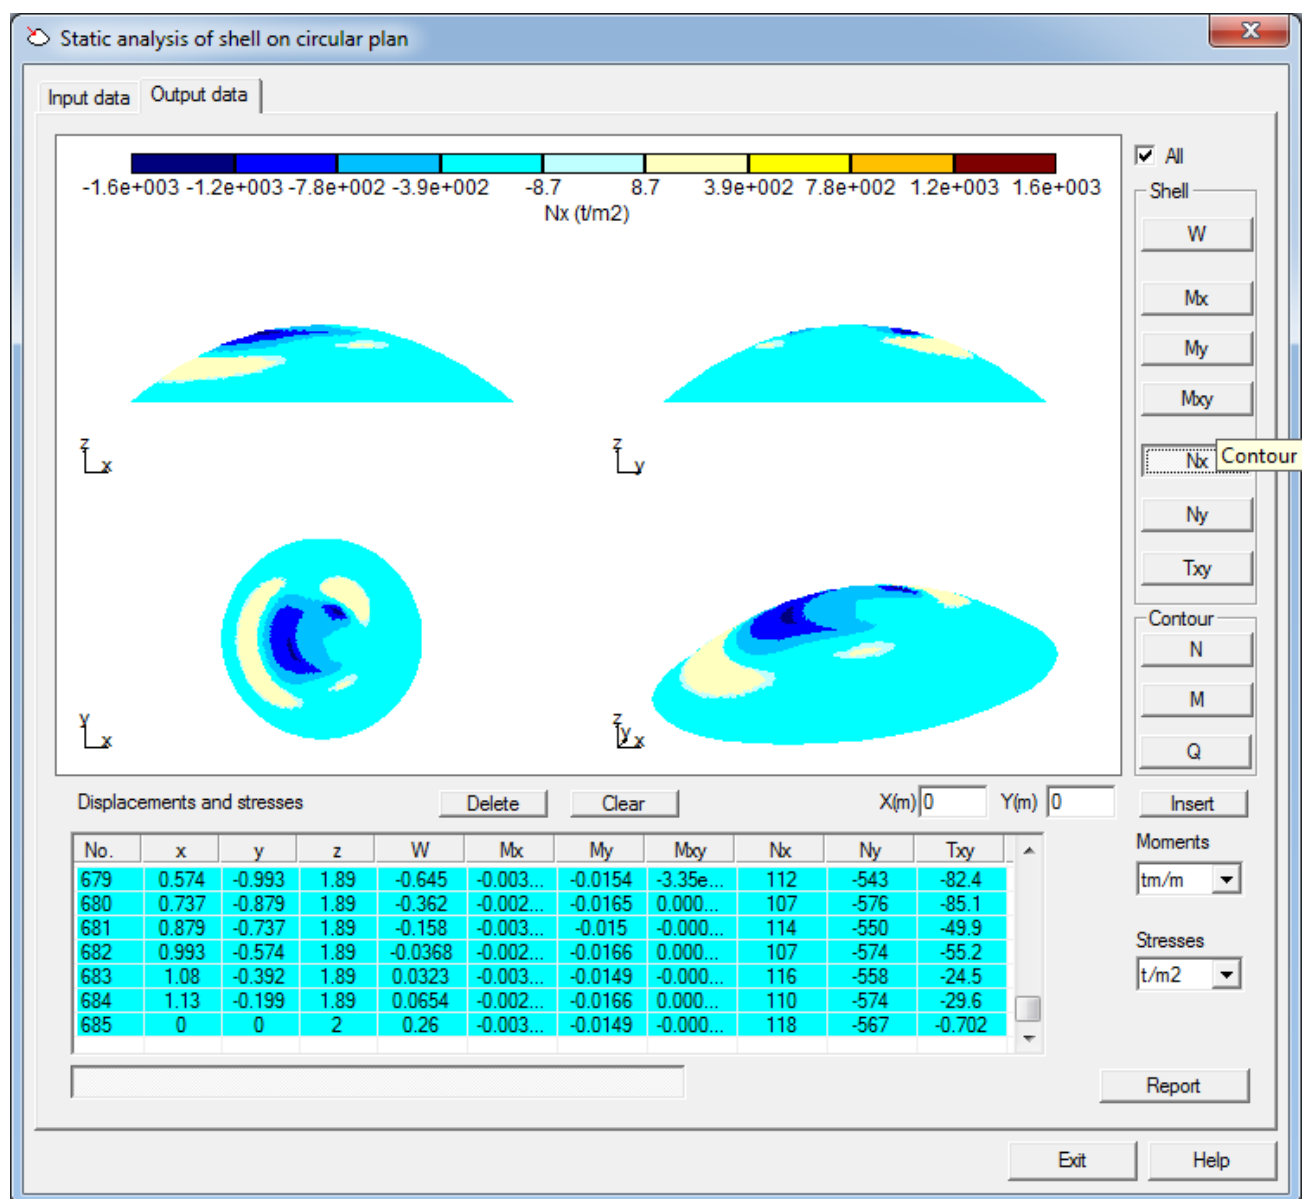


Figure 3.28 a)

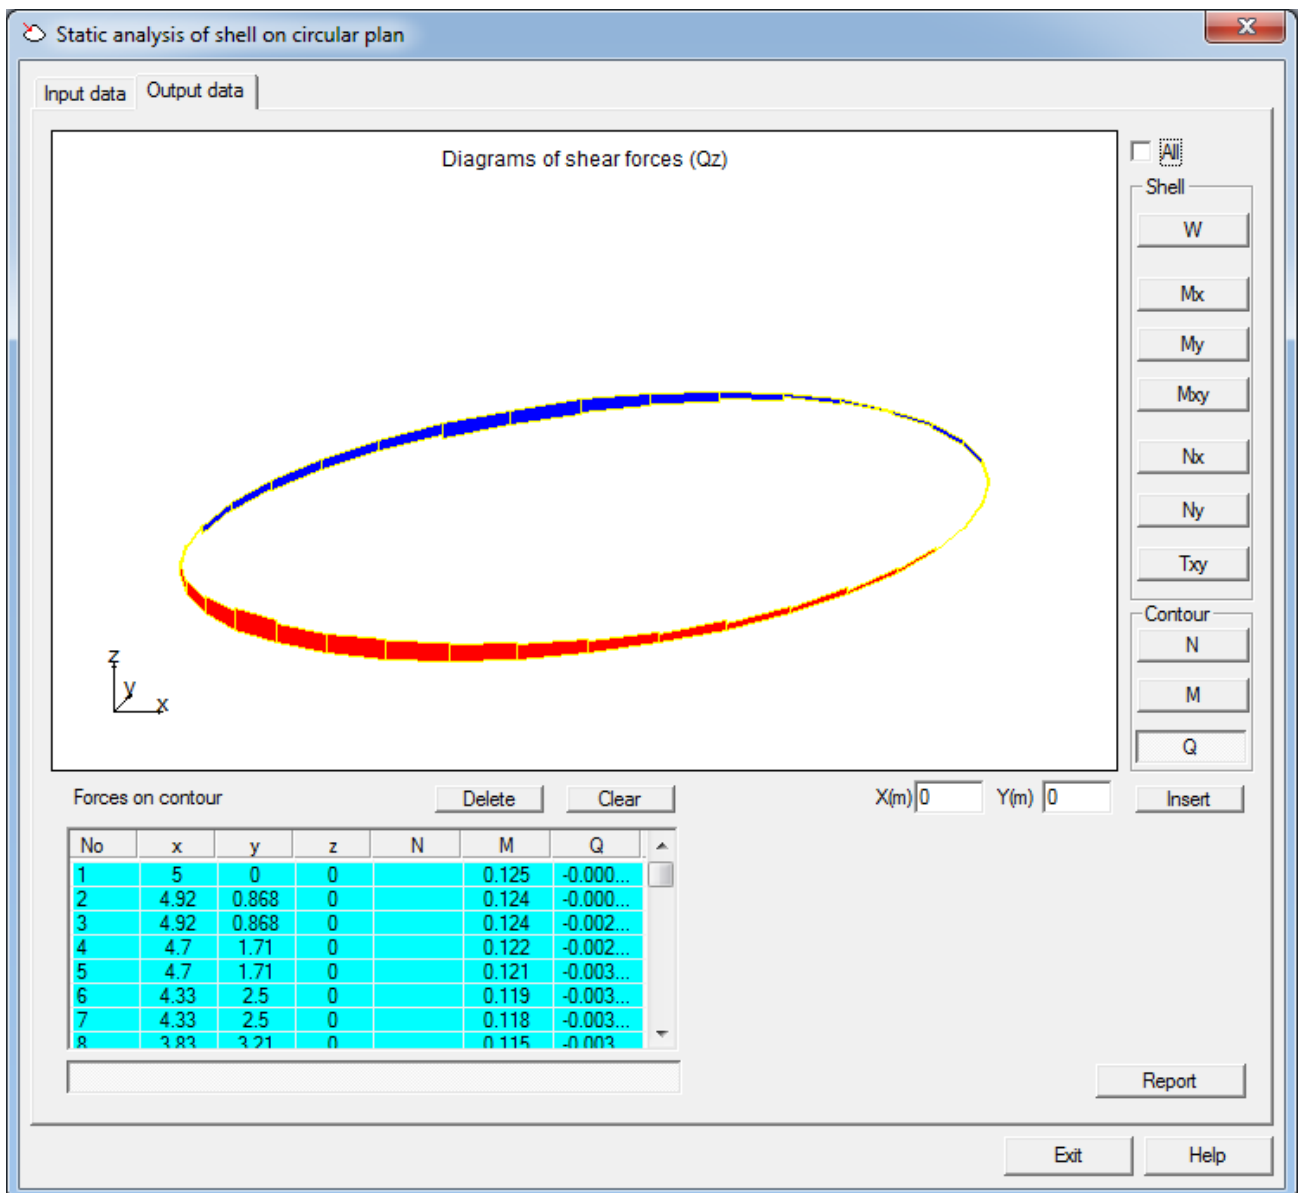


Figure 3.28 b)

Calculation is made by finite element method in displacements. When calculation procedure is complete, the **Output data** tab will be displayed in the dialog box. The following data is calculated:

- vertical displacements W ;
- bending moments M_x , M_y and torsion moment M_{xy} ;
- normal stresses N_x , N_y and shear stresses T_{xy} ;
- forces N , M , Q in support contour.

This data is presented as contour plots (W , M_x , M_y , M_{xy} , N_x , N_y , T_{xy}) or diagrams (N , M , Q), the values are presented in the table.

– Contour plots may be presented in different ways (it depends on the **All** check box status - on/off): 1) one by one in certain projection (XOY, XOZ, YOZ) or in dimetric projection; 2) all contour plots together. To generate certain contour plot, just click appropriate button. If the **All** check box is not selected, then when you click any button for a certain contour plot, the plots will change each other. To simultaneously display contour plots or diagrams in all three planes and in dimetric projection, select the **All** check box. The data may be added to the table only from projection on the XOY-plane (in plan). In this mode when you move the pointer across the contour plot on the image, at the bottom of the dialog box you will see information about location of the pointer and the value of appropriate contour plot. When you click at any point on the contour plot image, the value of this contour plot will be added to the table. To add result values to the table, you could also define coordinates of a point in appropriate boxes and click **Insert**. The report file contains only one projection for every contour plot or diagram, that is, the latest image visualized on the screen for the certain parameter.

– **Displacements and stresses** and **Forces on contour** tables for all elements of the model are presented after calculation. To delete all rows in the table, click **Clear** button above the table. Then you could input values of contour plots at certain points (with the help of the pointer), it will reduce the report. It is possible to vary measurement units for moments and stresses.

– To delete one row from the table, select the row with the pointer and click **Delete** button above the table.

To generate the report file in HTML format, click **Report**.

Mode shapes and frequencies of natural vibrations in cantilever

This module enables you to calculate mode shapes and frequencies of natural vibrations in cantilever. Method for iteration of subspace is applied to solve the eigenvalue problem.

Input data.

To define input data, follow these steps:

- Output data.**

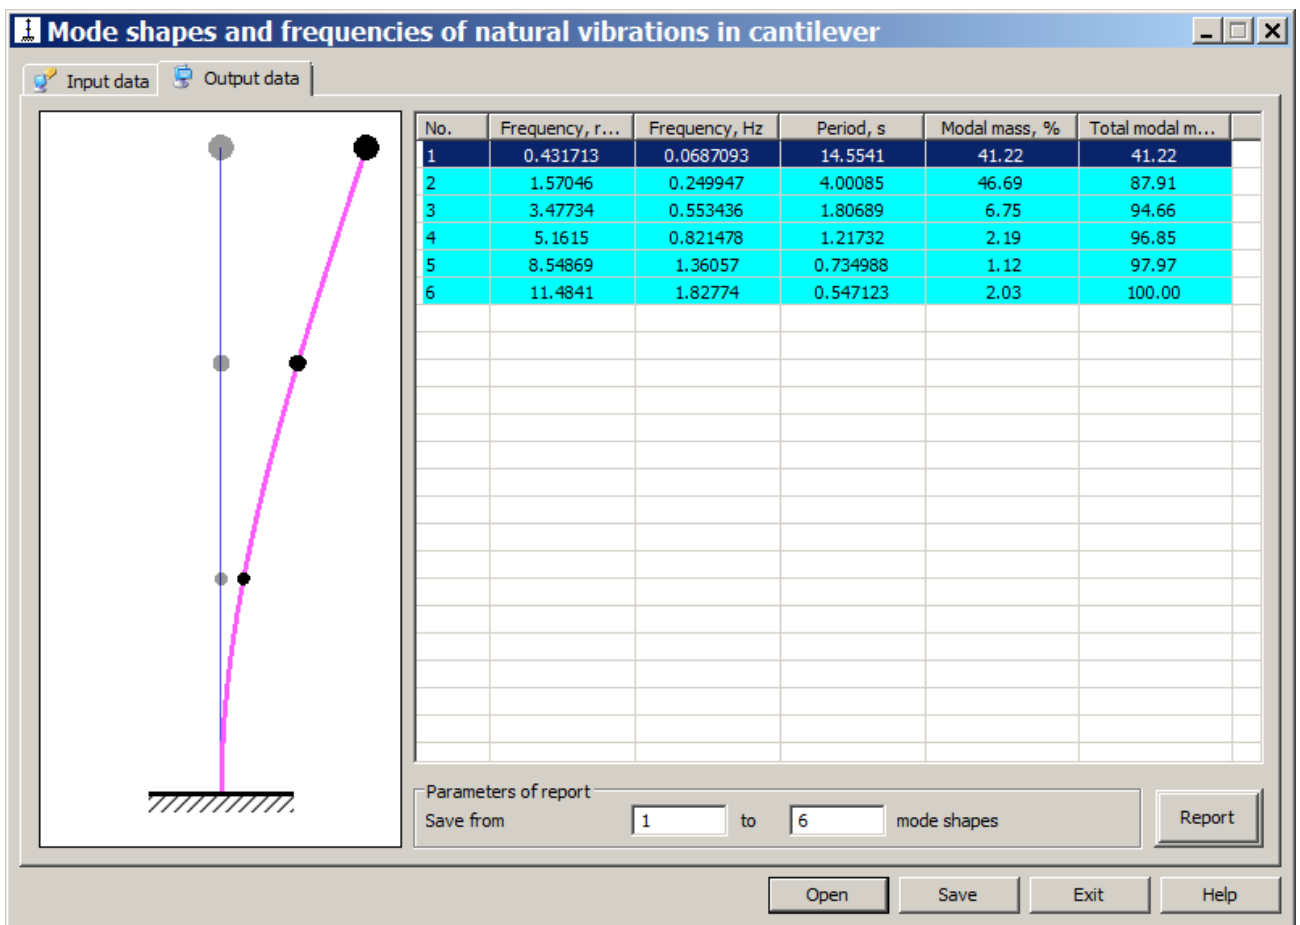


Figure 3.30

- On the **Output data** tab you will find mode shapes of natural vibrations. For every mode shape the following data is presented: angular frequency ω (rad/s), technical frequency f (Hz), period of vibrations T (s), modal mass (%) and total modal mass (%).
- In the **Parameters of report** area it is possible to define mode shapes for which results should be presented.
- To present a report document in HTML format, click **Report**.

Stability factors and buckling modes in cantilever

This module enables you to calculate stability factors and buckling modes. Buckling modes are computed in classical definition for elastic system. It is supposed that displacements are rather small and all external loads applied to the model (as well as internal forces) will increase in proportion to parameter λ . Minimum value of parameter λ (for which stiffness matrix for the system will not be positive-defined any more) is critical; this λ value is called 'stability factor'. Three stability factors and mode shapes appropriate for them are computed.

Input data.

Stability factors and buckling modes in cantilever

Input data

Measurement units: **t**

Define tiers

Height: **3.2** m

Force: **7** t

No. of current tier: **1**

Axial stiffness: **1000** t

Flexural stiffness: **2000** tm²

Add Edit Delete

Tier No.	Height	Force	Axial stiffness	Flexural stiffness
1	3.2	7	1000	2000
2	3.2	14	1000	2000
3	3.2	21	1000	2000

Normalization of buckling modes

☒ by unit ☐ orthonormalization

Calculate

Open Save Exit Help

Figure 3.31

To define input data, follow these steps:

- Define measurement units for stiffness and mass - **t** or **kN**.
- In the **Height** box, define the height of the tier in **m**.
- In the **Force** box, define the force at the level of tier top.
- In the **Axial stiffness** box, define the axial stiffness for the tier.
- In the **Flexural stiffness** box, define the flexural stiffness for the tier.
- To add defined tier, click **Add**.
- To modify parameters for the current tier, click **Edit**.
- To select a tier, just click appropriate row in the table of tiers.
- To delete the current tier, click **Delete**.
- To define normalization for mode shapes of natural vibrations, select appropriate option.
- When the input data is defined, click **Calculate**.
- Select the problem, if required.

Output data.

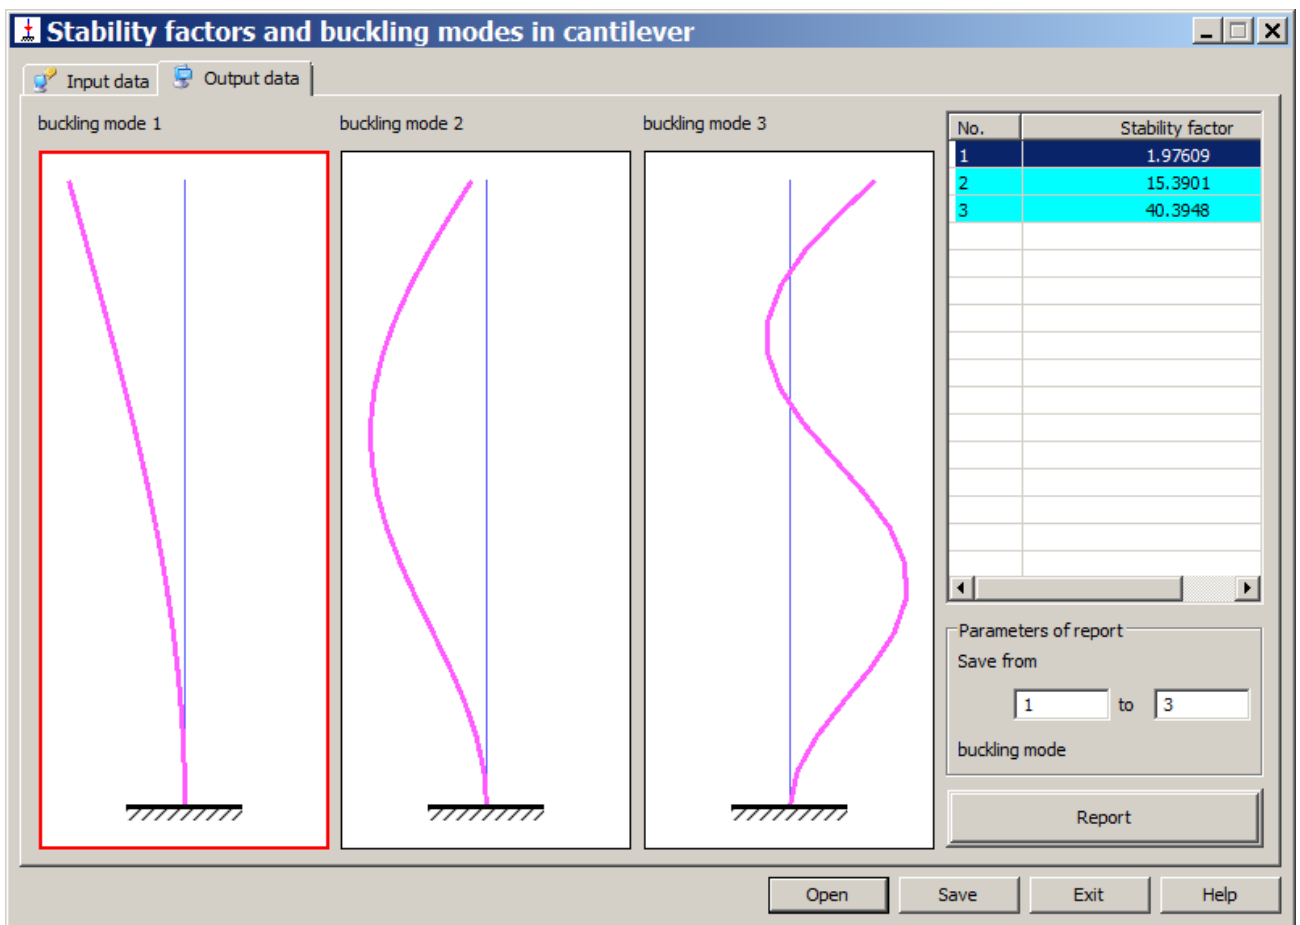


Figure 3.32

- On the **Output data** tab you will find up to three buckling modes. Stability factor is presented in the table for every buckling mode.
- In the **Parameters of report** area it is possible to define buckling modes for which results should be presented.
- To present a report document in HTML format, click **Report**.

Mode shapes and frequencies of natural vibrations in continuous beam

This module enables you to calculate mode shapes and frequencies of natural vibrations in multispans continuous beam (up to five spans with two cantilevers). Sections of spans may differ. It is possible to consider compliance of supports. Method for iteration of subspace is applied to solve the eigenvalue problem.

Input data.

Mode shapes and frequencies of natural vibrations in continuous beams

Input data | Output data

Parameters

Number of spans: **2**

☒ Left cantilever 3.0 m 1e3 tm2 0.3 t/m

1st span 6.0 m 2e3 tm2 0.3 t/m

2nd span 4.0 m 1.5e3 tm2 0.3 t/m

3rd span 0.0 m 0.0 tm2 0.0 t/m

4th span 0.0 m 0.0 tm2 0.0 t/m

5th span 0.0 m 0.0 tm2 0.0 t/m

☒ Right cantilever 2 m 1.e3 tm2 0.3 t/m

Options

Units of measurement: **t**

☐ Uniform beam

Supports

Type: **Current support: 3**

Stiffness for translation: 20000 t/m

Stiffness for rotation: 0.0 tm

Masses

Current span: **6**

P = 10 t/m

P1 = 0.0 t/m

a = 0.0 m

b = 0.0 m

Mass: **Add** **Edit**

Table of defined masses for the current load case

Mass type	Span	P	P1	a	b
distrib. mass	0	10	0	0	0
distrib. mass	2	10	0	0	0
distrib. mass	6	10	0	0	0

Calculate

Delete load

of load case **from span** **current**

☐ Account of dead weight in load case

Open **Save** **Exit** **Help**

Figure 3.33

To define input data, follow these steps:

- In the **Number of spans** drop-down list, define number of spans and, if required, define left or right cantilevers with appropriate check boxes.
- In the **Options** area, define measurement units for load and stiffness - **t** or **kN**.
- In the appropriate boxes, define the span (cantilever) length in **m** and flexural stiffness in a span. To define the same flexural stiffness for all spans and cantilevers, select the **Uniform beam** check box.
- Define support to which boundary conditions should be applied. To define such support, either click it directly in the schematic presentation or select it in the **Supports** area, in the **Current support** drop-down list.
- Then define the type of boundary condition (just click appropriate icon in the **Supports** area) and it will be displayed in the schematic presentation. If required, in the **Supports / Stiffness** area, define stiffness for translation or rotation.
- In the **Current span** box or in schematic presentation, select spans where the mass should be applied to (it will be displayed in schematic presentation window).
- Select one of the four available mass types (just click appropriate button).
- Define mass values (P, P1), distance to beginning/end of mass application (a,b) (if required) and click **Add**.
- To modify parameters for the mass, select the mass in the table, modify its parameters in the appropriate boxes and click **Edit**.

- To delete mass, select the mass in the table. To delete current mass, in the **Delete load** area, click **current**. To delete all masses from the current span, in the **Delete load** area, click **from span**.
- To consider the dead weight in the current load case, select the **Account of dead weight in load case** check box.
- When the input data is defined, click **Calculate**.
- Select the problem, if required.

Output data.

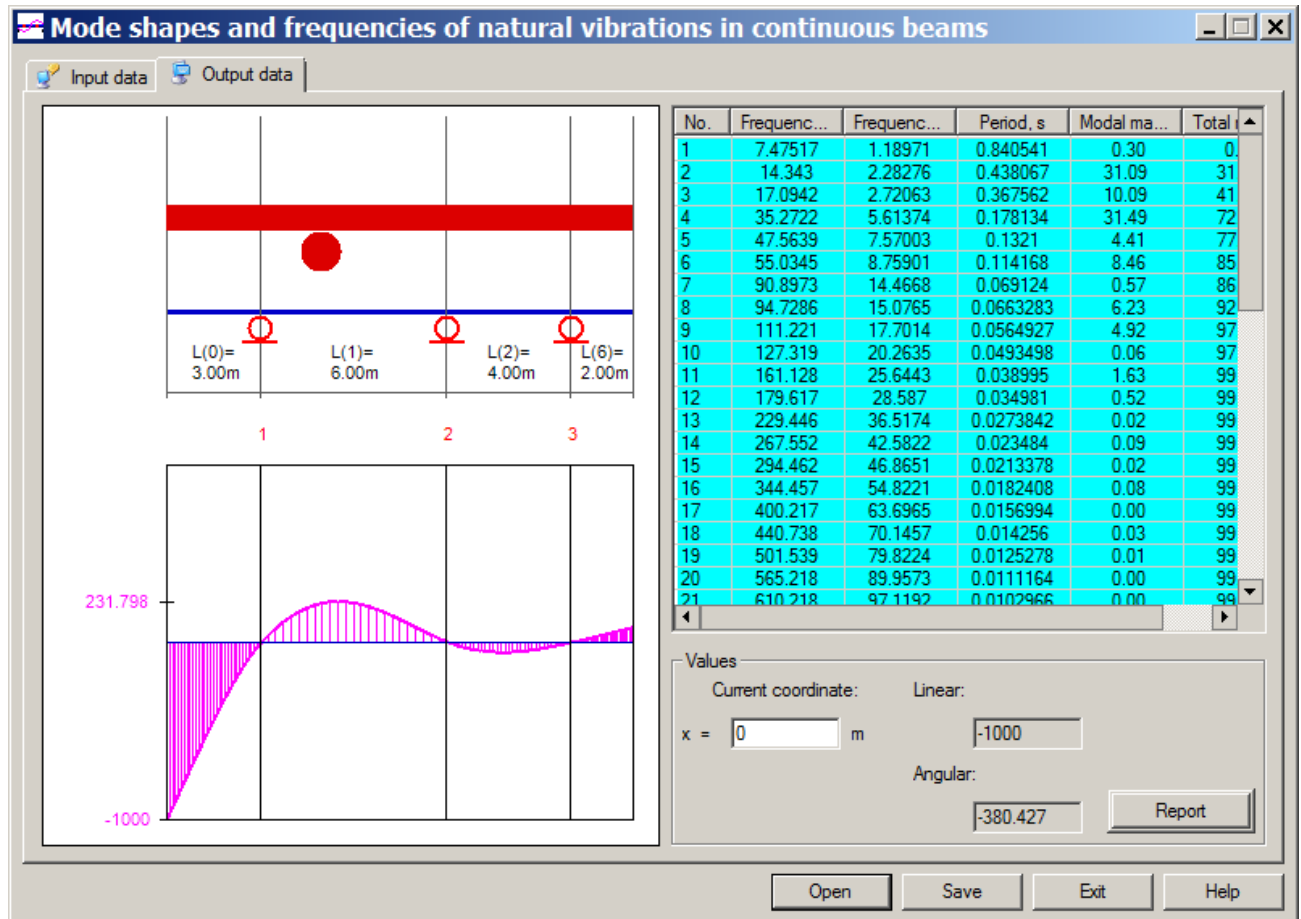


Figure 3.34

- On the **Output data** tab you will find mode shapes of natural vibrations. For every mode shape the following data is presented: angular frequency ω (rad/s), technical frequency f (Hz), period of vibrations T (s), modal mass (%) and total modal mass (%).
- To present a report document in HTML format, click **Report**.

Cable and string

Cable and string

This module enables you to analyse cable and strings according to requirements presented in the Design-theoretical reference book for structural designer.

There are five types for calculation.

For cables:

- calculation type 1 – by specified length of blank S_0 ;
- calculation type 2 – by dip f_q from dead weight q at mid-span;
- calculation type 3 – by dip f_K from arbitrary load at arbitrary point K .

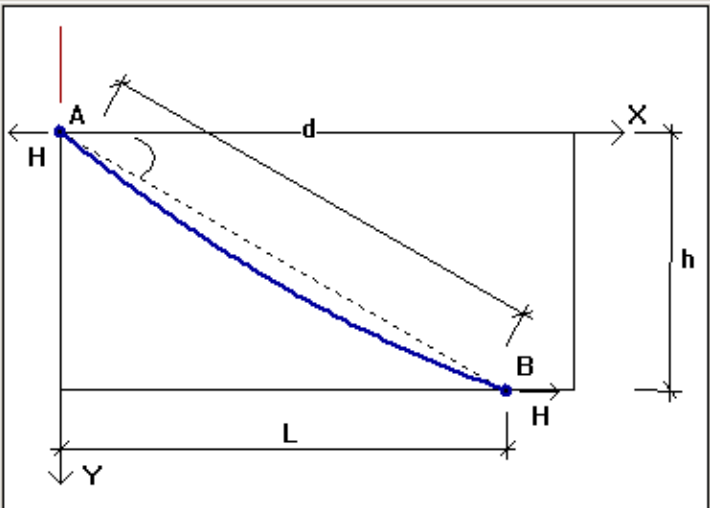
For strings:

- calculation type 4 – string with arbitrary load;
- calculation type 5 – string prestressed by force N , arbitrary load.

The following load patterns are available: concentrated load, different types of distributed loads, as well as their combinations.

Cable and string

Input data Output data



Span L , m: 60

Difference between support heights h , m: 34.64

Axial stiffness EF , t: 25536

Parameters of load

q 0.5 t/m $c1$ 30 m

p 0.42 t/m $c2$ 60 m

F 0 T 0 G 0 m

Length of blank S_0 , m: 0

Dip at mid-span f_q , m: 0

Dip at point K f_k , m: 6

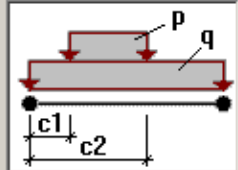
Distance to point K X_k , m: 20

Prestress N , t: 0

Calculation type

3. By dip f_k from arbitrary load at arbitrary point K

Load pattern



Model 2

Select

Redraw Calculate More.. Report Help Exit

Figure 3.35

Calculation type 1.

Cable. By length of blank $S_0 > d$ (d – length of chord) and allowed load pattern, determine thrust, form of equilibrium and axial force.

Calculation type 2.

Cable. By dip f_q at midspan from the dead weight and allowed load pattern, determine initial dip, thrust, length of blank, form of equilibrium and axial force.

Calculation type 3.

Cable. By dip f_k at arbitrary point K with arbitrary load pattern, determine form of equilibrium, initial thrust, length of blank and axial force.

Calculation type 4.

String. Length of blank is equal to length of chord $S_0 = d$. Determine thrust and force in string for the specified load pattern.

Calculation type 5.

String. Length of blank is equal to length of chord $S_0 = d$. Determine thrust and force in prestressed string for the specified load pattern.

Design model of the cable is located in the X and Y axes. X-axis is directed left-right. Y-axis is directed top-down.

Important.

If calculation type 3 is specified, then dip of the cable at point **K** is calculated automatically for the specified data. If the specified dip f_K is less than dip of the same cable at point **K**, then calculation procedure is terminated and the program displays the following message: 'For selected type of calculation with the specified parameters of cable and load pattern, specified value of dip at point K should be not less than [Yk] m'. In this case, new value will be displayed in the box for dip value; it is suggested for calculation procedure.

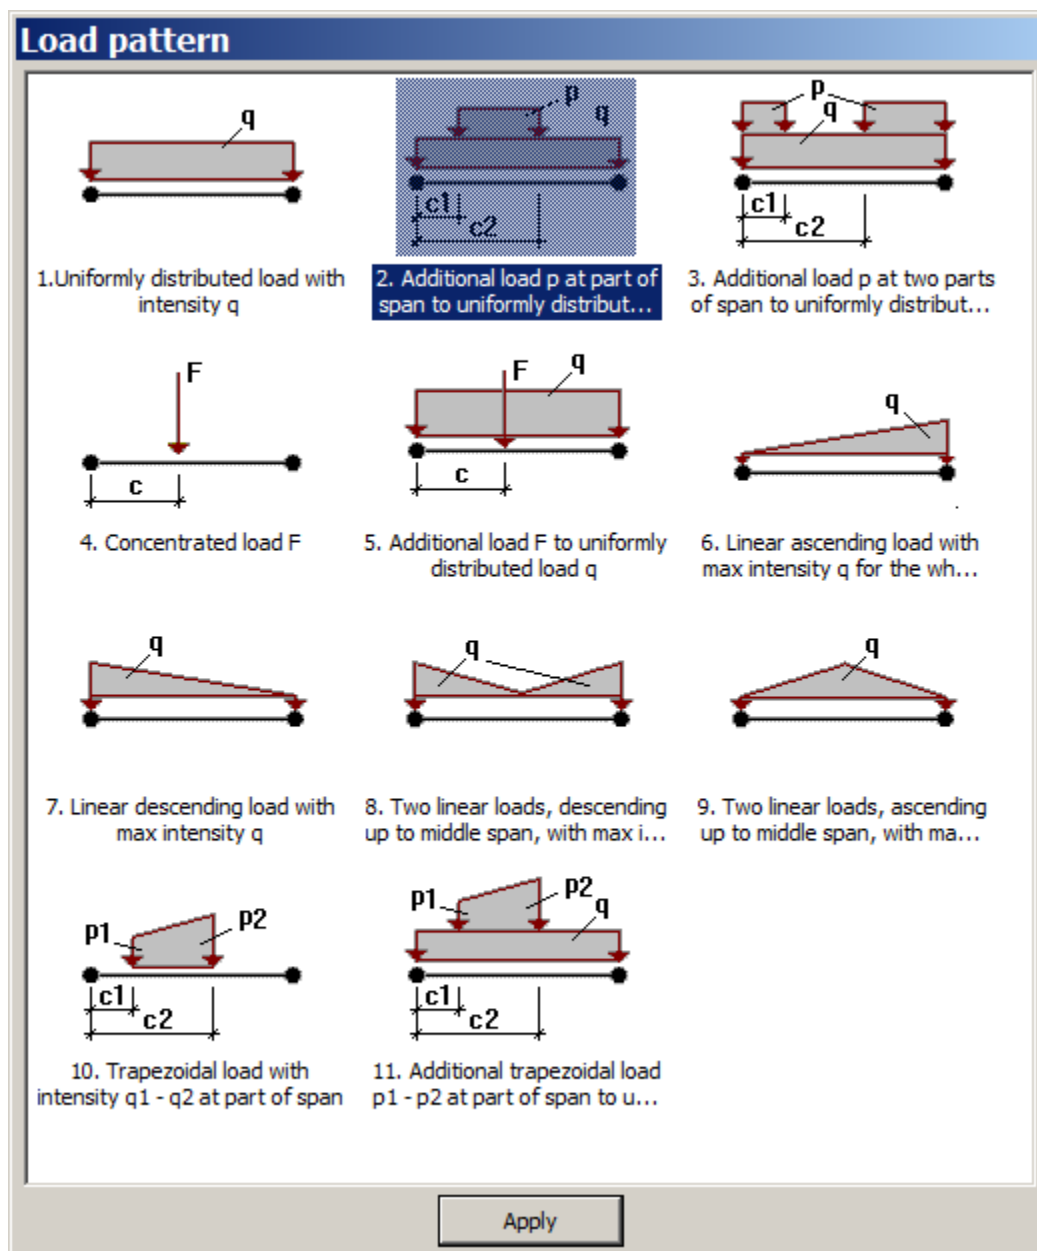


Figure 3.36

The following load patterns are realized:

- 1 – uniformly distributed load with intensity q ;
- 2 – additional load p at part of span to uniformly distributed load q ;
- 3 – additional load p at two parts of span to uniformly distributed load q ;
- 4 – concentrated load F ;
- 5 – additional load F to uniformly distributed load q ;
- 6 – linear ascending load with max intensity q for the whole span;
- 7 – linear descending load with max intensity q ;
- 8 – two linear loads, descending up to middle span, with max intensity q ;
- 9 – two linear loads, ascending up to middle span, with max intensity q ;
- 10 – trapezoidal load with intensity q_1-q_2 at part of span with length b , distance to the beginning c_1 .
- 11 – additional trapezoidal load with intensity p_1-p_2 at part of span with length b and distance to the beginning c_1 to uniformly distributed load q .

When you start the program, the dialog box will be displayed with the **Input data** tab where you could define input data for calculation.

Cable and string. Input data

The input data depends on the type of calculation you select.

Required parameters:

L – span length (distance between supports along the X-axis);
 h – difference between support heights (distance between supports along the Y-axis);
 EF – axial stiffness.

To present the cable on schematic presentation zone according to specified parameters, click **Redraw**.

From the **Calculation** box, select appropriate type of calculation procedure.

Boxes for additional parameters become active according to type of calculation you select.

Additional parameters depending on the type of calculation:

Calculation type 1 – length of blank S_0 . Available load patterns: 1, 2, 3, 5, 11.
Calculation type 2 – dip f_q at midspan. Available load patterns: 1, 2, 3, 5, 11.
Calculation type 3 – dip f_K at arbitrary point K and distance X_K to the left support. All load patterns are allowed.
Calculation type 4 – additional data is not required. All load patterns are allowed.
Calculation type 5 – prestress N . All load patterns are allowed.

To select load pattern, click **Select** button. You will find load patterns available for certain type of calculation.

To start calculation procedure, click **Calculate**.

Cable and string. Output data

When calculation is complete, the **Output data** tab and the **Report** button become available.

The output data contains:

1. Projection of cable (string) onto horizontal axis; load pattern is indicated.
2. Diagram of dips for the cable (string) $f = Mb(X) / H$.
3. Form of equilibrium for the cable (string) $Y = f(X)$.
4. Diagram of tg values of slope angles for the cable (string).
5. Diagram of beam moment and shear forces onto horizontal projection.
6. Diagram of axial force.

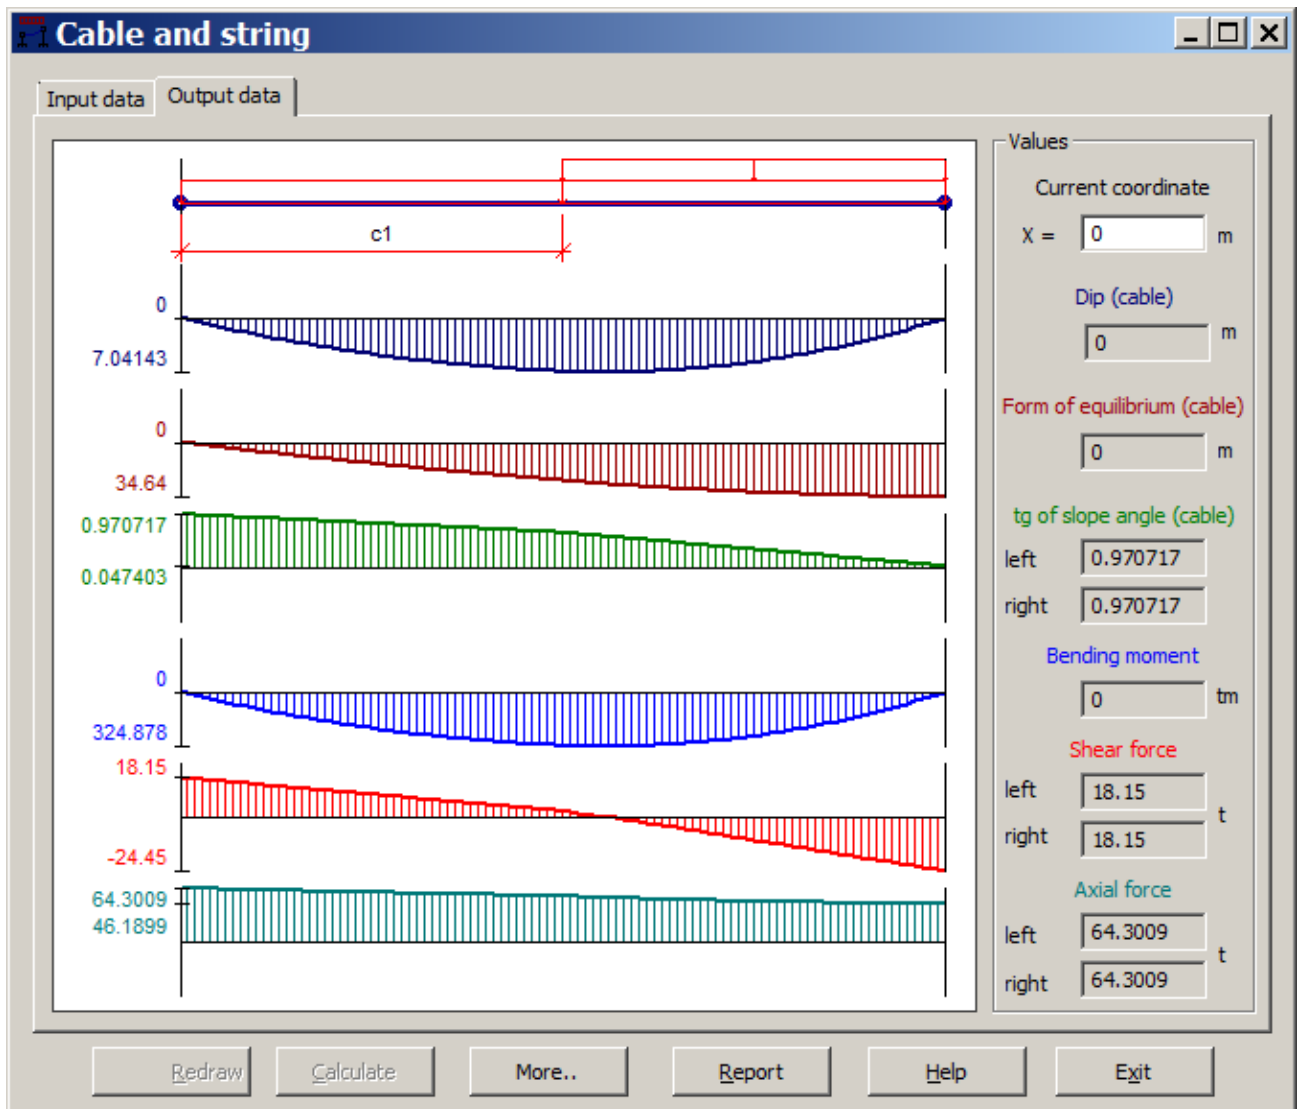


Figure 3.37

When you define **Current coordinate X**, ordinate values for the above-mentioned diagrams will be displayed in appropriate boxes.

When you drag the pointer along the image, you will also see ordinate values for the above-mentioned diagrams. Colour for the diagram corresponds to the colour for the text at appropriate boxes.

To present the text file with temporary parameters for calculation and comments on them, click **More** button.

If calculation was terminated by any reason, then temporary parameters calculated up to this moment are saved to this file with a message about the cause of such termination.

To generate report file (HTML) with input and output data, click **Report**. It is possible to save the report file for further work.

Cable and string. Notation

Notation for input data

For geometry:

f_q – dip at midspan from the dead weight q ;

f_K – dip at arbitrary point K ;

X_K – distance from left support to point K .

For load:

q – dead weight or load uniformly distributed along the whole span or max value of triangular load;

$q1$ – the first (from left support) ordinate of trapezoidal load at part of a span;

$q2$ – the second (from left support) ordinate of trapezoidal load at part of a span;

p – additional uniformly distributed load at part of a span;

$p1$ – the first (from left support) ordinate of additional trapezoidal load at part of a span;

$p2$ – the second (from left support) ordinate of additional trapezoidal load at part of a span;

F – force in span;

c_1 – distance from the left support to the first ordinate of trapezoidal load;

c_2 – distance from the left support to the second ordinate of trapezoidal load;

c – distance from the left support to the force.

Notation for output data and temporary parameters

H_0 – thrust of nonstretchable cable;

S_0 – length of blank;

H – thrust of elastic cable;

S – length of loaded elastic cable;

d – length of chord;

D – parameter of load;

ϕ – slope angle between cable and the X-axis;

$R1$ – reaction at left support;

$R2$ – reaction at right support;

$Mb(Xk)$ – beam moment at point Xk ;

Eps – relative (along the X-axis) distance from the left support to resultant;

Yc – dip at point where resultant is applied;

Yk – dip at point K .

nju – ratio of dip (at point where resultant is applied) to span length;

A, B – coefficients in cubic equation;

$v, w, w1, J, J1, t1, t2, z$ – temporary parameters for solving cubic equation;

$r1, r2, k$ – temporary parameters.

Influence lines in continuous beam

The module enables you to generate influence lines of displacements, rotation angles, bending moments and shear forces from moving loads in multispan continuous beam (up to five spans with two cantilevers).

Input data.

Influence Lines in Continuous Beams

Input data

Parameters

Number of spans: Flexural stiffness: tm2 Dead load: t/m

☐ Left cantilever m tm2 t/m

1st span m tm2 t/m

2nd span m tm2 t/m

3rd span m tm2 t/m

4th span m tm2 t/m

5th span m tm2 t/m

☐ Right cantilever m tm2 t/m

Options

Units of measurement:

To define input data, follow these steps:

- In the **Number of spans** drop-down list, define number of spans and, if required, define left or right cantilevers with appropriate check boxes.
- In the **Options** area, define measurement units for load and stiffness - **t** or **kN**.
- In the appropriate boxes, define the span length in m, flexural stiffness in a span, and the dead load. To define the same flexural stiffness for all spans and cantilevers, select the **Uniform beam** check box.
- Define support to which boundary conditions should be applied. To define such support, either click it directly in the schematic presentation or select it in the **Supports** area, in the **Current support** drop-down list. Then define the type of boundary condition (just click appropriate icon) and it will be displayed in the schematic presentation. If required, define stiffness for translation or rotation.
- In the **Assigned section** box, define ordinate of beam for which influence lines should be generated.
- Define the **Class of load** in the appropriate box. You could also define your own moving load that differ from normative values of load classes A11 and A8 (SNIP 2.05.03-84 'Bridges and pipes'). To do this, select the **Edit load values** check box and input appropriate values.
- When input data is defined, click **Calculate**.

Output data.

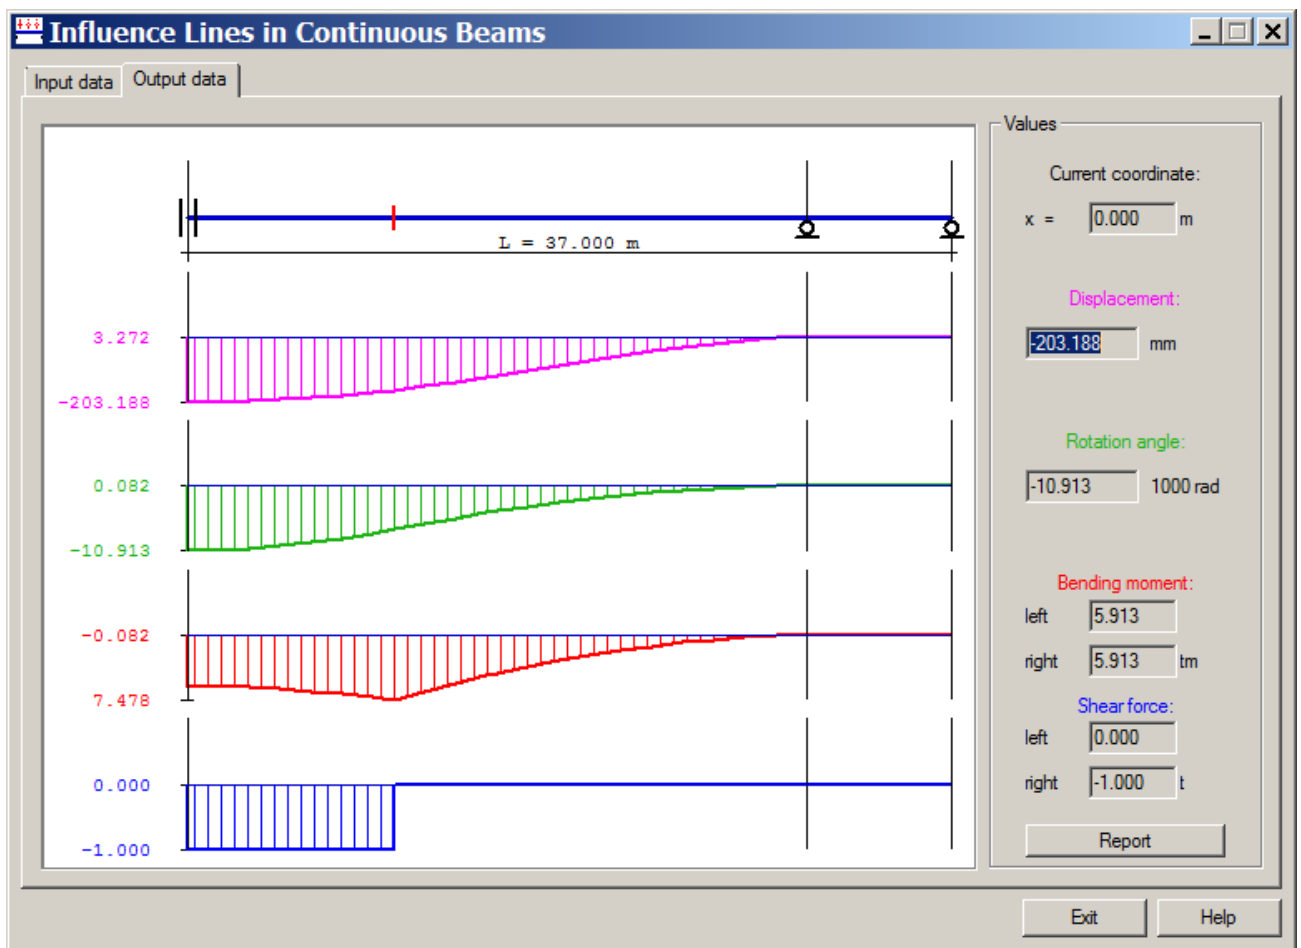


Figure 3.39

On the **Output data** tab you will see influence lines of displacements, rotation angles, bending moments and shear forces. To review values of influence lines at any point of beam, just drag the beam ordinate with the pointer. The values will be displayed at the appropriate boxes.

To present a report document in HTML format, click **Report**.

To generate a report with detailed tables of results, on the **Input data** tab, select the **Report in detail** check box.

Steel Structures

Steel structures

This chapter contains modules for analysis of elements and joints of steel structures as well as reference modules necessary for analysis and design of steel structures.

[Steel table](#)

[Analysis of steel elements](#)

[Principal and equivalent stresses in steel structures](#)

[Effective lengths of steel structure elements](#)

[Parametric joints of steel structures](#)

[Analysis of welds](#)

[Bolted connections](#)

[Cold-formed shapes](#)

[Critical temperature of section](#)



Figure 4.1

Steel table

This module is a version of [SRS-SAPR \(Steel Rolled Shapes\)](#) module in [LIRA-SAPR](#) program but it is adapted for the work in [ESPRI](#) environment.

The module enables you to view and edit existing steel tables and create new ones.


The module is mentioned to review and edit available steel tables and to create new ones.

Steel tables contain: table of *profiles*, table of *materials* and table of *combinations*.

Dimensions and geometric properties of profiles are presented in the table of profiles.

Physical and mechanical properties of materials that profiles are made of are presented in the table of materials.

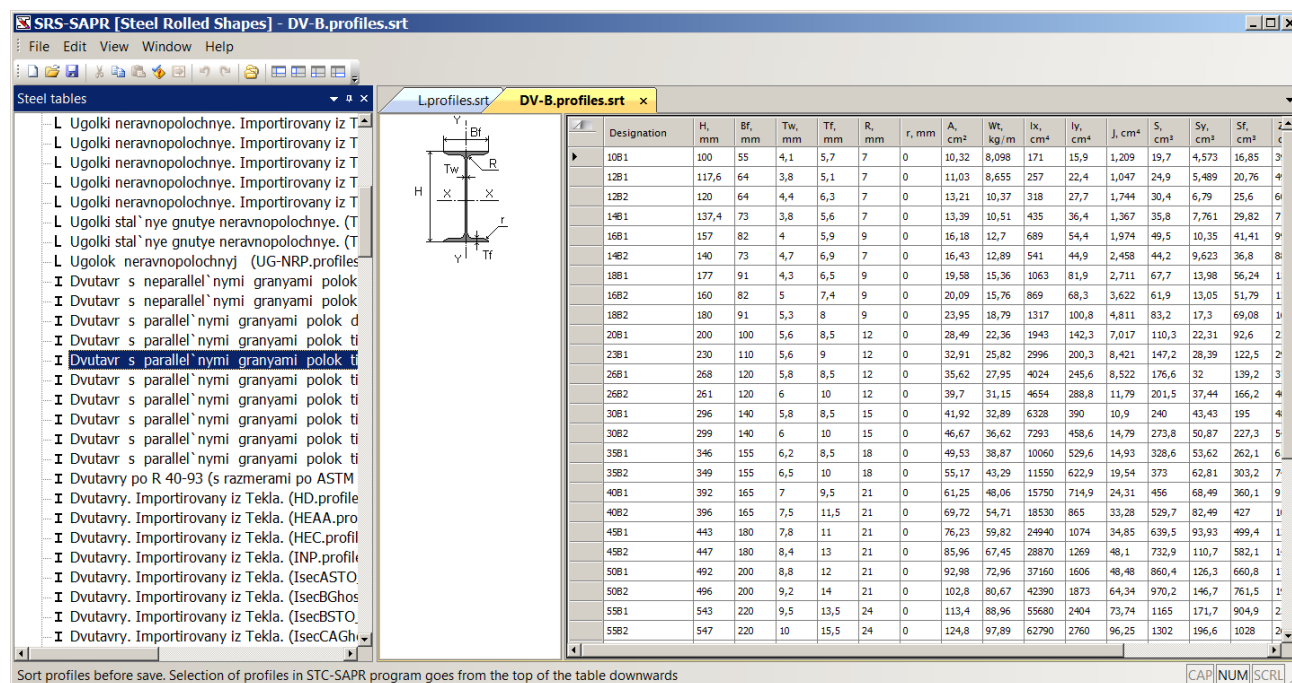Table of combinations presents data about compatibility of every combination profile-material, that is, whether the profile may be made of certain material, and properties of such combination.



Designation	H, mm	Bf, mm	Tw, mm	Tf, mm	R, mm	r, mm	A, cm ²	Wt, kg/m	Ix, cm ⁴	Iy, cm ⁴	J, cm ⁴	S, cm ³	Sy, cm ²	Sf, cm ²	z, cm
10B1	100	55	4,1	5,7	7	0	10,32	8,098	171	15,9	1,209	19,7	4,573	16,85	3
12B1	117,6	64	3,8	5,1	7	0	11,03	8,655	257	22,4	1,047	24,9	5,489	20,76	4
12B2	120	64	4,4	6,3	7	0	13,21	10,37	318	27,7	1,744	30,4	6,79	25,6	6
14B1	137,4	73	3,8	5,6	7	0	13,39	10,51	435	36,4	1,367	35,8	7,761	29,82	7
16B1	157	82	4	5,9	9	0	16,18	12,7	689	54,4	1,974	49,5	10,35	41,41	9
14B2	140	73	4,7	6,9	7	0	16,43	12,89	541	44,9	2,458	44,2	9,623	36,8	8
18B1	177	91	4,3	6,5	9	0	19,58	15,36	1063	81,9	2,711	67,7	13,98	56,24	1
16B2	160	82	5	7,4	9	0	20,09	15,76	869	68,3	3,622	61,9	13,05	51,79	1
18B2	180	91	5,3	8	9	0	23,95	18,79	1317	100,8	4,811	83,2	17,3	69,08	1
20B1	200	100	5,6	8,5	12	0	28,49	22,36	1943	142,3	7,017	110,3	22,31	92,6	2
23B1	230	110	5,6	9	12	0	32,91	25,82	2996	200,3	8,421	147,2	28,39	122,5	2
26B1	268	120	5,8	8,5	12	0	35,62	27,95	4024	245,6	8,522	176,6	32	139,2	3
26B2	261	120	6	10	12	0	39,7	31,15	4654	288,8	11,79	201,5	37,44	166,2	4
30B1	296	140	5,8	8,5	15	0	41,92	32,89	6328	390	10,9	240	43,43	195	4
30B2	299	140	6	10	15	0	46,67	36,62	7293	458,6	14,79	273,8	50,87	227,3	5
35B1	346	155	6,2	8,5	18	0	49,53	38,87	10060	529,6	14,93	328,6	53,62	262,1	6
35B2	349	155	6,5	10	18	0	55,17	43,29	11550	622,9	19,54	373	62,81	303,2	7
40B1	392	165	7	9,5	21	0	61,25	48,06	15750	714,9	24,31	456	68,49	360,1	9
40B2	396	165	7,5	11,5	21	0	69,72	54,71	18530	865	33,28	529,7	82,49	427	10
45B1	443	180	7,8	11	21	0	76,23	59,82	24940	1074	34,85	639,5	93,93	499,4	1
45B2	447	180	8,4	13	21	0	85,96	67,45	28870	1269	48,1	732,9	110,7	582,1	1
50B1	492	200	8,8	12	21	0	92,98	72,96	37160	1606	48,48	860,4	126,3	660,8	1
50B2	496	200	9,2	14	21	0	102,8	80,67	42390	1873	64,34	970,2	146,7	761,5	1
55B1	543	220	9,5	13,5	24	0	113,4	88,96	55680	2404	73,74	1165	171,7	904,9	2
55B2	547	220	10	15,5	24	0	124,8	97,89	62790	2760	96,25	1302	196,6	1028	2

Sort profiles before save. Selection of profiles in STC-SAPR program goes from the top of the table downwards

Figure 4.2

Main options

Preview steel table

In the list of steel tables, double-click appropriate item. Table of profiles presented in the steel table will be opened. To preview the table of materials, on the VIEW menu, click **Materials table**. To display the general data, on the VIEW menu, click **Show annotations**.

Note: If the list of steel tables is hidden, to present the list, on the VIEW menu, point to

Toolbars and docking windows and click **Steel tables** (button on the toolbar). To open file, you could also use the **Open** command on the FILE menu.

Edit existing steel table

Open the file for preview. On the EDIT menu, click **Edit mode**. Now you could edit the table. When you edit the table, it is possible to type the values or use copy & paste commands: you could prepare fragment of the table in the table editor like MS Excel, then copy it to the Clipboard and paste to appropriate steel table in the **SRS-SAPR**. To do this,

on the EDIT menu, click **Paste**. You could also copy selected fragment from [SRS-SAPR](#) table (**Edit / Copy**) and paste it to the table editor.





Open folder that contains files of steel tables

To open folder that contains steel tables, on the FILE menu, click **Open folder**. Then double-click appropriate steel table in the list.

Create new steel table

To create new file of steel table, on the FILE menu, point to **New** and click the type of profile for which the steel table is created. Then fill in the table of profiles and table of materials. For ropes, it is necessary to fill in the table of combinations as well.


Add new profile to the table of profiles

Open the table of profiles as described above in the 'Edit existing steel table' or 'Create new steel table' sections. Select the last row in the table (the last row is denoted with an asterisk ). Define the name for the new profile in the **Designation** column and profile dimensions in the appropriate cells according to schematic presentation. To determine geometric properties of these profiles according to their dimensions, on the EDIT menu, click **Autocomplete now** (or click  button on the toolbar or click F12). If geometric properties of a certain profile are known, you could define them in the table manually. To check them, on the EDIT menu, click **Validate now** (button  on the toolbar). If there are any mistakes in values (program check), symbol  will be displayed in the cells. If the value is correct, just ignore the warning. The additional check option is the option to generate the sketch of cross section of profile to scale. To generate the sketch, on the VIEW menu, click **Show sketch**.

Notes:

1. To cancel or customize check carried out by the program, on the EDIT menu, click **Validation options**.
2. Before the new steel table is saved, it is recommended to sort the table of profiles by area (just click the title of appropriate column).

Add new material to the table of materials

Open the table of profiles as described above in the 'Edit existing steel table' or 'Create new steel table' sections. To open materials table, on the VIEW menu, click **Materials table**. Select the last row in the table (the last row is denoted with an asterisk ). Type the name of new steel to the **Designation** cell, its GOST or TU – to **GOST** cell. Define design and normative strength of new steel in the **Ry1, Ru1, Ryn1, Run1** cells and define thickness of steel **Tmin1, Tmax1**, for which steel strength values are actual. If for another range of steel thicknesses it is necessary to define another strength values, fill in **Ry2, Ru2, Ryn2, Run2** and **Tmin2, Tmax2** cells, etc. The procedure for check of defined data is the same as for the table of profiles.

Notes:

1. To customize units of measurement, on the VIEW menu, click **Units**.
2. Table of combinations is filled in automatically as you define other data. That's why it should be edited manually only in case you edit the steel table of ropes.

Important. Several modules ESPRI 'Steel' also use these steel tables.

Analysis of steel elements

This module represents **STC-SAPR** module adapted to work in **ESPRI** environment. The module enables you to select and check sections of steel elements according to different building codes.

The program supports the following normative documents:

- SNIP II–23–81* 'Steel structures',
- Manual on design of steel structures (to SNIP II–23–81* 'Steel structures'),
- Eurocode 3 'Design of steel structures'.

The work with the program is illustrated by an example: analysis of steel beam with I-section shape loaded in two planes.

Input data

On the FILE menu, point to **New** and click **Element** (button  on the toolbar).

In the **Units of measurement** dialog box, define appropriate units for input data and output data and click **OK**.

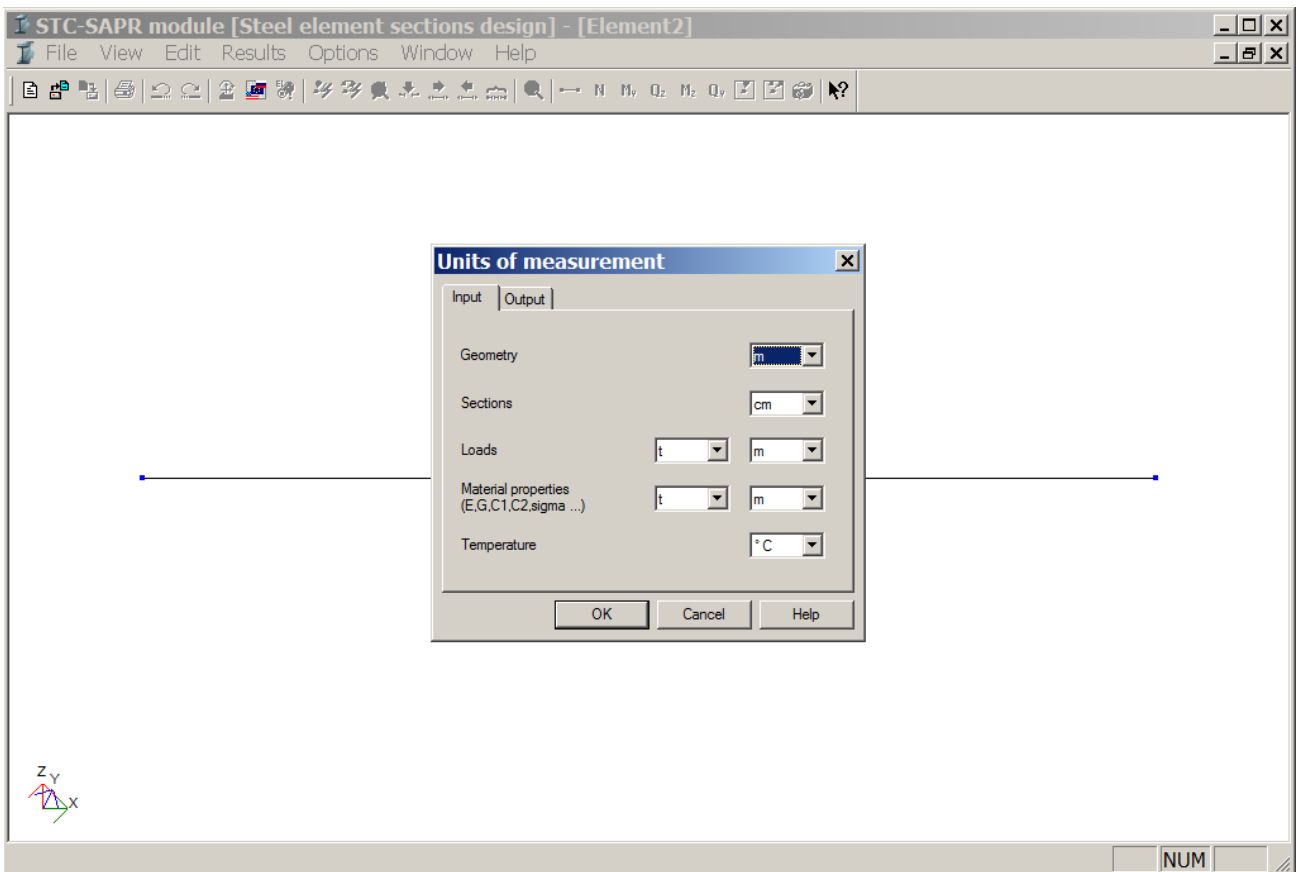


Figure 4.3 a)

In the **Problem info** dialog box, define the following data:

- problem code (comment) (not necessary);
- number of element (by default, it will be the file name);
- length of element – for this problem, define 6 m;
- element location – define either vertical or horizontal (specifies how the diagrams should be located in the report).

For flexure elements, it is possible to select and check according to serviceability limit states (SLS) by enveloping diagrams of DCF.

Select the **Calculate deflection by envelope diagrams DCF** check box and then define appropriate **Fixities at beam ends** (Y1, Z1 – translation along appropriate local axes of bar are not allowed, UY1, UZ1 – rotations about appropriate local axes of element are not allowed).

In the present case, we define beam with hinge support at the left end in both directions (Y1, Z1) and at the right end - fixed in its own plane and with hinge support out-of-plane (Y1, Z1, UY1).

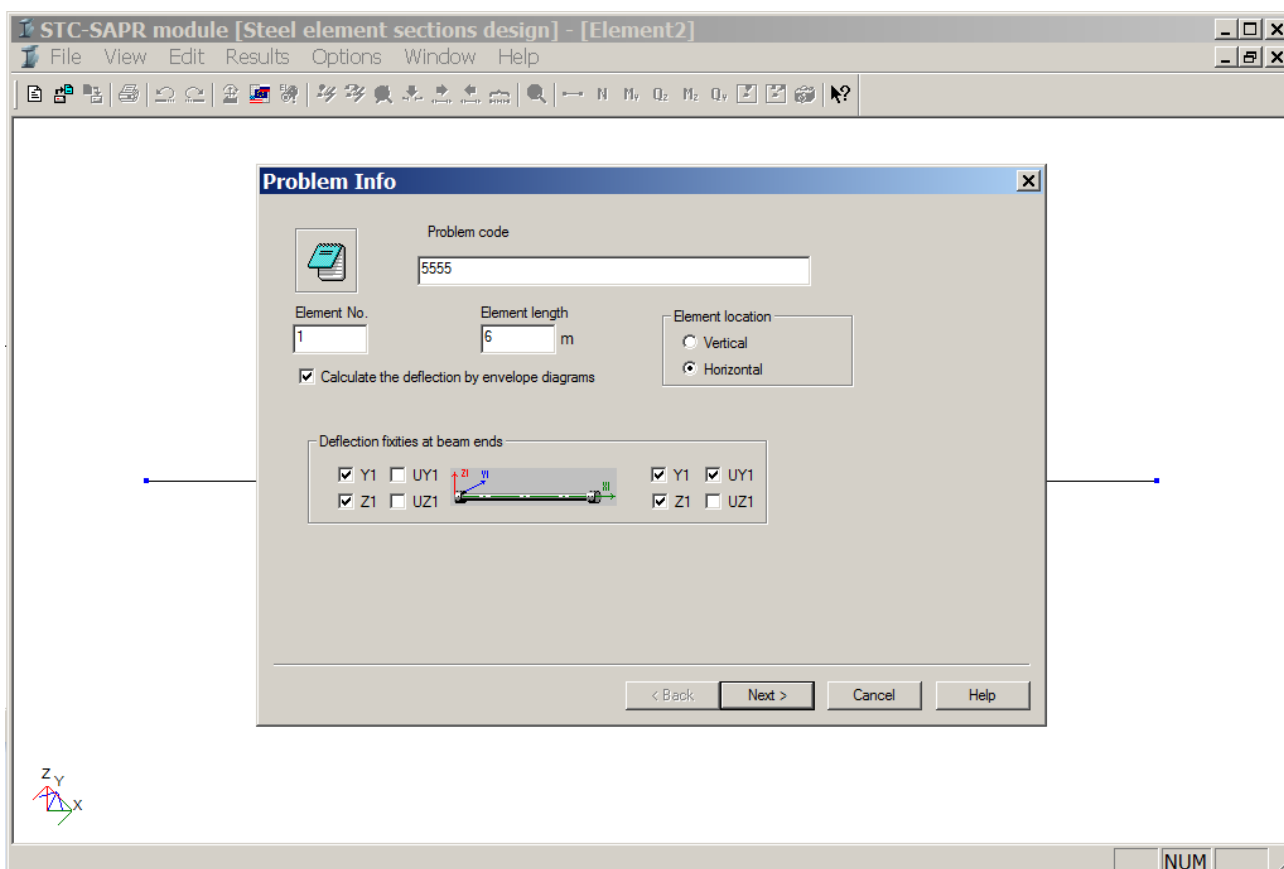


Figure 4.3 b)

Click **Next**.

In the **Design forces** dialog box, define **Number of force combinations** as equal to 5 and click **OK**.

In the table fill in the column of section numbers (Sect.) with sequence numbers 1, 2, 3, 4, 5 and for every section define appropriate forces in the table (for beam – bending moments and shear forces) according to sign convention presented in the right bottom corner of the dialog box.

When you fill in values in the **Design forces** table, click **OK**.

In the **Select section type** dialog box, select the type of section - **I-section**. To select the section type, either double-click its icon or select the section with the pointer and click **OK**.

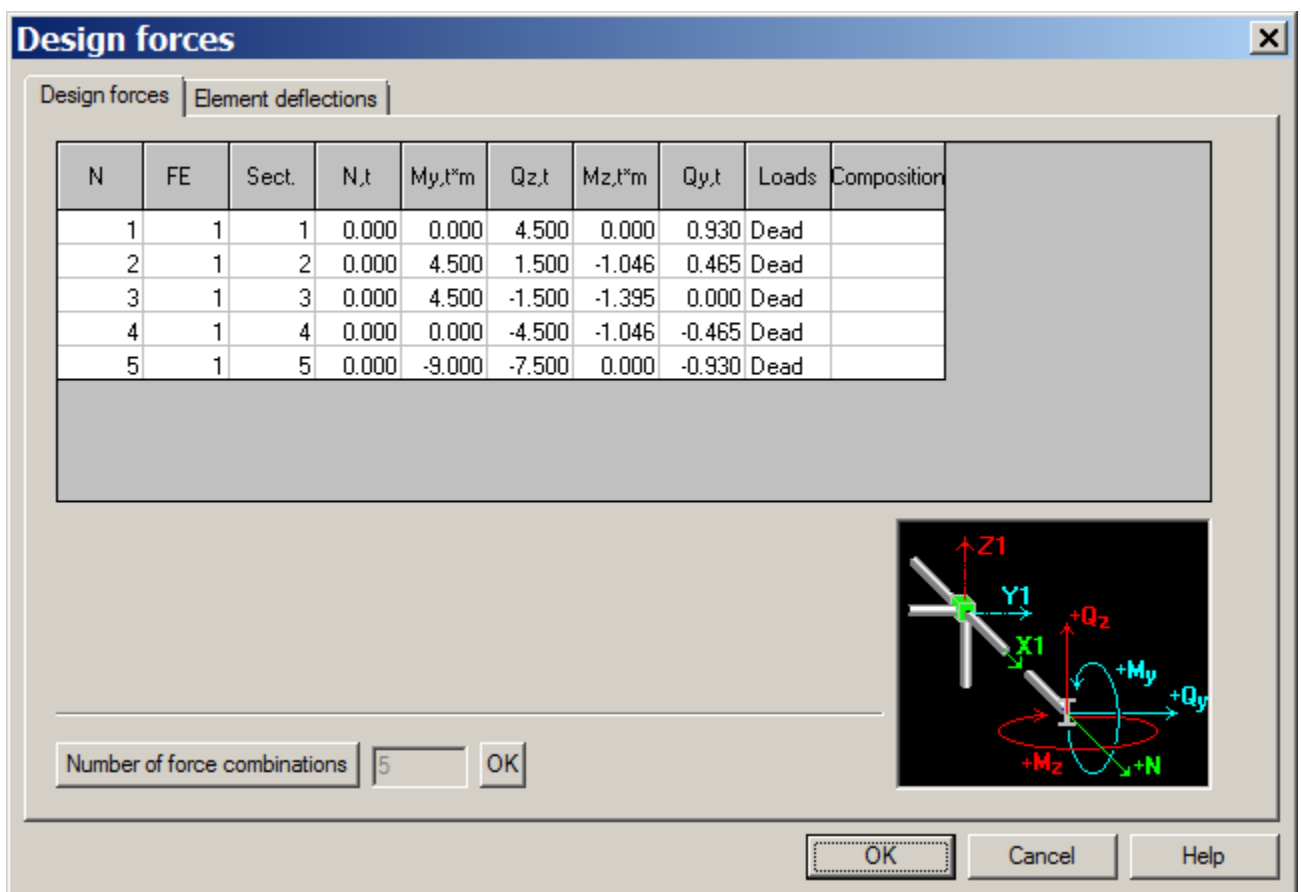


Figure 4.4

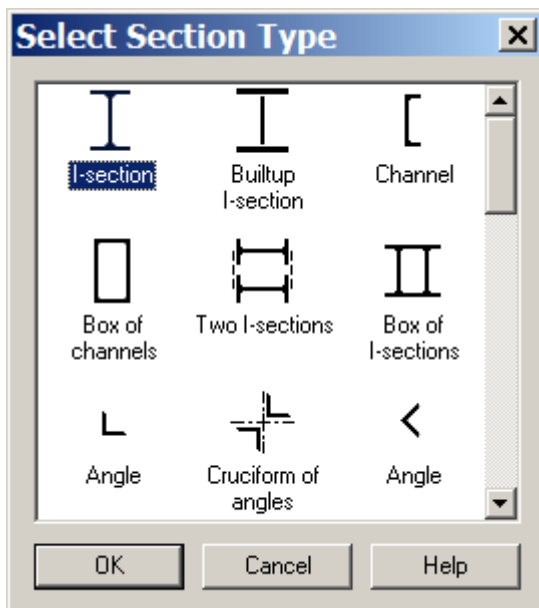


Figure 4.5

In the **Steel cross-section** dialog box, on the **Components** tab, in the drop-down lists **Profile**, select the profile table and number (name) for profile: *I-section with non-parallel*

flanges (45). Then, in the drop-down lists **Steel**, select the steel table and steel grade (C245).

To use forbidden combinations profile-steel (combinations may be found in the [Steel Table](#) module), select appropriate check box.

Figure 4.6

On the **Additional characteristics** tab, in the **Element type** area, click **Beam** (corresponds to analysis of flexure elements by SNIP II–23–81* 'Steel structures'). Input necessary data according to SNIP II–23–81* 'Steel structures' for the problem:

- service condition factor for strength – 1.1;
- safety factor – 0.95;
- in the **Analysis** area, click **Elastic**;
- in the **Deflection analysis** area, define **Max allowed deflection** as equal to 1/250;
- in the **Data for buckling analysis** area, under **Bracing of compressed flange**, for buckling analysis define effective length $L_{ef} = 1.5$ m (suppose that beam is fixed out-of-plane with purlins of step 1.5 m).

Steel cross-section

Components Additional characteristics Selection limitations

Section components

..... I 1. I-section 45

Service conditions factors for buckling strength Safety factor

0.95 1.1 0.95

Stiffeners

☐ Place stiffeners with spacing 0 m

Analysis

☒ Elastic ☐ Plastic

Deflection analysis

Span length L Auto

Maximum allowed deflection 1/ 250

☐ Cantilever

Element type

☐ Truss ☐ Column ☒ Beam

Bending elements

Data for buckling analysis

☐ Cantilever ☐ Beam with only 1 symmetry axis

Bracing of compressed flange

☐ No bracing ☐ At midspan L ef 1.5 m

☒ 2 or more dividing the span to equal parts

Load

☐ Causing pure bending



☐ Use factor to length of structural element


OK Cancel Help




Figure 4.7

On the **Selection limitations** tab you could define parameters for limitation in selection procedure. In the Limitations area, define overall dimensions along axes and min thickness. It enables you to limit min and max height and width of sections during selection procedure. This option is frequently used for selection of weld composed sections. Click **OK**.

Output data

To check or select section of element in steel structure, on the RESULTS menu, click **Check element** (button  on the toolbar) or **Select element section** (button  on the toolbar).

If you have to check or select separate section of an element, on the RESULTS menu, click **Choose section** (button  on the toolbar) and click any of section diagrams where selection or check should be made.

To switch to the next or previous section or to return to the mode of results for element as a whole, on the RESULTS menu, use the **Next section** (button ) , **Previous section** (button ) or **Element as a whole** commands (button ) .

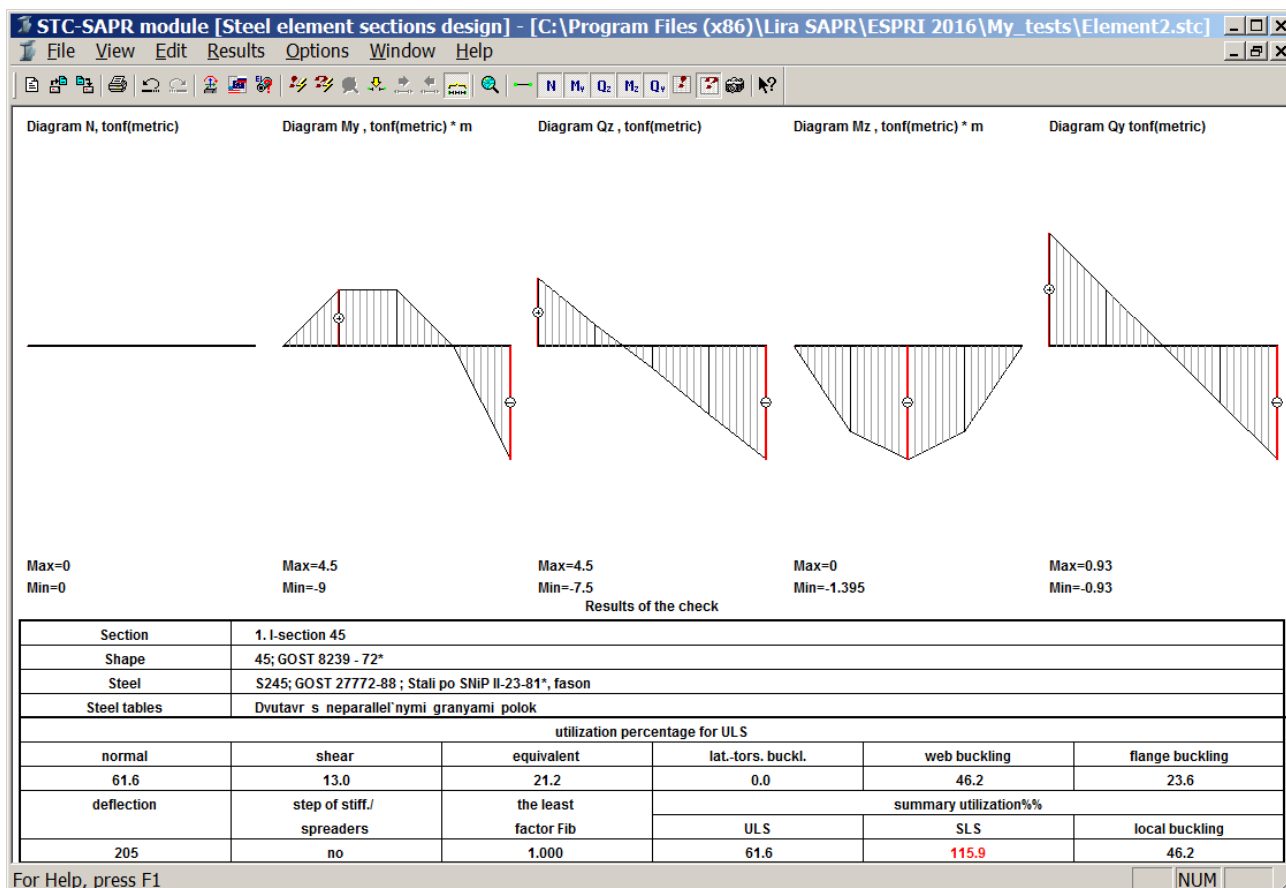





Figure 4.8

Output data (for the check option) presents utilization ratio values by appropriate checks (ratio of bearing capacity of section to real stress, slenderness, etc. multiplied by 100%). Output data (for the selection option) presents determined section with utilization percentage by appropriate checks.

To carry analysis by another building code, on the OPTIONS menu, click **Building code** (button  on the toolbar).

To print the output data directly from the program window, on the FILE menu, click **Print** (button ). It is also possible to copy data to other applications that work with graphic objects. To do this, use the **Copy** button on the toolbar .

The program contains additional tools that enhance visualization options.

Principal and equivalent stresses in steel structures

The module enables you to calculate principal and equivalent stresses by different criteria of rupture applied for analysis of steel structures and structures of composite materials. Principal stresses σ_1 , σ_2 , σ_3 are determined by the certain stress tensor $\{\sigma_x, \sigma_y, \sigma_z, \tau_{xy}, \tau_{xz}, \tau_{yz}\}$.

Figure 4.9

To find out roots of principal stresses, cubic equation is solved based on stress matrix $[\sigma]$ in the form:

$$[\sigma] = \begin{bmatrix} \sigma_x & \tau_{xy} & \tau_{xz} \\ \tau_{xy} & \sigma_y & \tau_{yz} \\ \tau_{xz} & \tau_{yz} & \sigma_z \end{bmatrix}$$

Input data

Besides components of the stress tensor, it is necessary to define the following data:

- strength in compression **R_c** (tf/m²);
- strength in tension **R_r ≤ R_c** (tf/m²);
- for calculation of composite materials, strength in pure shear should be also defined – **R_{tau}**, if **R_{tau}=0** it is taken as:

$$R_{\tau} = 0.5 \cdot R_c (1 + c) / \sqrt{3},$$

where

c=R_r/R_c – fragility parameter of material;

v – Poisson's ratio;

– additional parameters for calculation by different strength criteria **c, θ** (or other parameter), **P2C** are determined automatically according to defined strength parameters: **R_c, R_r, R_{tau}**.

Output data

When the **Strength analysis** check box is selected, after strength analysis, the following data is displayed:

- σ₁, σ₃** – ultimate allowed values of principal stresses;
- σ₀, τ₀** – ultimate axial and shear octahedral stresses;
- reserve factor (analysis by serviceability limit state is supposed, that is, normative strength parameters of material are considered in analysis);

$$\mu_{\sigma} = \frac{(2\sigma_2 - \sigma_1 - \sigma_3)}{(\sigma_1 - \sigma_3)};$$

- Lode-Nadai parameter is computed as:

To generate report file in HTML format, click **Report**. The report file contains the following data:

- principal stresses as: **σ₁ > σ₂ > σ₃**;
- matrix of directional cosines **MC(3,3)** – orientation of principal stresses in the space relative to the X,Y,Z axes:

$$MC = \begin{bmatrix} l1 & m1 & n1 \\ l2 & m2 & n2 \\ l3 & m3 & n3 \end{bmatrix}$$

- slope angles **AL1, AL2, AL3 (l1, l2, l3)** of principal stress **σ₁** to the X, Y, Z-axes; angles define orientation of the crack plane in the space;
- slope angle **α₃** of principal stress **σ₃** to the X-axis; angle defines orientation of the crack plane relative to the X-axis ;
- Euler angles **TETA, PSI, FI (θ, ψ, φ)** that define location of principal stresses **σ₁, σ₂, σ₃** relative to the X, Y, Z-axes of global coordinate system;
- additional strength parameters:
 - strength in biaxial uniform compression – **R2c = R_c*P2c**,
 - strength in biaxial uniform tension – **R2p**.

Stress tensor		
Sig_X =1500.000	Sig_Y =-2500.000	Sig_Z = 0.000
Tau_XY= 450.000	Tau_XZ= 0.000	Tau_YZ= 0.000
Principal stress		
SIG_1=1550.000	SIG_2= 0.000	SIG_3=-2550.000
Equivalent stress by theory	Mises	
SIG_1E=1550.000	SIG_2E=-2550.000	
Octahedral stress - Normal	Sig_O =-333.333	
Octahedral stress - Shear	Tau_O =1690.332	
Lode-Nadai coefficient	Param_Lode = 0.2439	
Slope angle of crack	Alfa_crack_2x= -83.660	(degrees)
Slope angle Sig_1	to X, Y, Z-axes	of principal coordinate system
AL1= 3.031 (Radians)	AL2= 1.681	AL3= 1.571
AL1= 167.320 (Degrees)	AL2= 12.680	AL3= 90.000
Matrix of direction cosines	Orientation SIG_1,2,3 in triaxial stress strain state	MC(3,3)
L1=-0.99388	m1= 0.00000	n1= 0.00000
L2=-0.11043	m2= 0.00000	n2= 0.00000
L3=-0.00000	m3=-1.00000	n3= 1.00000
Material properties:	Steel	
Initial Poisson's ratio	Nu_o =0.250	
Normative strength in compression	Rc_n=4000.000	(tf/m2)
Normative strength in tension	Rp_n=4000.000	(tf/m2)
Strength in pure shear	R_tau=2309.401	(tf/m2)
Strength in biaxial compression	R_2c=4000.000	(tf/m2)
Strength in biaxial tension	R_2p=4000.000	(tf/m2)
Safety factor by stress	kRs =1.200	
Design compression strength	Rs_c =3350.000	(tf/m2)
Design tensile strength	Rs_r =3350.000	(tf/m2)
Initial modulus of elasticity	Es_o =2.0000e+007	(tf/m2)
Secant modulus, elastic-plastic	Es_cut =4.5276e+003	(tf/m2)
Ultimate strain elastic, rupture	Def_u =2.000000e-003	Def_pl =1.800000e-001
Principal strain, elastic	Def_1 =1.151316e-004	Def_3 =-1.342105e-004
Principal strain, elastic-plastic	Def_1n=3.423454e-001	Def_3n=-3.990769e-001
Ultimate principal stress		
SG_1L =4000.000	SG_2L = 0.000	SG_3L= -2844.524
SG_OL =-371.844	TAU_L = 2309.401	
Presence of cracks:	TB=1,2,3 - cracks;	TB=10 - crack and yield in compression;
TB=20 - yielding of steel in biaxial compression;	TB=5 - yielding of steel by ULS;	TB=50 - rupture by ultimate strain
State of steel in biaxial stress strain state	TB=50	
Reserve factor by SLS	1.116	
Reserve factor by ULS	0.930	
Utilization factor by SLS	0.89643	

Figure 4.10

Effective lengths of steel structure elements

The module enables you to determine effective lengths of the following elements of steel structures:

- Idealized conditions (columns) of uniform section;
- elements of uniform section with semi-rigid joints;
- elements of uniform section for one- or multi-storey frames;
- intersecting elements of uniform section;
- continuous beams (top chord of truss) and columns (crane laced columns);
- elements of 3D laced structures;
- lower part of single-stage (crane) columns.

The following building code are implemented in the program:

1. SNIP II-23-81* 'Steel Structures';
2. Manual to design of steel structures (to SNIP II-23-81* 'Steel Structures').

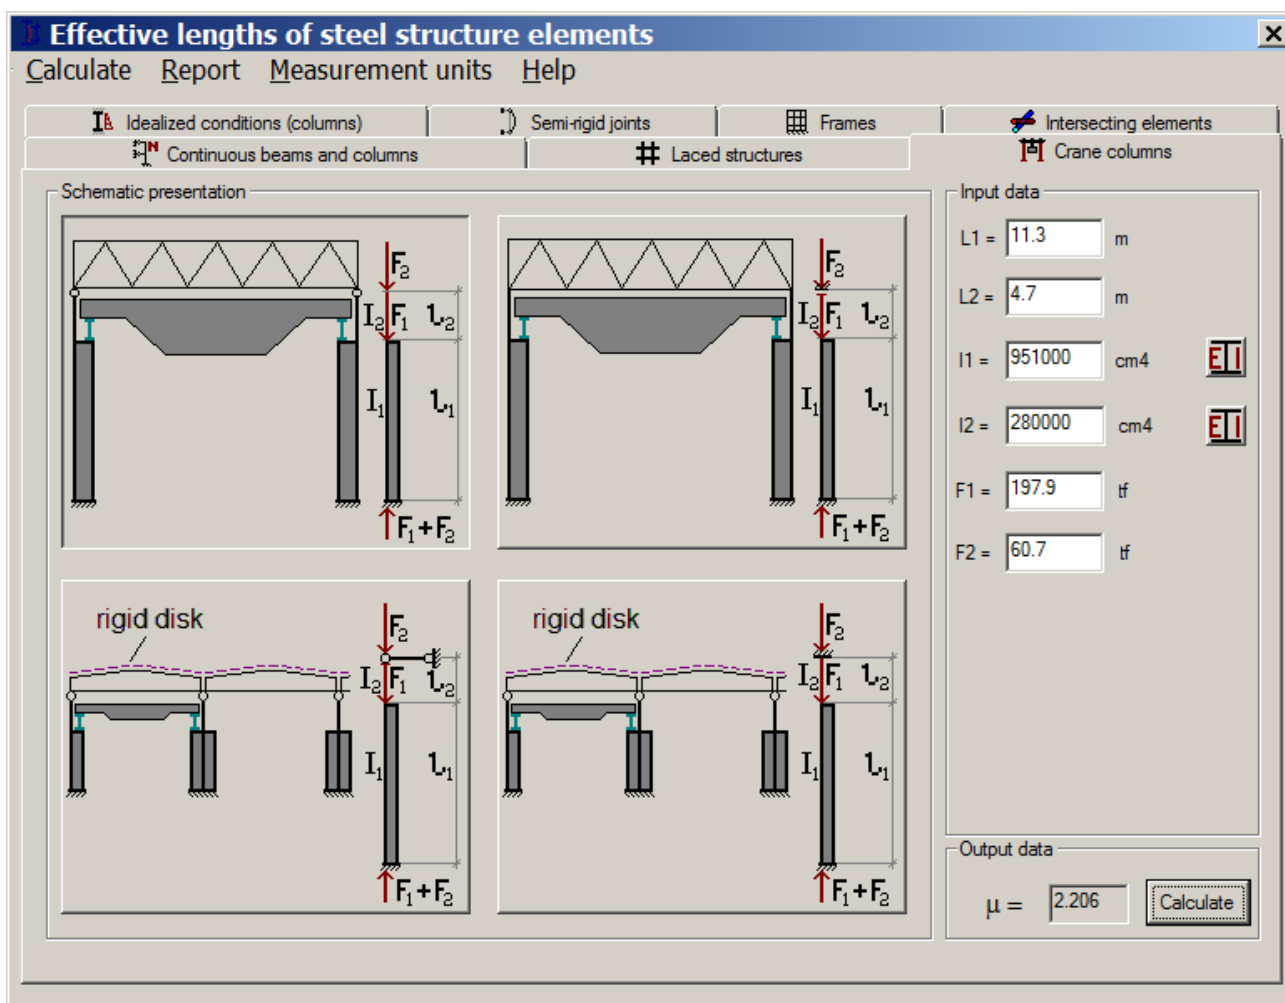



Figure 4.11

Input data

When you start the program, select appropriate tab with the short description of topology for computed elements of the structure (e.g. Crane columns).

In the dialog box, select with the pointer the element to be calculated or design model of the structure (except **Frames**, where frame parameters are described with number of defined storeys and spans).

Generally, it is necessary to define geometry for the element or the structure and stiffness properties. In some cases, define load on element or structure. The stiffness may be described either numerically or with program options in the **Steel cross-section** dialog box (button  - **Stiffness**). When you click the **Section** button in the **Steel cross-section** dialog box, it is possible to select different types of sections, for which stiffness is calculated automatically.

Effective lengths of steel structure elements

Calculate Report Measurement units Help

Continuous beams and columns Laced structures Crane columns

Idealized conditions (columns) Semi-rigid joints Frames Intersecting elements

Parameters of structure

Storeys: 3.00 m, 2.7 m, 3.2 m, 4.8 m

Spans: 6.00 m, 5 m, 4.5 m, 5 m

Column fixation: ☐ hinge, ☒ rigid

Frame fixation: ☒ free, ☐ not free

Beam fixation: ☐ hinge, ☒ rigid

Apply

Input data

Ic = 101476 cm4

Is1 = 21826 cm4

Is2 = 52439 cm4

Output data

$\mu =$ 1.323

Figure 4.12

Elastic fixing at the ends on the **Semi-rigid joints** tab (elements of uniform section with semi-rigid joints) may be defined numerically or you could compute appropriate stiffness according to the variant of design model (button).

To start calculation, click **Calculate**.

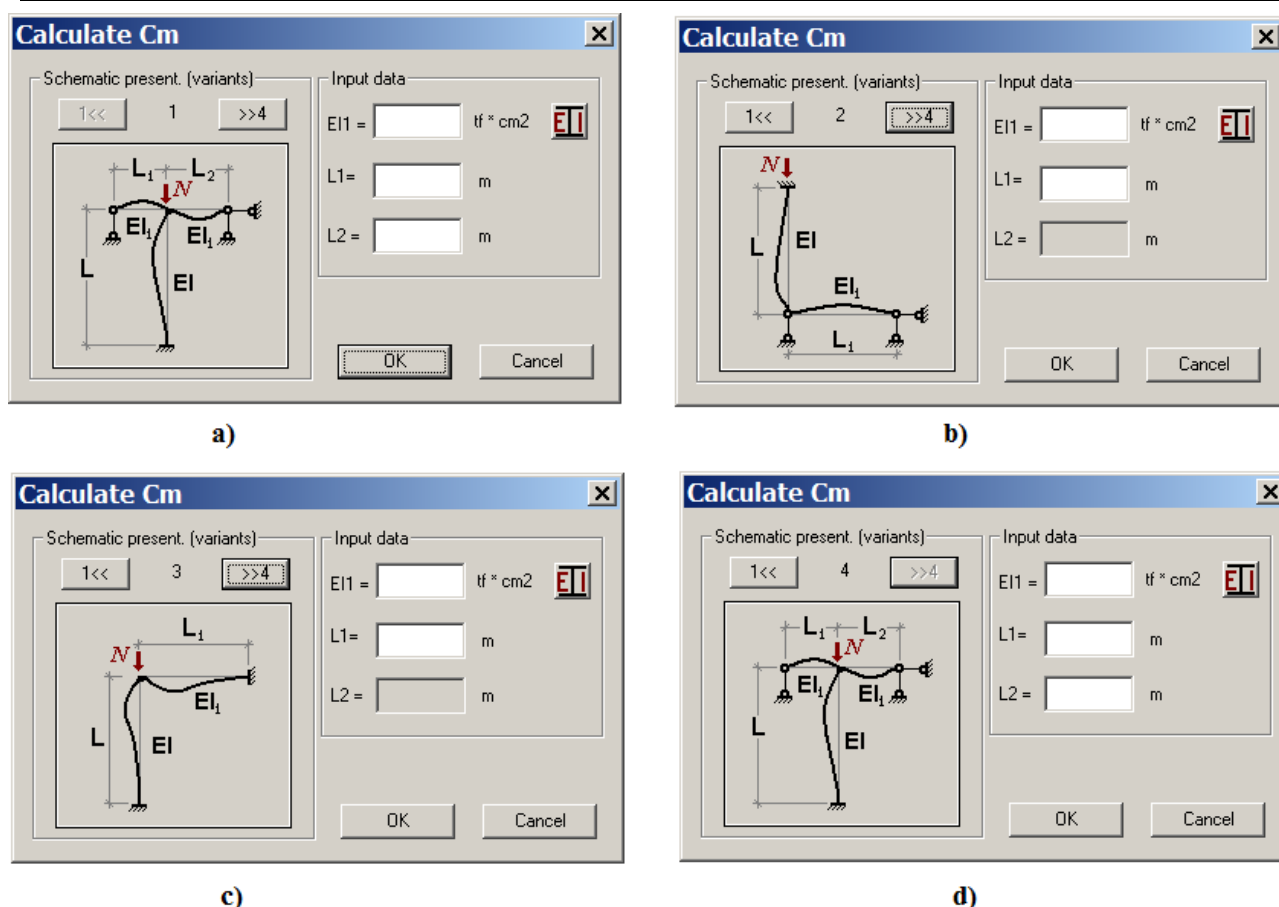


Figure 4.13

Output data

Output data contains coefficient (coefficients) μ . Effective length (lengths) may be obtained if geometric length of element (elements) of structure is multiplied by this coefficient (coefficients).

Output data may be presented as a report. To present a report document in HTML format, click **Report** on the menu bar.

Parametric joints of steel structures

This module represents **STC-SAPR** module adapted to work in **ESPRI** environment. The module enables you to design and check joints of steel structures.

The program supports the following normative documents:

- SNIP II–23–81* 'Steel structures',
- Manual on design of steel structures (to SNIP II–23–81* 'Steel structures'),
- Provisions contained in [45, 46].

Input data

On the FILE menu, point to **New** and click **Joint**. In the **Select joint type** dialog box, select the joint prototype from the following menu: **Trusses, Beam-to-column joint, Beam-to-beam joint, Column-to-column joint, Column bases, Sway bracing, Rigid connections**.

Then select with the pointer the icon of appropriate joint and click **OK** or simply double-click appropriate icon.

In the **General** dialog box, define safety factor and service condition factor. In the **Group name for joint elements** list, select certain group of components: principal elements of joint, welds, plates, bolts, etc. List of groups depends on selected type of joint. When you click **Group properties**, the dialog box that corresponds to this group will be displayed on the screen.

For the principal elements of joint, from appropriate lists select the profile and its name, then steel table and steel name.

For other groups of elements, appropriate dialog boxes will appear. Necessary data is defined there by default. If necessary, correct the data.

If it is necessary to input data about design resistances that differ from the ones mentioned in SNIP II-23-81*, then select the **Edit** check box for appropriate options and define the values manually.

For the joints of columns, in the **General** dialog box, define class of concrete for foundation.

When the input data is defined for every group (or for all groups), the **Apply specified properties to all elements of group** button becomes available. Click this button to apply properties.

Then click **OK**.

The **Design forces** dialog box will be displayed on the screen. There you should define forces at joint.

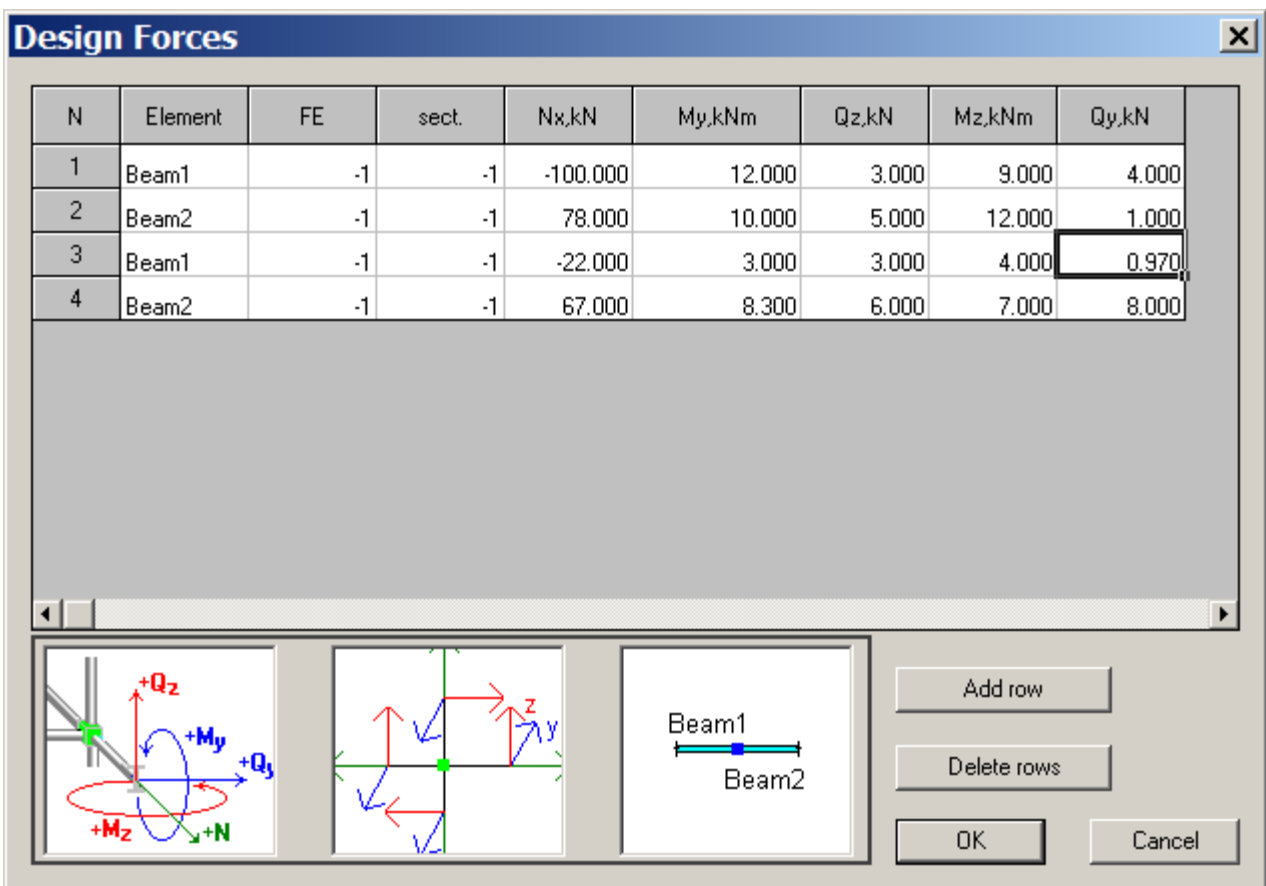


Figure 4.14

When you click **OK**, analysis will be carried out.

The EDIT menu contains the following commands:

- **Forces** – to display the **Design forces** dialog box;
- **General properties** – to display the **General** dialog box;
- **Joint parameters** – to display the **Joint properties** dialog box with the joint type and defined parameters.

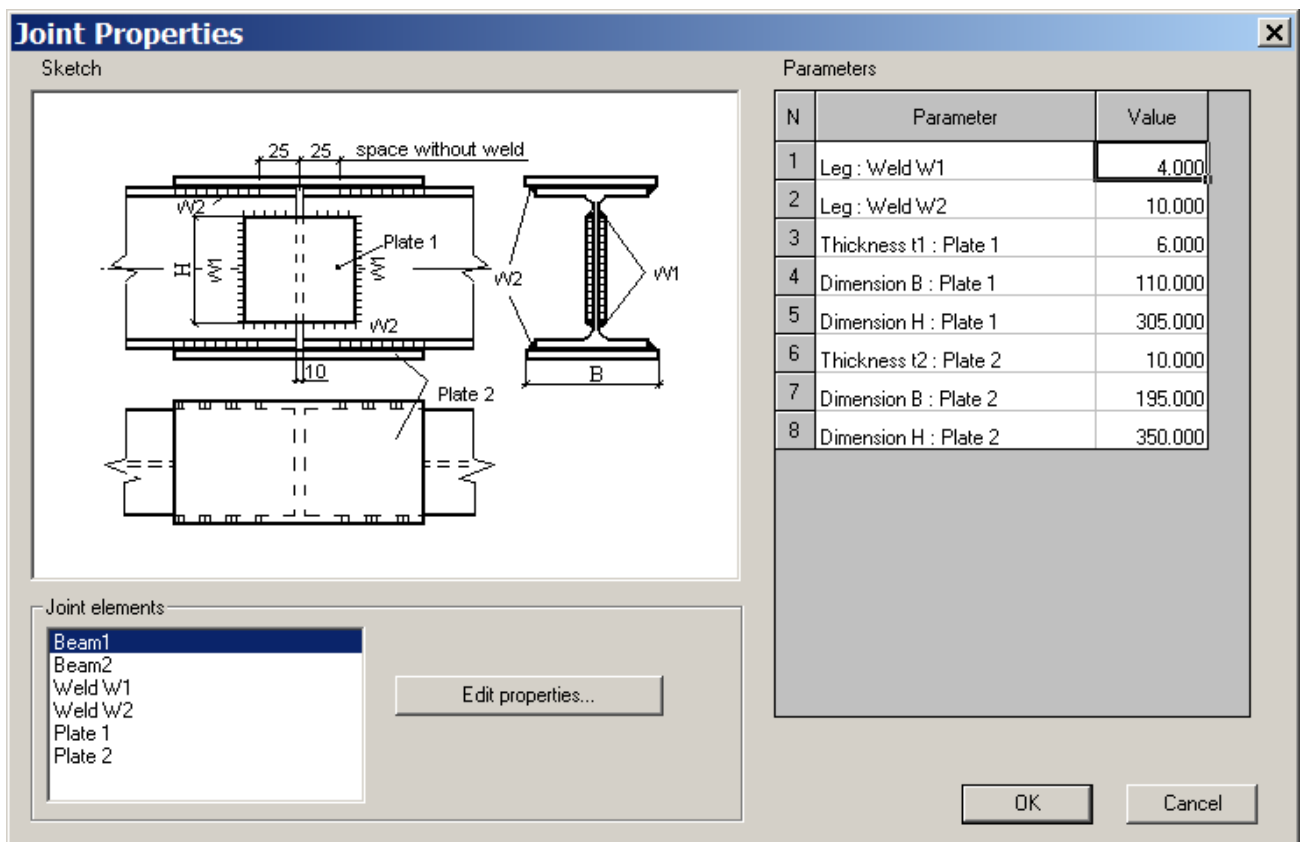


Figure 4.15

The ANALYSIS menu contains the following commands:

- **Check joint elements** – to check elements of joint according to selected prototype;
- **Select joint elements** – to select elements of joint according to selected prototype;
- **Tracing routine** – to generate file with tracing routine about analysis procedure. This file will be opened in web-browser right away.

Output data

Output data presents utilization ratio (ratio of bearing capacity of element in a joint to the real stress multiplied by 100%) by strength of elements available at joint as well as sketch of drawing.

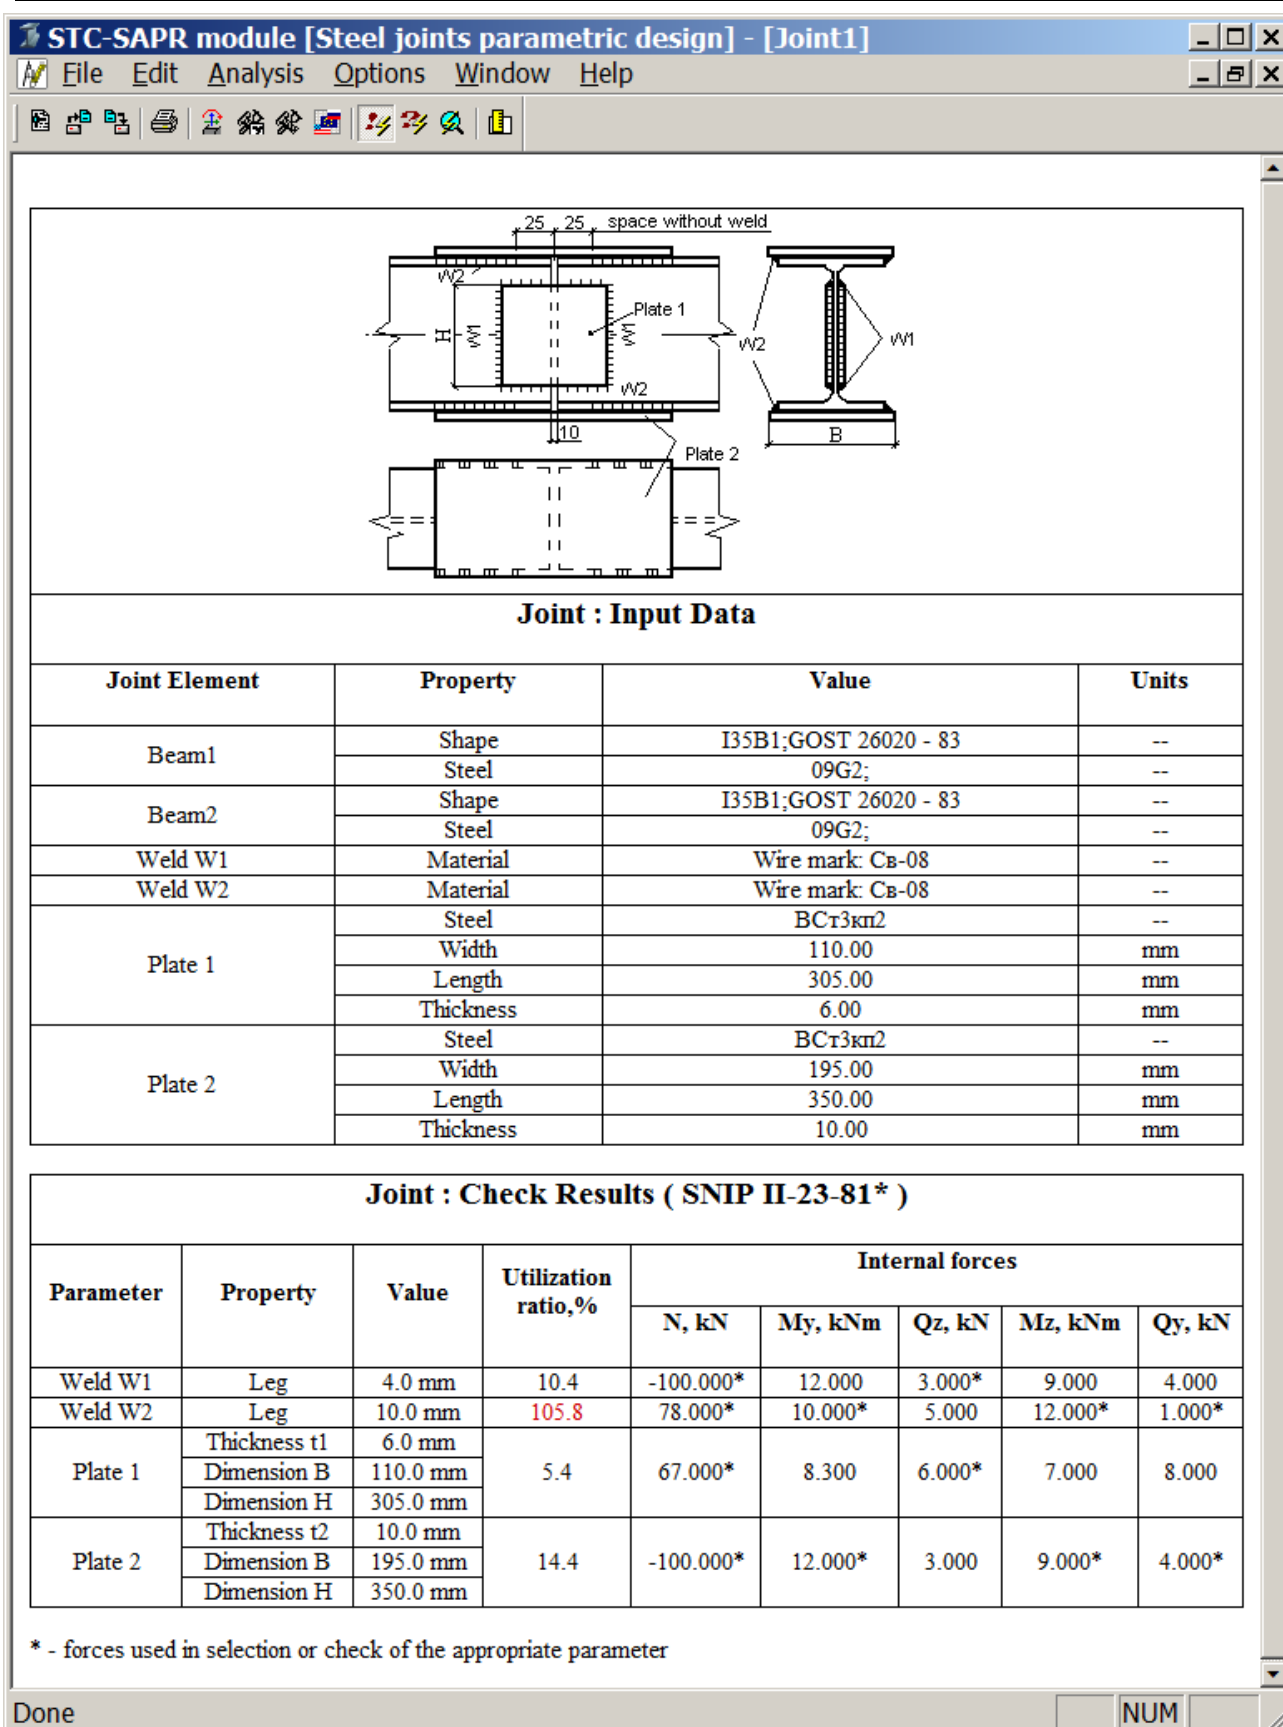



Figure 4.16

Use the **Tracing routine** command  to generate the tracing routine file for the check and selection of joint. This file will be opened in web-browser right away.

Analysis of welds

The program enables the user to analyse the following types of weld joints in steel structures:

- Lap joints
- T-joints, butt
- [T-joints, flanged](#)

The program supports the following building codes:

1. SNIP II-23-81* 'Steel structures. Design rules' — M.: TSITP Gosstroy USSR, 1990;
2. Manual on analysis and design of weld joints in steel structures (to SNIP II-23-81* 'Steel structures') / Moscow, 1984;
3. Manual on design of steel structures (to SNIP II-23-81*) / TSNIIISK named Kucherenko Gosstroy USSR.

Analysis of welds in overlap joints is carried out according to sections 11.2*, 11.3*, 11.5, 12.8 SNIP II-23-81*.

Welding techniques are provided according to table 34* SNIP II-23-81*.

Min leg lengths are selected in **Select** option (or defined values are checked in **Check** option) according to table 38* SNIP II-23-81*.

The program works with steel tables that may be edited and created in the **Steel table** module ([ESPRI](#) program, **Steel structures** chapter).

The program supports the following building codes:

Mode	References to building codes
Steel	Table 50* SNIP II-23-81* Table 51* SNIP II-23-81* Table 51,6 SNIP II-23-81*
Materials for welding	sect. 2.2*, 3.4 SNIP II-23-81* Table 55* SNIP II-23-81* Table 56 SNIP II-23-81*
Parameters of weld joints	sect. 11.2*-11.3*, 11.5, 12.8 SNIP II-23-81*
Partial safety factors	Table 6* SNIP II-23-81*

Input data

The program window contains four tabs where you could define input data for analysis of weld joint:

- [Joint type](#)
- [Steel](#)
- [Parameters](#)
- [Welding materials](#)

Input data for analysis of selected joint is defined in sequence tab by tab from left to right; at the same time the program [checks](#) whether assigned data is correct. Otherwise, the program displays the error message and it is not possible to select another tab in program window.

When defined data is approved as correct one, you will be able to select another tab and define appropriate data there. When you define data for selected template joint at any tab, you could return to any of the previous tabs to edit or review the previously defined data.

When you switch from one tab to another, all defined data is saved in both directions. If previously defined data do not correspond to current data, then the program opens the tab where the inconsistency is found and you could remove such inconsistency.

As you define input data, the program may display various warnings and tips for the user.

On the **Joint type** tab it is possible to define data about weld joint that should be analysed, its service conditions and parameters for welding.

In the **Select template joint** area, select their type: **Lap, T-joints (butt and flanged)**.

In the list of joint templates located below select appropriate template. For the check option, selected template will be displayed in the upper small window.

In the **Service conditions** and **Parameters of weld joint** areas, select in the drop-down lists and with option buttons all data necessary for analysis according to SNIP II-23-81* 'Steel structures'. Ratio of defined **Welding technique** and **Weld location** are [checked](#) for correspondence according to SNIP.

On the **Steel** tab it is possible to assign steel for every element in the joint (use appropriate option buttons to activate certain mode):

- **Profile (Strip)** and **Gusset** for the lap joint;
- **Profile (Rolled sheet)** and **End-plate** for the T-joint (butt);
- **Flange** and **Web** for the T-joint (flanged).

Depending on previously defined **Service conditions**, in the **Material for joined elements** box, for every element according to table 50* SNIP II-23-81* you will see lists of recommended steel or steel grades according to other building codes that may be used instead of steel recommended in GOST 27772-88.

With the help of option buttons you should define whether you will work either with classes or with grades of steel. In this case, when you select the class of steel in the **Steel recommended according to GOST 27772-88** list, in the special list **Steel grades by other GOST and TU** (not active at the moment) you will see steel grades that correspond to this class and vice versa.

In case of butt joint of pipes you will see the list of steel grades according to table 50* and table 51.a SNIP II-23-81* .

To compute flanged joint of built-up beam, it is possible to assign steels of different strength for flange and beam.

In the information window to the right you will see normative and design values of steel strength. These values depend on the thickness of steel profiles and sheets for selected class (grade) of steel in appropriate list.

The steel name and its mechanical properties for any element in the joint may be defined manually, if required. To do this, select appropriate check box. In this case, the input data is not checked but when you click the **Parameters** tab, defined value of thickness range is considered.

For steel profiles, in the **Designation** list for certain **Shape** you will see only shape in which flange thickness corresponds to the specified thickness range. If there are no such thickness values in the available shapes, then the **Designation** list remains empty and the program displays a warning that the thickness range should be modified.

Defined values of steel sheets are checked not so strictly. When you open the **Parameters** tab for the first time, min value for thickness range is displayed. Min value may be modified but within the range.

When you switch from the **Parameters** tab to the next tab **Welding materials**, the program checks correspondence between assigned thickness range for steel profiles and sheets of a certain element and the thickness value defined in the **Elements of joint** area. In case of any inconsistency, appropriate warning will be displayed and the thickness range should be modified.

Select with the pointer class or grade of steel for the element of weld joint and then click **Assign**. To do the same, it is also possible to double-click selected row. Information about defined steel for every element in the joint will be displayed in the information box to the right.

Class or grade of steel may be defined for four groups of structures and three climatic zones according to table 50* SNIP II-23-81*. If you select a steel for which there is a note in the table (about specific features of application), the program displays appropriate message. If the non-recommended steel is assigned for the gusset, you will see appropriate warning. But you could take a decision whether it is possible to apply such steel.

Important. The steel should be assigned separately for every element in the joint. To do this, use appropriate option buttons for every element in the joint and then select and assign steel for these elements.

On the **Parameters** tab it is possible to define data about dimensions of the joint and the forces that act on the joint. On schematic presentation of selected joint you will see necessary data about defined parameters and positive direction of applied forces. Depending on the type of calculation (**Check** or **Select** options), either leg lengths and weld lengths are defined (**Check** option) and then their values are [checked](#) or min allowed values for leg lengths are displayed (**Select** option) as input ones. When you place the

pointer over appropriate boxes for leg lengths and weld lengths, you will see tooltips with information about allowed values for these parameters. When you select this tab for the first time, min allowed values for leg lengths and weld lengths are displayed by default.

In the **Elements of joint** area, select the **Shape** and **Designation** of the profile in the steel table or define height and thickness for the **Sheet**, as well as thickness for **Gusset** or **End plate**. For the butt joint of built-up I-section, in this area specify width and thickness of rolled sheets from which the I-section is consisted of and thickness of the end-plate.

For the T-joints (flanged) just as for the butt joint of built-up I-section, it is necessary to define geometric properties of rolled sheets that the built-up I-section of the beam is consisted of. If there is a local stress in this beam, you should define length (b) of application of concentrated load to flange of built-up beam.

To display additional information about main geometric properties of the sections, click the **Geometric properties** button.

In the **Type of analysis** area, select with option button either **Check** or **Select**.

If the **Check** option is selected, then weld lengths and leg lengths should be defined in appropriate boxes, schematic presentation is available. The check procedures (by SNIP) carried out in computation depend on the joint type and combination of loads that act on this joint. For this type of computation, nonzero forces acting on the joint are [checked](#) unlike the **Select** option where the same condition causes that parameters of welds are selected by design requirements.

If the **Select** option is selected, then min allowed leg lengths (for defined element thickness) are displayed while weld lengths remain as zero values. For certain types of joints, additional options for **Select** procedure are available. For L-shaped lap joints it is possible to define additional option **Leg lengths at the heel and toe are equal**, for the flanged joints - **One-sided flange weld**. For the T-joint (butt) of the sheet element, in both modes of analysis it is also possible to assign **One-sided weld and edge preparation in full penetration**.

In the **Forces** area, there are forces for which **Check** or **Select** procedures for weld parameters is carried out according to the sign convention displayed on schematic presentation (for the active forces equal to zero, parameters of weld will be selected according to design conditions).

In analysis of **T-joints (butt)**, the **check strength of joint across the thickness of rolled steel** option may be defined. In this case, when the tensile stresses arise in the main steel across the thickness of rolled steel, the program displays another dialog box where you should define **Pattern for edge preparation and type of penetration** and, if required, define depth for edge preparation for strength analysis of the end-plate across the thickness of rolled steel.

All linear dimensions are defined in mm.

Important. When you assign another **Shape** or thickness for any element in the joint from rolled sheet and then click at any box or at the **Leg length** boxes, in these boxes the program will display recomputed min allowed value for defined parameters of elements.

On the **Welding materials** tab it is possible to select and assign welding materials for the structure. Materials are selected according to table 55* SNIP II-23-81*. In the **Materials for welding** area, you will see the list of available electrode types or marks of welding wire; the content of the list depends on previously defined **Service conditions**.

With the mouse pointer, select the electrode type or mark of welding wire in the table. In the lower left corner of the dialog box, the **Calculate** button becomes available.

Check of input data


When you move sequentially from one tab to another, the assigned data is checked for compliance with the requirements of SNIP II-23-81*. If the specified data does not satisfy the building code, one of the following messages is displayed:



- information warning about non-compliance with recommendations SNIP; further work (defining input data and carrying out analysis) is possible as preferred by the user;



- message about error in the input data, further work (defining input data and carrying out analysis) is not available until this data is modified.

When a steel for which specific features are specified in table 50* SNIP II-23-81* is assigned to elements of joint, the program displays the warning with the  icon.

Data specified on the [Joint type](#) tab is checked for mutual consistency according to SNIP provisions mentioned below.

Selected **Welding technique** and **Weld location** allow you to determine the coefficients β_f and β_z according to table 34* SNIP II-23-81*. When assigned weld location does not correspond to selected welding technique and you try to move to the next tab, the warning is displayed and you cannot move to the next tab.

In case of butt joint for the pipe for structures of *Group 1* (table 50* SNIP II-23-81*), the program also displays appropriate warning.

Defined value of **safety factor** for **unique object** for **class of responsibility** is also checked.

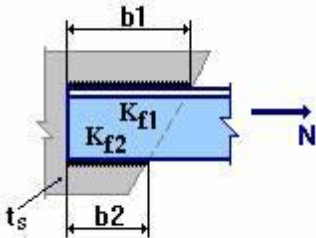
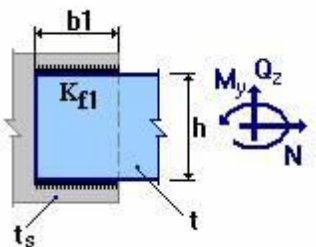
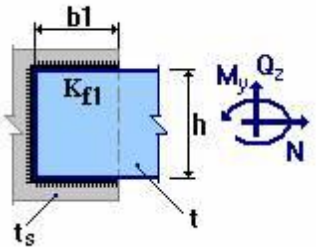
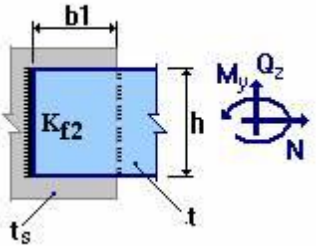
When you move from the [Steel](#) tab to the following [Parameters](#) tab, the program checks the steel assigned for the second element in the joint.







Values for **Parameters** of joints of all types are checked according to sect.11.2, in some cases - also sect.11.3, 11.5 SNIP II-23-81*. Defined values of element thickness are checked for:





- whether it is allowed to weld (table 38* SNIP II-23-81*);
- whether steels defined for elements are allowed.

For lap joints of sheets, the program also checks whether defined height h is correct.

Here for the **Check** procedure, leg length and weld length are specified. When you move from one tab to another, the program checks whether these values correspond to requirements of sect.12.8 SNIP II-23-81*:

<i>Joint</i>	<i>Check of parameters</i>
	$K_f \min \leq K_{f1} \leq 1.2 \cdot \min\{1.2 \cdot t, t_s\}$, $K_f \min = \text{Table 38* SNIP II-23-81*} \{ \max(t, t_s) \}$ $K_f \min \leq K_{f2} \leq 1.2 \cdot \min\{0.9 \cdot t, t_s\}$, $K_f \min = \text{Table 38* SNIP II-23-81*} \{ \min(0.9 \cdot t, t_s) \}$ $b1 \geq \max\{40 \text{ mm}, 4 \cdot K_{f1}\}$ $b2 \geq \max\{40 \text{ mm}, 4 \cdot K_{f2}\}$
	$K_f \min \leq K_{f1} \leq 1.2 \cdot \min\{t, t_s\}$, $K_f \min = \text{Table 38* SNIP II-23-81*} \{ \max(t, t_s) \}$ $b1 \geq \max\{40 \text{ mm}, 4 \cdot K_{f1}\}$ $h \geq 5 \cdot \min\{t, t_s\}$
	$K_f \min \leq K_{f1} \leq 1.2 \cdot \min\{t, t_s\}$, $K_f \min = \text{Table 38* SNIP II-23-81*} \{ \max(t, t_s) \}$ $b1 \geq \max\{40 \text{ mm}, 4 \cdot K_{f1}\}$ $h \geq \max\{40 \text{ mm}, 4 \cdot K_{f1}, 5 \cdot \min\{t, t_s\}\}$
	$K_f \min \leq K_{f2} \leq 1.2 \cdot \min\{t, t_s\}$, $K_f \min = \text{Table 38* SNIP II-23-81*} \{ \max(t, t_s) \}$ $b1 \geq 5 \cdot \min\{t, t_s\}$ $h \geq \max\{40 \text{ mm}, 4 \cdot K_{f2}\}$

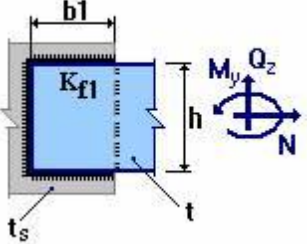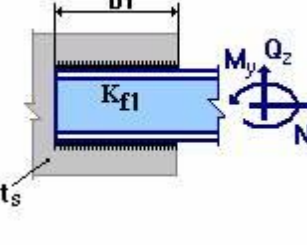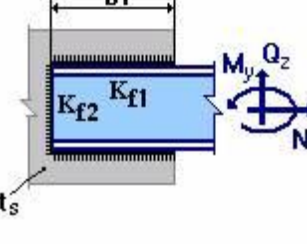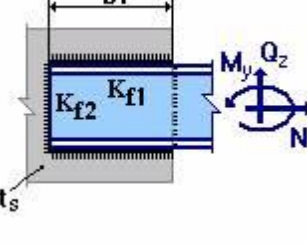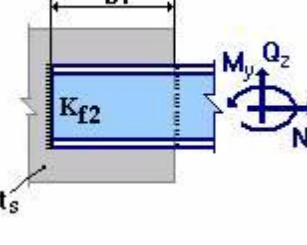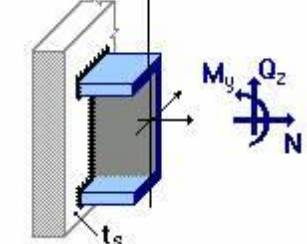	$K_f \min \leq K_{f1} \leq 1.2 \cdot \min\{t, t_s\}$, $K_f \min = \text{Table 38}^* \text{ SNIP II-23-81}^* \{ \max(t, t_s) \}$ $b1 \geq \max\{ 40 \text{ mm}, 4 \cdot K_{f1}, 5 \cdot \min\{t, t_s\} \}$ $h \geq \max\{ 40 \text{ mm}, 4 \cdot K_{f1}, 5 \cdot \min\{t, t_s\} \}$
	$K_f \min \leq K_{f1} \leq 1.2 \cdot \min\{t, t_s\}$, $K_f \min = \text{Table 38}^* \text{ SNIP II-23-81}^* \{ \max(t, t_s) \}$ $b1 \geq \max\{ 40 \text{ mm}, 4 \cdot K_{f1} \}$
	$K_f \min \leq K_{f1} \leq 1.2 \cdot \min\{t, t_s\}$, $K_f \min = \text{Table 38}^* \text{ SNIP II-23-81}^* \{ \max(t, t_s) \}$, where t – flange thickness of channel section $K_f \min \leq K_{f2} \leq 1.2 \cdot \min\{t, t_s\}$, $K_f \min = \text{Table 38}^* \text{ SNIP II-23-81}^* \{ \max(t, t_s) \}$, where t – web thickness of channel section $b1 \geq \max\{ 40 \text{ mm}, 4 \cdot K_{f1} \}$
	$K_f \min \leq K_{f1} \leq 1.2 \cdot \min\{t, t_s\}$, $K_f \min = \text{Table 38}^* \text{ SNIP II-23-81}^* \{ \max(t, t_s) \}$, where t – flange thickness of channel section $K_f \min \leq K_{f2} \leq 1.2 \cdot \min\{t, t_s\}$, $K_f \min = \text{Table 38}^* \text{ SNIP II-23-81}^* \{ \max(t, t_s) \}$, where t – web thickness of channel section $b1 \geq \max\{ 40 \text{ mm}, 4 \cdot K_{f1}, 5 \cdot \min\{t, t_s\} \}$
	$K_f \min \leq K_{f2} \leq 1.2 \cdot \min\{t, t_s\}$, $K_f \min = \text{Table 38}^* \text{ SNIP II-23-81}^* \{ \max(t, t_s) \}$ $b1 \geq 5 \cdot \min\{t, t_s\}$
	$K_f \min \leq K_{f1} \leq 1.2 \cdot \min\{t, t_s\}$, $K_f \min = \text{Table 38}^* \text{ SNIP II-23-81}^* \{ \max(t, t_s) \}$, where t – flange thickness of profile $K_f \min \leq K_{f2} \leq 1.2 \cdot \min\{t, t_s\}$, $K_f \min = \text{Table 38}^* \text{ SNIP II-23-81}^* \{ \max(t, t_s) \}$, where t – web thickness of profile

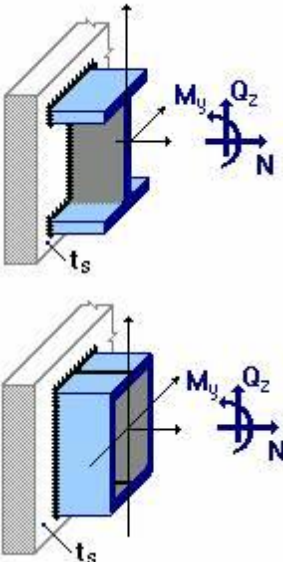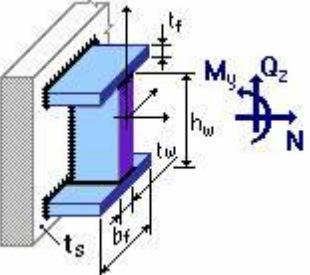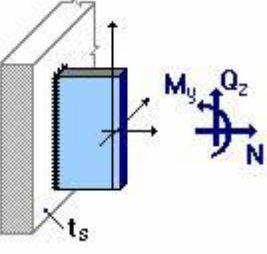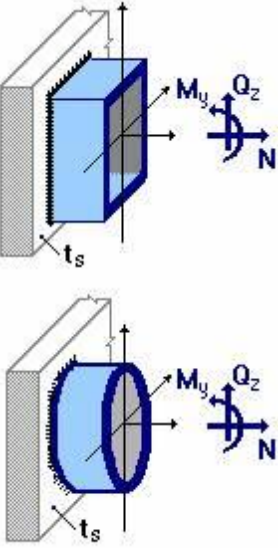
	
	<p> $K_f \min \leq K_{f1} \leq 1.2 \cdot \min\{t, t_s\}$, $K_f \min = \text{Table 38}^* \text{ SNIP II-23-81}^* \{ \max(t, t_s) \}$, where t – flange thickness of built-up I-section $K_f \min \leq K_{f2} \leq 1.2 \cdot \min\{t, t_s\}$, $K_f \min = \text{Table 38}^* \text{ SNIP II-23-81}^* \{ \max(t, t_s) \}$, where t – web thickness of built-up I-section </p>
	<p> $K_f \min \leq K_{f1} \leq 1.2 \cdot \min\{t, t_s\}$, $K_f \min = \text{Table 38}^* \text{ SNIP II-23-81}^* \{ \max(t, t_s) \}$ $h \geq \max\{ 40 \text{ mm}, 4 \cdot K_f \}$ </p>
	<p> $K_f \min \leq K_{f1} \leq 1.2 \cdot \min\{t, t_s\}$, $K_f \min = \text{Table 38}^* \text{ SNIP II-23-81}^* \{ \max(t, t_s) \}$ </p>

In some cases it is not possible to define min leg lengths correctly because of attempt to weld elements of inappropriate combinations of thicknesses or to use steel not mentioned in Table 38* SNIP II-23-81*. In this case, zero values of the leg lengths are displayed in the corresponding input boxes and the warning is issued. When you carry out the **Select** procedure, the values of min leg lengths are also checked to be not equal to zero. To continue calculation, data should be reset.

When you carry out the **Check** procedure, the program checks that at least one of the acting forces should be with non-zero value. For the **Select** procedure, zero forces in the joint are allowed and weld dimensions are selected according to design requirements.

For lap joints of the L-shaped profile, if only longitudinal force is acting, the thickness of the gusset is checked for compliance with the recommended value depending on the acting force. In case of non-compliance, the warning is displayed.


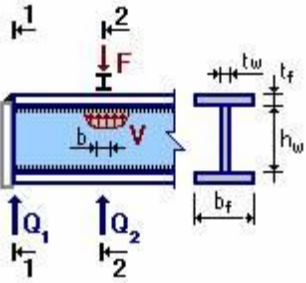
Geometric properties of the section of the flanged T-joint are checked for compliance with the following requirements:





	$b_{f2} \geq b_f$, where b_f – flange width of built-up I-section in section 1-1, b_{f2} – flange width in section 2-2 $h_w \geq b_f$, $h_w > 40 \text{ mm}$, $b_f > t_w$, $b \geq 50 \text{ mm}$, if $F \neq 0$, $Q_1=0$ and $Q_2=0$ and $F=0$ (in this case, the weld is assigned according to design features) or $Q_1=0$ and $Q_2=0$ and $F=0$ or $Q_1 \neq 0$ and $Q_2 \neq 0$ and $F=0$ or $Q_1 \neq 0$ and $Q_2 \neq 0$ and $F \neq 0$
--	---

Weld T-joints (flanged)

In built-up beams, flanges are joined to webs by means of fillet welds.

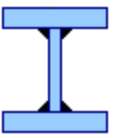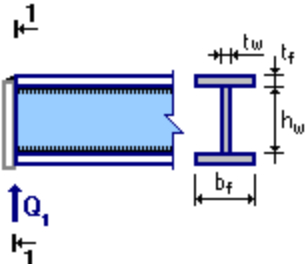For analysis of T-joints (flanged), the following types of flanged joints in built-up I-sections are available:

		Flanged joint of built-up I-section when there is no local stress ($\sigma_{loc} = 0$)
---	---	--

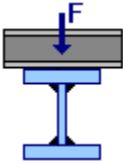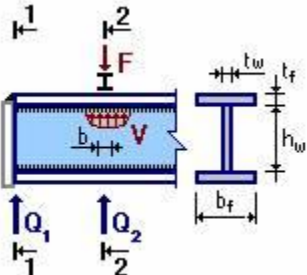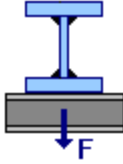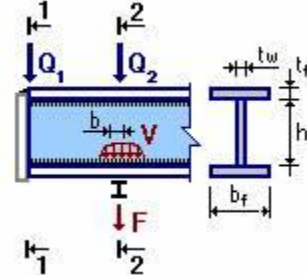		Flanged joint of built-up I-section with local stress ($\sigma_{loc} \neq 0$)
		Flanged joint of built-up I-section with local stress ($\sigma_{loc} \neq 0$)

Load on flange of built-up beam may be transferred from steel purlin and from RC slab. Pressure V from design value of concentrated loads F should be computed by formula

$$V = F/l_{ef},$$

where

$$l_{ef} = b + 2t_f - \text{effective length of load distribution,}$$

$$t_f - \text{thickness of appropriate flange of beam.}$$

Important. When load F is applied to the bottom flange of beam, welds of the bottom flange are computed with account of force Q (regardless of the presence of stiffener in section where load F is applied to).

Output data

To carry out analysis, click the **Calculate** button (on the **Welding materials** tab).

Output data is presented on the **Parameters** tab. This tab is displayed automatically after analysis procedure. The **Report** button becomes available after computation.

After the **Check** of weld joint, the program computes max utilization ratio of design strength of weld joints either by weld metal or by metal of fusion weld boundary (ratio of real stress to effective strength of weld, expressed as %).

In the **Select** procedure, the program computes min allowed leg lengths and corresponding weld lengths (that do not exceed min allowed effective lengths) that provide bearing capacity of the joint. Computed values are displayed in the appropriate boxes.

For analysis of T-joint butt welds in case of tensile stresses in the main steel across the thickness of rolled steel, the program carries out the check of steel strength. The output data contains utilization ratio of steel strength across the thickness of rolled steel according to this check.

In case forces (that act on the joint of any type) are defined as equal to zero for the **Select** procedure, the leg length and length of weld are assigned according to design features (you will see appropriate warning).

For the flanged joint, the program carries out only **Selection** of leg length at the support of beam and in the plane of local stress ([section 2-2 Fig. in the table](#)). If computed leg length exceeds max allowed value, then the program displays the warning that it cannot determine weld for the specified parameters and forces.

After analysis procedure, it is possible to generate the **Report** that contains the input data and the output data from **Check** or **Select** procedures. To generate and open the report file in HTML format, click **Report**. It is possible to save the copy of the report with user-defined name and location (on the FILE menu, use the **Save as** command).

Bolted connections

The module enables the user to analyse and design lap bolted connections in steel structures of the following main types:

- connections of single and double angles to the gusset;
- connections of sheet elements with splices;
- connections of beam web (rolled or built-up) with splices.

The program supports the following building codes:

1. SNIP II-23-81* 'Steel structures. Design rules' — M.: TSITP Gosstroy USSR, 1990;
2. Manual on design of steel structures (to SNIP II-23-81*) / TSNIISK named Kucherenko Gosstroy USSR.

The program window contains four tabs where you could define input data for analysis of bolted connection:

[Connection type](#)
[Steel of elements](#)
[Parameters of connection](#)
[Requirements to bolts](#)

When [input data is defined](#) and [analysis results](#) are obtained, the output data is generated as report file that may be printed or saved, if necessary.

Set of checks by SNIP II-23-81* depends on type of connections and sections of its elements, type of bolts (without controlled tension or with controlled tension - friction-grip bolts) and all loads applied to connection. Below there is a list of checks for every type of connection.

Connections of angle sections:

- bolt in shear (without controlled tension) — sect.11.7;
- connection in shear (friction-grip bolts) — sect.11.13*;
- angle in local compression — sect.11.7;
- gusset in local compression — sect.11.7;

- strength in weakened section of angle — sect. 5.1.

Connections of sheet elements with splices:

- bolt in shear (without controlled tension) — sect.11.7;
- connection in shear (friction-grip bolts) — sect.11.13*;
- splice in local compression — sect.11.7;
- gusset in local compression — sect.11.7;
- strength in weakened section of splice — sect. 5.1.
- strength in weakened section of gusset (if its width is equal to width of splice) — sect. 5.1.

Connections of beam web:

- bolt in shear (without controlled tension) — sect.11.7;
- connection in shear (friction-grip bolts) — sect.11.13*;
- web of beam in local compression — sect.11.7;
- splice in local compression — sect.11.7;
- strength in weakened section of web in beam — sect. 5.1.
- strength in weakened section of splice — sect. 5.1.

For analysis of different connections of structural shapes, the steel table from [ESPRI](#) program '**Steel structures**' chapter is used. Geometric properties of rolled sheets are defined by the user.

The program supports the following building codes:

<u>Mode</u>	<u>References to buildings codes</u>
Steel of elements	Table 50* SNIP II-23-81* Table 51* SNIP II-23-81* Table 51,6 SNIP II-23-81*
Matchmarks that determine location of bolt holes in elements	GOST 24839-81 «Steel structures. Arrangement of holes in rolled sheets. Dimensions» sect. 12.19*, Table 39 SNIP II-23-81*
Requirements to bolts	sect. 2.4*, 2.7*, 3.5, 3.7 SNIP II-23-81* Table 57*, 58* and 59* SNIP II-23-81* (bolts without controlled tension) Table 36* SNIP II-23-81* (friction-grip bolts)
Partial safety factor	Table 6* SNIP II-23-81*
Partial safety factor for connection	Table 35* SNIP II-23-81*

Input data

Input data for analysis of selected connection is defined in sequence tab by tab from left to right; at the same time the program [checks](#) whether assigned data is correct. Otherwise,

the program displays the error message and it is not possible to select another tab in program window.

When defined data is approved as correct one, you will be able to select another tab and define appropriate data there. When you define data for selected template connection at any tab, you could return to any of the previous tabs to edit or review the previously defined data.

When you switch from one tab to another, all defined data is saved in both directions. If previously defined data do not correspond to current data, then the program opens the tab where the inconsistency is found and you could remove such inconsistency.

As you define input data, the program may display various warnings and tips for the user.

On the **Connection type** tab it is possible to define data about connection that should be analysed, its service conditions, type of structure and type of bolts.

In the **Select template connection** area, select the template type that will be displayed in the upper small window.

In the **Service conditions** and **Parameters of bolted connection** areas, select in the drop-down lists and with option buttons all data necessary for analysis according to SNIP II-23-81* 'Steel structures'.

In the **Parameters of bolted connection** area, define the type of structure from one of the following:

OHTL - overhead transmission line;

OSG - outdoor switchgear;

CS - overhead control system.

On the **Steel** tab it is possible to assign steel for every element in the connection (use appropriate option buttons to activate certain mode):

— **Profile (Strip)** and **Gusset** for the lap connection of angle and sheet;

— **Profile** (rolled or built-up from sheets) and **Splice** for connection of built-up or rolled beam.

Depending on previously defined **Group of structures** and **Climatic zone according to SNIP II-23-81***, in the **Material for connected elements** box, for every element according to table 50* SNIP II-23-81* you will see lists of recommended steel or steel grades by other building codes that may be used instead of steel recommended in GOST 27772-88.

With the help of option buttons you should define whether you will work with steel classes or with steel grades. When you select the class of steel in the **Steel recommended according to GOST 27772-88** list, in the special list **Steel grades by other GOST and TU** (not active at the moment) you will see steel grades that correspond to this class and vice versa.

In the information window to the right you will see normative and design values of steel strength. These values depend on the thickness of steel profiles and sheets for selected class (grade) of steel in appropriate list.

The steel name and its mechanical properties for any element in the connection may be defined manually, if required. To do this, select appropriate check box. In this case, the input data is not checked but when you click the **Parameters** tab, defined value of thickness range is considered. If any property of user-defined steel was modified but not confirmed when you select this tab once more, then when you switch to another tab you will see appropriate warning.

For steel profiles, in the **Designation** list for certain **Profile** you will see only profiles in which flange thickness corresponds to the specified thickness range. If there are no such thickness values in the available profiles, then the **Designation** list remains empty and the program displays a warning that the thickness range should be modified.

Defined values of steel sheets are checked not so strictly. When you open the **Parameters** tab for the first time, min value for thickness range is displayed. Min value may be modified but within the range.

When you switch from the **Parameters** tab to the next tab **Requirements to bolts**, the program checks correspondence between assigned thickness range for steel profiles and sheets of a certain element and the thickness value defined in the **Elements of connection** area. In case of any inconsistency, appropriate warning will be displayed and the thickness range should be modified.

Select with the pointer class or grade of steel for the element of bolted connection and then click **Assign**. To do the same, it is also possible to double-click selected row. Information about defined steel for every element in the connection will be displayed in the information box to the right.

Class or grade of steel may be defined for four groups of structures and three climatic zones according to table 50* SNIP II-23-81*. If you select a steel for which there is a note in the table (about specific features of application), the program displays appropriate message.

Important. The steel should be assigned separately for every element in the connection. To do this, use appropriate option buttons for every element in the connection and then select and assign steel for these elements.

On the **Parameters** tab it is possible to define data about dimensions of the connection, forces that act on the connection, diameter and accuracy class of bolts, hole misalignment (difference in nominal diameter of holes and bolts) and location of centres of bolt holes.

On schematic presentation of selected connection you will see necessary data about defined parameters, matchmarks that determine location of bolt holes in connected elements, and about applied forces.

Depending on selected type of connection, matchmarks may be either completely defined by the user according to sect.12.19*, Table 39 SNIP II-23-81* or, for connections of angles, recommended ones (matchmarks stipulated in GOST 24839-81). In connections with

staggered arrangement of bolts, min distance between bolt centres is limited. In this case, the weakened section is checked and the area of weakened section is computed in vertical direction across the force.

When you place the pointer over appropriate boxes for matchmark values (distances from bolt centre to edge of element and between bolt centres in any direction) and number of bolt spacings in both directions, you will see tooltips with information about allowed values for these parameters. The program checks these parameters according to sect.12.19* SNIP II-23-81*.

When you open this tab for the first time, in the boxes with geometrical data the program displays min allowed values (thickness) for bolted connections and in boxes for matchmarks - their min allowed values are displayed as initial ones and may be modified.

In the **Elements of connection** area, select the **Profile** and its **Designation** in the steel table or define height and thickness for the **Splice**, as well as thickness for **Gusset**. For the connection with splice (splices) of built-up I-section, in this area specify width and thickness of rolled sheets from which the I-section is consisted of and thickness of the splice.

To display additional information about main geometric properties of the sections, click the **Geometric properties** button.

When you define **Forces** applied to connection, necessary **Accuracy class**, diameter of bolts d_b and **Hole misalignment**, dimensions for **Necessary contours of bolted field**, to confirm all modifications that determine allowed (min and max) values of matchmarks, click **Set matchmarks**. If the data is defined incorrectly or the program cannot select allowed value of matchmark, you will see appropriate warning with the list of errors, and in case of selection procedure, with recommendations about possible modification of this data.

All linear dimensions are defined in mm.

Important. When you assign another **Profile** or thickness for any element in the connection from rolled sheet, set of forces applied to the connection, values of matchmarks or other parameters of connection that determine matchmarks (diameter or accuracy class of bolts, hole misalignment), click **Set matchmarks**. The program will check whether current values of matchmarks are allowed.

On the **Requirements to bolts** tab it is possible to select and assign materials for the structure depending on type of bolts defined earlier. For bolts without controlled tension, in the **Requirements to bolts** area, the program displays the list of **Accuracy classes** for bolts stipulated depending on previously defined **Service conditions**. If temperature conditions for the connection are defined as below -40°C , the user will be able to select the mode of maintenance in heated space.

Select with the pointer accuracy class for the bolts. In the information boxes you will see appropriate values for design strength in shear R_{bs} and in tension R_{bt} for bolts of selected class. Below you will also see information about design strength in local compression for connected elements R_{bp} for the current class of accuracy defined on the **Parameters** tab.

In the lower left corner of the dialog box, click **Calculate**.

For the friction-grip bolts, in the **Connections on high strength bolts with controlled tension** area, define **Method of processing (cleaning) the surfaces to be joined** and information about mechanical properties of high strength bolts.

Select with the pointer certain method of processing the surfaces. In this case, in the information boxes you will see appropriate values of friction coefficient μ and load factor γ_h .

In the table, select the **Steel grade according to GOST 4543-71*** from the list. The contents of the list depend on previously defined nominal diameter of thread.

In the lower left corner of the dialog box, click **Calculate**.

Check of input data


When you move sequentially from one tab to another, the assigned data is checked for compliance with the requirements of SNIP II-23-81*. If the specified data does not satisfy the building code, one of the following messages is displayed:



- information warning about non-compliance with recommendations SNIP; further work (defining input data and carrying out analysis) is possible as preferred by the user;



- message about error in the input data, further work (defining input data and carrying out analysis) is not available until this data is modified.

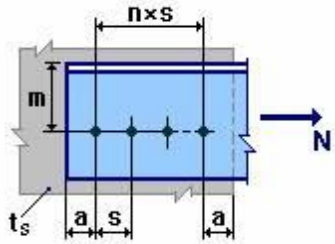
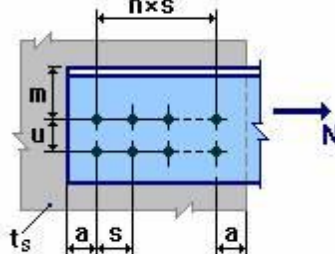
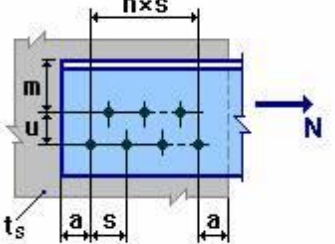
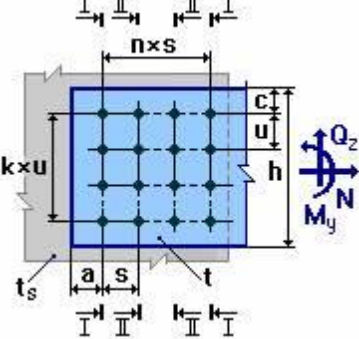
When a steel for which specific features are stipulated in table 50* SNIP II-23-81* is assigned to elements of connection, the program displays the warning with the  icon.



When you move from the [Steel](#) tab to the following [Parameters](#) tab, the program checks the steel assigned for the second element in the connection.


Values for **Parameters** of connections of all types are checked for mutual correspondence for further correct arrangement of bolts in connection according to SNIP II-23-81*. Defined values of element thickness are checked:

- whether it is allowed to connect with bolts of selected diameter (table 39 SNIP II-23-81*);
- whether steels defined for elements are allowed.


When you move to **Requirements to bolts** tab or click **Calculate**, the program checks whether defined values of matchmarks correspond to requirements of sect.12.19* SNIP II-23-81*:

Connection	Check of parameters (Table 39 SNIP II-23-81*)
	<p>m – defined according to GOST 24839-81 $a_{\min} \leq a \leq \min(4d, 8T)$, $T = \min(t, t_s)$ – for connection of single angle to gusset $T = t$ – for connection of double angles to gusset $a_{\min} = 1.5d$ ($R_{yn} \leq 375 \text{ MPa}$) or $2.5d$ ($R_{yn} > 375 \text{ MPa}$) $a_{\min} = 1.3d$ – for high strength bolts with controlled tension (friction-grip bolts) $s_{\min} \leq s \leq \min(8d, 12T)$ $s_{\min} = 2d$ ($R_{yn} \leq 375 \text{ MPa}$) or $3d$ ($R_{yn} > 375 \text{ MPa}$) $n \geq 0$</p>
	<p>m, u – defined according to GOST 24839-81 $a_{\min} \leq a \leq \min(4d, 8T)$, $T = \min(t, t_s)$ – for connection of single angle to gusset $T = t$ – for connection of double angles to gusset $a_{\min} = 1.5d$ ($R_{yn} \leq 375 \text{ MPa}$) or $2.5d$ ($R_{yn} > 375 \text{ MPa}$) $a_{\min} = 1.3d$ – for high strength bolts with controlled tension (friction-grip bolts) $s_{\min} \leq s \leq \min(8d, 12T)$ $s_{\min} = 2d$ ($R_{yn} \leq 375 \text{ MPa}$) or $3d$ ($R_{yn} > 375 \text{ MPa}$) $n \geq 0$</p>
	<p>m, u – defined according to GOST 24839-81 $a_{\min} \leq a \leq \min(4d, 8T)$, $T = \min(t, t_s)$ – for connection of single angle to gusset $T = t$ – for connection of double angles to gusset $a_{\min} = 1.5d$ ($R_{yn} \leq 375 \text{ MPa}$) or $2.5d$ ($R_{yn} > 375 \text{ MPa}$) $a_{\min} = 1.3d$ – for high strength bolts with controlled tension (friction-grip bolts) $s_{\min} \leq s \leq \min(8d, 12T)$ $s_{\min} = 2(u + 1.5d)$ $n \geq 1$</p>
	<p>$a_{\min} (c_{\min}) \leq a (c) \leq \min(4d, 8T)$, $T = \min(t, t_s)$ – for connection of single splice or $T = t_s$ – for similar connection with double splices $a_{\min} = 1.5d$ ($R_{yn} \leq 375 \text{ MPa}$) or $2.5d$ ($R_{yn} > 375 \text{ MPa}$) $c_{\min} = 1.5d$ – for sheared edges $c_{\min} = 1.2d$ – for rolled edges $c_{\min} = 1.5d$ ($R_{yn} \leq 375 \text{ MPa}$) or $2.5d$ ($R_{yn} > 375 \text{ MPa}$) $a_{\min} = 1.5d$ – for sheared edges $a_{\min} = 1.2d$ – for rolled edges $c_{\min} = a_{\min} = 1.5d$ ($R_{yn} \leq 375 \text{ MPa}$) or $2.5d$ ($R_{yn} > 375 \text{ MPa}$), for all other combinations of forces $a_{\min} = c_{\min} = 1.3d$ – for friction-grip bolts $s_{\min} (u_{\min}) \leq s (u) \leq \min(8d, 12T)$</p> <p>if $N \neq 0; Q_z, M_y = 0$</p> <p>if $Q_z \neq 0; N, M_y = 0$</p>

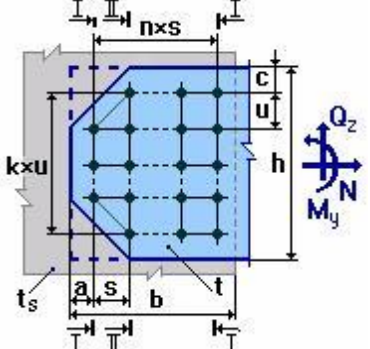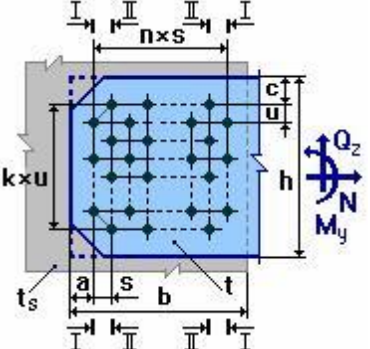	$s_{\min}(u_{\min}) = 2d$ ($R_{yn} \leq 375\text{MPa}$) or $3d$ ($R_{yn} > 375\text{MPa}$) $n \geq 0$ $k \geq 0$
	$a_{\min}(c_{\min}) \leq a(c) \leq \min(4d, 8T)$, $T = \min(t, t_s)$ – for connection of single splice or $T = t_s$ – for similar connection with double splices $a_{\min} = 1.5d$ ($R_{yn} \leq 375\text{MPa}$) or $2.5d$ ($R_{yn} > 375\text{MPa}$) $c_{\min} = 1.5d$ – for sheared edges $c_{\min} = 1.2d$ – for rolled edges $c_{\min} = 1.5d$ ($R_{yn} \leq 375\text{MPa}$) or $2.5d$ ($R_{yn} > 375\text{MPa}$) $a_{\min} = 1.5d$ – for sheared edges $a_{\min} = 1.2d$ – for rolled edges $c_{\min} = a_{\min} = 1.5d$ ($R_{yn} \leq 375\text{MPa}$) or $2.5d$ ($R_{yn} > 375\text{MPa}$), for all other combinations of forces $a_{\min} = c_{\min} = 1.3d$ – for friction-grip bolts $s_{\min}(u_{\min}) \leq s(u) \leq \min(8d, 12T)$ $s_{\min}(u_{\min}) = 2d$ ($R_{yn} \leq 375\text{MPa}$) or $3d$ ($R_{yn} > 375\text{MPa}$) $n \geq 1$ $k \geq 2$
	$a_{\min}(c_{\min}) \leq a(c) \leq \min(4d, 8T)$, $T = \min(t, t_s)$ – for connection of single splice or $T = t_s$ – for similar connection with double splices $a_{\min} = 1.5d$ ($R_{yn} \leq 375\text{MPa}$) or $2.5d$ ($R_{yn} > 375\text{MPa}$) $c_{\min} = 1.5d$ – for sheared edges $c_{\min} = 1.2d$ – for rolled edges $c_{\min} = 1.5d$ ($R_{yn} \leq 375\text{MPa}$) or $2.5d$ ($R_{yn} > 375\text{MPa}$) $a_{\min} = 1.5d$ – for sheared edges $a_{\min} = 1.2d$ – for rolled edges $c_{\min} = a_{\min} = 1.5d$ ($R_{yn} \leq 375\text{MPa}$) or $2.5d$ ($R_{yn} > 375\text{MPa}$), for all other combinations of forces $a_{\min} = c_{\min} = 1.3d$ – for friction-grip bolts $u_{\min} \leq u \leq \min(8d, 12T)$ $u_{\min} = d$ ($R_{yn} \leq 375\text{MPa}$) or $1.5d$ ($R_{yn} > 375\text{MPa}$) $s_{\min} \leq s \leq \min(8d, 12T)$ $s_{\min} = u + 1.5d$ $n \geq 2$, always even $k \geq 2$, always even

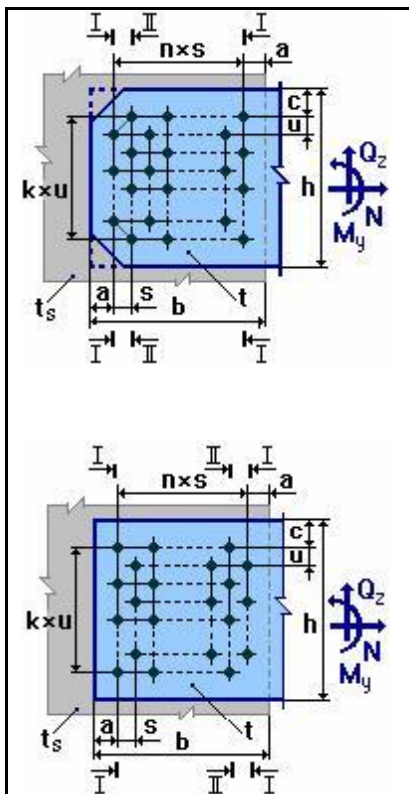

$a_{\min} (c_{\min}) \leq a (c) \leq \min(4d, 8T)$,
 $T = \min(t, t_s)$ – for connection of single splice or
 $T = t_s$ – for similar connection with double splices
 $a_{\min} = 1.5d (R_{yn} \leq 375 \text{ MPa})$ or $2.5d (R_{yn} > 375 \text{ MPa})$
 $c_{\min} = 1.5d$ – for sheared edges
 $c_{\min} = 1.2d$ – for rolled edges
 $c_{\min} = 1.5d (R_{yn} \leq 375 \text{ MPa})$ or $2.5d (R_{yn} > 375 \text{ MPa})$
 $a_{\min} = 1.5d$ – for sheared edges
 $a_{\min} = 1.2d$ – for rolled edges
 $c_{\min} = a_{\min} = 1.5d (R_{yn} \leq 375 \text{ MPa})$ or $2.5d (R_{yn} > 375 \text{ MPa})$,
 for all other combinations of forces
 $a_{\min} = c_{\min} = 1.3d$ – for friction-grip bolts
 $u_{\min} \leq u \leq \min(8d, 12T)$
 $u_{\min} = d (R_{yn} \leq 375 \text{ MPa})$ or $1.5d (R_{yn} > 375 \text{ MPa})$
 $s_{\min} \leq s \leq \min(8d, 12T)$
 $s_{\min} = u + 1.5d$
 $n \geq 1$, always odd
 $k \geq 2$, always even

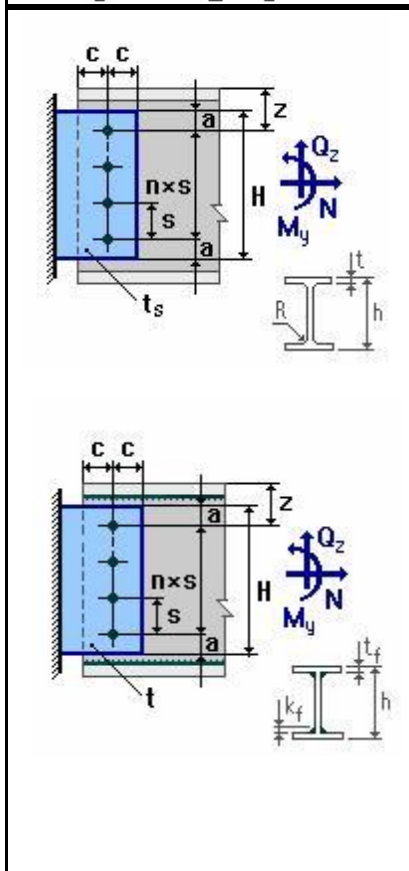

$a_{\min} (c_{\min}) \leq a (c) \leq \min(4d, 8T)$,
 $T = \min(t, t_s)$ – for connection of beam web with single splice or
 $T = t_s$ – for similar connection with double splices
 $a_{\min} = 1.5d (R_{yn} \leq 375 \text{ MPa})$ or $2.5d (R_{yn} > 375 \text{ MPa})$
 $c_{\min} = 1.5d$ – for sheared edges
 $c_{\min} = 1.2d$ – for rolled edges
 $c_{\min} = 1.5d (R_{yn} \leq 375 \text{ MPa})$ or $2.5d (R_{yn} > 375 \text{ MPa})$
 $a_{\min} = 1.5d$ – for sheared edges
 $a_{\min} = 1.2d$ – for rolled edges
 $a_{\min} = c_{\min} = 1.5d (R_{yn} \leq 375 \text{ MPa})$ or $2.5d (R_{yn} > 375 \text{ MPa})$,
 for all other combinations of forces
 $a_{\min} = c_{\min} = 1.3d$ – for friction-grip bolts
 $s_{\min} \leq s \leq \min(8d, 12T)$
 $s_{\min} = 2d (R_{yn} \leq 375 \text{ MPa})$ or $3d (R_{yn} > 375 \text{ MPa})$
 $z - a \geq t + R + 2$ – for rolled beam
 $z - a \geq t_f + k_f + 2$ – for built-up beam
 $h - n*s = 2z$
 $n \geq 0$
 $k_f \geq 3$

In some cases it is not possible to define correctly min values of matchmarks because of attempt to connect elements with unallowable thickness combinations for the specified

steel for the current diameter of hole. It means that for these parameters, min allowed value of matchmark exceeds max value that is determined according to Table 39 SNIP II-23-81*.

When you open the **Parameters of connection** tab for the first time for the current connection or after significant changes to input parameters considered as a new problem, the min allowed values of the element thickness and matchmarks are displayed in the corresponding boxes. When you modify any parameters presented on this tab and then confirm them with the **Set matchmarks** button, a warning is displayed that assigned matchmarks do not correspond to the tolerance limits. The min allowed value of T (see above) is indicated. In this case, to perform further calculations, the data must be modified properly.

Output data

To carry out analysis, click the **Calculate** button.

Output data is presented on the **Parameters** tab. This tab is displayed automatically after analysis procedure. The **Report** button becomes available after computation.

After the **Check** of bolted connection, the program computes max utilization ratio of bearing capacity of weakened sections of elements in connections. Location of weakened sections is also provided.

After analysis procedure, it is possible to generate the **Report** that contains the input data and the output data from check procedures. To generate and open the report file in HTML format, click **Report**. It is possible to save the copy of the report with user-defined name and location (on the FILE menu, use the **Save as** command).

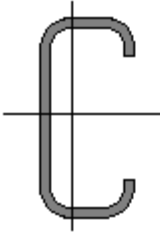
Cold-formed shapes

The module enables you to check and select sections of structures made of cold-formed steel shapes according to *Guidelines on design, manufacturing and assemblage of framework structures in low-rise buildings and attics of cold-formed galvanized shapes made at 'Balt-Profil' Ltd.* (Edited by E. Ajrumyan).

The work with this program is similar to the work with '[Analysis of steel elements](#)' module. Dialog boxes to define the input data are presented in Figures 4.24 – 4.27.

Additional parameters and selection limitations X

Section outline



Element type
☐ Truss ☐ Column ☒ Beam

Partial safety factors
 for buckling: 1.000
 for strength: 1.000

Safety factor: 1.000

☐ use factors for length of element
☐ Cantilever ☐ Beam with one axis of symmetry

End conditions of compression flange of beam
☒ no fixations ☐ lower flange
☐ one at middle Lef: 3.000000
☐ more, span divided into equal parts

Load
☒ applied 1 ☐ applied 2
☒ cause pure bending ☐ applied to two flanges
☐ concentrated at 1/2 span ☐ applied to middle support
☐ uniformly distributed

Place stiffeners in: 200.000

☐ Analysis with account of plasticity


Calculation by deflection
 Span length:
 Max allowed deflection: 1/ 400

Select steel for the element
☒ Select section from defined steel only
☐ Move downwards the steel list
☐ Move upwards the steel list

Selection limitations
 Overall dimensions along Z1
 min: 1.000 max: 1.000
 Overall dimensions along Y1
 min: 1.000 max: 1.000
☐ Place stiffeners Min thickness: 1.000

Figure 4.24

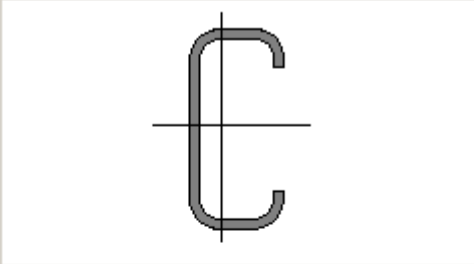Section outline X



Steel table
 Shape
 Steel
 Select shape
☐ Channel ☒ C-shaped

Select Shape

Section type

Parameters of shape

Ry	<input type="text" value="230.000"/>	Ru	<input type="text" value="350.000"/>
Total area	<input type="text" value="28.550"/>	Reduced area	<input type="text" value="28.550"/>
Ix	<input type="text" value="10258.700"/>	Iy	<input type="text" value="110.320"/>
Wx	<input type="text" value="373.044"/>	Wy	<input type="text" value="20.659"/>

Parameters of section as a whole

It	<input type="text" value="1.544533"/>
Cw	<input type="text" value="71123.273"/>
d	<input type="text" value="1.000000"/>

Data for calculation of beam web not strengthened with stiffeners

Bend radius	<input type="text" value="2.500"/>
Support width	<input type="text" value="20.000"/>
Force at support	<input type="text" value="0.001"/>


Figure 4.25


Steel cross-section


Components


Section components:

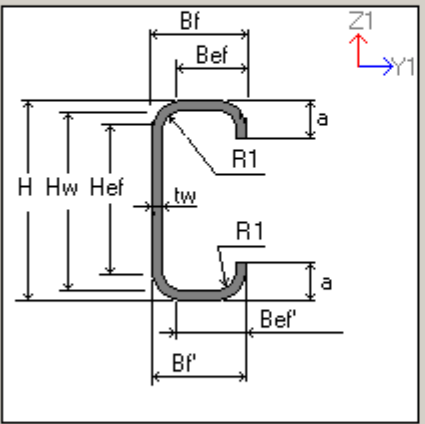..... **C** 1. C-shaped section 550 x 65 x 30 :



Profile: 

Steel: 

Specification: 


H = 55
 Tw = 0.4
 Bf = 6.5
 Tf = 0.4
 Bf' = 6.5
 Tf' = 0.4
 R1 = 0.6
 R2 = 0

Information about shapes in the file
 Annotation: Profili stal'nye gnutye S-obraznye ravnopolochnye
 The shapes comply with building codes: GOST 8282-76
 Shapes are sorted in ascending order of the parameter: A, ploshhad'
 Number of shapes in the file: 7
 Steels info
 Annotation: Stal', list
 The steels comply with building codes: DBN V.2.6-198:2014

(all in cm)

☐ Use forbidden combinations profile-steel

Comment:

Color: 

Corrosion: not specified

Figure 4.26

Design forces and deflections of element

Design forces

No.	Element	Section	N	My	Qz	Mz	Qy	Lo
1	1	1	-0.8000	0.9000	0.1140	0.1300	0.0900	
2	1	2	1.1200	0.3500	0.4300	0.1400	0.8000	

N: 1, FE: 1, sect.: 1, N,t: -0.8000, My,t*m: 0.9000, Qz,t: 0.1140, Mz,t*m: 0.1300, Qy,t: 0.0900, Load case: Dead

Number of combinations: OK Apply Add Delete

Deflections of element

Direction: ☐ Y1 ☐ Z1 ☒ Y'1+Z'1
 FE: 0, sect.: 1, deflect.,mn: 10.00, load case: Dead, DCF No.: 1

☐ Calculate deflection by enveloping diagrams of DCF

Boundary conditions: ☐ Y1 ☐ UY1 ☐ Z1 ☐ UZ1

OK Cancel

Figure 4.27

Cold-formed shapes - [COOL_2016.cif]

File View Edit Results Window Help

Section	C-shaped				
Shape	C-OBR.profiles.srt				
Steel	Gn.C550 x 65 x 30 x 4				
Steel table	S235				
Utilization percentage for section					
Streng.centr.tens.elem.	Buckl.centr.compr.	Streng.bent.single.shapes	Buckl.beams	Ultimate slenderness	Streng.bent.in2princ.pl.
0.00	0.00	0.00	19.99	76.31	48.34
Check for beam webs	Streng.eccent.comp.and.bent	Buckl.eccent.comp.and.bent	Buckl.webs strength.stiffen.	Buckl.webs not streng.stiffen.	Stiffener/batten spacing
35.16	66.71	366.98	0.00	19.88	No

Ready NUM

Figure 4.28

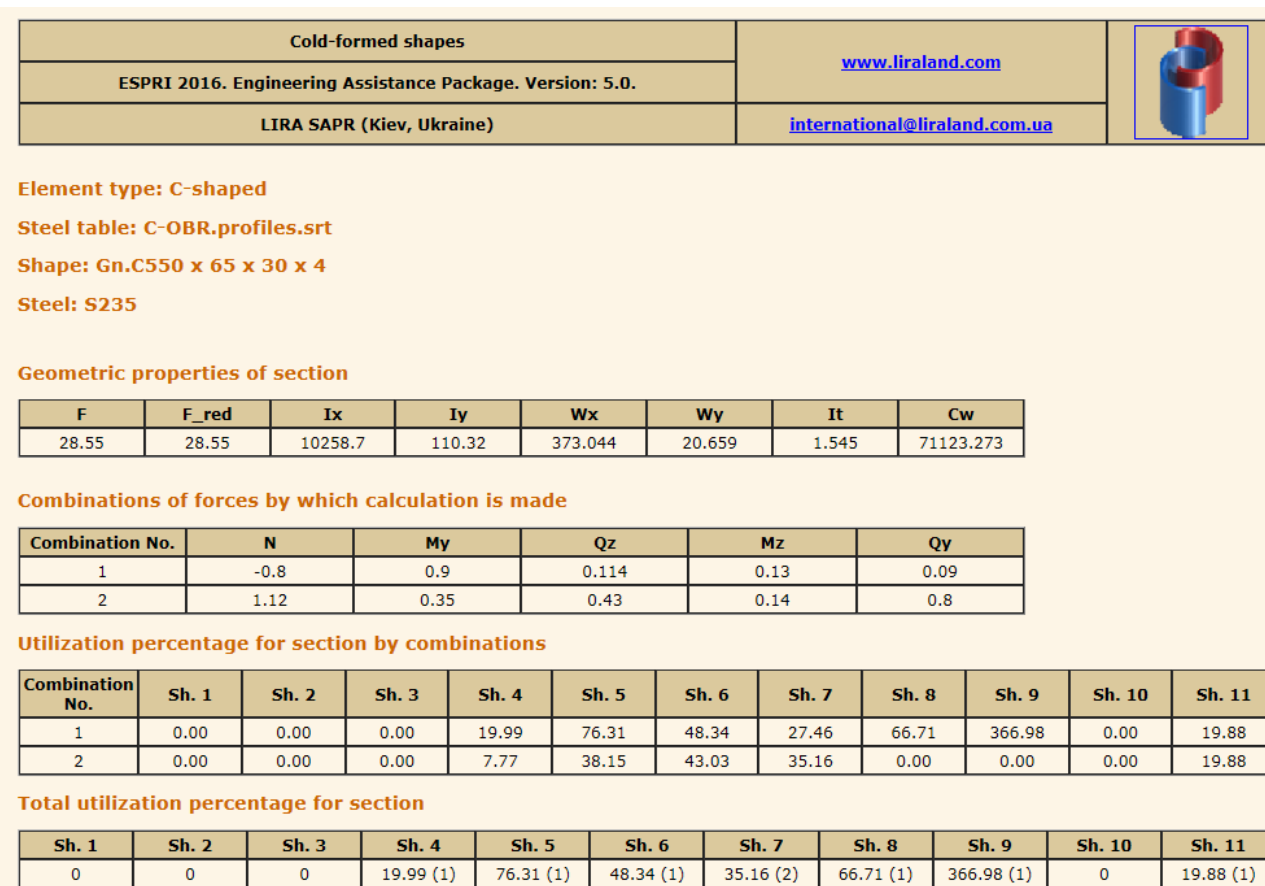


Figure 4.29

Utilization percentage for the section is computed for every check (see Fig.4.28).
 Output data is presented as the report file either in HTML or RTF format (see Fig.4.29).

Critical temperature of section

Use this module to calculate critical temperature of steel profiles.

The following building code is supported: DSTU-H EN 1993-1-2:2010 'Eurocode 3: design of steel structures'.

Input data

The contents of the dialog box is presented in the figure below.

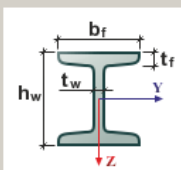
Critical temperature of section

Type of element: ☐ Beam ☐ Column ☐ Truss

Type of section:

Steel table:

Shape No.:



Flange width (b_f): mm

Flange thickness (t_f): mm

Height (h_w): mm

Web thickness (t_w): mm

k₁: k₂:

Bend radius (r): mm

Area of section: cm²

Geometric properties of section:

Section modulus (W_y): cm³ Section modulus (W_z): cm³

Critical moment (M_{crY}): cm³ Critical moment (M_{crZ}): cm³

Radius of gyration (i_y): cm Radius of gyration (i_z): cm

Effective lengths relative to:

Y-axis: mm Z-axis: mm

Design forces:

	My, kN*m	Mz, kN*m	Qy, kN	Qz, kN	T, kN
1	1.				858.
2					
3					
4					
5					
6					
7					
8					
9					
10					

☐ Buckling analysis is not required

Reduction factor for loads:

Material properties:

Yield strength: N/mm²

Modulus of elasticity: N/mm²

Output data:

Critical temperature (min by defined DCF): degrees

In the dialog box, select the section type. The following types of sections are available: built-up I-section, rolled I-section, channel, T-section, angle and pipe.

In the dialog box define dimensions, geometric properties of the section, effective lengths of element and forces in the element.

When you define axial force N, tensile forces are defined with the plus sign '+' while compression forces are defined with the minus sign '-'.

For calculation of beams, define coefficients k₁ and k₂ that consider non-uniform distribution of temperature.

For sections of classes 1 and 2, when calculating bearing capacity of the bar, plastic section modulus (only relative to y-axis) is considered.

For the welded I-section, W_{pl,y} is determined by formula:

$$W_{pl,y} = b \cdot t_f \cdot (h - t_f) + 0,25 \cdot t_w \cdot (h - 2 \cdot t_f)^2$$

By default, reduction factor for loads during the fire is taken as equal to 0.65. The user could modify this value manually.

When input data is defined, click **Calculate**.

Relative slenderness in plain buckling is determined by formula:

$$\bar{\lambda}_{LT} = \frac{1}{\sqrt{C_1}} UV \bar{\lambda}_Z \sqrt{\beta_W}$$

By default, the following factors are accepted:

$$\frac{1}{\sqrt{C_1}} = 1; \quad U = 0.9; \quad V = 1; \quad \beta_W = 1.$$

Output data

To present a report document in HTML format, click **Report**.

Design forces in case of fire ($E_{fi,d}$) and design resistance ($R_{fi,t,d}$) are presented in the report in absolute values.

Notation in the output data correspond to notation mentioned in DSTU-H EN 1993-1-2:2010.

Reinforced concrete (RC) structures

Reinforced concrete (RC) structures

This chapter contains modules for analysis of different types of reinforced concrete structures, such as bars, beams, slabs, shells.

[Properties of concrete;](#)

[Table of reinforcement;](#)

[Anchorage of reinforcement by DSTU 3760-07;](#)

[Sections of RC elements;](#)

[Reinforced concrete shell;](#)

[Reinforced concrete wall-beam;](#)

[Reinforced concrete slab;](#)

[Principal and equivalent stresses in reinforced concrete structures;](#)

[Strengthening with composite materials;](#)

[Strength of reinforced concrete butt joint in shear;](#)

[Concrete sections with fibre-reinforced polymer \(FRP\) bars;](#)

[Concrete pipe sections;](#)

[Composite steel and concrete columns;](#)

[Column strengthened with composed materials;](#)

[Composite steel and concrete slabs.](#)



Figure 5.1

The programs of this chapter are based on the following regulations:
SNIP 2.03.01–84* 'Concrete and reinforced concrete structures';

Manual on design of concrete and reinforced concrete structures from heavyweight and lightweight concrete without prestressing of reinforcement (to SNIP 2.03.01–84);
 SNIP 51–01–2003 'Concrete and reinforced concrete structures';
 SP 52–101–2003 'Concrete and reinforced concrete structures without prestressing of reinforcement';
 SP 63.13330.2012 'Concrete and reinforced concrete structures. General rules';
 Manual on design of concrete and reinforced concrete structures from heavyweight concrete without prestressing of reinforcement (to SP 52–101–2003);
 Eurocode 2. Design of concrete structures;
 DSTU 3760–98. Rolled rebars for reinforced concrete structures;
 DSTU 3760–2006. Rolled rebars for reinforced concrete structures;
 TSN 102–00*. Reinforced concrete structures with reinforcement of class A500C and A400C.

Properties of concrete

The module provides reference materials about normative and design strength of concrete for ultimate and serviceability limit states according to SNIP 2.03.01–84* 'Concrete and reinforced concrete structures'.

Properties of concrete

Ultimate limit states (ULS) | Serviceability limit states (SLS) | Modulus of elasticity

Design strength of concrete for ultimate limit states R_b and R_{bt} for class of concrete according to strength in compression

Strength type	Concrete	B1	B1.5	B2	B2.5	B3.5	B5
Axial compression (prism strength) R_b	Heavyweight and fine-aggregate					2.1	2.8
	Lightweight				1.5	2.1	2.8
	Cellular	0.63	0.95	1.3	1.6	2.2	3.1
Axial tension R_{bt}	Heavyweight					0.26	0.37
	Fine-aggregate of groups:						
	A					0.26	0.37
	B					0.17	0.27
	C						
	Lightweight with fine aggregate:						

Values in:

Notes:

1. Values of design strength R_b for cellular concrete with average humidity 10%.
2. For ceramsite-perlit concrete on expanded perlit sand, values R_{bt} are taken as for lightweight concrete on porous sand, multiplying by coefficient 0.85.
3. For porous concrete, values R_b are taken as for lightweight concrete while value R_{bt} is multiplied by coefficient 0.7.
4. For prestressed concrete, value R_b is taken as for heavyweight concrete while value R_{bt} is multiplied by coefficient 1.2.

Exit Help

Figure 5.2

It is possible to preview concrete properties either in mm^2 or cm^2 .

Anchorage of reinforcement by DSTU 3760-07

This module enables you to determine anchorage length of rebars (length of rebar outside the section where it should take forces acting in the section).

Anchorage of reinforcement is carried out according to DSTU 3760–07 'Reinforcing bars for RC structures'.

Length of anchorage in reinforcing bars is computed for ***horizontal beams and slabs***.

Length of anchorage is computed for separate and for double rebars. Rebars in which clear spacing is less than their diameter are considered as *double rebars*.

Concrete cover for the corner rebar is selected from the two values: vertical and horizontal, ***whichever is less***. For intermediate rebars, concrete cover is specified up to the side at which it is located.

Anchorage of reinforcement (DSTU 3760-07)

Class of reforc. **A500C d=8-2** Rebar diameter, mm **18** ☐ Double rebars

Concrete **B25** Clear spacing between double rebars (c), mm **0**


3 Area of reinforcement required by calculation ($A_{s,reg}$), mm² Concrete cover, mm **30**


59 Area of reinforcement, actually placed ($A_{s,prov}$), mm² Clear spacing between rebars (b), mm **100**


4 Value of compressive stress that acts perpendicularly to anchored rebar, MPa ☒ tensile reinforcement for concrete in tension

Type of stress state: ϕ_4 **0.7**

Secondary (distribution) reinforcement: spacing, **100** diameter, **10** Element type: ☒ beam

Location of anchored rebar relative to secondary (distribution) reinforcement:  -- anchored rebar

Anchorage type: 

Output data:  Lan **377.329** mm d **18** mm

Calculate **Report** **More...** **Cancel** **Help**

Figure 5.4

Area of distribution reinforcement ($\sum A_{st}$) located along the length l_{an} is calculated with computer program by the successive approximations method based on the spacing and diameter of distribution reinforcement.

Value of compressive stress in concrete (σ_b) that acts perpendicularly to anchored rebar is obtained by dividing support reaction into support area of an element.

Coefficients ϕ_1 and ϕ_2 are computed depending on the type of anchorage and ratio of anchored rebar diameter to distribution rebar diameter.

Coefficient ϕ_4 takes into account location of reinforcement during placing of concrete; coefficient is determined according to the table 12 (Recommendations).

Input data should be defined in the dialog box. then click **Calculate**.

To display the output data together with temporary computation data, click **More**.



To display the report file (with input & output data) in HTML format, click **Report**.

The report is presented below.

Input data

Code	DSTU 3760-07		
-------------	--------------	--	--

Materials			
Diameter of anchoring rebar, mm	18		
Grade of concrete	B25		
Class of reinforcement	A500C d=8-22		

Concrete cover, mm	30		
Clear distance between rebars, mm	100		
Element type: beam			
Tensile reinforcement in tensioned concrete			
Area of reinforcement required by calculation, mm ²	3		
Area of reinforcement actually arranged, mm ²	59		
Value of compressive stress that acts perpendicularly to anchoring rebar, MPa	4		
Spacing of secondary (distribution) reinforcement, mm	100		
Diameter of secondary (distribution) reinforcement, mm	10		
Anchorage type			
Location of anchoring rebar relative to secondary (distribution) reinforcement			

Output data

l _b	Basic length of anchorage, mm	1257.76
l _{an,min}	Min length of anchorage, mm	377.329
l _{an}	Effective length of anchorage, mm	53.5639
L _{an}	Length of anchorage, mm	377.329

Sections of RC elements

The module enables you to carry out analysis of reinforcement in sections of RC elements by ultimate (ULS) and serviceability limit states (SLS) according to the following building codes.

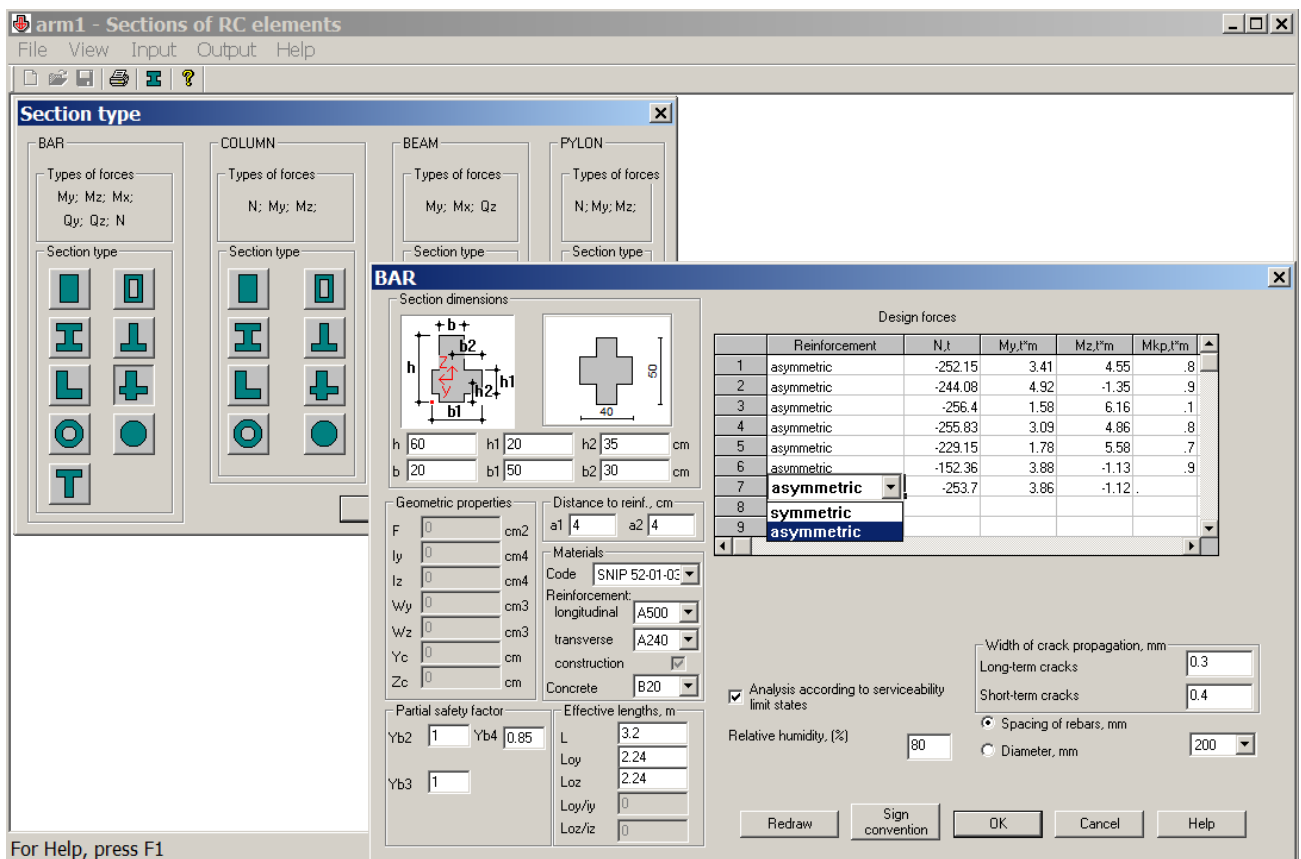


Figure 5.5

Input data

On the INPUT menu, click **Input data and calculation** (button  on the toolbar).

In the **Section type** dialog box, select appropriate **type of section** by type of forces and click **OK**.

In the **Bar**, **Column**, **Beam** or **Pylon** dialog box (depending on defined **Type of forces**), in the **Materials** area, define the building code by which computation should be carried out. In the dialog box define appropriate section dimensions; distances from the gravity centre of reinforcement to the bottom (top) face (a1) and to the side face (a2); define all necessary properties according to the building code.

When you click **Redraw**, schematic presentation of the section will be updated according to appropriate dimensions and in the **Geometric properties** area you will see geometric properties of the section (they are computed automatically).

To find out schematic presentation of positive directions for forces in element section, click **Sign convention**.

Define appropriate data for **Design forces**.

To start calculation of reinforcement, click **OK**.

Output data

To present analysis results as a report (input & output data for the problem) file in HTML format, on the OUTPUT menu, click **Report**.

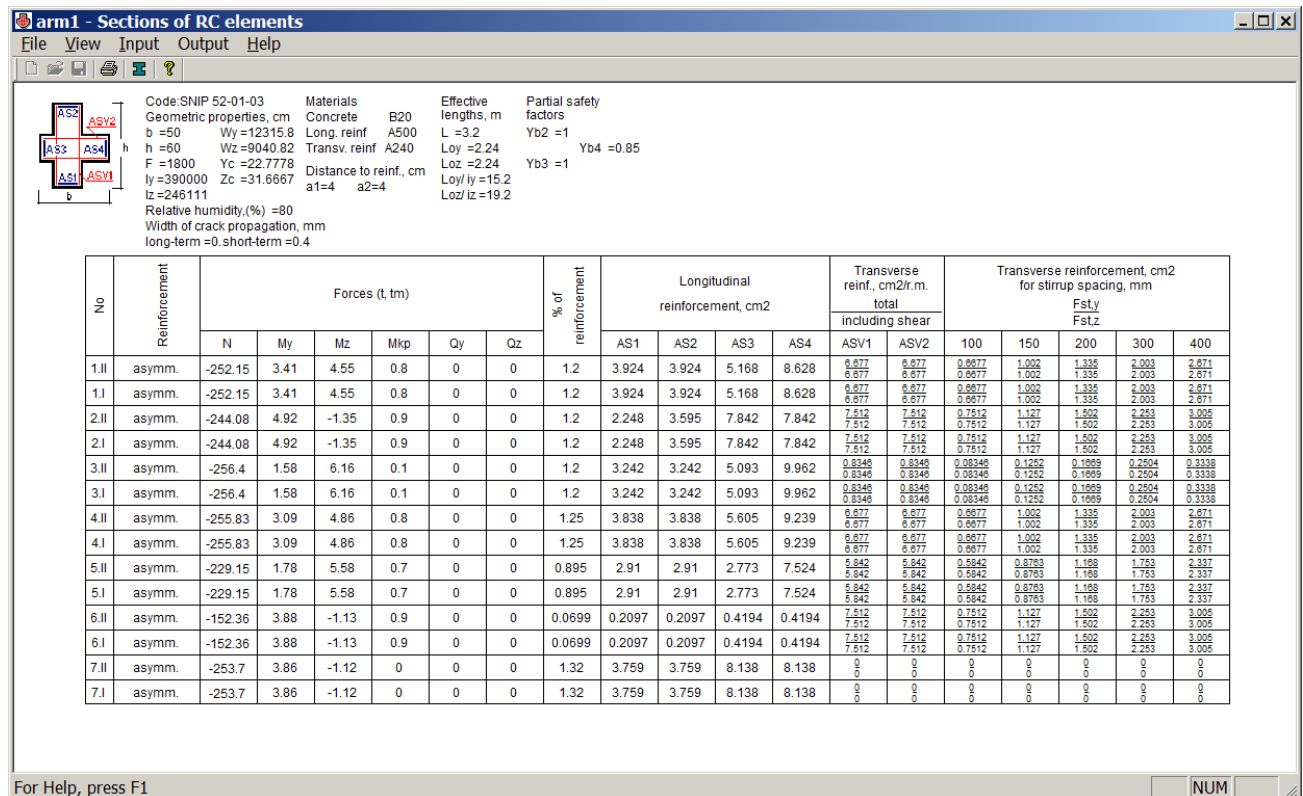


Figure 5.6

To print the output data directly from the program, on the FILE menu, click **Print**.

Reinforced concrete shell

This module enables you to analyse reinforcement in plate RC structures with complex stress state (shells) by ultimate and serviceability limit states according to different building codes.

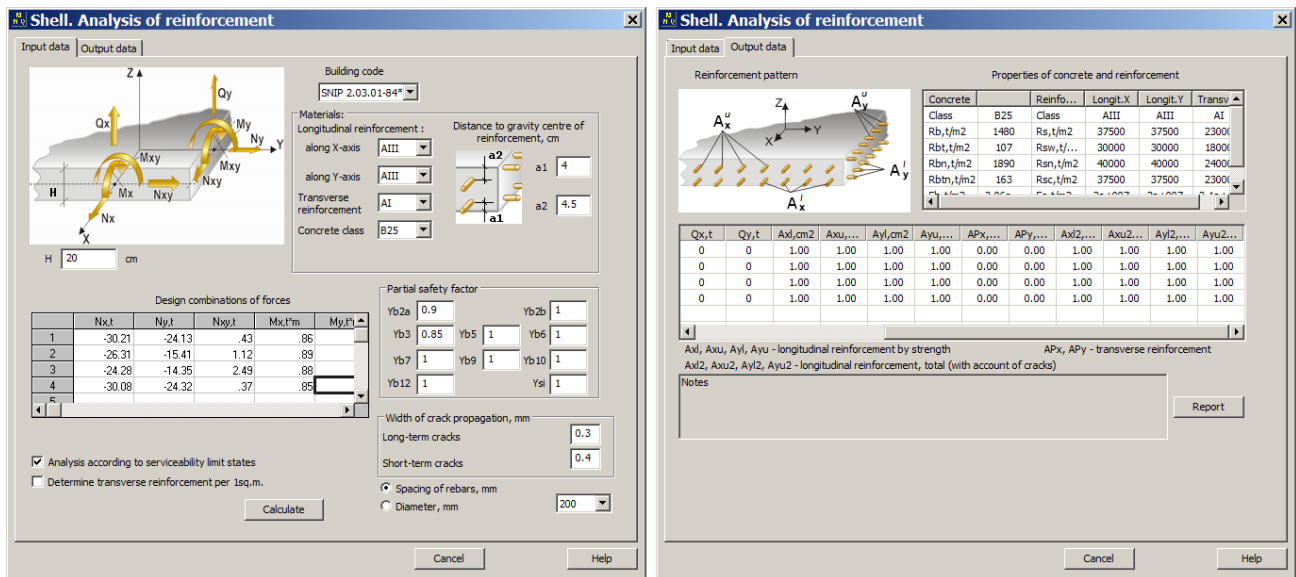


Figure 5.7

Input data

To define input data, follow these steps:

- In the **Shell. Analysis of reinforcement** dialog box, select the building code for calculation from appropriate list.
- In the **Materials** area, select classes of reinforcement along certain axes indicated on the model; define distances from extreme lower ($a1$) and extreme upper ($a2$) fiber of section to gravity centres of reinforcement; define **class of concrete**.
- In the **Partial safety factors** area, define required parameters according to selected building code (additional data is different and depends on the selected building code).
- Define thickness for the plate element in the **H** box.
- When the **Design combinations of forces** table is filled in, click **Calculate**.

Output data

When calculation is complete, on the **Output data** tab you will see determined reinforcement as well as input data.

To present a report document in HTML format, click **Report**.

Reinforced concrete wall-beam

This module enables you to analyse reinforcement in plate RC structures with complex stress state (wall-beam) by ultimate and serviceability limit states according to different building codes.

Wall-beam. Analysis of reinforcement

H cm

Code:

Type of structure:

Materials:

Longitudinal reinforcement

along X-axis:

along Y-axis:

Transverse reinforcement:

Concrete class:

Distance to gravity centre of reinforcement, cm:

Design combinations of forces

	$N_{x,t}$	$N_{y,t}$	$N_{xy,t}$	A_e	A	W
1	5.45	-97.3	3.5	0	0	1
2	7.9	-130.1	5.65	0	1	0
3	25.5	-79.7	7.7	1	0	0
4	12.	-122.7	.79	1	0	0

A_e, A, W - presence of earthquake, accidental and wind loads: 0 - no, 1 - yes

☐ Determine reinforcement separately for every combination


Stress-strain diagram $\sigma_c - \epsilon_c$

Figure 5.8 a)

Wall-beam. Analysis of reinforcement

Input data | Output data

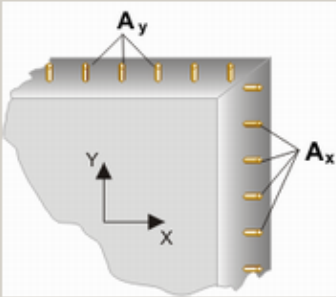Reinforcement pattern



Properties of concrete and reinforcement

Concrete		Reinfor...	Longit.X	Longit.Y	Transv
Class	C25	Class	A400	A400	A220
Rb,t/m2	2549.29	Rs,t/m2	40788.6	40788.6	22433
Rbt,t/m2	275.32	Rsw,t/m2			
Rbn,t/m2		Rsn,t/m2			
Rbtn,t/m2		Rsc,t/m2	40788.6	40788.6	22433
Eb,t/m2	3.21e+...	Es,t/m2	2.04e+...	2.04e+...	2.04e+...

No	Nx,t	Ny,t	Nxy,t	Ax,cm2	Ay,cm2	APx,cm2	APy,cm2	Tsh,mm	Tlong,mm
1	5.45	-97.3	3.5						
2	7.9	-130.1	5.65						
3	25.5	-79.7	7.7						
4	12	-122.7	0.79	2.31	1.70	1.30	1.30		

Ax, Ay - longitudinal reinforcement, cm2
 APx, APy - transverse reinforcement, cm2
 Tsh, Tlg - width of crack propagation for short-term (long-term) cracks, mm

Notes

Report

Cancel Help

Figure 5.8 b)

Input data

To define input data, follow these steps:

- In the **Wall-beam. Analysis of reinforcement** dialog box, select the building code for calculation from appropriate list.
- In the **Materials** area, select classes of reinforcement along certain axes indicated on the model; define distances from extreme lower (*a1*) fiber of section to gravity centres of reinforcement; define **class of concrete**.
- In the **Partial safety factors** area, define required parameters according to selected building code (additional data is different and depends on the selected building code).
- Define thickness for the plate element in the **H** box.
- When the **Design combinations of forces** table is filled in, click **Calculate**.

Output data

When calculation is complete, on the **Output data** tab you will see determined reinforcement as well as input data.

To present a report document in HTML format, click **Report**.

Reinforced concrete slab

This module enables you to analyse reinforcement in plate RC structures with stress state of flexural elements by ultimate and serviceability limit states according to different building codes.

Slab. Analysis of reinforcement

Input data | Output data

Code: Eurocode | Type of structure: Civil

Materials:

Longitudinal reinforcement

along X-axis: A400 | along Y-axis: A400

Transverse reinforcement: A220

Concrete: C25

Distance to gravity centre of reinforcement, cm

a1: 3 | a2: 3

H: 20 cm

Design combinations of forces

	$M_{x,t}$ m	$M_{y,t}$ m	$M_{xy,t}$ m	$Q_{x,t}$	$Q_{y,t}$
1	-5.35	-3.54	-1.1	-15.77	-10.12
2	-15.4	-7.56	-5.89	-24.75	-14.7
3	3.5	-15.4	.55	-12.4	-3.8
4	-7.3	-12.8	-2.7	-10.2	-8.9
5					

Stress-strain diagram $\sigma_c - \epsilon_c$

☒ Determine reinforcement separately for every combination

☒ Determine transverse reinforcement per 1sq.m.

Calculate


Cancel Help

Figure 5.9 a)

Slab. Analysis of reinforcement

Input data | Output data

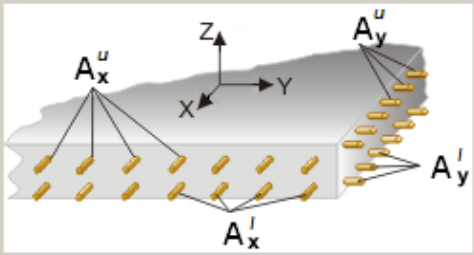Reinforcement pattern



Properties of concrete and reinforcement

Concrete		Reinfo...	Longit.X	Longit.Y	Trans...
Class	C25	Class	A400	A400	A220
Rb,t/m2	2549.29	Rs,t/m2	40788.6	40788.6	22433.8
Rbt,t/m2	275.32	Rsw,t/...			
Rbn,t/m2		Rsn,t/m2			
Rbtn,t/...		Rsc,t/m2	40788.6	40788.6	22433.8
Eb,t/m2	3.21e...	Es,t/m2	2.04e...	2.04e...	2.04e...

No	Mx,t*m	My,t*m	Mxy,...	Qx,t	Qy,t	Axl,cm2	Axu,...	Ayl,cm2	Ayu,...	APx,...	APy,...	Axl
1	-5.35	-3.54	-1.1	-15.77	-10.12	0.85	11.70	0.85	8.40	1.74	1.30	
2	-15.4	-7.56	-5.89	-24.75	-14.7	8.05	48.70	0.85	27.70	3.39	1.54	
3	3.5	-15.4	0.55	-12.4	-3.85	6.15	0.00	0.85	33.10	1.30	1.30	
4	-7.3	-12.8	-2.7	-10.2	-8.9	0.85	16.20	0.85	27.20	1.30	1.30	

Axl, Axu, Ayl, Ayu - longitudinal reinforcement by strength
 APx, APy - transverse
 Axl2, Axu2, Ayl2, Ayu2 - longitudinal reinforcement, total (with account of cracks)

Notes

Report

Cancel Help

Figure 5.9 b)

Input data

To define input data, follow these steps:

- In the **Slab. Analysis of reinforcement** dialog box, select the building code for calculation from appropriate list.
- In the **Materials** area, select classes of reinforcement along certain axes indicated on the model; define distances from extreme lower (a_1) and extreme upper (a_2) fiber of section to gravity centres of reinforcement; define **class of concrete**.
- In the **Partial safety factors** area, define required parameters according to selected building code (additional data is different and depends on the selected building code).
- Define thickness for the plate element in the **H** box.
- When the **Design combinations of forces** table is filled in, click **Calculate**.

Output data

When calculation is complete, on the **Output data** tab you will see determined reinforcement as well as input data.

To present a report document in HTML format, click **Report**.

Principal and equivalent stresses in reinforced concrete structures

The module enables you to calculate principal stresses $\sigma_1, \sigma_2, \sigma_3$ by the certain stress tensor $\{\sigma_x, \sigma_y, \sigma_z, \tau_{xy}, \tau_{xz}, \tau_{yz}\}$.

To find out roots of principal stresses, cubic equation is solved based on stress matrix $[\sigma]$ in the form:

$$[\sigma] = \begin{bmatrix} \sigma_x & \tau_{xy} & \tau_{xz} \\ \tau_{xy} & \sigma_y & \tau_{yz} \\ \tau_{xz} & \tau_{yz} & \sigma_z \end{bmatrix}$$

Principal stresses in concrete

Normative, design values

250000 Compress. - Rc 166667

33000 Tension - Rp 18000.0

-88376 Shear -Rtau, E0 345000000

Strength criterion: Geniev G.A.

Building code: Eurocode

Concrete class: C25-30

Poisson's ratio: 0.18

Xi: 0.1320

Teta: 0.000

P2c: 1.7320

Strength analysis: ☒

Triaxial strength: ☐

Thermal creep: t°C 20

Stress tensor: (tf/m2)

σ_x : 120 σ_y : 40 σ_z : 160 τ_{xy} : -80 τ_{xz} : -70 τ_{yz} : 220

Main stresses

σ_1 : 371.372812

σ_2 : 78.627188

σ_3 : -130.00000

Equivalent stresses

σ_1 : 380.6199 σ_2 : -211.0000

Output data

Angles Sig1 to XYZ (deg.)

X: 45.163775

Y: 55.022444

Z: 43.628994

Slope angle of crack in 2D stress: 72.255325

Matrix COS

Main strain

ϵ_1 : 1.103246e-006

ϵ_3 : -6.115942e-006

σ_0 : 106.66666

τ_0 : 205.64260

μ_σ : -0.167776

Reserve factor: 79.089394

Calculate

Ultimate stresses

σ_0 : 8436.2018

τ_0 : 27281.6192

σ_1 : 38939.46 σ_3 : -13630.85

Strength zone

Report Help

Рис. 5.10

In this program you could also check strength by the certain stress tensor.

Input data

For concrete it is necessary to define class and type of concrete according to SNIP 2.03.01-84*, for example:

- B25 HA – concrete class 25, heavyweight of groups A,B,C (fine-aggregate of groups A,B,C with thermal treatment B25 FAT), etc.;
- B3.5 L1400 – concrete class 3.5 lightweight, with unit weight 800-1800 kg/m³;
- B2.5 C800 – concrete class 2.5 cellular, with unit weight 500-900 kg/m³;
- strength parameters: strength in compression – **R_c**, strength in tension – **R_p**, are taken automatically from the database;
- to define arbitrary strength parameters for concrete: in the **Concrete class** box, select **Nonstandard concrete**; and then define strength parameters for concrete: **R_c > R_r** (tf/m²).

Output data

When the **Strength analysis** check box is selected, after strength analysis, the following data is displayed:

- σ_1, σ_3 – ultimate allowed values of principal stresses;
- σ_0, τ_0 – ultimate axial and shear octahedral stresses;
- reserve factor (analysis by serviceability limit state is supposed, that is, normative strength parameters of material are considered in analysis);

$$\mu_\sigma = \frac{(2\sigma_2 - \sigma_1 - \sigma_3)}{(\sigma_1 - \sigma_3)} ;$$

- Lode-Nadai parameter is computed as:

To generate report file in HTML format, click **Report**. The report file contains the following data:

- principal stresses as: $\sigma_1 > \sigma_2 > \sigma_3$;
- matrix of directional cosines MC(3,3) – orientation of principal stresses in the space relative to the X,Y,Z axes:

$$MC = \begin{bmatrix} l1 & m1 & n1 \\ l2 & m2 & n2 \\ l3 & m3 & n3 \end{bmatrix}$$

- slope angles AL1, AL2, AL3 (l1, l2, l3) of principal stress σ_1 to the X, Y, Z-axes; angles define orientation of the crack plane in the space;
- slope angle α_3 of principal stress σ_3 to the X-axis; angle defines orientation of the crack plane relative to the X-axis ;
- Euler angles TETA, PSI, FI (θ, ψ, φ) that define location of principal stresses $\sigma_1, \sigma_2, \sigma_3$ relative to the X, Y, Z-axes of global coordinate system;
- additional strength parameters:
 - strength in biaxial uniform compression – $R_{2c} = R_c \cdot P_{2c}$,
 - strength in biaxial uniform tension – R_{2p} .
- whether cracks are present TB=1, 2, 3 – one, two, three; TB=10 (20) – destruction of element in compression. TB=0 – no cracks.

Strengthening with composite materials

This module enables you to check strength of reinforced concrete sections in case the structures are strengthened with composite materials.

Input data and calculation

In the dialog box select the section type (rectangle, T-section with flange at the bottom, T-section with flange at the top, I-section) and define its dimensions. To check T-section or I-section with trapezoidal flanges, define the average values for flange overhang.

Select appropriate composite material or define arbitrary material (if **User-defined** option is selected in the list). You should also define design forces.

The following types of composite materials are available:

ASLAN, FibARM®, ITECWRAP®, Mapei®, S&P®, Sika®, Tyfo®, YOЛ.

It is also possible to define non-standard data.

The following regulations are realized in the program: *'Manual on strengthening of RC structures with composite materials'* and *SP 52-101-2003 'Concrete and reinforced concrete structures without prestressing of reinforcement'*.

The following classes of concrete are available: B10, B15, B20, B25, B30, B35, B40, B45, B50, B55, B60.

The following classes of reinforcement are available: A240, A300, A400, A500, B500.

Max diameter of reinforcement - 40 mm.

Distance to reinforcement - distance from gravity centre of reinforcement group up to the nearest side (lower reinforcement to the lower side, upper reinforcement to the upper one).

Physical and mechanical properties of suggested reinforcement types FRP (composite materials) are taken from Appendix 5 *'Manual on strengthening of RC structures with composite materials'*.

Define thickness of monolayer, modulus of elasticity for composite material, strength in tension and ultimate tensile strength.

Note. It is recommended that you should contact the manufacturer to find out parameters of materials you selected.

Partial safety factor for FRP (fiber-reinforced polymer) is defined according to the table below.

Environmental conditions	Material	Laminates	Fabric
Inner premises	Carbon	0.95	0.9
	Glass	0.75	0.7
	Aramid	0.85	0.8
Outer structures	Carbon	0.85	0.8
	Glass	0.65	0.6

	Aramid	0.75	0.7
Corrosive medium	Carbon	0.85	0.8
	Glass	0.5	0.5
	Aramid	0.7	0.6

The dialog box where you define input data is presented below.

Strengthening with composite materials

Composite material

Width, mm: 150

Number of layers: 2

Manufacturers: FibARM®

Reinforcement type FRP: FibARM® Tape 350/300

Thickness of monolayer, mm: 0.194

Modulus of elasticity, MPa: 230000

Strength in tension, MPa: 4300

Ultimate tensile strain, %: 0.018

Partial safety factor for FRP: 1

Design forces

	N, kN	M, kN*m	M0, kN*m	Q, kN
1	100	200	50	

Load factor: 1

Reinforcement

Reinforcement	Class	Diameter, mm	Number	Dimension (a), mm
Upper	A500	16	4	50
Lower	A400	14	2	50

Concrete class: B35

Partial safety factor for concrete: 1

Buttons: Save..., Open..., Calculate, Results..., Report, Help, Exit

Figure 5.14

Define **design forces** in the appropriate table. To convert design values to normative values, the load factor γ_f will be applied.

N – axial force applied at the gravity centre, kN;

M – expected moment from external forces, kN*m;

M0 – moment from external forces before strengthening, kN*m;

Q – shear force, kN.

Sign convention: positive moment corresponds to tension in lower fiber (according to schematic presentation of section), positive axial force corresponds to compression.

Partial safety factor for concrete γ_{b2} is defined depending on the load pattern (by default, it is taken as equal to 1).

To make calculation, click **Calculate**.

Output data

To display **Output data** for the calculation, click **Results**.

The 'Output data' window displays the following values:

Ared	126550.29888	mm ²	Ired	4521012377.6	mm ⁴	Wred	14844131.465	mm ³
y0	304.56563848	mm						
Concrete area, mm ²	120000		Area of upper reinforcement, mm ²	804.24771				
Composite area, mm ²	58.200001		Area of lower reinforcement, mm ²	307.87607				
Ultimate moment, kN*m	145.0222296		Mcrc, kN*m	40.67588362	acrc, mm	1.073760145		

Exit

Figure 5.15

To save the model in *.cmp format, click **Save**.

To open the input data of the saved model, click **Open**. The calculation should be made once again.

To present a report document in HTML format, click **Report**.

Notation in output data

Ared - area of equivalent section;

Ired - moment of inertia of equivalent section;

Wred - section modulus of equivalent section;

y0 - distance from lower fibre up to gravity centre of the section;

x - height of compression zone of concrete;

Mult - ultimate moment for the section;

Mcrc - moment in crack formation;

acrc - max width of crack propagation.

Important. If the **Mult** value in output data is less than defined value **M0** before strengthening or equal to zero, it is necessary to check defined parameters for concrete and reinforcement.

Concrete and reinforcement				
Reinforcement	Класс	Diameter,mm	Number	Dimension,mm
Upper	A400	18	4	50
Lower	A400	22	2	50
Concrete class	Eb, MPa	Rb, MPa	Rb,ser, MPa	Rbt,ser, MPa
B30	34500	17	22	1.75
Partial safety factor for concrete	1			
Composite material				
thickness, mm	0.111			
width, mm	400			
number of layers	2			
type of reinforcement	FibARM® Tape 200/300			
modulus of elasticity,MPa	230000			
strength in tension,MPa	4300			
max tensile strain, %	0.018			
partial safety factor for FRP	1			
Design combinations				
N,kN	M,kN*m	M0,Kn*m	Q,kN	
500	220	50	0	
Load factor	1			

Output data

Area of effective section,mm2	Ared=250900
Moment of inertia of effective section,mm4	Ired=8.85101e+009
Section modulus of effective section,mm3	Wred=2.94269e+007
Centre of mass of section before strengthening,mm	Y0=300.78
Area of concrete,mm2	240000
Area of lower reinforcement,mm2	760.265
Area of upper reinforcement,mm2	1017.88
Area of composite,mm2	88.8
Ultimate moment, kN*m	Mult=295.308
Moment while crack formation, kN*m	Mcrc=110.14
Width of crack propagation,mm	acrc=0.483375

Figure 5.16

Strength of reinforced concrete butt joint in shear

The module enables you to check strength in shear for butt joints of precast and cast-in-situ RC structures as well as structures of cast-in-situ RC with additional layer for joint grouting.

The dialog box of the program is presented in Figure 5.11.

Strength of RC connection in shear

Calculate Report Help

Concrete class: B25 TA

Partial safety factor: K_{Pc1}, K_{Pc2} 0.9; K_{Pr1}, K_{Pr2} 0.95; Coefficient of friction for seam 0.7

Reinforcement param. Class: A-III

12 Diameter (mm); 300 Spacing-S(mm); 0 Diameter of anchor head (mm)

☒ Check ☐ Select

☐ Self-stressed concrete ☐ Non-uniform distribution Q

Building code: SNIP 2.03.01-84

Additional stress from self-stressing (tf/m²): 0

Contact surface: "Rough"

Earthquake, cyclicity ☒

Loads on connection (tf, tf*m): -300.00 N, Nlive -210.0; 2 Q, Qlive 1.400; 10 M, Mlive 7.000

Geometry of connection (m): L 4; B 3; h1 0.6; d 0.02; l2 0.000; H 0.9000; l1 3.6; b1 2.8; h2 0.3; alpha 90; l_anchor 0.15; h3 0.2800

Design param. of material ULS, SLS (tf/m²): Rc_I, Rc_II 1480.0; 1890.0; 3060000; Eo, Rtau; Rr_I, Rr_II 107.00; 163.00; 146.695; Rax, Raz 40000.000; 36500.000

Data about double layer connection of slab: Compres. stress at contact zone (tf/m²) -25.000; Percent. of reforc. actual (%) 0.01979; Area of reforc., design value (cm²) 26.67; Area of reforc., actual value (cm²) 23.75; Max tensile stress in anchor 545.79%; Reserve factor 0.8904

Ultimate forces: N-bar 11681.012; Q-bar 1.780904; M-bar 12.53936

Figure 5.11

Calculation is made according to the following building codes:

1. EN 1992-1 Eurocode 2. 'Design of concrete structures. Part 1. General rules and rules for buildings'. 1992.
2. DSTU-N EN 1998-1:2011. 'Design in earthquake-prone regions. Basis of design.' (EN 1998-1:2004 Eurocode 8), 2004.
3. DSTU B V.2.6-156: 2010. 'Concrete and reinforced concrete structures from heavyweight concrete', 2010.

Output data and notation

$$B = L; \quad h = H$$

$$I_2 = b_{j1}; \quad h_{j2} = h_2$$

$$V_{Sd} = Q; \quad M_{Sd} = M; \quad N_{Sd} = N$$

$$f_{ck} = Rc_II; \quad f_{cd} = Rc_I$$

$$f_{yd} = Raz$$

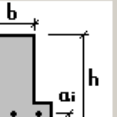
\overline{Q}
$$\overline{N}$$
 \overline{Q} \overline{M}

To present a report document in HTML format, click **Report**.

Sections with FRP bars - Concrete sections with fibre-reinforced polymer (FRP) bars

Criterion for check procedure
Deformation model

Section
T-section (bottom)



Load
N -150 t
My 34 tm

Output data
Calculation is complete.
Height of compression zone of concrete, mm 533.27094
Relative height of compression zone 0.8332358
Width of crack propagation, mm 0.0930738
Distance between cracks, mm 219.16420
More...

Concrete
b 360 mm b1 0 mm b2 480 mm
h 640 mm h1 0 mm h2 180 mm
Concrete class B25 Humidity, % 60
Diagram for concrete Bilinear Gamma b2 1

Reinforcement
A1 A400 d1 18 mm n1 6 a1 40 mm
A2 A400 d2 18 mm n2 4 a2 40 mm
A3 A400 d3 12 mm n3 4 a3 40 mm
A4 A400 d4 12 mm n4 4 a4 40 mm

Save Open Calculate Report Help

Building codes

— SP 63.13330.2012 Concrete and reinforced concrete structures. General rules.

— SP2013 (first draft) Structures from concrete with fibre-reinforced polymer bars. Design requirements.

Materials

Concrete: heavy-weight concrete of classes B15, B20, B25, B30, B35, B40, B45, B50, B55, B60, B70, B80, B90, B100.

For calculation by deformation model, diagrams for concrete state are realized - bilinear, trilinear and nonlinear (Appendix G. SP 63.13330.2012).

Steel reinforcement: A240, A400, A500, A600, A800, A1000, B500, Bp500, Bp1200, Bp1300, Bp1400, Bp1500, Bp1600.

Non-steel reinforcement:

- glass-reinforced plastics (ANK-S);
- basalt-plastic (ANK-B);
- carbon fibre-reinforced plastic (ANK-U);
- aramid fibre (ANK-A);
- hybrid (ANK-H).

Section types

The following types of concrete sections are realized in the program:

- rectangular;
- T-section with table at the bottom;
- T-section with table at the top;
- I-section.

Input data

Concrete: section dimensions (**b**, **h**, **b1**, **h1**, **b2**, **h2**), class of concrete, relative humidity, partial safety factor for concrete γ_{b2} , diagram for concrete state (for calculation by deformed shape).

Reinforcement: It is possible to define 4 types of reinforcement with different location relative to bottom edge of the section. For every type of reinforcement, the following data is defined: class of reinforcement (composite and steel), diameter **di**, number of rebars **ni** and distance from the bottom edge **ai**.

Load:

N – axial force (compression is denoted with sign «-»),

M – bending moment («+» if bottom edge of section is in tension, «-» if top edge of section is in tension).

To work with binary file of the program data, sue the **Save** and **Open** buttons. To start calculation, click **Calculate**.

Output data

When calculation is complete, you will obtain the following values: height of compression zone of concrete, relative height of compression zone of concrete, width of crack propagation and distance between cracks.

To view additional results, click **More**. In another dialog box you will see the following data:

- **x** – height of compression zone of concrete;
- **ksi** – relative height of compression zone of concrete;
- **% arm** – percentage of reinforcement for section;
- **l_crc** – distance between cracks;
- **a_crc** – width of crack propagation;
- **Abet** – area of concrete;
- **A1, A2, A3, A4** – areas of reinforcement;
- **Rs1, Rs2, Rs3, Rs4** – design strengths corresponding to them;
- **h_crc** – depth of crack (calculated only by deformation model).

The screenshot shows a dialog box titled "Output data (in detail)" with a close button (X) in the top right corner. The main area is titled "Calculation by deformation model". It displays various parameters in a grid-like format, each with a text input field and a unit. At the bottom center is an "OK" button.

Parameter	Value	Unit
x	533.27094	m
ksi	0.8332358	
A bet	0.252	m ²
% arm	1.3688367	
h_crc	0.0677610	m
Rs1	385	MPa
Rs2	385	MPa
Rs3	385	MPa
Rs4	385	MPa
A1	0.0015268	m ²
A2	0.0010178	m ²
A3	0.0004523	m ²
A4	0.0004523	m ²
l_crc	0.2191642	m
a_crc	9.3073851	m

Figure 5.18

Report

To present a report document in HTML format, click **Report**.

The report contains material stress-strain properties as well as the output data:

Percentage of reinforcement for section, %

Relative height of compression zone of concrete - **ksi**

Height of compression zone of concrete, mm - **x**

Width of crack propagation, mm - **acrc**

Distance between cracks, m - **lcrc**

Equivalent area of the section, mm² - **Ared**

Equivalent moment of inertia for the section, mm⁴ - **Ired**

Stress in extreme tensile or min compressed reinforcement, MPa - **Sigma_kr**

For calculation by ultimate states:

Equivalent section modulus for the section, mm³ - **Wred**

Ultimate moment, tm - **Mult**

Cracking bending moment, tm - **Mcrc**

For calculation by deformation model:

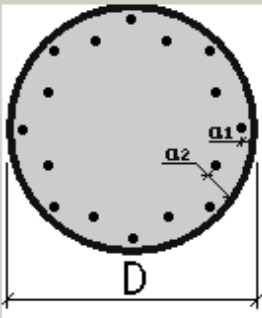
Max depth of cracks, mm - **hcrc**

Relative strain in extreme compressed fibre of concrete - **EpsBMax**.

Concrete pipe sections

The module is meant for strength analysis of concrete pipe sections of columns based on deformation model.

Concrete pipe - Analysis of concrete pipe sections



Concrete

Code: SP 63.13330.2012

Class: B15 Yb2: 1

Diagram: Trilinear

Humidity, %: 60

Load

N, t: -200

My, tm: 45

Mz, tm: 23

Steel

Pipe: VSt3kp D, mm: 680 Thickness, mm: 12

Reinforcement	Diameter	Number of rebars	Distance	Angular distance
A1: A400	d1, mm: 16	n1: 18	a1, mm: 40	fi1: 0
A2: A500	d2, mm: 12	n2: 12	a2, mm: 30	fi2: 0

Buttons: Save Open Calculate Results Report Help

Figure 5.19

The following building codes are supported in the module:	
Russian Federation	Ukraine
<ul style="list-style-type: none"> – SP 63.13330.2012 - Concrete and reinforced concrete structures. General rules. – SP 16.13330.2011 - Steel structures. – SP ____ 2013 - Structures from concrete with fibre-reinforced polymer bars. Design requirements. 	<ul style="list-style-type: none"> – DBN V.2.6-160:2010 - Steel-concrete composite structures. Basic provisions. – DBN V.2.6-98:2009 - Concrete and reinforced concrete structures. Basic provisions. – DBN V.2.6-135(163):2010 - Steel structures. Requirements for design, manufacturing and assembly. – DSTU-N B V.2.6-XXXX:2011 - Manual on design and manufacturing of concrete structures with non-steel composite reinforcement based on basalt and glass rovings.
Materials	

Concrete - heavyweight concrete of classes:	
B15, B20, B25, B30, B35, B40, B45, B50, B55, B60, B70, B80, B90, B100 For calculation by deformation model, the bilinear and trilinear diagrams of concrete state are realized (Appendix G. SP 63.13330.2012).	C12/15, C16/20, C20/25, C25/30, C30/35, C32/40, C35/45, C40/50, C45/55, C50/60 For calculation by deformation model, the bilinear and trilinear diagrams of concrete state are realized.
Steel reinforcement:	
A240, A400, A500, A600, A800, A1000, B500, Bp500, Bp1200, Bp1300, Bp1400, Bp1500, Bp1600	A240, A400, A500, B500
Non-steel reinforcement:	
glass-reinforced plastics (ANK-S); basalt-plastic (ANK-B); carbon fibre-reinforced plastic (ANK-U); aramid fibre (ANK-A); hybrid (ANK-H).	Basalt TU U V.2.7-25.2-34323267-001:2009 Basalt TU U V.2.7-25.2-21191464-:20 Glass TU U V.2.7-25.2-21191464-:20
Steel pipe:	
VSt3kp VSt3ps VSt3sp VSt3ps4 VSt3sp4 20	VSt3kp VSt3ps VSt3sp VSt3ps4 VSt3sp4 20 16G2AF 09G2S

Input data

Concrete: Class of concrete, relative humidity, partial safety factor for concrete γ_{b2} , diagram of concrete state.

Steel pipe: Steel, diameter **D**, web thickness.

Reinforcement: It is possible to define 2 types of reinforcement with different location. For every type of reinforcement, the following data is defined: class of reinforcement

(composite and steel), diameter **di**, number of rebars **ni**, distance from the bottom edge of pipe **ai** and angular distance relative to the Y-axis.

Load:

N – axial force (compression is denoted with sign «-»),

My – bending moment relative to Y-axis («+» if bottom edge of section is in tension, «-» if top edge of section is in tension),

Mz – bending moment relative to Z-axis («+» if right edge of section is in tension, «-» if left edge of section is in tension).

To work with binary file of the program data, sue the **Save** and **Open** buttons. To start calculation, click **Calculate**.

Output data

When calculation is complete, to obtain results, click **Results**. In another dialog box you will see the following data:

- **x** – height of compression zone of concrete;
- **Abet** – area of concrete;
- **Rb*/Rb** – coefficient for strengthening of compressed concrete,
- **a_crc** – width of crack propagation;
- **A, A1** and **A2** – areas of pipe and reinforcement;
- **% arm** – percentage of reinforcement for section.

The screenshot shows a dialog box titled "Output data (in detail)" with a close button (X) in the top right corner. The dialog contains eight input fields arranged in two columns, each with a label and a numerical value. At the bottom center is an "OK" button.

Parameter	Value
x, mm	577.16379
A, mm ²	25183.006
A_bet, mm ²	0.4087936
A1, mm ²	3619.1147
Rb*/Rb	1.6673059
A2, mm ²	1357.1680
a_crc, mm	0.0019652
% arm	8.9592229

Figure 5.20

Report

To present a report document in HTML format, click **Report**.

The report contains physical and mechanical properties of materials as well as the output data:

Percentage of reinforcement for section, %

Relative height of compression zone of concrete – **ksi**

Height of compression zone of concrete, mm – **x**

Width of crack propagation, mm – **acrc**

Max depth of cracks, mm – **hcrc**

Distance between cracks, m - **lcrc**

Coordinates of gravity centre – **Y, Z**

Relative strain in extreme compressed fibre of concrete - **EpsBMax**

Coefficient for strengthening of compressed concrete – **Rb*/Rb**.

Composite steel and concrete columns

The module is meant for strength analysis of sections in composite steel and concrete columns based on deformation model.

Design of composite steel and concrete columns

Output data: Calculation is complete.

% of reinforcement	2.9851666	acrc, mm	0
x, mm	0.4998793	lcrc, mm	0
ksi	1	hcrc, mm	0

Steel

Class: VSt3kp

Diagram:

t, mm: 9.5
d, mm: 5.6
h, mm: 240
b, mm: 115
z, mm: 0
l, mm: 0
x, mm: 0
y, mm: 0

Concrete

Building code: SP 63.13330.2012
Class: B30
Diagram: Bilinear
Humidity, %: 60
Yb2: 1

Load

N, t: -228
Mx, tm: 7
My, tm: 5

Buttons: Open, Save, Calculate, Report, Help

Figure 5.21

The following building codes are supported in the module:	
Russian Federation	Ukraine
<ul style="list-style-type: none"> – SP 63.13330.2012 - Concrete and reinforced concrete structures. General rules. – SP 16.13330.2011 - Steel structures. 	<ul style="list-style-type: none"> – DBN V.2.6-160:2010 - Steel-concrete composite structures. Basic provisions. – DBN V.2.6-98:2009 - Concrete and reinforced concrete structures. Basic provisions. – DBN V.2.6-135(163):2010 - Steel structures. Requirements for design, manufacturing and assembly.
Materials	
Concrete - heavyweight concrete of classes:	
B15, B20, B25, B30, B35, B40, B45, B50, B55, B60, B70, B80, B90, B100 For calculation by deformation model, the bilinear and trilinear diagrams of concrete state are realized (Appendix G. SP 63.13330.2012).	C12/15, C16/20, C20/25, C25/30, C30/35, C32/40, C35/45, C40/50, C45/55, C50/60 For calculation by deformation model, the bilinear and trilinear diagrams of concrete state are realized.
Steel reinforcement:	
A240, A400, A500, A600, A800, A1000, B500, Bp500, Bp1200, Bp1300, Bp1400, Bp1500, Bp1600	A240, A400, A500, B500
Steel pipe:	
VSt3kp VSt3ps VSt3sp VSt3ps4 VSt3sp4 20	VSt3kp VSt3ps VSt3sp VSt3ps4 VSt3sp4 20 16G2AF 09G2S

Input data

Concrete: Class of concrete, relative humidity, partial safety factor for concrete γ_{b2} , diagram of concrete state.

Steel: Steel and dimensions of steel shape **h, b, d, t, z**, distance between gravity centres (for channel sections) **I**.

Load:

N – axial force (compression is denoted with sign «-»),

My – bending moment relative to Y-axis («+» if bottom edge of section is in tension, «-» if top edge of section is in tension),

Mz – bending moment relative to Z-axis («+» if right edge of section is in tension, «-» if left edge of section is in tension).

To work with binary file of the program data, sue the **Save** and **Open** buttons. To start calculation, click **Calculate**.

Output data

When calculation is complete, in appropriate section of the dialog box you will see results:

x – height of compression zone of concrete,

% arm – percentage of reinforcement for section,

ksi – relative height of compression zone of concrete,

a_crc – width of crack propagation,

h_crc – depth of crack,

I_crc – distance between cracks.

Report

To present a report document in HTML format, click **Report**.

Input data					
			Building codes SP 63.13330.2012 SP 16.13330.2011		
Concrete					
Class of concrete	Eb, GPa	Rb, MPa	Rbt, MPa	Epsb2	Epsbt2
B30	34.5	17	1.15	0.0048	0.00031
Partial safety factor for concrete	1	Humidity, %	60	Strain diagram	Bilinear
Section					
H, mm	B, mm	Area, mm ²			
400	300	120000			
Steel					
Class	Es, GPa	Ry, MPa	Ru, MPa	Ryn	Run
VSt3kp	206	215	350	225	370
hs, mm	bs, mm	ds, mm	ts, mm	---	---
240	115	5.6	9.5	---	---
Design forces					
N, t	-228	My, tm	7	Mz, tm	5
Output data					
Percentage of reinforcement in section, %			2.98517		
Relative height of compression zone of concrete			ksi=1		
Height of compression zone of concrete, mm			χ=0.499879		
Width of crack propagation, mm			acrc=0		
Max depth of cracks, mm			hcrc=0		
Distance between cracks, m			lcrc=0		
Coordinates of gravity centre of the section			Y=0.00276343 m Z=-0.0145168 m		
Equivalent stiffnesses for the section			EAred=100237 t EIx=1250.61 tm ² EIy=522.601 tm ²		

Figure 5.22

The report contains physical and mechanical properties of materials as well as the output data:

Percentage of reinforcement for section, %

Relative height of compression zone of concrete – **ksi**

Height of compression zone of concrete, mm – **χ**

Width of crack propagation, mm – **acrc**

Max depth of cracks, mm – **hcrc**

Distance between cracks, m - **lcrc**

Coordinates of gravity centre – **Y, Z**

Equivalent stiffnesses for the section – **EAred, EIy, Elz**.

Column strengthened with composed materials

This module enables you to check strength of reinforced concrete sections in case the columns are strengthened with composite materials.

The following regulations are supported in the program:

SP 164.1325800.2014 'Strengthening of reinforced concrete structures with composite materials';

SP 63.13330.2012 'Concrete and reinforced concrete structures. General rules.'

Input data

In the dialog box define section dimensions, properties of concrete, reinforcement and composite material as well as design force.

The following classes of concrete are allowed: B10, B15, B20, B25, B30, B35, B40, B45, B50, B55, B60.

The following classes of reinforcement are allowed: A240, A400, A500, B600, B800.

Max diameter of reinforcement bars - 40 mm.

Location of reinforcement (distance, a) - distance from gravity centre of reinforcement up to the nearest edge (bottom reinforcement to bottom edge, top reinforcement to top edge).

Physical and mechanical properties of suggested FRP reinforcement types (composite materials) are taken from Appendix 5 'Manual on strengthening of RC structures with composite materials'. It is strongly recommended that you should revise properties of selected materials from the manufacturer. If it is necessary to define properties of composite material that is not available in the **Manufacturers** and **Reinforcement type FRP** lists, then these properties may be defined manually in appropriate boxes - thickness of monolayer, its modulus of elasticity and tensile strength.

The dialog box of the program is presented in the figure below.

Column strengthened with composite materials

Strengthening with composite materials: longitudinally

Diagram: h , b , a

h: mm
b: mm
Effective length of column, mm:
Design force N, kN:

Concrete and reinforcement

Class of concrete: B20
Class of reinforcement: A400
Diameter of rebars, mm:
Number of rebars:
Distance (a), mm:

Composite material

Width, mm:
Number of layers:
Manufacturers: User-defined
Reinforcement type FRP: User-defined
Thickness of monolayer, mm:
Modulus of elasticity, MPa:
Tensile strength, MPa:

Output data

Ared: mm Ired: mm
Height of compression zone, cm:
Strength of section is adequate.

Buttons: Help Calculate Report Cancel

Figure 5.23

In the dialog box define the type of column strengthening with composite material - longitudinally or transversely.

You should also define effective length of column, section parameters and axial force N applied to the gravity centre.

To define composite material that is not available in the **Manufacturers** and **Reinforcement type FRP** lists, simply define properties in the appropriate boxes: thickness of monolayer, its modulus of elasticity and tensile strength.

To start calculation, click appropriate button.

Output data

To present a report document in HTML format, click **Report**.

Notation in output data

Ared - area of equivalent section;

Ired - moment of inertia of equivalent section;

x - height of compression zone of concrete.

Column strengthened with composite materials

Input data

Strengthening with composite materials:longitudinally	
Section height, mm	400
Section width, mm	400
Design force N , kN	400
Effective length of column, mm	3000
Concrete and reinforcement	
Class of concrete	B20
Class of reinforcement	A400
Diameter of reinforcement, mm	16
Number of rebars	4
Distance, mm	20
Composite material	
Width, mm	150
Number of layers	2
Manufacturer	User-defined
Reinforcement type FRP	User-defined
Thickness of monolayer, mm	2
Modulus of elasticity, MPa	120000
Tensile strength, MPa	1400

Output data

Ared, mm ²	167308
Ired, mm ³	2.3701e+009
Height of compression zone, cm	138.296

Figure 5.24

Composite steel and concrete slabs

The module is meant for strength analysis of sections in composite steel and concrete ribbed slabs based on deformation model.

Design of composite steel and concrete slabs

Load

N, t: -100

My, tm: 12

H: 620

B: 1000

h: 150

Output data

Calculation is complete.

% of: 1.0195456 acrc, mm: 0

x, mm: 0.1500000 lcrc, mm: 0

ksi: 1 hcrc, mm: 0

Steel

Class: VSt3kp

hs: 500

bs: 200

ds: 1

ts: 1

bs1: 200

bs2: 0

Shape: H57-750-0,6

Concrete

Building code: SP 63.13330.2012

Stress-strain diagram: Bilinear

Yb2: 1

Class: B25

Humidity: 60

Reinforcement

	Class	Diameter, mm	Number of rebars	Distance, mm
1:	A240	10	4	30
2:	A240	10	4	30
3:	A240	10	0	0

Buttons: Open, Save, Calculate, Report, Help

Figure 5.25

The following building codes are supported in the module:

Russian Federation	Ukraine
<ul style="list-style-type: none"> – SP 63.13330.2012 - Concrete and reinforced concrete structures. General rules. Updated edition of SNIP 52-01-2003 (with amendment No.1) – SP 16.13330.2011 - Steel structures. 	<ul style="list-style-type: none"> – DBN V.2.6-160:2010 - Steel-concrete composite structures. Basic provisions. – DBN V.2.6-98:2009 - Concrete and reinforced concrete structures. Basic provisions.

– GOST 24045-94 - Steel roll-formed trapezoidally corrugated sheets for construction.	– DBN V.2.6-135(163):2010 - Steel structures. Requirements for design, manufacturing and assembly. – DSTU-N B V.2.6-XXXX:2011 - Manual on design and manufacturing of concrete products and structures with non-metallic composite reinforcement based on basalt and glass rovings – DSTU B V.6-9:2008 Steel roll-formed trapezoidally corrugated sheets for construction. Technical requirements.
Materials	
Concrete - heavyweight concrete of classes:	
B15, B20, B25, B30, B35, B40, B45, B50, B55, B60, B70, B80, B90, B100 For calculation by deformation model, the bilinear and trilinear diagrams of concrete state are realized (Appendix G. SP 63.13330.2012).	C12/15, C16/20, C20/25, C25/30, C30/35, C32/40, C35/45, C40/50, C45/55, C50/60 For calculation by deformation model, the bilinear and trilinear diagrams of concrete state are realized.
Reinforcement (steel):	
A240, A400, A500, A600, A800, A1000, B500, Bp500, Bp1200, Bp1300, Bp1400, Bp1500, Bp1600	A240, A400, A500, B500
Reinforcement (other):	
fiberglass (ANK-S); basalt-plastic (ANK-B); carbon-fibre (ANK-U); aramid fibre (ANK-A); hybrid (ANK-H).	Basalt TU U V.2.7-25.2-34323267-001:2009 Basalt TU U V.2.7-25.2-21191464-:20 Glass TU U V.2.7-25.2-21191464-:20
Steel pipe:	
VSt3kp VSt3ps VSt3sp VSt3ps4 VSt3sp4 20	VSt3kp VSt3ps VSt3sp VSt3ps4 VSt3sp4 20 16G2AF 09G2S

Corrugated sheet:	
H57-750-0,6	H57-750-0,6
H57-750-0,7	H57-750-0,7
H57-750-0,8	H57-750-0,8
H60-845-0,7	H60-845-0,7
H60-845-0,8	H60-845-0,8
H60-845-0,9	H60-845-0,9
H75-750-0,7	H75-750-0,7
H75-750-0,8	H75-750-0,8
H75-750-0,9	H75-750-0,9
H114-600-0,8	H114-600-0,8
H114-600-0,9	H114-600-0,9
H114-600-1,0	H114-600-1,0
H114-750-0,8	H114-750-0,8
H114-750-0,9	H114-750-0,9
H114-750-1,0	H114-750-1,0
HC35-1000-0,6	HC35-1000-0,6
HC35-1000-0,7	HC35-1000-0,7
HC35-1000-0,8	HC35-1000-0,8
HC44-1000-0,7	HC44-1000-0,7
HC44-1000-0,8	HC44-1000-0,8
C10-899-0,6	C10-899-0,6
C10-899-0,7	C10-899-0,7
C10-1000-0,6	C10-1000-0,6
C10-1000-0,7	C10-1000-0,7
C18-1000-0,6	C18-1000-0,6
C18-1000-0,7	C18-1000-0,7
C15-800-0,6	C15-800-0,6
C15-800-0,7	C15-800-0,7
C15-800-0,6	C15-800-0,6
C15-800-0,7	C15-800-0,7
C21-1000-0,6	C21-1000-0,6
C21-1000-0,7	C21-1000-0,7
C44-1000-0,7	C44-1000-0,7

Input data

Concrete: Class of concrete, relative humidity, partial safety factor for concrete γ_b , diagram of concrete state.

Steel: Steel and dimensions of steel shape **h**, **b**, **d**, **t**, **z**.

Reinforcement: It is possible to define 2 (in some sections 3) types of reinforcement with different location. For every type of reinforcement, the following data is defined: class of reinforcement (steel and composite non-metallic), diameter of rebars **d_i**, number of rebars **n_i**, distance from the bottom edge of pipe **a_i**.

Shape: Range of corrugated sheets.

Load:

N – axial force (compression is denoted with sign «-»),

My – bending moment relative to Y-axis («+» if bottom edge of section is in tension, «-» if top edge of section is in tension).

To work with the file of program data, use the **Save** and **Open** buttons.

To start calculation, click **Calculate**.

Output data

The report contains physical and mechanical properties of materials as well as the output data:

Percentage of reinforcement for section, %

Relative height of compression zone of concrete – **ksi**

Height of compression zone of concrete, mm – **x**

Width of crack propagation, mm – **acrc**

Max depth of cracks, mm – **hcrc**

Distance between cracks, m - **lcrc**

Coordinates of gravity centre – **Y, Z**

Equivalent stiffnesses for the section – **EAred, Ely, Elz**.

To present a report document in HTML format, click **Report**.

Design of composite steel and concrete slabs

Input data

	<p>Building codes SP 63.13330.2012 SP 16.13330.2011 SP ____ 2013</p>				
Concrete					
Concrete class	Eb, GPa	Rb, MPa	Rbt, MPa	Epsb2	Epsbt2
B25	30	14.5	1.05	0.0048	0.00031
Partial safety factor for concrete	1	Humidity, %	60	Stress-strain diagram	Bilinear
Section					
H, mm	B, mm			Area, mm ²	
150	1000			150000	
Steel					
Class	Es, GPa	Ry, MPa	Ru, MPa	Ryn	Run
VSt3kp	206	215	350	225	370
hs, mm	bs, mm	ds, mm	ts, mm	H	bs1, mm / bs2, mm
500	200	1	1	620	200 / 0
Reinforcement					
Layer No.	Number of rebars	Diameter, mm	Area, mm ²	Distance, mm	
1	4	10	0.000314159	30	
Class of reinforcement	Es, GPa	Rs, MPa	Rsc, MPa	Epss	Epsc
A240	0	0	0	0	
Layer No.	Number of rebars	Diameter, mm	Area, mm ²	Distance, mm	
2	4	10	0.000314159	30	1.16254e-307
Class of reinforcement	Es, GPa	Rs, MPa	Rsc, MPa	Epss	Epsc
A240	0	0	0	0	0

Design forces

N, t	-100	My, tm	12		
------	------	--------	----	--	--

Output data

Percentage of reinforcement for section, %	1.01955
Relative height of compression zone of concrete	ksi=1
Height of compression zone of concrete, mm	x=0.15
Width of crack propagation, mm	acrc=0
Max depth of cracks, mm	hcrc=0
Distance between cracks, m	lcrc=0
Coordinates of gravity centre of the section	Y=0 m Z=-0.0180962 m
Equivalent stiffnesses for the section	EARED=108453 t EIx=2.58365e+007 t*m2 EIy=6499.96 t*m2

Masonry and masonry reinforcing

Masonry and masonry reinforcing

The chapter contains modules for analysis of elements in masonry and masonry reinforcing structures as well as reference programs:

[Design compression strength in masonry](#)

[Brick pier](#)

[Masonry in local compression](#)

[Brick pier in tension](#)

[Brick pier by DBN V.2.6-162:2010](#)

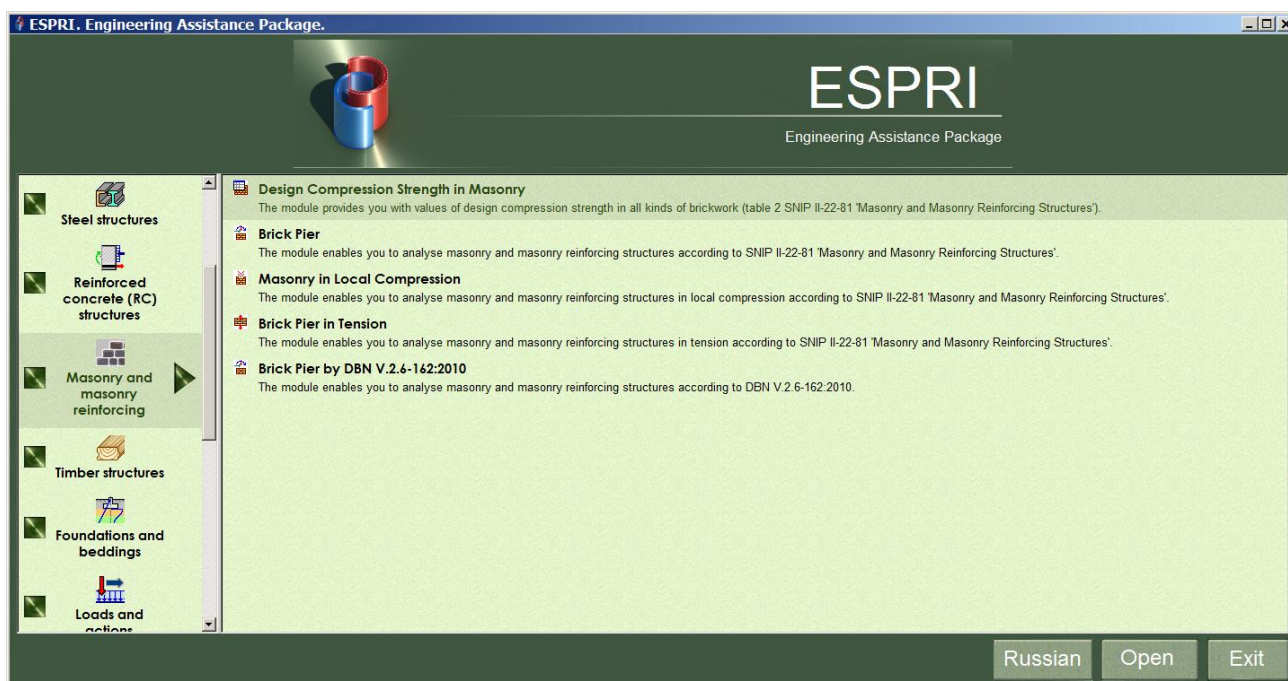


Рис. 6.1

Design compression strength in masonry

The program presents values for design compression strength in all types of brickwork and stonework from structural clay tile with slit-like vertical cells of width up to 12mm and height of masonry course 50-150mm on heavy mortars depending on mortar mark. (Table 2 SNIP II-22-81 'Rock / reinforced masonry structures').

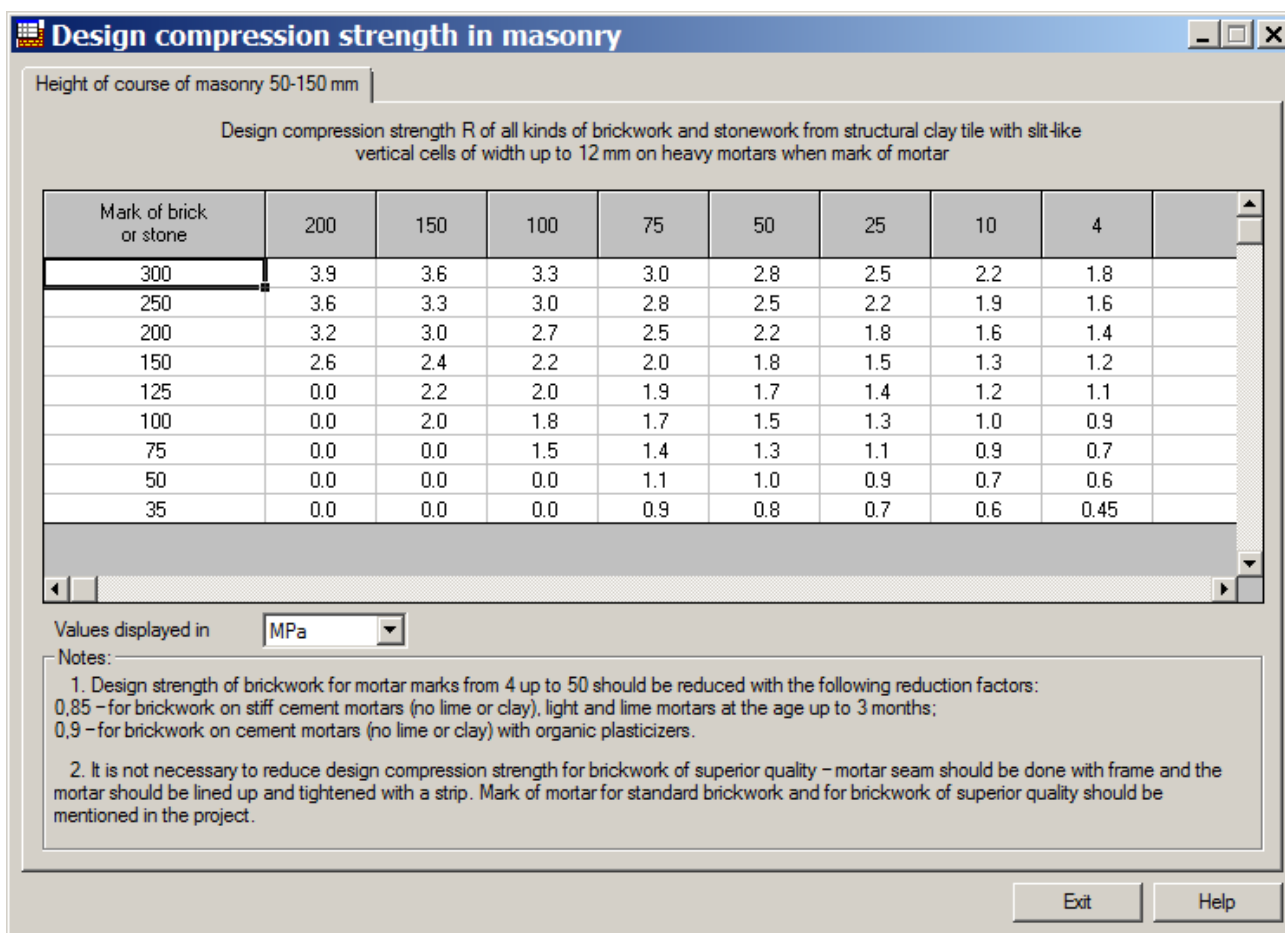


Figure 6.2

To present design strength values either in MPa or in kg/cm^2 , define appropriate data in the **Values displayed in** drop-down list.

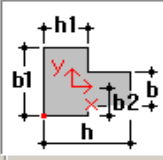
Brick pier

The module enables you to analyse masonry and masonry reinforcing structures in compression according to SNIP II–22–81* 'Masonry and masonry reinforcing structures'.

Define brick pier of rectangular or T-section shape. Plane eccentric compression of brick pier is considered. Tensile and shear forces are considered in analysis. After analysis, if the pier should be reinforced, you will obtain number of courses in brickwork for which it is necessary to place wire mesh reinforcement with the specified cell and diameter of reinforcement and (or) area of longitudinal reinforcement.

Analysis of brick pier

Geometry, cm



Redraw

b 64 b1 100 b2 50

h 100 h1 51 h2 0

Effective length factor 1 Storey height 300

☐ CHECK specified strengthening >>>

Materials

Brick type clay brick, standard

Brick mark 75

Mortar mark 25

Mortar type stiff, no admixture

Masonry quality standard

Properties

Ultimate strain in masonry 0.5 *1e-4

Elastic parameter table 15 SNIP II-22-81* 750

Creep coefficient 2.2

Coef. to design. strength of masonry compression 0.85 tension 1

Building code SP 15.13330.2012

Parameters of reinforcement

Reinforcement: stirrup spacing (mm) 150

mesh BP-I vertical A-I

Reinforcem. type meshes + vertical rebars

Height of course in masonry (mm) 77

Design dimension of cell in mesh reinforcement (mm) 30

Design diameter, (mm)

mesh, (stirrup) 3 vertical reinforcement 6

Partial safety factor for masonry and reinforcement

KPc1 1 Fire damages, cracks, etc. 1

KPc2 1 Partial safety factor for masonry t.24 SNIP 1.2

KPr1 1 KPr2, spec. load 1

Forces			Wind	Earth qu.	Forces (long-term part)			Numb. of masonry courses	Vertical. reinforcement. cm2	Transverse stirrup cm2/m	Analysis by serviceability limit state (SLS)
N, tf	M, tf*m	Q, tf			N, tf	M, tf*m	Q, tf				
-50	8.7	5.2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>				0	1.69646	8	<input type="checkbox"/>
			<input type="checkbox"/>	<input type="checkbox"/>				0	0	0	<input type="checkbox"/>
			<input type="checkbox"/>	<input type="checkbox"/>				0	0	0	<input type="checkbox"/>

Strength of masonry (tf/m2)

normative, design bonded, unbonded section

	normative	design bonded	unbonded section
compression	598.825	222.966	110
tension	26	13	5
shear	110	55	11
bending		20	8

Modulus of elasticity

Initial 176000

Average (secant) 143309

Elastic parameter of reinforced masonry 750

Buckling coefficient 1

Safety factor 2.04443

Relative strain

Creep -0.000758864

Average short-term -0.000423624

Calculate

Report

Help

Geometric properties

Sign convention

Figure 6.3

Input data

Click schematic presentation of the section that should be calculated and define its parameters.

In the appropriate boxes, type or select all data necessary for calculation by SNIP II-22-81* 'Masonry and masonry reinforcing structures'.

In the **Forces** table, define necessary values.

Click **Calculate**.

In this program you could also check the specified strengthening. It is allowed to strengthen the pier with steel or RC casing as well as with rebars in reinforced plaster.

To define parameters of strengthening, click >>> button. The **Types of strengthening of brick piers** dialog box appears on the screen. In this dialog box, select type of strengthening and define appropriate parameters. Click **OK** and close the dialog box.

Then in the **Analysis of brick pier** dialog box, select the **CHECK specified strengthening** check box. Defined parameters will be displayed in this dialog box.

When you define loads, it is possible to start calculation.

Types of strengthening of brick piers

S: $500 \leq S \leq H$
batten : $b \times d$ (mm)

150	S - spacing of batten, stirrup (mm)	C245	Steel
20	b - batten width (mm)	A-I	Class of reinforcement
3	d - batten thickness (mm)	24500	Design strength of steel (tf/m ²)
3	Diameter of transverse stirrup (mm)	23000	Design strength of reinforcement (tf/m ²)
6	Diameter of vertical reinforcement (mm)	Angle symmetric	Shape type
40	a0 - thickness of casing (mm)	20x20x3	Shape No.
4	Number of angles, plates or vertical rebars	UG_R.SRT	Steel table file

Pier strengthening by

☒ steel casing

☐ RC casing

☐ reinforced plaster

☐ wire mesh

Casing is supported (type), Coefficient

Completely from below and above 1

0 Area of one angle, rebar, etc. (cm²)

0 Total area of vertical strengthening (cm²)

0 Area of transverse stirrups (cm²/m)

SP 63.13330.2012 Building code

Concrete class of RC casing B10

OK Cancel

Figure 6.4

Output data

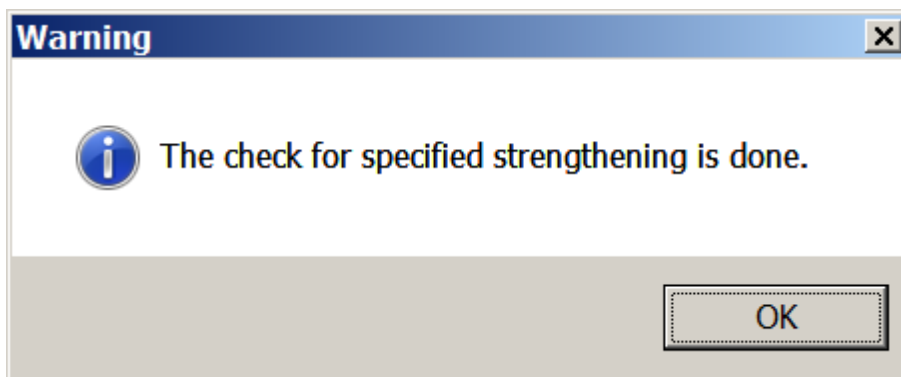
When you click **Calculate** button, you may see the following messages.

Warning


Analysis of brick pier in Tension for unbonded section.
According to sect.4.19 SNIP, such elements cannot be designed by unbonded section.

OK

Warning according to notes to sect. 4.18 and 4.19 SNIP II–22–81* 'Masonry and masonry reinforcing structures' about provision that flexural and tensile elements of masonry structures cannot be designed by unbonded section.



Reinforcement in brick pier is selected or brick pier is adequate according to ultimate and serviceability limit states without reinforcement. If reinforcement with meshes is defined, then in the **Number of masonry courses** box, the figure from 1 to 5 will be displayed, That is, number of masonry courses through which it is necessary to place reinforcing mesh with the specified cell, diameter and class of reinforcement. When reinforcement with vertical bars is defined, then in the **Vertical reinforcement** box you will see the area of selected vertical rebars in cm.

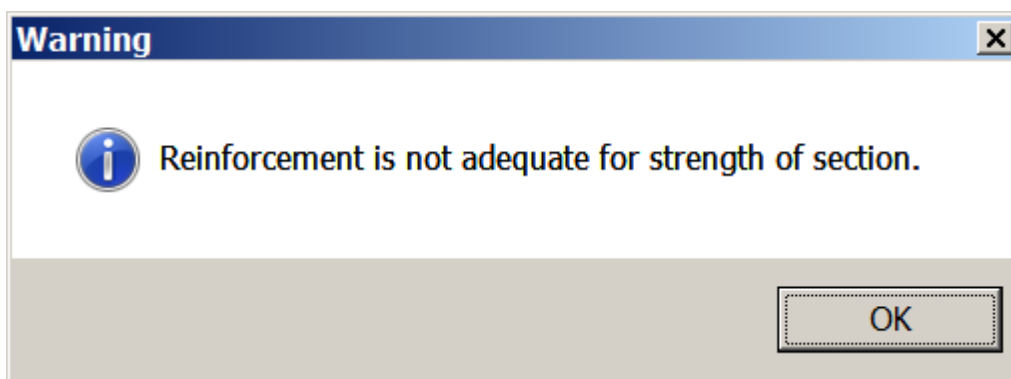

It is impossible to select reinforcement or non-reinforced brick pier is adequate to strength and stability conditions. It is necessary to increase properties of masonry, section, properties of reinforcement or change the type of reinforcement.

In the **Strength of masonry** area, you will see normative and design values of strength for non-reinforced and reinforced masonry (depends on whether reinforcement was selected or not) along bonded and unbonded sections by different types of actions.

When you click **Report**, you will see protocol of input data and output data for masonry and masonry reinforcing piers.

Masonry in local compression

The module enables you to analyse masonry and masonry reinforcing structures in local compression according to SNIP II-22-81* 'Masonry and masonry reinforcing structures'.

Analysis of masonry in local compression

Geometry, cm

1 2 3 4 5 6 7 8 9 10

Ac- Local compression area

b 142 a 40 hc 0 δ 0
h 51 bc 0 L 0 q (t/m) 0

Materials

Brick type clay brick, standard
Brick mark 100
Mortar mark 75
Mortar type stiff, no admixt
Masonry quality standard
Properties air brick up to 27%
Material of beam Reinforced concrete
Elastic parameter of masonry t.15 SNIP 1000
Creep coefficient 1.8
Coef.to des. strength of masonry compression 1 tension 1.25
Building Code SP 15.13330.201

Strengthen with mesh, distributing plate

Strengthen with mesh
Mesh BP-I Length of distrib. plate - Lpl. (cm) 50
Height of course in masonry (mm) 77
Design dimension of cell in mesh reinforcement (mm) 30
Design diameter of mesh (mm) 3

Part. safety factor for concrete and reinforc.

KPc1 1 KPc2 1
KPr1 1 KPr2, spec. load 1
Partial safety factor for masonry table 24 SNIP 1.2

Coef. for shape of pressure diagram

☒ Rectangular diagram
☐ Triangular diagram
☐ Calculate
☐ Define ψ 1

Total forces			Forces (local)		
N,tf	M,tf*m	Q,tf	N,tf	M,tf*m	Q,tf
-50	8.600000	2.3	-47	7.3	1.9

Numb. of mesh rows 5

Compression area (cm²)

Total 7242
Local 2040

Analysis by serviceability limit state (SLS) ☐

Strength of masonry (tf/m²)

	normative	design:	
		bonded	unbonded section
compression	260.576	170	
tension	36	18	8
shear	130	65	16
bending		25	12

Initial modulus of elasticity (tf/m²) 340000
Elastic parameter of masonry 833.473
Max stress in masonry from local compression -230.392
Average stress in masonry from local compression -230.392
Design strength of masonry in local compression 237.932
Safety factor 1.03273

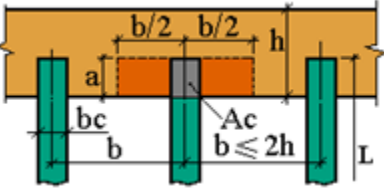
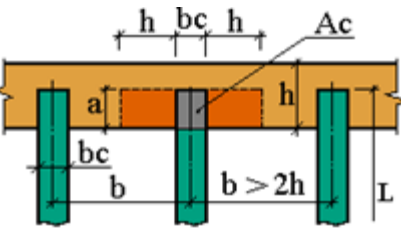
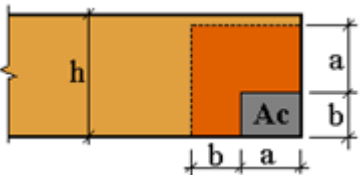
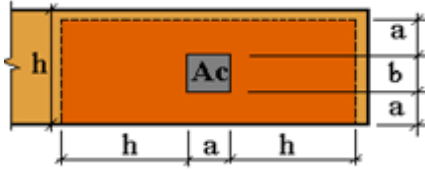
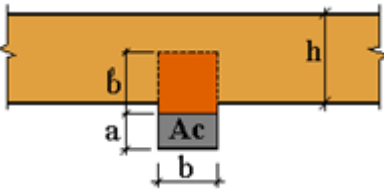
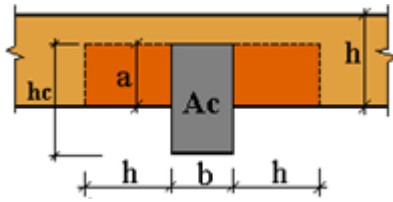
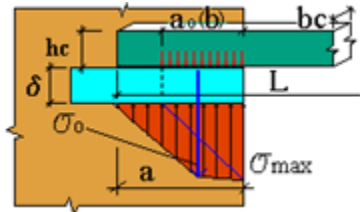
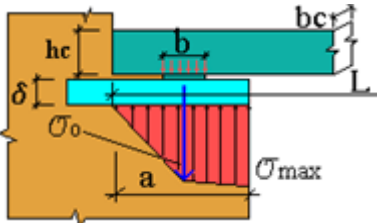
Sign convention
Calculate
Report
Help




Figure 6.5

Analysis in local compression is available for eleven types of support sections (see table below).

Types of sections for analysis in local compression:

Section No.	Type of section	Type of section	Notes
1, 2			

	<p>a – width of support zone A_c – area of local compression</p>	<p>a – width of support zone A_c – area of local compression</p>	
3	 <p>a – depth of beam setting b_c – width of beam</p>	 <p>a – depth of beam setting b_c – width of beam</p>	<p>Pinned connection between beams and walls. Variant of section is selected automatically based on dimensions b, h.</p>
4, 5	 <p>a, b – dimensions of support zone A_c – area of local compression</p>	 <p>a – width of support zone A_c – area of local compression</p>	
6, 7	 <p>a – length for area of local compression b – width of rib (pilaster) A_c – area of local compression</p>	 <p>a – depth of setting b – width of rib (pilaster) A_c – area of local compression</p>	
8, 9	 <p>a – length of beam supporting b_c, h_c – width and height of beam</p>	 <p>a – length of beam supporting b_c, h_c – width and height of beam</p>	<p>$b = a_0$ – usable length of support in pinned connection If $b > 0$, $b \leq a$ – supporting on distributing plate $a \leq 14\text{cm}$. Lpl. – width of distributing plate</p>

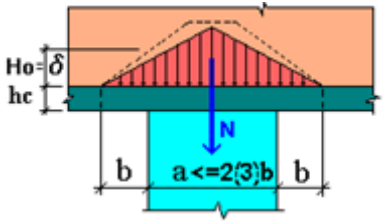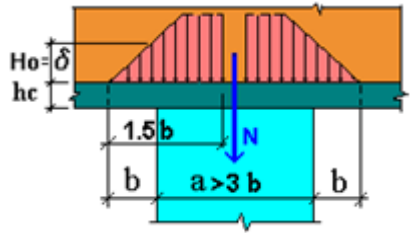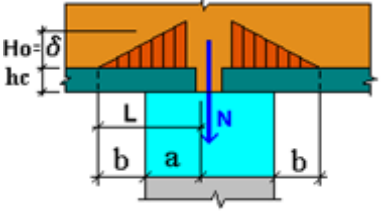10	 <p>a – length of beam supporting b_c, h_c – width and height of beam</p> <p>Variants: a), b)</p>	 <p>a – length of beam supporting b_c, h_c – width and height of beam</p> <p>Variant: c)</p>	<p>h – thickness of hanging wall $\delta = H_0$ – equivalent height of spandrel beam $b = s = 1.57 H_0$ $(\delta, b \text{ are computed})$ Variants: a), b), c) – distribution of pressure is selected automatically (calculation should be made when coefficient for shape of pressure diagram $\psi = 1.0$)</p>
11	 <p>a – length of beam supporting b_c, h_c – width and height of beam</p> <p>Variant: d)</p>		<p>For the check of masonry (d) above the utmost beams (lintels) and spandrel beams, define: a – length of support zone in spandrel beam; $\psi = 0.5$ – coefficient for shape of pressure diagram.</p>

Input data

With the mouse button, select schematic presentation for the section and define its parameters.

In the appropriate lists, either type or select the data necessary for analysis from SNIP II–22–81 'Masonry and masonry reinforcing structures'.

Define **Forces** values in the table.

Click **Calculate**.

Output data

In the **Strength of masonry** area of the dialog box, you will see normative and design values of strength for unreinforced and reinforced masonry (it depends on whether reinforcement was selected or not) along bonded and unbonded sections by different types of loads.

To present the report file in HTML-format, click **Report**. The report file contains the input data with the type of section and the output data as well.

Brick pier in tension

The module enables you to analyse masonry and masonry reinforcing structures in tension according to SNIP II-22-81* 'Masonry and masonry reinforcing structures'. In this program you could check strength, check and select required reinforcement in tension along bonded and unbonded sections, in tension with flexure and in local tension (breaking off an anchor) along bonded section.

Geometry, cm

Diagram: A brick pier of width b and height h is shown under tension N . The effective length factor is 1 and the storey height is 300 cm.

Materials

- Brick type: clay brick, standard T.2
- Brick mark: 100
- Mortar mark: 75
- Mortar type: stiff, no admixtures
- Masonry quality: standard
- Properties: air brick up to 27%
- Ultimate strain in masonry: 0 *1e-4
- Elastic parameter table 15 SNIP II-22-81*: 1000
- Creep coefficient: 2.2
- Coef. to des. strength of masonry: compression 1, tension 1.25
- Buildig code: SP 15.13330.2012

Parameters of reinforcement

- Reinforcement: stirrup spacing (mm): 150
- mesh: BP-4, vertical: A-1
- Reinforcem. type: meshes + vertical rebars
- Height of course in masonry (mm): 77
- Dimension of cell in mesh (mm): 30
- Design diameter, (mm): mesh (stirrup) 3, vertical reinforcement 6

Part. safety factor for masonry and reinforcement

- KPc1: 1, Fire damages, cracks, etc. KP3: 1
- KPc2: 1, Partial safety factor for masonry Tabl.24 SNIP: 1.2
- KPr1: 1, KPr2, spec. load: 1

Forces

N, tf	M, tf*m	Q, tf
-50	8.7	2.9

Forces (long-term part)

N, tf	M, tf*m	Q, tf
-47.000000	7.900000	1.900000

Strength of masonry (tf/m2)

	normative	design bonded	design unbonded section
compression	340	170	170
tension	36	18	8
shear	130	65	16
bending		25	12

Modulus of elasticity

- Initial: 544000
- Average (secant): 331218

Relative strain

- Creep: -0.000396482
- Average short-term: -0.000295996


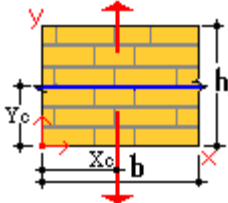

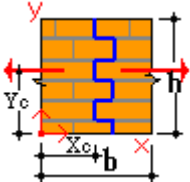

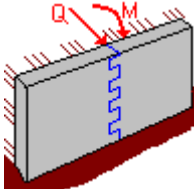

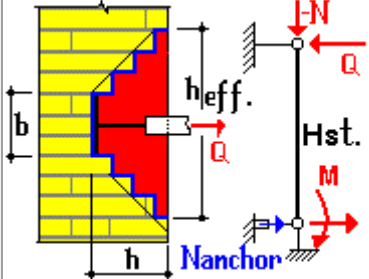
Other fields:

- Elastic parameter of reinforced masonry: 1000
- Buckling coefficient: 0.962353
- Safety factor: 1.27732

Buttons: Calculate, Report, Help

Figure 6.6

Analysis in tension is available for the following types of sections:

No. Option button	Type of section	Notes
1 		Tension for unbonded section
2 		Tension for unbonded section
3 		Tension and flexure for bonded section
4 		Local tension (breaking off an anchor) for bonded section

Input data

With the mouse button, select schematic presentation for the section and define its parameters.

In the appropriate lists, either type or select the data necessary for analysis from SNIP II–22–81 'Masonry and masonry reinforcing structures'.

Define **Forces** values in the table.

Click **Calculate**.

Output data

In the **Strength of masonry** area of the dialog box, you will see normative and design values of strength for unreinforced and reinforced masonry (it depends on whether reinforcement was selected or not) along bonded and unbonded sections by different types of loads.

To present the report file in HTML-format, click **Report**. The report file contains the input data with the type of section and the output data as well.

Brick pier by DBN V.2.6-162:2010

Analysis of brick pier according to DBN B.2.6-162:2010 (EN 1996-1-1:2005 Eurocode 6).

The module enables you to analyse masonry piers of rectangular section, T-section, I-section and cruciform section according to DBN B.2.6-162:2010. Strength is checked and necessary reinforcement is selected in calculation. The specified strengthening of brick piers may be also checked.

The program window is presented in the Fig. 6.7.

Analysis of brick pier by DBN V.2.6-162:2010 (EN 1996-1-1:2005 Eurocode 6)

Geometry, cm

Redraw

b 38 b1 150 b2 150

h 350 h1 25 h2 25

Effective length factor 1 Storey height 350

☐ CHECK specified strengthening >>>

Materials

Brick type cellular blocks of autoclave

Mortar type mortar fm<5 N/mm2

Strength class, concrete -fb (MPa) 3.5

Strength class, mortar - fm (MPa) 5.0

Masonry quality high quality - Groups

Properties air brick more than 50%

Ultimate strain in masonry 0 *1e-2

Elastic parameter table P14 DBN V.2.6-162 750

Creep coefficient table 8.9 2.5

Coef. to design strength of masonry compression 1 tension 1

Parameters of reinforcement

Reinforcement: stirrup spacing (mm) 150

mesh BP-1 vertical A240C

Reinforcem. type meshes + vertical rebar

Height of course in masonry (mm) 200

Design dimension of cell in mesh reinforcement (mm) 30

Design diameter, (mm)

mesh (stirrup) 3 vertical reinforcement 6

Part safety factor for masonry and reinforcement

KPc1 1 Fire damages, cracks, etc. 1

KPc2 1 Safety fact. by responsib. classes 1.5

KPr1 1 KP2, spec. load 1

Forces

N, MN	M, MN*m	Q, MN
-4000	300	400

Wind ☒ Ear th qu. ☐

Conversion factor to long-term forces 0.7

Scale of forces, stresses mega Newton, MN*m, MPa

Numb. of masonry courses	Vertical reforc., cm2	Transverse stirrup cm2/m
1	1.13097	0
0	0	0
0	0	0

☒ Analysis by serviceability limit state (SLS)

☐ Account of creep during erection

Geometric properties

Sign convention

Strength of masonry (MPa)

normative,		design bonded, unbonded section	
compression	fk	fd_ef	fd
compression	2.41499	1.66927	1
tension	fk2 0.2	fk1_ef 0.1	fk1 0.08
shear	fk 0.7875	fk1 0.35	fk1 0.16
bending		fk1 0.16	fk1 0.12

Modulus of elasticity (MPa)

Initial	Average (secant)
1200	960

Elastic parameter of reinforced masonry 465.84

Buckling coefficient 0.799541

Safety factor 0.000329031

Relative strain

Creep	Average short-term
-3.19829	-0.0136213

Calculate

Report

Help

Figure 6.7

For piers of T-section, I-section and cruciform section, the lowest length of transverse wall (b1) is taken into account in calculation.

$$b1 \leq 0.4 \cdot H_{\text{storey}} + b;$$

$$b1 \leq h;$$

$$b1 \leq 12 \cdot h1 + b;$$

Types of masonry, mortar and marks stipulated for calculation are presented in the Table 1.

Table 1.

No.	Material of wall
1	Class of mortar strength f_m (MPa): M20, ...M2.0 Class of (characteristic) strength for brick, stone f_b (MPa): 50,...M3- M0 (for packing of voids with concrete – class of strength for concrete: f_{ck} – characteristic compressive strength, f_{cvk} – shear strength: C12\15 –C25\30 and more)
2	clay brick, standard
3	sand-lime brick
4	vibrated masonry
5	rocks and large heavy concrete blocks Hcourse >50 cm
6	stones of concrete, gypsum concrete, etc. on porous aggregate Hcourse =20-30 cm
7	blocks of cellular concrete, slag concrete, etc. (hollow) Hcourse =20-30 cm (non-autoclave hardening)
8	natural stones (regular shape) low strength
9	natural stones from rubble
10	non-vibrated rubble concrete
11	vibrated rubble concrete
12	aerated concrete blocks of autoclave hardening with average density 400kg\m ³
13	concrete blocks of autoclave hardening from lightweight, cellular, aerated concrete; class is determined by average density D
14	Types of reinforcement for the wall: 0 – no reinforcement; 1 – mesh reinforcement, 2 – vertical rebars, 3 – meshes + vertical rebars, 4 – vertical external strengthening (Fig. 5.4)

The following types of mortar are available:

- mortar $f_m < 5 \text{ H/mm}^2$;
- mortar $f_m \geq 5 \text{ H/mm}^2$;
- light with density $\leq 800 \text{ kg/m}^3$;
- light with density $> 800 \text{ kg/m}^3$;
- thin-layer adhesive, cement paste.

Masonry quality:

- Poor – group 5;
- Standard – group 4;
- High – group 3, group 2,
- Superior – group 1 (joint pointing or all vertical joint of masonry are filled with mortar).
- Compressive strength of mortar (f_m) that is used in horizontal joints of reinforced masonry should be $f_m \geq 2 \text{ H/mm}^2$, ($\sim 204 \text{ tf/m}^2$), for reinforced masonry with filling of vertical joints $f_m \geq 4 \text{ H/mm}^2$.

Class of concrete for packing of vertical voids in masonry should be not less than C12\15.

Loads

The following types of total forces and their long-term part are defined for the pier

N – axial force, minus sign '-' denotes compression (tf);

M – moment, positive moment denotes the rib in tension (tf*m);

Q – shear force (tf).

If the long-term part of forces is defined as equal to zero, then it is assumed that

$$N_{\text{long-term}} = N/1.2; \quad M_{\text{long-term}} = M/1.2; \quad Q_{\text{long-term}} = Q/1.2$$

Strength properties of material for wall are taken according to defined marks for brick, mortar, type and quality of masonry and after analysis they are displayed on the screen.

If elastic parameter of masonry is defined as $\alpha_0=0$, its value will be computed automatically. All design values for strength properties of material are taken automatically based on defined values for: brick/stone mark, mortar mark and mortar type (see Table 2).

Table 2.

No.	Material properties	Notation
1	Design compressive strength of masonry	$f_d = f_k/\gamma_m$
2	Design tensile strength for unbonded masonry section	f_{xd1}
3	Design tensile strength for bonded masonry section Conventional design flexural strength of reinforced masonry along bonded section	f_{xd2} f_{xd2_app}
4	Design flexural strength for bonded masonry section	f_{xd}
5	Design flexural strength for unbonded masonry section	f_{xd1}
6	Design shear strength for bonded masonry section	f_{vd}
7	Design shear strength for unbonded masonry section	f_{vko}/γ_m
8	Initial characteristic shear strength for masonry	f_{vko}
9	Characteristic shear strength for masonry: $f_{vk} = f_{vko} + 0.4\sigma_0$ or $f_{vk} = 0.5 f_{vko} + 0.4\sigma_0$ if not all vertical courses of masonry are filled with mortar	$f_{vk} \leq 0.065 f_b$ $f_{vk} \leq 0.045 f_b$
10	Characteristic flexural strength for unbonded masonry	f_{xk1}

	section	
11	Characteristic flexural strength for bonded masonry section	f_{xk2}
12	Characteristic strength (temporary resistance) for unbonded masonry section	f_k
13	Normative mean compressive strength for masonry	f_b
14	Compressive strength of mortar	f_m
15	Temporary resistance of reinforced masonry R_{sku}	$f_{xd2_app} * \gamma_m$
16	Elastic parameter of masonry $\alpha_o = E_o / R_u$ Initial modulus of elasticity of masonry $E_o = \alpha_o * R_u$	$\alpha_o = E_o / f_d$ $E_o = \alpha_o * f_d$
17	Ultimate creep coefficient	Φ_∞
18	Elastic parameter of reinforced masonry $\alpha_{sk} = E_o / R_{sku}$	$\alpha_k = E_o / f_{xd2_app}$

Strength properties for reinforcement and types of reinforcement (wire mesh or meshes + vertical rebars) are taken according to user-defined classes of reinforcement by DSTU 3760-07 'Reinforcing bars'.

Characteristic initial strength of masonry in shear for zero compression – f_{vko} is presented in the Table 3 H/mm²=MPa (\approx kg/cm²)

Table 3.

Elements of masonry	Mortar of general purpose by class of strength *		Thin-layer mortar (adhesive)	Light mortar
Clay brick, standard	M10 – M20 M2.5 – M9 M1 – M2	0.3 (3.0) 0.2 (2.0) 0.1 (1.0)	0.3 (3.0)	0.15 (1.5)
Sand-lime brick	M10 – M20 M2.5 – M9 M1 – M2	0.2 (2.0) 0.15(1.5) 0.1 (1.0)	0.4 (4.0)	0.15 (1.5)
Concrete	M10 – M20	0.2 (2.0)	0.3 (3.0)	0.15 (1.5)
Aerated concrete (aeroc, etc.)	M2.5 – M9	0.15(1.5)	0.3 (3.0)	0.15 (1.5)
Precast concrete blocks, facing natural stone	M1 – M2	0.1 (1.0)	0.3 (3.0)	0.15 (1.5)

* Provided that the mortar of general purpose is manufactured by [DSTU-BB.2.7-23](#), [DSTU-ПББ.2.7-126](#) and does not contain additives.

Design fundamentals

In strength analysis and analysis of wire mesh reinforcement in piers, the following data is considered: defined height for the course of masonry, dimension for the cell of wire mesh, design diameter of wire mesh and vertical reinforcement. That's why, if after analysis of wire mesh reinforcement the program displays the message '*Reinforcement is not adequate for strength of section*', then it is necessary to increase design diameter or reduce dimension for the cell in wire mesh reinforcement, or modify the type of reinforcement to 'Meshes + vertical rebars'. In this case, if mesh reinforcement is not adequate, the program will automatically select vertical reinforcement.

In calculation of buckling coefficient Φ_m , the slenderness ratio of an element λ_h, λ_i is computed with account of effective length factor (height of pier H) - p_n . By default, $p_n=1$ is assumed for the case of pin joint on rigid (fixed) support.

$$\lambda_h = H_{ef} / t_{ef}; \quad \lambda_i = H_{ef} / i$$

$$H_{ef} = H_{storey} \cdot p_n$$

where

t – wall thickness or

t_{ef} – effective thickness of wall;

H_{ef} – effective height of wall;

i – the smallest radius of gyration;

λ_h – slenderness ratio of masonry should not be greater than 27.

Effective length factor for the pier may be modified.

The calculation procedure includes the following checks.

1. Check of unreinforced masonry structures in compression of pier (by bearing capacity).

$$N \leq \Phi_M \cdot \gamma_{b1} \cdot f_d \cdot L \cdot t_{ef}$$

where

Φ_m – coefficient to account slenderness and eccentricity of the section; coefficient is determined according to DBN as:

$$\Phi_m = A_1 \cdot e^{-u^2/2}$$

e – base of natural (Napierian) logarithm;

$$A_1 = 1 - 2 \frac{e_0}{t_{ef}}$$

$$u = \frac{\lambda - 0.063}{0.73 - 1.17 \frac{e_0}{t}}$$

$$\lambda = \frac{H_{ef}}{t_{ef}} \sqrt{\frac{f_k}{E}}$$

t_{ef} – effective equivalent thickness of the pier;

e_0 – eccentricity at the middle of the wall height:

$e_0 = e_m + e_k + e_{init}$,

where

$e_m = M_{design} / N_{design}$;

e_{init} – initial eccentricity that takes account of initial imperfections $e_{init} = h_{ef} / 450$.

$$e_k = 0.002 \cdot \Phi_{\infty} \cdot \frac{H_{ef}}{t_{ef}} \cdot \sqrt{e_m \cdot t}$$

- eccentricity from the creep may not be

considered if $\lambda_c = 15$ (recommended value for slenderness ratio for compressed part of the pier);

γ_{b1} – partial safety factor for masonry (influence of damages, strengthening, support method for the pier, etc.);

f_d – design compressive strength of masonry;

L – length of pier section.

If the area of pier section A is less than 0.1 m^2 , then reduction factor (formula 6.3) $k = (0.7 + 0.3 A)$ is applied in calculation;

2. Check in eccentric compression with flexure:

$$N \leq \gamma_{b1} \cdot \varphi_1 \cdot f_d \cdot L_c \cdot t_{ef}$$

where

$$\varphi_1 = (\Phi_m + \Phi_c) / 2$$

Φ_c – coefficient to account slenderness of compressed part of the section;

L_c – length of compressed part of the pier section;

t_{ef} – equivalent thickness of the section.

3. Check of unreinforced wall for ultimate moment in horizontal loads:

$$M \leq f_{xd} \cdot W ; \quad M \leq f_{xd1_app} \cdot W$$

W – elastic section modulus per unit of length or height of the section;
 f_{xd} – design flexural strength for unbonded section;

$$f_{xd1_app} = f_{xd1} + \sigma_0$$

For the constant compression of wall and taking into account $\sigma_0 \leq 0.2 f_d$.

4. Check of unreinforced masonry structures in shear along horizontal unbonded sections (by bearing capacity) – the smallest value is applied:

$$V_{Ed} \leq V_{Rd} = \gamma_{b1} \left(\frac{f_{vko}}{\gamma_M} + 0.4 \cdot \sigma_0 \right) \cdot A_c$$

$$V_{Rd} \leq \gamma_{b1} \cdot f_{vd} \cdot L_c \cdot t_{ef}$$

where

f_{vko}/γ_M – design shear resistance for unbonded section;
 σ_0 – mean value of compressive stress;

For the constant compression of wall and taking into account $\sigma_0 \leq 0.2 f_d$.

5. For the serviceability limit states (SLS), the check with account of long-term creep modulus E_{long} :

$$E_{long} = \frac{E_k}{1 + \Phi_{\infty}}$$

Φ_{∞} – ultimate creep coefficient is taken according to material type of masonry;

$f_k = f_d \cdot \gamma_M$ - characteristic (ultimate) strength of masonry;

f_d – design strength of masonry;

γ_M – coefficient for responsibility of material is assigned according to classes (groups) from: group – 1 (highest), up to group – 5 (lowest). By default, it is accepted that $\gamma_M = 1.5$ for structures of the 1st group with high architectural standards. This parameter may be modified.

Table 4.

	Coefficient for responsibility of material	γ_M for classes				
	Classes of responsibility	1	2	3	4	5
A	Stonework from: blocks of category I, design building mortar according to EN998-2, EN1996-2.	1.5	1.7	2.0	2.2	2.5
B	Stonework from: blocks of category II, specified building mortar according to EN998-2, EN1996-2.	1.7	2.0	2.2	2.5	2.7
C	Stonework from: blocks of category II, arbitrary building mortar according to EN998-2, EN1996-2, *e.	2.0	2.2	2.5	2.7	3.0
D	Anchor from reinforced steel	1.7	2.0	2.2	2.5	2.7
E	Reinforcing steel and pre-tensioned steel	1.15				
F	Additional components *c *d	1.7	2.0	2.2	2.5	2.7
*c	Accepted values are mean ones.					
*d	It is accepted that waterproofing should be covered with building mortar.					
*e	If variability coefficient for masonry of category II does not exceed 25%.					

6. For masonry reinforced with meshes in horizontal joints, additional check of conditional design strength in flexure for unbonded section - f_{xd2_app} . If mesh reinforcement is not adequate, the program will select vertical reinforcement:

$$M \leq f_{xd2_app} \cdot W$$

$$f_{xd2_app} = \frac{6 \cdot A \cdot f_{yd} \cdot Z}{t^2}$$

where

f_{yd} – design strength of reinforcement in horizontal joints;

A – area of cross section of tensile reinforcement of meshes per 1 r.m.;

Z – lever arm of internal pair of forces $\leq 0.95 \cdot d$;

X – distance to the neutral axis.

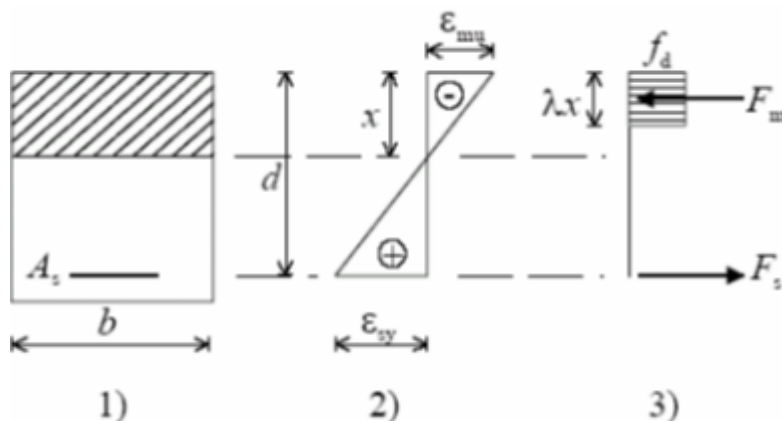


Figure 6.8. Distribution of stresses in reinforced section.

1 – design section; 2 – strain; 3 – internal forces.

Ultimate moment for elements of masonry of group 1 (except masonry with light aggregates) in flexure could not be greater than:

$$M \leq 0.4 \cdot f_d \cdot b \cdot d^2$$

or for elements of groups 2,3,4, and group 1 from lightweight concrete:

$$M \leq 0.3 \cdot f_d \cdot b \cdot d^2$$

7. Wire mesh reinforcement is selected by defined dimension of cell in wire mesh, diameter and class of reinforcement. The wire mesh reinforcement with the following dimensions are allowed: 30, 35, 40, 45, 50, 55, 60, 65, 70, 75, 80, 85, 90, 95, 100 mm.

8. Check of reinforced masonry structures in shear along bonded sections :

$$V \leq \gamma_{b1} \cdot f_{vd} \cdot A + \frac{\gamma_s \cdot f_{yd} \cdot Fa_{xy} \cdot A}{100}$$

where

f_{vd} – design shear resistance for bonded section ;

f_{yd} – design strength of transverse (wire meshes in vertical section or vertical) reinforcement;

Fa_{xy} – percentage of reinforcement for the section reinforced with wire meshes along vertical section.

In this case, f_{vd} (H/mm²) is increased (Supplement Π, DBN) in vertical reinforcement located in voids:

$$f_{vd} = \frac{0.35 + 0.175 Fa_z}{\gamma_m} \leq \frac{0.7}{\gamma_m}$$

9. If conditions by sect.6 and sect.8 are not satisfied, then vertical reinforcement is selected.

$$N \leq \gamma_{b1} \cdot f_k \cdot A + \frac{\gamma_s \cdot f_{yd_z} \cdot Fa_z \cdot A}{100}$$

where

f_{yd_z} – design compressive strength of vertical reinforcement;

Fa_z – percentage of vertical reinforcement in the section;

f_{sk} – design strength of masonry reinforced with wire meshes:

$$f_{sk} = f_k + \frac{2 \cdot Fa_x \cdot f_{yd_x}}{100} \leq 2 \cdot f_k$$

10. For the check of sect.9, vertical reinforcement is selected and additional check is carried out by ultimate moment based on double vertical reinforcement:

$$M \leq \gamma_{b1} \cdot f_k \cdot A_c \cdot (h_0 - 0.5 x) + \gamma_s \cdot f_{yd_z} \cdot A'_z \cdot (h_0 - a')$$

where

X – height of compressed zone of the section;

a – thickness of concrete cover (assumed as $a = a'$);

h_0 – effective height of section.

The following calculations are made:

1. Mean short-term relative strain is calculated as:

$$\varepsilon = \frac{-1.1 \cdot \ln\left(\frac{1 - \sigma}{1.1 \cdot f_k}\right)}{\alpha_0}$$

where f_k – characteristic strength of masonry.

2. Secant modulus (short-term) of strain in masonry is calculated as (see [Fig.6.9](#)):

$$E_k = \frac{\sigma}{\varepsilon}$$

where

ε – relative strain of masonry.

To evaluate complete strain of the structure with account of long-term loads (or with account of creep in freezing) and check masonry by ultimate strain, the program computes complete ultimate creep strain in masonry as:

$$\varepsilon_{total} = \varepsilon \cdot \Phi$$

$$E_{long} = \frac{E_k}{1 + \Phi}$$

where

Φ – creep coefficient:

$\Phi = 0.5 - 1.5$ – for masonry of structural clay tile with vertical slit-like cells;

$\Phi = 1.0 - 2.0$ – for masonry of large concrete blocks and artificial stones;

$\Phi = 1.0 - 2.0$ – for masonry of sand-lime brick solid and hollow and of concrete on porous aggregates (or aerated) and large sand-lime blocks;

$\Phi = 1.0 - 3.0$ – for masonry of ultralight precast concrete (small and large blocks);

$\Phi = 0.5 - 1.5$ – for masonry of aerated autoclave cellular concrete;


$\varepsilon_u = -0,0035$ – for masonry of group 1;

$\varepsilon_u = -0,0020$ – for masonry of group 2, 3, 4 (see [Fig.6.9](#)).

Strength of brickwork during the bricklaying (for $f_k < 2.5$ MPa) is checked according to obtained creep strain in masonry. If design strain exceeds allowed values, it is necessary to provide measures for strengthening of masonry up to the moment when it reaches necessary strength (temporary supports, etc.).

Strength is not checked according to serviceability limit states (SLS).

Check of specified strengthening

To check the specified strengthening of the brick pier, click  button and define the type of strengthening and appropriate numerical data.

Then in the main window of the program, select the ☒ CHECK specified strengthening check box and defined parameters of strengthening (area of vertical strengthening and area of transverse stirrups) will be automatically displayed in the main window of the program.

The following [patterns for strengthening of brick posts with casings](#) are available:

1. **Strengthening with steel casing** (strengthening with angles, stirrups of strips or circular rebars, etc., Fig. 6.10-a) – additional check by axial force by formula 71 Manual [2].
2. **Strengthening with reinforced concrete (RC) casing** (strengthening with angles, stirrups of strips or circular rebars, etc., Fig. 6.10-b) – additional check by axial force by formula 72 Manual [2].
3. **Strengthening with rebars in reinforced plaster \mortar casing** (see Fig. 6.10-c) – additional check by axial force by formula 73 Manual [2].

Strengthening of masonry with steel, RC and mortar casing is checked based on:

- vertical reinforcement defined in the main window of the program;
- type of strengthening defined in additional window of the program ([Fig. 6.11](#)).

It is also possible to select area of vertical strengthening.

Check of stirrup sections is made in accordance with the following data: specified diameter and class of wire mesh reinforcement, specified spacing of stirrups and area of stirrups per 1r.m. of the section height.

Calculation of battens in steel casing as elements of trusses (without diagonal elements) in shear force and bending moment in the plane of battens – this option is not available in current version of the program.

Recommendations.

1. For analysis of masonry with damages (cracks) – partial safety factor for masonry should be taken according to method of TSNIISK (see Table 5):

Table 5.

No.	Nature of damage in masonry of walls, posts and piers	Unreinforced masonry	Reinforced masonry
1	Cracks in certain bricks - does not intersect mortar joints	1.0	1.0
2	Hairline cracks that intersect not more than two courses of masonry (length 15-18cm)	0.9	1.0
3	Hairline cracks that intersect not more than four courses of masonry (length up to 35cm) if number of cracks is not more than four cracks per 1r.m. of width (thickness) of wall, post, pier	0.75	0.9
4	Cracks with propagation up to 2mm that intersect not more than eight courses of masonry (length up to 60-65cm) if number of cracks is not more than four cracks per 1r.m. of width (thickness) of wall, post, pier	0.5	0.7
5	Cracks with propagation up to 2mm that intersect more than eight courses of masonry (length up more than 60-65cm) if number of cracks is not more than four cracks per 1r.m. of width (thickness) of wall, post, pier	0	0.5

2. Based on support conditions for the pier, partial safety factor for strengthened masonry is taken as equal to:

$K_{Pc1}=1.0$ – when load is transferred to the casing and support is at the bottom of casing.

$K_{Pc1}=0.7$ – when load is transferred to the casing and there is no support at the bottom of casing.

$K_{Pc1}=0.35$ – without load transferring to the casing and if there is no support at the bottom of casing.

If there are two of above-mentioned factors, then factors will be multiplied.

3. To consider reduced design strength of reinforcement applied to the casing (table 10 Manual [2]), reduced partial safety factors for reinforcement are introduced $K_{Pr1}=0.8$ etc. in case conditions of age-hardening of reinforcement are taken into account (corrosion, fire damages, etc.).

4. Check for strength in walls and brick piers at places where beams and other elements are supported with them is made as check for local bearing strength in analysis on local compression.

To check strength for both non-damaged elements and elements that have cracks in the masonry (e.g. fire damages because of temperature, fire or old masonry), it is recommended to use regulations [2] and [3]. In this case, the program checks bearing capacity of centrally and eccentrically loaded elements strengthened with steel, RC and mortar casing. The user could select appropriate elements for strengthening, e.g. angles, plates or exterior vertical rebars connected with transverse stirrups (see Fig. 2.4) and define the area of exterior strengthening.

Messages at the time of computation:

1. If selected wire meshes do not satisfy condition of 'Max allowed reinforcement', the following message is displayed:

'Reinforcement - exceeds max allowed value.'

2. If it is not possible to arrange reinforcement, the following message is displayed:

'Reinforcement is not adequate for strength of section.'

3. If reinforcement is selected successfully, the following message is displayed:

'Reinforcement in masonry is selected.'

4. In analysis in tension, the following warning is displayed:

'Analysis of brick pier in Tension for unbonded section. According to DBN, such elements cannot be designed for unbonded section.'

5. If eccentricity of axial force is outside the section (or near the utmost edge of the section), the following warning is displayed:

'Distance from point of load application up to compressed edge of section is less than 2cm. It is not allowed to design such structures without vertical reinforcement.'

6. If the strength of section is not adequate, the following message is displayed:

'Strength of section is not adequate. Increase mark of brick and mortar'.

7. If the slenderness ratio of the brick pier exceeds 27, the following message is displayed:
'Slenderness of the wall exceeds allowed value'.

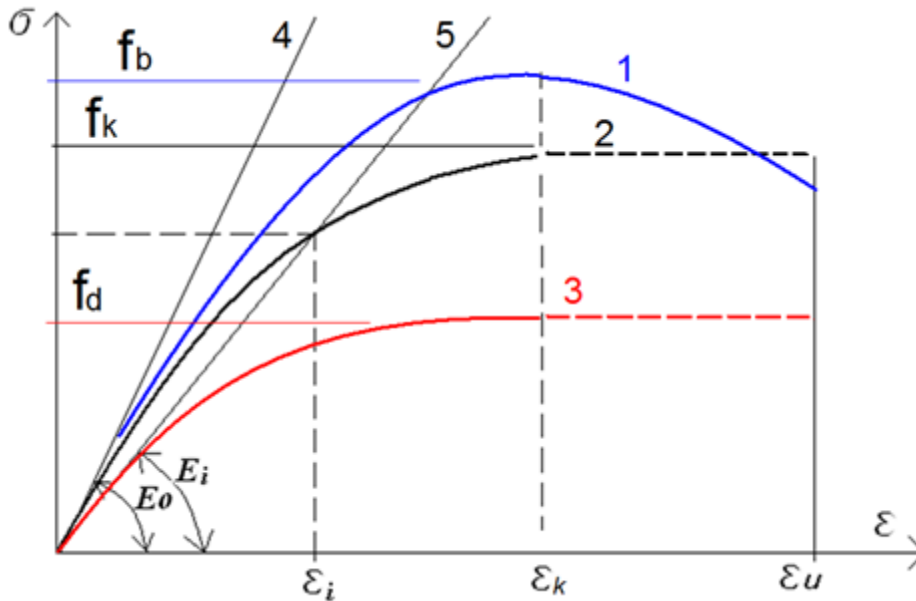


Figure 6.9. Modulus of elasticity of masonry.

E_0 – initial modulus of elasticity (4)

E_i – secant modulus of elasticity (5)

ε_k – ultimate short-term strain

ε_u – ultimate long-term strain

1 – physically nonlinear normalised compressive strength of a masonry unit - f_b

2 – idealized characteristic compressive strength of masonry - f_k

3 – idealized design compressive strength of masonry - f_d .

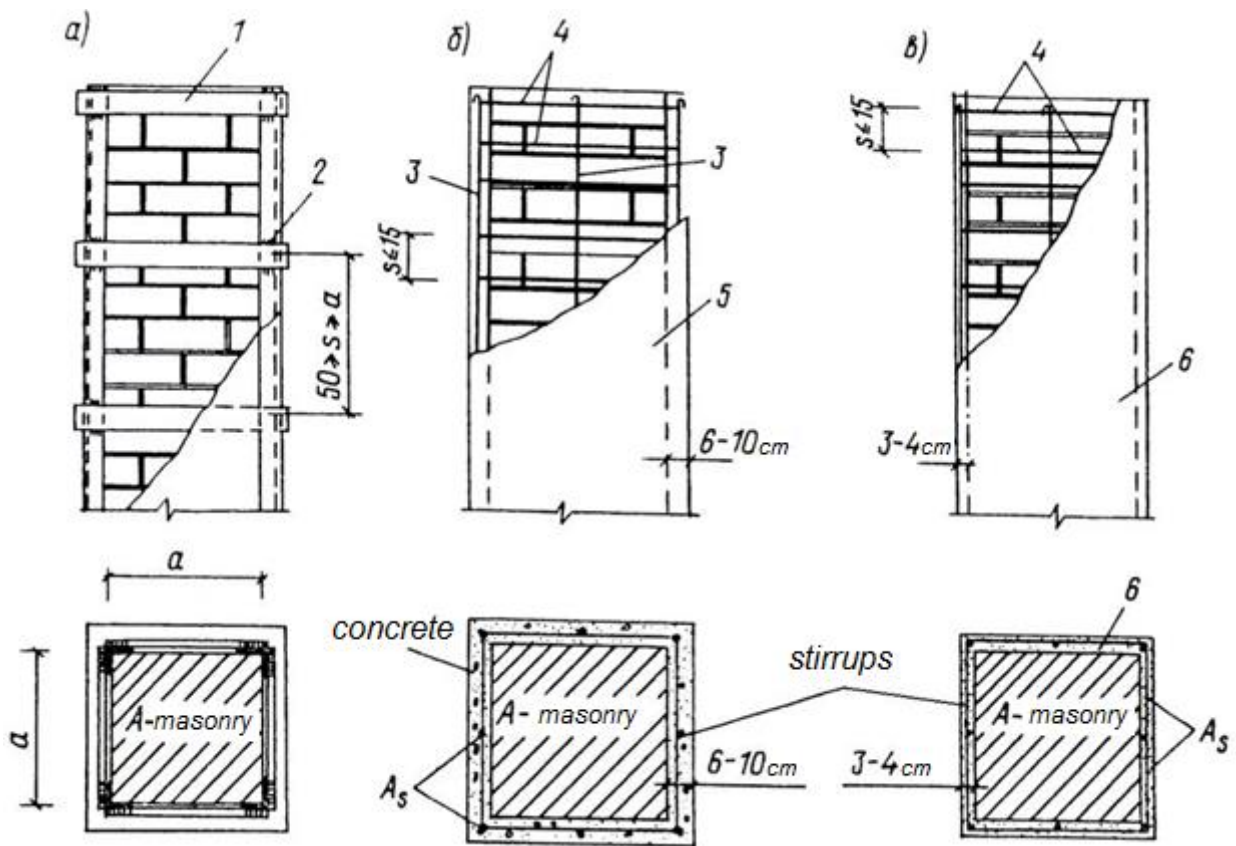


Fig. 6.10. Patterns for strengthening of brick piers with casing:
a) steel casing; b) RC casing; c) reinforced plaster.

- 1 – batten with section 35x5- 60x12mm;
- 2 – welding;
- 3 – rebars with diameter 5-12mm;
- 4 – stirrups with diameter 4-10mm;
- 5 – concrete of class B7.5- B15;
- 6 – plaster (mortar of mark M50 – M100).

Fig. 6.11. Types of strengthening of brick piers with casing:

a) Strengthening with steel casing

Types of strengthening of brick piers

Pier strengthening by

- ☒ steel casing
- ☐ RC casing
- ☐ reinforced plaster
- ☐ wire mesh, rebar

Parameters:

- S - spacing of batten, stirrup (mm): 150
- b - batten width (mm): 20
- d - batten thickness (mm): 3
- Diameter of transverse stirrup (mm): 3
- Diameter of vertical reinforcement (mm): 6
- a0 - thickness of casing (mm): 40
- Number of angles, plates or vertical rebars: 4
- Number of brick courses in which strengthening be done: 0

Reinforcement:

- Steel: C245
- Class of reinforcement: A240C
- Design strength of steel (tf/m²): 24500
- Design strength of reinforcement (tf/m²): 23000
- Shape type: Angle symmetric
- Shape No.: 20x20x3
- Steel table file: UG_R.SRT

Casing is supported (type), Coefficient:

- Casing is supported (type): Compl.leaning from below
- Coefficient: 1

Area calculations:

- Area of one angle, rebar, etc. (cm²): 0
- Total area of vertical strengthening (cm²): 0
- Area of transverse stirrups (cm²/m): 0

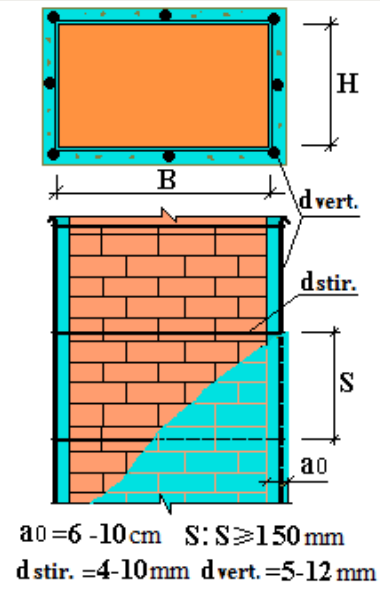
Building code: SNIIP 2.03.01-84

Concrete class of RC casing: B15 TA

Buttons: OK, Cancel

b) Strengthening with RC casing

Types of strengthening of brick piers



$a_0 = 6-10 \text{ cm}$ $S: S \geq 150 \text{ mm}$
 $d_{\text{stir.}} = 4-10 \text{ mm}$ $d_{\text{vert.}} = 5-12 \text{ mm}$

Pier strengthening by

- ☐ steel casing
- ☒ RC casing
- ☐ reinforced plaster
- ☐ wire mesh, rebar

150 S - spacing of batten, stirrup (mm)

20 b - batten width (mm)

3 d - batten thickness (mm)

3 Diameter of transverse stirrup (mm)

6 Diameter of vertical reinforcement (mm)

40 a_0 - thickness of casing (mm)

4 Number of angles, plates or vertical rebars

0 Number of brick courses in which strengthening be done

C245 Steel

A240C Class of reinforcement

24500 Design strength of steel (tf/m²)

23000 Design strength of reinforcement (tf/m²)

Angle symmetric Shape type

20x20x3 Shape No.

UG_R.SRT Steel table file

Casing is supported (type), Coefficient

Compl.leaning from below : 1

0 Area of one angle, rebar, etc. (cm²)

0 Total area of vertical strengthening (cm²)

0 Area of transverse stirrups (cm²/m)

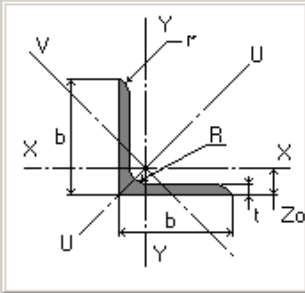
S:SNIP 2.03.01-84 Building code

Concrete class of RC casing

B15 TA


OK

Cancel



c) Strengthening with mortar casing

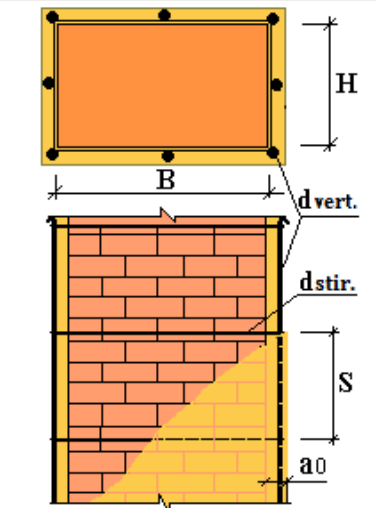Types of strengthening of brick piers



Pier strengthening by

☐ steel casing
☐ RC casing
☒ reinforced plaster
☐ wire mesh, rebar

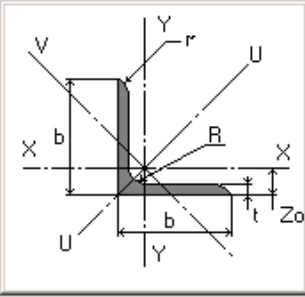
150 S - spacing of batten, stirrup (mm)
 20 b - batten width (mm)
 3 d - batten thickness (mm)
 3 Diameter of transverse stirrup (mm)
 6 Diameter of vertical reinforcement (mm)
 40 a0 - thickness of casing (mm)
 4 Number of angles, plates or vertical rebars
 0 Number of brick courses in which strengthening be done

C245 Steel
 A240C Class of reinforcement
 24500 Design strength of steel (tf/m²)
 23000 Design strength of reinforcement (tf/m²)
 Angle symmetric Shape type
 20x20x3 Shape No.
 UG_R.SRT Steel table file

Casing is supported (type), Coefficient
 Compl.leaning from below : 1

0 Area of one angle, rebar, etc. (cm²)
 0 Total area of vertical strengthening (cm²)
 0 Area of transverse stirrups (cm²/m)
 S:SNIP 2.03.01-84 Building code
 Concrete class of RC casing
 B15 TA

OK Cancel



Timber structures

Timber structures

The chapter contains 6 modules for analysis of elements in timber structures:

- [Sections of solid timber](#) by SP 64.13330 2011;
- [Sections of glued timber](#) by SP 64.13330 2011;
- [Sections of composite timber](#) by SP 64.13330 2011;
- [Sections of solid timber](#) by Eurocode 5;
- [Sections of glued timber](#) by Eurocode 5;
- [Sections of composite timber](#) by Eurocode 5.



Figure 7.1

Sections of solid timber

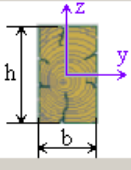
These modules enable you to carry out analysis of rectangular and round bars in solid timber sections according to SP 64.13330.2011 and Eurocode 5.

Analysis of timber structures (solid section) by Eurocode 5 - Untitled

File View Help

Input data Analysis / Output Data

Element type
 Beam Column Truss

Section dimensions

 h = 200 mm
 b = 100 mm

Section type
 Rect bar
 Round bar

Effective length
 Leff = 2000 mm

Design forces

	My, kN m	Qz, kN	Mz, kN m	Qy, kN	Flags
1	1.5	0.5	0.495	0.33	P
2	0.9	0.6			P+L
3					
4					
5					
6					
7					
8					
9					

Loads
 Long-term Short-term Instant Average-term Sign convention

Additional data
 Timber class C30
 Service class 2
☒ Analysis in local compression at supports
 Width of support element 85 mm


Messages

 ↑ Positive directions

Figure 7.2

Output data may be presented either in abridged format or in detail with formulas and utilization ratio for sections according to appropriate check procedures.

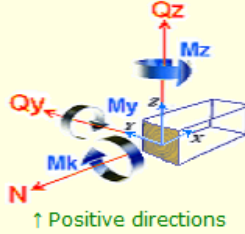Input data

In the **Element type** area, click appropriate button to select the type of element:

- **Beam** – flexural element (design forces – M_y , M_z , Q_y , Q_z);
- **Column** – eccentrically-compressed (tensile) element (design forces – N , M_y , M_z , Q_y , Q_z);
- **Truss** – axially-compressed (tensile) element (design force – N).

Select the **Section type**: **Rectangular bar** or **Round bar**.

Define **Section dimensions**: height h and width b for rectangular section or diameter d for round section.

If the **Beam** type is selected, then define:

- for Eurocode 5 – effective length of element L_{eff} ;
- for SP 64.13330.2011 – length between supports L_p (that is, distance between fixities of compressed fibre of an element from displacement out of plane of bending in intermediate points).

If **Column** or **Truss** type is selected, then define l_{oy} , l_{oz} – effective lengths of element relative to The Y-axis and Z-axis respectively ('relative axis' means the plane that is perpendicular to the axis).

For the round section of column or truss element, define greatest effective length l_o .

In the **Additional data** area, define all required parameters for the element according to SP 64.13330.2011 or Eurocode 5 and coefficient γ (design resistance of timber will be multiplied by this coefficient). Coefficient is defined by the user according to appropriate building code.

In the **Design forces** table, define one or several values for design combinations of forces. In this case, to determine design resistance of materials according to SP, for the specified rows of design combinations of forces (DCF) it is necessary to select the **Stresses from dead and live loads exceed 80% of all loads** check box if it is true for the certain DCF row.* (* - Only for calculation by SP 64.13330.2011).

To define short-term loads available in the combination, click appropriate buttons in the **Loads** area. These loads will be denoted in the **Flags** column in the **Design forces** table.

To display schematic presentation with positive directions of forces in element sections, click **Sign convention**.

Output data

To carry out analysis and then evaluate results, click **Analysis / Output data tab**. Analysis results are presented as utilization percentage by appropriate criteria – ratio of bearing capacity of the section to actual stress, slenderness, etc. You will also obtain summary info whether certain criteria (strength, ultimate slenderness, etc.) are adequate or not.

Output data may be printed directly from the program window or you could save it to the report file (see FILE menu, **Save report as** command).

To display max values for each check, on the VIEW menu, click **Characteristic DCF only**.

To display the report in detail with numerical formulas for check procedures, on the VIEW menu, unselect the **Report abridged** command.

Sections of glued timber

These modules enable you to carry out analysis of glued sections in timber structures according to SP 64.13330.2011 and Eurocode 5.

Analysis of timber structures (glued section) by Eurocode 5 - Untitled

File View Help

Input data | Analysis / Output Data

Element type

Parameters of boards in package

Effective length
 $L_{oz} =$ mm
 $L_{oy} =$ mm

Section dimensions
Width, b mm
Height, h mm

Design forces

	N, kN	M_y , kN m	Q_z , kN	M_z , kN m	Q_y , kN	Flags
1	-10.1	1.2	0.53	0	0	P
2	-12.2	0.81	0.2	0.074	0.021	P+S
3						
4						
5						
6						
7						
8						
9						

Loads

Additional data

Timber class

Service class

Eccentricity
 e_y mm e_z mm

Messages

↑ Positive directions

Figure 7.3

Input data

In the **Element type** area, click appropriate button to select the type of element:

- **Beam** – flexural element (design forces – M_y , M_z , Q_y , Q_z);
- **Column** – eccentrically-compressed (tensile) element (design forces – N , M_y , M_z , Q_y , Q_z);
- **Truss** – axially-compressed (tensile) element (design force – N).

Define the following data:

- for analysis by SP - parameters of boards in package;
- for analysis by Eurocode - section dimensions.

If the **Beam** type is selected, then define:

- for Eurocode 5 – effective length of element L_{eff} ;
- for SP 64.13330.2011 – length between supports L_p (that is, distance between fixities of compressed fibre of an element from displacement out of plane of bending in intermediate points).

If **Column** or **Truss** type is selected, then define l_{oy} , l_{oz} – effective lengths of element relative to The Y-axis and Z-axis respectively ('relative axis' means the plane that is perpendicular to the axis).

In the **Additional data** area, define all required parameters for the element according to SP 64.13330.2011 or Eurocode 5 and coefficient γ (design resistance of timber will be multiplied by this coefficient). Coefficient is defined by the user according to appropriate building code.

In the **Design forces** table, define one or several values for design combinations of forces. In this case, to determine design resistance of materials according to SP, for the specified rows of design combinations of forces (DCF) it is necessary to select the **Stresses from dead and live loads exceed 80% of all loads** check box if it is true for the certain DCF row.* (* - Only for calculation by SP 64.13330.2011).

To define short-term loads available in the combination, click appropriate buttons in the **Loads** area. These loads will be denoted in the **Flags** column in the **Design forces** table.

To display schematic presentation with positive directions of forces in element sections, click **Sign convention**.

Output data

To carry out analysis and then evaluate results, click **Analysis / Output data tab**. Analysis results are presented as utilization percentage by appropriate criteria – ratio of bearing capacity of the section to actual stress, slenderness, etc. You will also obtain summary info whether certain criteria (strength, ultimate slenderness, strength in bending (chipping), etc.) are adequate or not.

Output data may be printed directly from the program window or you could save it to the report file (see FILE menu, **Save report as** command).

To display max values for each check, on the VIEW menu, click **Characteristic DCF only**.

To display the report in detail with numerical formulas for check procedures, on the VIEW menu, unselect the **Report abridged** command.

Sections of composite timber

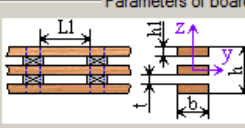
These modules enable you to carry out analysis of composite sections in timber structures according to SP 64.13330.2011 and Eurocode 5.

Analysis of timber structures (composite section) by Eurocode 5 - Untitled

File View Help

Input data Analysis / Output Data

Element type
☐ Beam ☐ Column ☐ Truss

Parameters of boards in package

Number it.
☒ Flange
t = mm
Width
b = mm
Thickness ☐ Different
h1 = mm
Effective length, mm
Leff

Additional data
Timber class
Service class
Fasteners Diameter mm
Eccentricity
ey mm ez mm

Design forces

	My, kN m	Qz, kN	Mz, kN m	Qy, kN	Flags
1	-2.13	0	0	0	P+L
2					
3					
4					
5					
6					
7					
8					
9					

Loads
☐ Long-term ☐ Short-term ☐ Instant ☐ Sign convention

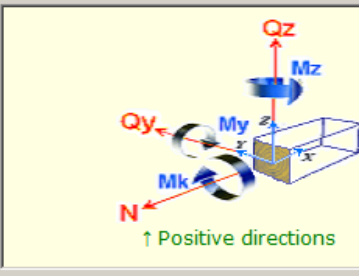
Messages


Figure 7.4

Input data

In the **Element type** area, click appropriate button to select the type of element:

- **Beam** – flexural element (design forces – M_y , M_z , Q_y , Q_z);
- **Column** – eccentrically-compressed (tensile) element (design forces – N , M_y , M_z , Q_y , Q_z);
- **Truss** – axially-compressed (tensile) element (design force – N).

Define section dimensions. To do this, in the **Parameters of boards in package** area, define number of boards (not less than 2 items), section dimensions depend on the number of boards in package. Thickness may be defined as different for every board or the same for all boards in the package. Width and height of the cross-section of boards in package may be selected according to the certain building code in the drop-down list or it is possible to define these values manually. To define these values manually, in the appropriate drop-down list, select <..> and then input required value.

If height of the section is increased with intermediate pieces (flanges), select the **Flanges** check box and define their thickness.

If the **Beam** type is selected, then define:

- for Eurocode 5 – effective length of element L_{eff} ;

- for SP 64.13330.2011 – length of span L and length between supports L_p (that is, distance between fixities of compressed fibre of an element from displacement out of plane of bending in intermediate points).

If **Column** or **Truss** type is selected, then define web length l_1 and l_{oy} , l_{oz} – effective lengths of element relative to The Y-axis and Z-axis respectively ('relative axis' means the plane that is perpendicular to the axis).

In the **Additional data** area, define all required parameters for the element according to SP 64.13330.2011 or Eurocode 5 and coefficient γ (design resistance of timber will be multiplied by this coefficient). Coefficient is defined by the user according to appropriate building code.

In the **Design forces** table, define one or several values for design combinations of forces. In this case, to determine design resistance of materials according to SP, for the specified rows of design combinations of forces (DCF) it is necessary to select the **Stresses from dead and live loads exceed 80% of all loads** check box if it is true for the certain DCF row.* (* - Only for calculation by SP 64.13330.2011).

To define short-term loads available in the combination, click appropriate buttons in the **Loads** area. These loads will be denoted in the **Flags** column in the **Design forces** table.

To display schematic presentation with positive directions of forces in element sections, click **Sign convention**.

Output data

To carry out analysis and then evaluate results, click **Analysis / Output data tab**. Analysis results are presented as utilization percentage by appropriate criteria – ratio of bearing capacity of the section to actual stress, slenderness, etc. You will also obtain summary info whether certain criteria (strength, ultimate slenderness, strength in bending (chipping), etc.) are adequate or not.

Output data may be printed directly from the program window or you could save it to the report file (see FILE menu, **Save report as** command).

To display max values for each check, on the VIEW menu, click **Characteristic DCF only**.

To display the report in detail with numerical formulas for check procedures, on the VIEW menu, unselect the **Report abridged** command.

Foundations and beddings

Foundations and beddings

The chapter contains modules for analysis of footings and foundations:

[Moduli of subgrade reaction C1, C2](#)

[Single pile](#)

[Pile under combined action of loads](#)

[Settlement of equivalent footing](#)

[Principal and equivalent stresses in soil](#)

[Slope stability](#)

[Stability of multi-layer slope](#)

[Bearing capacity of piles by field test results](#)

[Combined piled-raft foundation](#)

[Disregard for soil resistance in earthquake analysis](#)

[Properties of rubber metal damper](#)



Figure 8.1

The following building codes are supported in the module:

SNIP 2.02.01– 83*. Foundation beds for buildings and structures;

SP 50–101–2004. Foundation beds for buildings and structures;

SNIP 2.02.03–85. Pile foundations;

SP 50–102–2003. Design and installation of pile foundations;

MGSN 2.07–01. Footings, foundations and underground structures;
DBN V.2.1-10:2009. Footings and foundations of structures;
SP 22.13330.2011. Foundation beds for buildings and structures;
SP 24.13330.2011. Pile foundations.


Moduli of subgrade reaction C1, C2

This module enables you to calculate moduli of subgrade reaction of the soil **C1** and **C2** under the centre of column foundation or foundation slab. Analysis may be carried out by different methods based on computation of settlement according to various building codes.

C1 Calculate subgrade moduli C1 and C2

Parameters | **Geology**

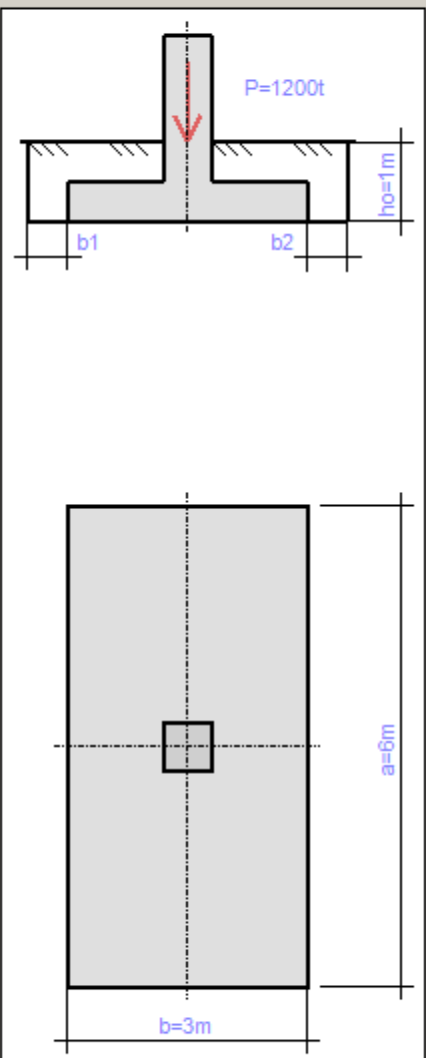Record of soil model: Calculate C1 and C2



Vertical load (P) 1200 t

Eccentricity (e) ☐ ex ☐ ey 0 m

Depth of foundation (ho) 1 m

Shape of foundation

☒ Rectangular ☐ Circular

Width of foundation (b) 3 m

l/b ratio of foundation 2

Distance to foundation pit wall (b1+b2) 0 m

Unit weight of soil above base of foundation (go) 1.8 t/m³

Ratio of stresses for limitation of depth of compressible stratum

Calculate 0.5

Algorithm

Linear elastic half-space

☐ SNIP 2.02.01-83

☐ SP 50-101-2004

☐ DBN V.2.1-10:2009

☒ SP 22.13330.2011

Linear elastic layer

☐ SNIP 2.02.01-83

☐ SP 22.13330.2011

☐ High-speed analysis of settlement (DBN V.2.1-10:2009, appendix D)

☐ For dynamic loads with empirical formula of O.A. Savinov

Open Save Calculate Report Help

Figure 8.2 a)

Input data

On the **Parameters** tab, in the **Shape of foundation** area, click **Rectangular** or **Circular** and define dimensions for foundation.

On this tab, define the following input data:

- vertical load on foundation;
- eccentricity of load application;
- depth of foundation;
- unit weight of soil above foundation base;

- ratio of stresses for limitation of depth of compressible stratum.

To determine the lower depth of compressible stratum, you should define the ratio of additional vertical stress to vertical stress from dead weight of soil.

Define appropriate algorithm and building code for calculation:

- analysis by linear elastic half-space (LHS) according to sect. 1–6 Appendix 2 SNIP 2.02.01–83*, according to SP 50-101-2004 or DBN V.2.1-10:2009;
- analysis by linear elastic layer (LEL) according to sect. 7–8 Appendix 2 SNIP 2.02.01–83*;
- high-speed analysis of settlement according to DBN V.2.1-10:2009;
- for dynamic loads, with empirical formula of O.A.Savinov.

Calculate subgrade moduli C1 and C2

Parameters | **Geology**

Number of layers in soil (n)

Properties of layer

Active layer No. (i)

Colour for layer

Modulus of elasticity of layer (Ei) t/m²

Ee,i = ki * Ei. Coefficient (ki)

Poisson's ratio (mi)

Depth of layer (hi) m

Unit weight of soil (gi) t/m³

Soil type

☒ sand

☐ silty-clayed

☐ Layer

☐ water-saturated

☐ water-proof

Stiffness coefficient for formula of O.A.Savinov (Coi) t/m³

Open Save **Calculate** Report Help

Figure 8.2 b)

On the **Geology** tab, define the number of soil layers and properties for every soil layer:

E – modulus of elasticity for soil;

u – Poisson's ratio;

h – thickness of layer;

γ – unit weight of soil.

For analysis by linear elastic layer (LEL) , define the soil type: either sand or silty-clayed.

In the **Layer** area, define whether the layer is water-saturated or water-proof.

To apply empirical formula of O.A.Savinov, define the stiffness coefficient appropriate for soil layer.

Click **Calculate**.

Output data

The output data contains the following values:

S – settlement of foundation;

H_c, H_m – depth of compressible stratum for algorithm of linear elastic half-space and linear elastic layer respectively;

E_{gr} – mean value of modulus of elasticity of soil;

m_{gr} – mean value of Poisson's ratio;

E_{gr3} – modified modulus of elasticity of soil. It is calculated on the assumption that modulus of elasticity of soil increases along the depth and additional stress is distributed uniformly;

i – tangent of rotation angle of foundation;

C₁, C₂ – moduli of subgrade reaction of soil in compression and shear.

Diagram for distribution of vertical stresses is presented according to selected building code.

To present analysis results as report, click appropriate button. In the **Report generation** dialog box, define the path and name for the report file, click **Generate** and then click **Preview**.

Report may be generated for the following data: parameters, geology and analysis results.

Brief description of algorithm.

1) Regardless of selected algorithm, the depth of compressible stratum **H_c** is determined according to LHS (linear elastic half-space) with account of requirements of sect.7-8 Appendix 2 SNIP 2.02.01-83*, SP 50-101-2004, SP 22.13330.2011, DBN V.2.1-10:2009 based on formula (1):

$$\sigma_{zp} = \lambda \sigma_{zg}, \quad (1)$$

where

σ_{zp} – additional vertical stress at depth $Z = H_c$;

σ_{zg} – vertical stress from dead weight of soil.

λ – coefficient stipulated in the appropriate building codes and depending on type of soil and type of structure, as a rule $\lambda = 0.2$.

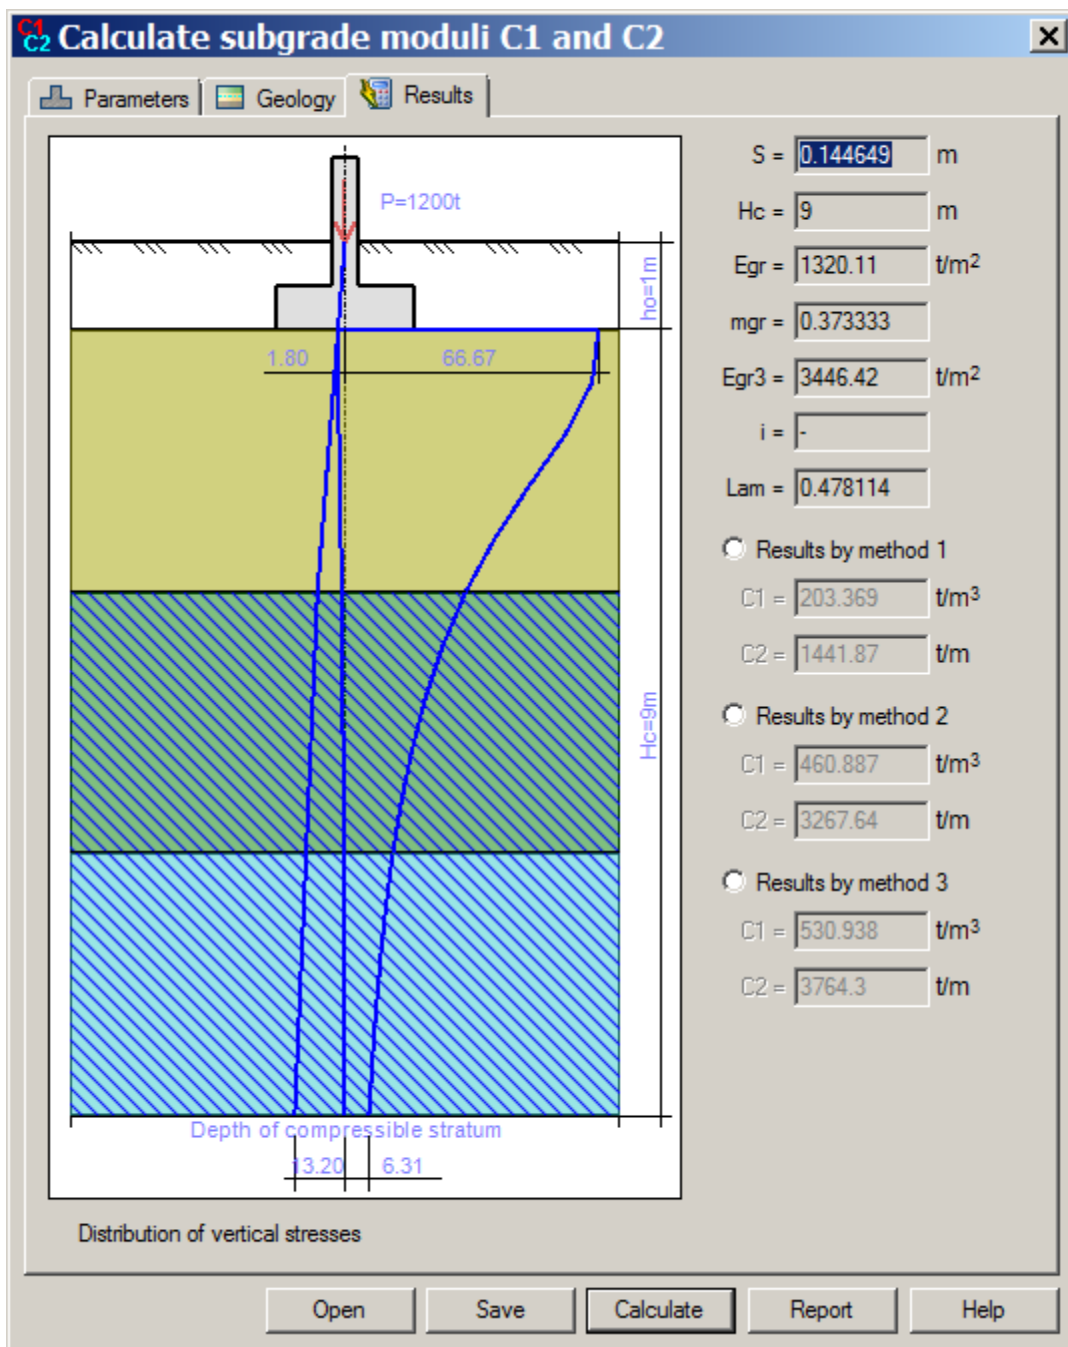


Figure 8.3

Analysis by linear elastic half-space (LHS) according to SNIP 2.02.01-83*

2) Settlement (**S**) of foundation according to linear elastic half-space is calculated by layer-by-layer sum according to the formula:

$$S = 0.8W, \quad (2)$$

where

$$W = \sum_{i=1}^n \frac{\sigma_{zp,i} h_i}{E_i}; \quad (3)$$

h_i, E_i – thickness and modulus of elasticity of the **i-th** layer of soil (with account of its division into sublayers) respectively;

n – number of soil layers from the base of foundation up to the depth $Z = H_c$ with account of division into sublayers (**i=1~n**).

Analysis by linear elastic half-space (LHS) according to SP 50-101-2004 and DBN V.2.1-10:2009

3) The following limitations are imposed on the values of λ and depth **Hc**:

- a) when $b \leq 5$ - $\lambda = 0.2$, but **Hc** not less than $b/2$;
- b) when $5 < b \leq 10$ - $\lambda = 0.02*b+0.1$, but **Hc** not less than $b/2$;
- c) when $10 < b \leq 20$ - $\lambda = 0.02*b+0.1$, but **Hc** not less than $(4+0.1*b)$;
- d) when $20 < b$ - $\lambda = 0.02*b+0.1$, but **Hc** not less than $(4+0.1*b)$.

b - smaller side of foundation.

Coefficient λ and ultimate values of **Hc**.

b, m	λ	Hc, m not less than	b, m	λ	Hc, m not less than
1 -:- 5	0.2	2.5	15	0.4	5.5
6	0.22	3.0	16	0.42	5.6
7	0.24	3.5	17	0.44	5.7
8	0.26	4.0	18	0.46	5.8
9	0.28	4.5	19	0.48	5.9
10	0.3	5.0	20	0.5	6.0
11	0.32	5.1	30	0.5	7.0
12	0.34	5.2	40	0.5	8.0
13	0.36	5.3	50	0.5	9.0
14	0.38	5.4	100	0.5	10.0

4) Settlement is calculated in the following way:

$$W_1 = \sum_1^n \frac{(\sigma_{zp,i} - \sigma_{zy,i}) h_i}{E_i} ;$$

$$W_2 = \sum_1^n \frac{\sigma_{zy,i} h_i}{E_{ei}} ;$$

$$W_3 = \sum_1^n \frac{\sigma_{zp,i} h_i}{E_{ei}} \quad (5)$$

where

E_i – modulus of elasticity of the i-th layer of soil along the loading path;

E_{ei} – modulus of elasticity of the i -th layer of soil along the unloading path;

by default $E_{ei} = E_i$;

$\sigma_{zp,i}$ – stress at the i -th layer of soil from external load;

$\sigma_{zy,i}$ – stress at the i -th layer of soil from dead weight.

If dead weight of soil at the level of foundation base is greater than mean pressure under the foundation base, then $W = W_3$, otherwise $W = W_1 + W_2$. Settlement is calculated according to formula (2).

5) Mean (within the limits of fixed depth of compressible stratum **H_c**) values of modulus of elasticity E_{gr} and Poisson's ratio m_{gr} are used for calculation of subgrade moduli. These values are calculated according to formulas 11 and 12 Appendix 2 SNIP 2.02.01-83*.

$$E_{gr} = \frac{\sum_{i=1}^n \sigma_{zp,i} h_i}{H_c}; \quad m_{gr} = \frac{\sum_{i=1}^n \nu_i h_i}{H_c} \quad (5)$$

6) Modulus of subgrade reaction **C₁** is calculated by three methods.

Method 1. Subgrade modulus **C₁** is calculated by formula:

$$C_1 = \frac{E_{gr}}{H_c (1 - 2m_{gr}^2)}; \quad (6)$$

Method 2. Subgrade modulus **C₁** is calculated according to Winkler method:

$$C_1 = \frac{q}{S}, \quad (7)$$

where

$$q = \frac{P}{\eta * b^2} \text{ – mean pressure under the base of foundation;}$$

b – width of foundation;

η – ratio of the longest dimension of foundation to the shortest one;

S – settlement of soil.

Method 3. Just as in method 1, formula (6) is used to determine subgrade modulus **C₁**.

The difference is that in this case correction factor u to modulus of elasticity of the **i -th** sublayer is introduced for calculation of mean modulus of elasticity. This factor varies from

$u_1 = 1$ at the level of foundation base up to $u_n = 12$ at the level of calculated depth of compressible stratum. It is accepted that factor u varies according to parabola law:

$$u = \frac{11z^2}{H_C^2} + 1 \quad . \quad (8)$$

Moreover, it is also accepted that additional vertical stress is distributed uniformly along the depth. Then

$$E_{gr3} = \frac{H_C}{\sum_{i=1}^n \frac{h_i}{u_i E_i}} \quad (9)$$

Method 3 is suggested in order to remove limitations of the first two methods.

Limitation of method 1 – it is impossible to take into account that modulus of elasticity increases along the depth. It causes too high values of settlements and therefore too low values of subgrade modulus **C1**.

7) For all methods, subgrade modulus **C2** is calculated according to the formula:

$$C_2 = \frac{C_1 H_C^2 (1 - 2m_{gr}^2)}{6(1 + m_{gr})} \quad . \quad (10)$$

Analysis by linear elastic layer (LEL)

8) Depth of compressible stratum **Hm** for linear elastic layer is determined with account of requirements of paragraph 2.40 and paragraphs 7-8 Appendix 2 SNIP 2.02.01-83*.

If these requirements are not satisfied, then the program displays a message and asks whether you want to continue calculation process. If yes, then it is accepted that **Hm=Hc** and calculation procedure is continued. Otherwise, it is terminated.

9) Mean (with account of layers **j=1~n** within the limits of fixed depth of compressible

stratum **Hm**) values of modulus of elasticity E_{gr} , E_{gr3} and Poisson's ratio m_{gr} are used for calculation of subgrade moduli by three methods. Correction factor u is calculated according to formula (8).

$$E_{gr} = \frac{\sum_{j=1}^n (k_j - k_{j-1})}{\sum_{j=1}^n \frac{(k_j - k_{j-1})}{E_j}};$$

$$m_{gr} = \frac{\sum_{j=1}^n \nu_j h_j}{H_m};$$

$$E_{gr3} = \frac{\sum_{j=1}^n (k_j - k_{j-1})}{\sum_{j=1}^n \frac{(k_j - k_{j-1})}{u_j E_j}} \quad (11)$$

10) Settlement **S** is calculated according to formula 7 Appendix 2 SNIP 2.02.01-83*.

11) Modulus of subgrade reaction **C1** is calculated by three methods. Formula (6) where **Hc** is replaced with **Hm** and formula (7) are used. Subgrade modulus **C2** is calculated according to formula (10) where **Hc** is replaced with **Hm**.

Quick calculation of settlement

12) The settlement may be calculated quickly according to formulas D.9 – D.11 and table D2, Appendix D, DBN V.2.1-1-:2009.

$$S = 1.44 \frac{\eta}{\eta + 1} \frac{(p - \sigma_{zg,0}) b}{E_c}, \quad (12)$$

where:

$\eta = l/b$ – ratio of foundation length to foundation width;

p – mean pressure below foundation base;

$\sigma_{zg,0}$ – vertical pressure from the dead weight of soil at the level of foundation base;

E_c – mean modulus of elasticity, computed by formula

$$E_c = \frac{\sum_{i=1}^n E_i h_i z_i}{0.5 H_c^2}, \quad (13)$$

where:

E_i – modulus of elasticity of the i -th layer of soil;

z_i – distance from the middle of the i -th layer to the lower depth of compressible stratum;

H_c – depth of compressible stratum, computed by formula

$H_c = k \cdot b$, (14)

k – coefficient from the table below.

$\eta = l/b$	Circular foundation	1.0	1.2	1.4	1.8	2.0	2.4	3.2	5.0	≥ 6.0
k	1.8	2.0	2.2	2.4	2.8	3.0	3.4	3.8	4.3	6.0

Analysis by formula of O.A.Savinov

13) Mean value of stiffness coefficient is determined based on stiffness coefficients C_{0i} specified for every layer of soil and calculated depth of compressible stratum **Hc**. Mean value of stiffness coefficient is calculated by formula

$$C_{gr0} = \frac{\sum_{i=1}^n C_{0i} h_i}{H_C} \quad (12)$$

14) Modulus of subgrade reaction **C1** is calculated according to the following formulas: for rectangular foundation with dimensions **l*b**

$$C_1 = C_0 \left(1 + \frac{2(l+b)}{\Delta l b} \right) \sqrt{\frac{q}{p_0}}; \quad (13)$$

for circular foundation with radius **R**

$$C_1 = C_0 \left(1 + \frac{2}{\Delta R} \right) \sqrt{\frac{q}{p_0}}, \quad (14)$$

where C_{0i} – stiffness coefficient taken from the table;

p_0 – pressure determined from laboratory tests and equal to 2 t/m²;

q – mean pressure under the base (t/m²);

Δ – constant of elasticity of soil taken as equal to 1 (in 1/m).

15) Modulus of subgrade reaction **C2** is calculated according to the formula (10).

Table with stiffness coefficients

(N.A. Tsytoich, Soil mechanics, page 358)

No.	Name of soil	C_0 , tf/m ³
1	Sand: 1) silty, greatly saturated; 2) fine, regardless of density and humidity; 3) medium, coarse and gravel, regardless of density and humidity.	800 – 1000 1000 – 1200 1200 – 1600
2	Clay, clay loam and sandy clay: 1) soft; 2) firm; 3) stiff.	500 – 1000 1000 – 2000 2000 – 3000

Single pile

The module enables you to compute bearing capacity of single pile. It is possible to compute end-bearing piles, friction piles and screw piles according to SNIP 2.02.03-85 'Pile foundations', MGSN 2.07-01 and requirements of 'Manual for design of pile foundations'.

Input data

End-bearing piles and friction piles

- In the **Pile type** area, select the type of piles: driven piles, bored and drilled piles, shell piles.
- Select the type of pile cross-section and define its dimensions.
- Depending on the pile type, in the left part of the dialog box there may be some check boxes to define additional information.
- To compute settlement (for friction piles), select appropriate check box. In another dialog box that appear, select the building code, define appropriate parameters and data (if required) to take account of interaction of piles in the pile group.
- For **friction piles**, define soil properties along the side surface of the pile.

Screw piles

- L – pile length ≤ 10 ;
- D – diameter of pile shaft;
- d1 – diameter of pile helix;
- h1 – depth of penetration of pile helix;
- A – in **compressive and sign variable loads** - area of projection of pile helix OR
 - in **pullout loads** - difference between projection area of pile helix and projection area of pile shaft.

C1 – design value for soil resistance within work space (within soil layer with thickness d1 adjacent to the pile helix from above and below);

Angle of internal friction of soil within work space.

Load type – compression, pullout, sign variable.

In the **soil type** list, select required type of the i -th layer and define its thickness (t_i), design value for unit weight (γ_i) and design value for soil resistance along side surface of pile shaft (f_i). To add or delete the soil layer, use appropriate buttons in the dialog box.

Click **Calculate**.


Analysis of single pile

End-bearing piles | Friction piles | Screw piles


Pile type

- ☒ Driven piles
- ☐ Bored and drilled piles
- ☐ Shell piles filled with concrete and driven into unweathered rock soil by at least 0,5 m
- ☐ Shell piles uniformly supported by the surface of unweathered rock soil

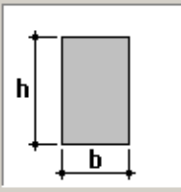Pile cross-section, m



b h

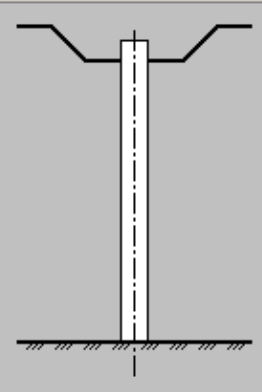

R tf/m²

γ_c

Bearing capacity of pile, Fd tf

Figure 8.4 a)

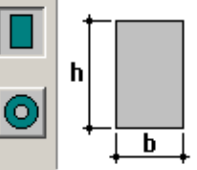
Analysis of single pile

End-bearing piles Friction piles Screw piles

Pile type

- ☒ Driven of all types
- ☐ Shell piles driven without soil excavation
- ☐ Bored piles
- ☐ Drilled piles
- ☐ Shell piles filled with concrete

Pile cross-section, m

 b: 0.5 h: 0.3

Penetration of pile toe (H) 9 m

dp 1.5 m ☒ Settlement

Soil along side surface of pile

Layer 1 Layer 2 Layer 3

Soil type sandy silt of medium densit

Layer thickness (ti), m 20

γ_{cf} 1

Poisson's ratio .325

Modulus of elasticity, tf/m² 1100

Add Delete last layer

Partial safety factor

γ_c 1 $\gamma_{c\&}$ 1

Calculate Report

Bearing capacity 124.2 tf

Settlement 3.7748 cm

Stiffness per 1 r.m. 2350 tf/m

Save... Open... Exit Help

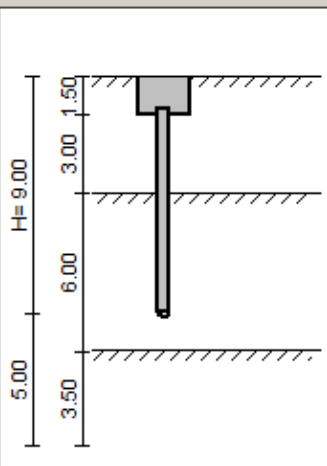



Figure 8.4 b)

Analysis of single pile

End-bearing piles | Friction piles | Screw piles

Length of pile penetrated into soil (L), m: Load type:

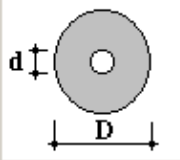Cross-section of pile, m



D:

Diameter of pile helix (d1), m:

Depth of penetration of pile helix (h1), m:

Area of projection of pile helix, m2:

Design value for unit cohesion of soil within work space (C1), t/m2:

Angle of internal friction within work space (degrees):

Layer 1 | Layer 2

soil type:

thickness of soil layer (ti), m:

design value for unit weight (γi), t/m3:

design value for soil resistance along side surface of pile shaft (fi), t/m2:

Calculate

Bearing capacity, tf:

Open... Save... Report

Add soil layer Delete the last soil layer

Exit Help

Figure 8.4 c)

Output data

Output data is presented in the **Bearing capacity of pile** box.

For friction piles and screw piles, the output data may be presented as a report in HTML file.

For friction piles, the following data is displayed in the report file: bearing capacity of pile, its settlement, including the one with account of interaction of piles in the pile group, stiffness of pile per 1 running metre.

For screw piles, the following data is displayed in the report file: bearing capacity of pile helix, pile shaft and the pile itself.

The output data for the friction pile is saved to the file with extension **.pile*.

The output data for the screw pile is saved to the file with extension **.vpl*.

Bearing capacity of friction pile

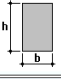
Input data		
Driven pile		
	Pile cross-section: b=0.5 m, h=0.3 m	
γ_c	Partial safety factor for pile	1
γ_{cs}	Partial safety factor for soil under pile toe	1
H	Penetration of pile toe, m	9
dp	Height of grillage, m	1.5
Soil along side surface of pile		
Layer 1		
	gravel sand of medium density	
ti	Layer thickness, m	3
γ_{cs}	Partial safety factor for soil	1
ν	Poisson's ratio	0.4
E	Modulus of elasticity, tf/m ²	1000
Layer 2		
	medium sand of medium density	
ti	Layer thickness, m	6
γ_{cs}	Partial safety factor for soil	1
ν	Poisson's ratio	0.4
E	Modulus of elasticity, tf/m ²	800
Layer 3		
	sandy silt of medium density	
ti	Layer thickness, m	20
γ_{cs}	Partial safety factor for soil	1
ν	Poisson's ratio	0.325
E	Modulus of elasticity, tf/m ²	1100
Output data		
Fd	Bearing capacity of pile, tf	124.19
U	Perimeter of pile cross-section, m	1.6
A	Area of pile cross-section, m ²	0.15
R	Design strength of soil under pile toe, tf/m ²	390
Design strength of soil along side surface of pile		
hi - thickness of the i-th layer of soil, m		

Figure 8.5

Pile under combined action of loads

The module enables you to compute single pile in strain and in stability from combined action of vertical and horizontal loads and moment.

The following building codes are supported:

- appendix 1 SNIP 2.02.03-85*;
- appendix B SP 24.13330.2011 with account of modification No.1.

Analysis by SNIP 2.02.03-85* includes:

- Analysis of bearing capacity of piles in case the 2nd stage of the stress-strain state of soil is developing $H \leq F_d / \gamma_k$;
- Check for soil stability according to sect.13 only for the 1st stage of stress-strain state of soil;
- Analysis of piles according to serviceability limit state with the following check $U_p \leq U_u$;
 $\psi_p \leq \psi_u$;
- Analysis of pile section according to ultimate and serviceability limit states (sect. 8-9 assuming that the 2nd stage of the stress-strain state of soil is developing). In other cases, according to sect. 14,15.

It is supposed that in loading process there are two stages of stress strain state for the 'pile-soil' system.

At the first stage the soil enveloping the pile behaves as linearly elastic medium.

Elastic properties of soil are described with modulus of subgrade reaction that is increased linearly with the depth.

At the second stage, in the upper part of soil enveloping the pile there is an area of limit equilibrium (plastic zone). Stiffness of soil within the limits of limit equilibrium area is described with strength factor of proportionality. Below, the soil behaves as in the first stage (linearly elastic medium).

The ultimate state of the 'pile-soil' system is taken to become at the moment when the plastic hinge is generated within the limits and on the edge of limit equilibrium area for soil.

Horizontal displacement and angle of rotation of the pile head are determined after calculation. In case of one-stage calculation, stability analysis of soil is carried out according to sect. 13 Appendix 1 SNIP 2.02.03-85. If the account of the second stage of stress strain state of soil is defined, the program computes bearing capacity of pile according to condition $H \leq F_d / \gamma_k$, where

H – design value of transverse load applied to pile;

F_d – bearing capacity of pile, determined according to requirements of sect. 10;

γ_k – partial factor for an action, taken as equal to 1.4 .

Analysis by SP 24.13330.2011 includes:

- Analysis of bearing capacity of piles in case the 2nd stage of the stress-strain state of soil is developing $H \leq F_d / \gamma_k$;
- Check for soil stability according to sect. B.7 ;
- Analysis of piles according to serviceability limit state with the following check $U_p \leq U_u$;
 $\psi_p \leq \psi_u$;
- Analysis of pile section according to ultimate and serviceability limit states.

Input data may be saved to *.*mnh* file. It is also possible to download input data from the previously saved file. To do this, click **Save** or **Open** on the System menu of the program. To access the System menu, either left-click on the upper-left icon of the dialog box or press the ALT and SPACE keys. The name of the current file is displayed in the dialog box.

Figure 8.6

Input data

In the **Code** list, select the building code: either SNIP 2.02.03-85 or SP 24.13330.2011.

In the **Loads applied to pile** area, define the moment, vertical and horizontal loads, length of pile.

Select the type of pile cross-section and define its dimensions.

In the right part of the dialog box, input **Modulus of elasticity for pile material**, define **Type of pile support**, number of soil layers and for every layer define **Soils that envelope pile**, **Design properties of soil** and other parameters.

To take account of design situation, select either **Fixed connection of pile and grillage** or **Driven pile or shell pile** option.

If the **Account of plastic strain in soil** check box is selected, analysis is carried out with account of the second stage of stress-strain state of the soil.

If the **Account of plastic strain in soil** check box is not selected, then analysis of pile according to serviceability limit state and stability analysis of soil are carried out. In this case, in analysis procedure, the following message may appear: *'Stability of soil that envelopes the pile is NOT adequate. Perform iterations by reducing K?'*. If you click **Yes**, analysis will be continued but with reduced values of proportionality factor **K**. If you click **No**, analysis is complete.

Click **Calculate**.

Output data

Output data is presented as report file in HTML format. This file appears on the screen after calculation or when you click **Report**.

Output data

1. Calculation of pile by deformations

I	Moment of inertia for pile cross section, m ⁴	0.005105
bc	Conventional width of pile, m	1.40
K	Factor of proportionality, (tf/m ⁴)	1800.00
a	Strength factor of proportionality, (tf/m ³)	7.10
α_e	Strain coefficient, 1/m	0.701778
l_{red}	Reduced value of pile penetration	5.614226
Qo	Design value of shear force in pile section, tf	4.0000
Mo	Design value of bending moment in pile section, tf*m	10.0000
Up	Design value of horizontal displacement of pile head, mm	10.271343
Ψ_p	Design value of rotation angle of pile head, rad*1000	3.385170

2. Check for bearing capacity of pile

	Part of dead loads in total horizontal load, %	50.00
Mu	Ultimate bending moment with account of normal force, tf*m	100.000000
e	Load eccentricity, m	0.000000
Qo	Design value of shear force in pile section, tf	4.0000
Zz	Distance from soil surface to plastic hinge, m	3.1135
Fd	Bearing capacity of pile, tf	27.530123
γ_k	Partial factor for an action	1.40

Condition $H \leq F_d / \gamma_k$ is satisfied ($H=Q_o$).

Figure 8.7

Settlement of equivalent footing

The module enables you to compute the settlement of pile group as equivalent footing according to SNIP 2.02.03-85 sect.6 and SP 24.13330.2011 with account of SP 22.13330.2011.

The input and output data is presented in Fig. 8.8.

Input data

- Select the shape of pile section.
- Define **Section dimensions, Pile penetration to soil, Number of piles, Contour dimensions of pile group**, parameters for grillage.
- Define **Vertical load on foundation, Number of layers in soil**.
- Define **Soil properties**.
- Click **Calculate**.

Settlement of equivalent footing

Input data

☒ SNIP 2.02.03-85
 ☐ SP 24.13330.2011
 ☐ Inclined piles

Shape of pile section: ☒ Rectangle ☐ Ring

Section dimensions: m m

Pile penetration to soil: m
 Number of piles:

Spacing: m

Distance to sides of foundation pit (b1+b2): m

Grillage:

Width: m Length: m

Height: m Density: t/m3

Penetration: m Contour dimensions of pile group: m m

Vertical load on foundation: t
 λ :

Number of layers in soil:
☐ Silty clay soil with liquidity index IL > 0.6 is present below pile toe

Output data: Settlement m

Soil properties

No. of current layer:

Layer thickness: m

Unit weight of soil: tf/m3

Poisson's ratio for layer:

Angle of internal friction: °

Modulus of elasticity for layer: tf/m2

Unloading factor:

☒ Standard
☐ Water saturated
☐ Water-resistant

Figure 8.8

Output data

Output data (dimensions of equivalent footing, its dead weight, depth of compressible stratum and settlement) is presented as report file. To present a report document in HTML format, click **Report**.

Soil properties							
Layer	Layer thickness, m	Unit weight of soil, tf/m ³	Angle of internal friction, °	Modulus of elasticity, tf/m ²	Poisson's ratio for layer	Coefficient for unloading	Notes
No.	L _I	γ _I	φ _I	E _I	μ _I	K _{E, I}	
1	4.00	1.80	14.00	4000.00	0.35	1.00	
2	4.50	1.90	24.00	4000.00	0.35	1.00	
3	15.00	2.00	40.00	4000.00	0.35	1.00	

Vertical load on foundation, tf	
300.00	

Output data

Weight of grillage, tf	Weight of piles, tf	Weight of soil in volume of equivalent footing, tf	
360.00	54.00	1478.70	

Actual settlement, mm	Punching shear settlement, mm	Compression settlement, mm	
6.09	0.84	0.17	

Dead weight of equivalent footing, tf	Dimensions for base of equivalent footing, m		Depth of compressible stratum, m	Settlement, mm
414.00	8.20	12.20	4.96	7.10

Vertical stresses from dead weight of soil at the base of equivalent footing are not considered in additional vertical pressure at the level of the base.

Figure 8.9

Principal and equivalent stresses in soil

The module enables you to calculate principal and equivalent stresses σ_1 , σ_2 , σ_3 in soil by the specified stress tensor $\{\sigma_x, \sigma_y, \sigma_z, \tau_{xy}, \tau_{xz}, \tau_{yz}\}$.

Principal stresses

Design properties of soil

Compress.: R_c, R_{2c} 23.5035 33.2339

Angle of internal friction - $F_{io}, (R_r)$ 18.000 7.83450

Unit cohesion - $C_o, (R_{tau})$ 1.8000 11.07965

Strength criterion: Coulomb-Mohr

Soil type: Soil of average densi

Shape of surface load: Round

Area of surf. load (m²): 1

Settlem. (m): 0.01

Poisson's ratio: 0.3

Safety factors: load (Y_f) 1.15, material (Y_m) 0.9

Xi: 0.000, Teta: 0.707, P2c: 1.414

Stress tensor: (tf/m^2)

σ_x : 12, σ_y : 5, σ_z : 3, τ_{xy} : -4, τ_{xz} : 21, τ_{yz} : 5

Principal stresses

σ_1 : 28.976778, σ_2 : 6.958337, σ_3 : -15.935115

Equivalent stresses

σ_1 : 31.669811, σ_2 : -26.715649

Output data

Angles Sig1 to XYZ (deg.): X: 38.96483, Y: 89.91856, Z: 51.03528

Slope angle of crack in 2D stress: 81.85126

Matrix COS

Modulus of complete deform. Eg: 738.553040

σ_0 : 6.666667, τ_0 : 18.336362, $\mu\sigma$: 0.019483

Reserve factor: 0.272685

Ultimate stresses

$\bar{\sigma}_0$: 1.817897, $\bar{\tau}_0$: 5.000042, $\bar{\sigma}_1 \bar{\sigma}_3$: 7.051052, -4.838196

Strength zone

Figure 8.10

Input data

In the appropriate list, define the soil type: soil of average density, dense soil or rock.

In the **Design properties of soil** area, define the following values:

- strength in compression: **R_c**, if **R_c=0** – the value is determined automatically;
- angle of internal friction: - **F_i** (in degrees);
- cohesion – **C_o** (tf/m²) or strength in pure shear (negative value – **R_{tau}** for soils where cohesion is close to zero). For soils where cohesion is close to zero, it is possible to define strength of soil in compression. Then required strength in pure shear is taken as **R_{tau} = 0.5*R_c / 1.732**.

To determine modulus of complete deformations of soil E_g according to SNIP 2.02.01–83 and DBN V.1.1–5–2000, define the following data:

Shape of surface load (rectangular or round);

Area of surface load (m²);

Design value of settlement (m);

Poisson's ratio.

Click **Calculate**.

Modulus of complete deformations is determined by field test results with surface load according to the model of linear elastic half-space (LHS) and it is valid only for deformed zone below the surface load.

The following limit equilibrium equations are realized for soil: Coulomb-Mohr criterion and Mises-Schleicher-Botkin criterion (modified Coulomb-Mohr criterion).

Output data

When the **Strength analysis** check box is selected, after strength analysis, the following data is displayed:

- σ_1, σ_3 – ultimate allowed values of principal stresses;
- σ_0, τ_0 – ultimate axial and shear octahedral stresses;
- reserve factor (analysis by serviceability limit state is supposed, that is, normative strength parameters of material are considered in analysis);

$$\mu_\sigma = \frac{(2\sigma_2 - \sigma_1 - \sigma_3)}{(\sigma_1 - \sigma_3)} ;$$

- Lode-Nadai parameter is computed as:

To generate report file in HTML format, click **Report**. The report file contains the following data:

- principal stresses as: $\sigma_1 > \sigma_2 > \sigma_3$;
- matrix of directional cosines MC(3,3) – orientation of principal stresses in the space relative to the X,Y,Z axes:

$$MC = \begin{bmatrix} l1 & m1 & n1 \\ l2 & m2 & n2 \\ l3 & m3 & n3 \end{bmatrix}$$

- slope angles AL1, AL2, AL3 (l1, l2, l3) of principal stress σ_1 to the X, Y, Z-axes; angles define orientation of the crack plane in the space;
- slope angle α_3 of principal stress σ_3 to the X-axis; angle defines orientation of the crack plane relative to the X-axis ;
- Euler angles TETA, PSI, FI (θ, ψ, φ) that define location of principal stresses $\sigma_1, \sigma_2, \sigma_3$ relative to the X, Y, Z-axes of global coordinate system;
- additional strength parameters:
 - strength in biaxial uniform compression – $R2c = Rc \cdot P2c$,
 - strength in biaxial uniform tension – $R2p$.
- whether cracks are present TB=1, 2, 3 – one, two, three; TB=10 (20) – destruction of element in compression. TB=0 – no cracks.

Stress tensor		
Sig_X = 12.000	Sig_Y = 5.000	Sig_Z = 3.000
Tau_XY= -4.000	Tau_XZ= 21.000	Tau_YZ= 5.000
Principal stress		
SIG_1= 28.977	SIG_2= 6.958	SIG_3= -15.935
Equivalent stress by theory	Max principal deformations	
SIG_1E= 31.670	SIG_2E= -26.716	
Octahedral stress - Normal	Sig_O = 6.667	
Octahedral stress - Shear	Tau_O = 18.336	
Lode-Nadai coefficient	Param_Lode = 0.0195	
Slope angle of crack	Alfa_crack_2x= 81.851	(Degrees)
Slope angle Sig_1	to X, Y, Z-axes	of principal coordinate system
AL1= 0.680 (Radians)	AL2= 1.569	AL3= 0.891
AL1= 38.965 (Degrees)	AL2= 89.919	AL3= 51.035
Matrix of direction cosines	Orientation SIG_1,2,3 in triaxial stress strain state	MC(3,3)
L1= 0.77753	m1= 0.18498	n1= 0.00000
L2= 0.00142	m2=-0.95627	n2= 0.00000
L3= 0.62884	m3=-0.22656	n3= 1.00000
Soil properties	Soil of average density	
Angle of internal friction	Fi =18.000	(deg.)
Unit cohesion	Co =1.800	(tf/m2)
Poisson's ratio	Nu_g =0.300	
Safety factor by load	kMad_P=1.150	
Safety factor by strength	k_R1C =0.900	
Conversion factor to biaxial strength	P2C =1.414	
Normative strength in compression	Rc_n=23.504	(tf/m2)
Normative strength in tension	Rr_n=7.835	(tf/m2)
Strength in pure shear	R_tau=11.080	(tf/m2)
Strength in biaxial compression	R2c=33.234	(tf/m2)
Strength in biaxial tension	R2r=5.540	(tf/m2)
Design compression strength	Rgr_c =21.153	(tf/m2)
Design tensile strength	Rgr_r =7.051	(tf/m2)
Modulus of total deformations	Egr =738.553	(tf/m2)
Shape of surface load	Rectangular	
Area of surface load	F =1.000	(m2)
Effective settlement	S=0.01000	(m)
Principal strain, elastic	Def_1 =0.03411698	Def_3 =0.03411698
Principal strain, inelastic	Def_1n=0.03923453	Def_3n=0.02157613

Figure 8.11

Slope stability

These modules enable you to check stability of slope by:

- 1st type: Plane slip surface of homogeneous soil (see Fig.8.12 a);
- 2nd type: Cylindrical slip surface of homogeneous soil (see Fig.8.12 b).

plane slip surface

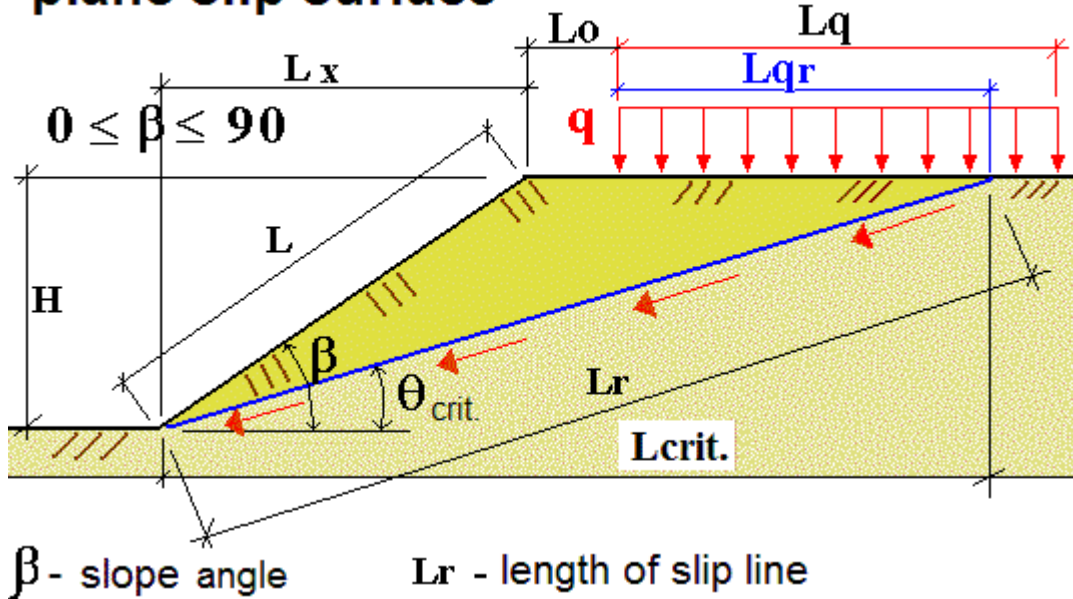


Figure 8.12 a.

cylindrical slip surface

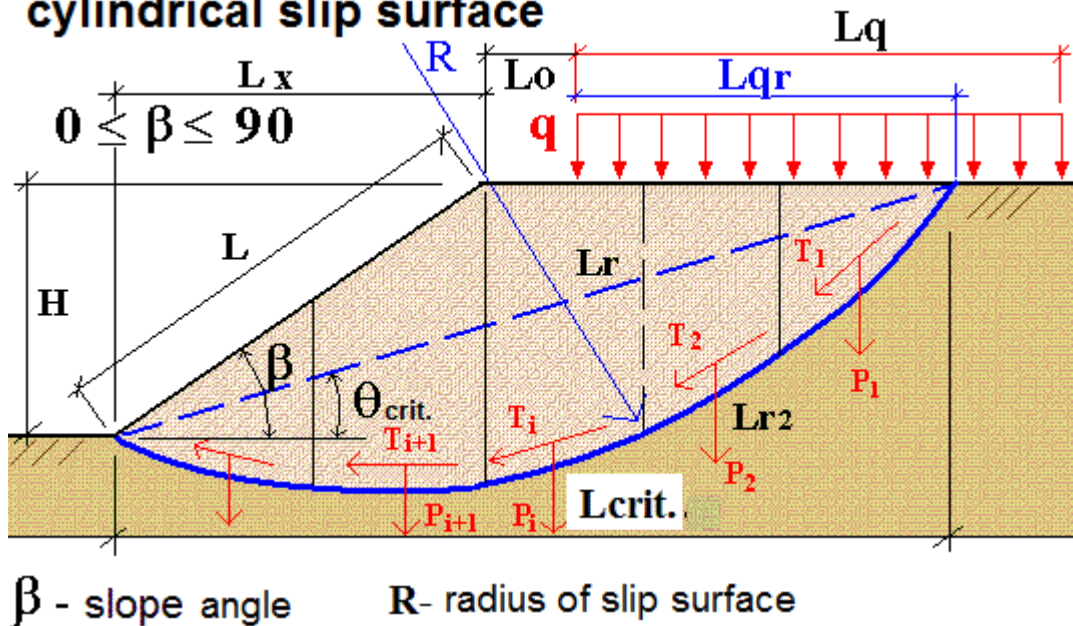


Figure 8.12 b.

For types 1 and 2, simplified integration by the 1st point is realized. Stability factor of slope for the 1st type (**Kstab**) is computed taking into account that the length of slip surface (**Lr2**) is increased relative to the plane slip surface (**Lr**).

Slope stability

Soil properties

Unit weight (tf/m³)

Angle of internal friction - Fio (deg)

Unit cohesion - Co (tf/m²)

Ultimate compressive stress - Rc (tf/m²)

Factor of safety

Number of integration points

☒ Soil by water saturated

☒ Type-1 Plane slip surface

☐ Type-2 Cylindrical slip surface

☐ Type-3 Cylindrical slip surface with soil layer of great stiffness

Geometry and loads on slope

Height - H (m)

Slope angle - β (deg.)

Load per r.m. (tf/m, m)

q Lq Lo Lqr

El. of soil layer great stiffn. Hy

Radius R, R' (m)

Ultimate design parameters of slope

Critical height - Hcrit. (m)

Critical angle of slope - θ_{crit}

Total shear force - Tsum (tf)

Total weight of soil - Pt (tf)

Ultm. weight of soil - Nstab. (tf)

Reverse factor

Mean stress

σ_o

τ_o

L

Lr

Lr2

Lcrit.

Calculate

Report

Help

Exit

plane slip surface

$0 \leq \beta \leq 90$

H

L

β

θ_{crit}

Lr

Lcrit.

L_o

L_q

L_{qr}

q

β - slope angle

L_r - length of slip line

Figure 8.13

Input data

In the **Slope stability** dialog box, define parameters of slope: height, slope angle and load per running metre.

In the **Soil properties** area, define angle of internal friction, unit cohesion, unit weight, ultimate compressive stress, safety factor, number of integration points.

With option button, select the type of slip surface.

Click **Calculate**.

Output data

When calculation is complete, you will obtain the following values:

- critical height of slope – **Hcrit**;
- critical angle of slip surface – **θ_{crit}** ;
- total weight of soil above slip surface – **Psum**;
- total shear force from weight of soil along slip surface – **Tsum**;
- ultimate weight of soil – **Nstab**;
- length of slip surface (plane) – **Lr** by Type 1;
- length of cylindrical slip surface – **Lr2** by Type 2;
- critical distance from the slope base up to the upper safe (relatively safe) point – **Lcrit**.
- stability factor for slope – **Kstab**;
- mean normal (**Sig**) and shear (**Tau**) stresses at slip area.

Date: 4.11.2016	Module << Stability of slope from homogeneous soil >>	Ver.:4.08.09
INPUT DATA		
Slope height	H	3.000 (m)
Slope angle	Beta	60.000 (deg.)
Radius of slip surface	R	3.000 (m)
Length of plane slip surface	Lr1	4.767 (m)
Length of cylindrical slip surface	Lr2	4.992 (m)
Design loads on slope		
Distributed load	Q	0.000 (tF/m)
Distance to distributed load	L0	0.000 (m)
Length of distributed load	Lq	0.000 (m)
Effective length of distributed load	Lqr	1.973 (m)
Soil properties		
Angle of internal friction	Fio	18.000 (deg.)
Unit cohesion	Co	2.000 (tF/m2)
Unit weight of soil	Gama	1.800 (tF/m3)
Ultimate compressive stress	Rc	20.000 (tF/m2)
Safety factor	Kn	1.150
Water saturated soil	Yes	
OUTPUT DATA		
Calculation by plane slip surface		
Total weight of soil above slip surface	Psum.	3.326 (tF)
Max shear force along slide surface	Tsum.	3.352 (tF)
Ultimate weight of soil	Nstab.	11.153 (tF)
Length of slope	L	3.464 (m)
Length of plane slip surface	Lr	4.767 (m)
Length from foot up to top of slope	Lx	4.992 (m)
Critical length from foot of slope	Lcr.	3.705 (m)
Critical height of slope	Hcr.	6.282 (m)
Critical angle of slip surface	Cor.	39.000 (deg)
Stability factor	Kstab	2.094

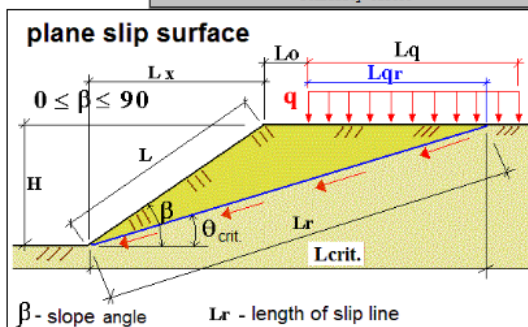


Figure 8.14

The following limit equilibrium equations are realized for soil: Coulomb-Mohr criterion and Mises-Schleicher-Botkin criterion.

To present the output data as a report file in HTML-format, click **Report**.

Stability of multi-layer slope

These modules enable you to check stability of slope by cylindrical slip surface with multi-layer slope. Calculation is made by Swedish method (method by Swedish Society for Geomechanics). This method is experimental. Up to 10 base layers are allowed.

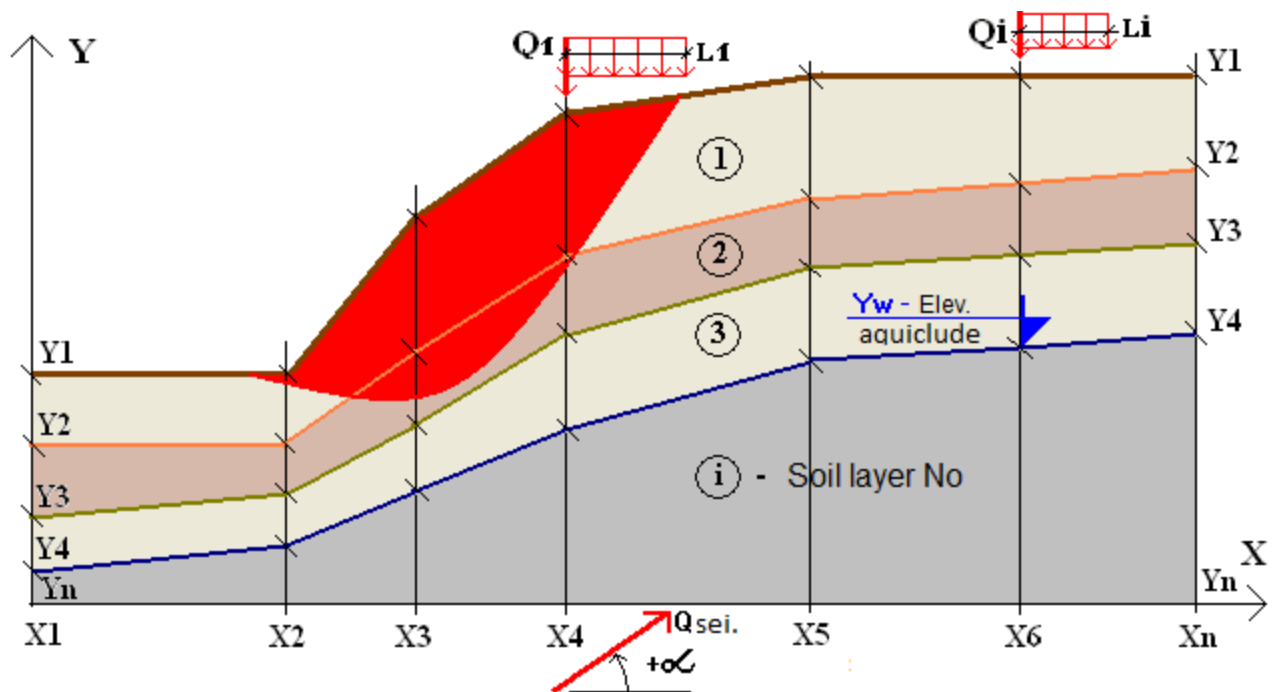


Figure 8.15

Coordinates of landslide X_i and Y_i as well as ordinates of the diagram of landslide pressure P_i are determined after calculation.

Safety factor – 1.150

Reserve factor for static load – 0.914

Reserve factor for dynamic load – 0.000

Total active normal force (tf) = -49.287

Active component of shear forces (tf) – 5.099

Reactive component from cohesion (tf) – 0.000

Radius of cylindrical sliding surface (m) – 60.675

It is possible to evaluate graphically geometry of multi-layer slope and the slip surface of multi-layer slope.

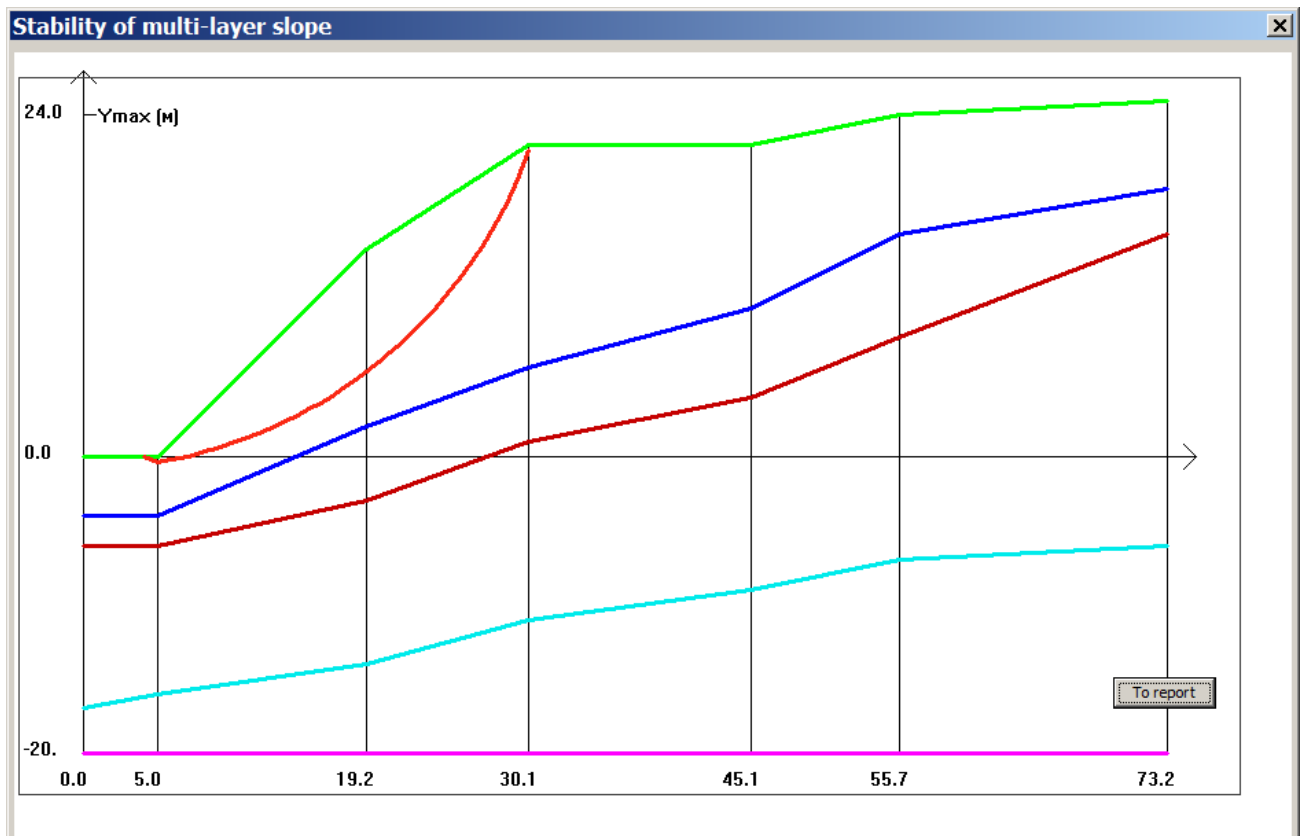


Figure 8.16

To present the output data as a report file in HTML-format, click **Report**.

Basic assumptions for calculation

1 r.m. of the slope width is taken into consideration. The weight of the whole soil with account of additional active load above the damage surface P_{sum} is determined:

$$P_{sum} = \frac{0.5 \cdot H^2 \cdot \sin(\beta - \theta)}{(\sin \beta \cdot \sin \theta)} + q \cdot Lqr$$

$$\theta_{crit} = \frac{(\beta + f)}{2}$$

Critical angle of slip surface –

Ultimate weight of soil according to [3]:

$$N_{stab} = \frac{(g \cdot H_{crit})}{C_o \cdot K_n}$$

where g – design value for unit weight of soil (tf/m³);

K_n – safety factor (by default, $K_n = 1.15$).

Stability factor K_{stab} according to [3]:

$$K_{stab} = K_{stab1} = \frac{(P_{sum} \cdot \cos \theta \cdot \operatorname{tg} f + C_o \cdot Lr)}{(P_{sum} \cdot \sin \theta)}$$

To find out arbitrary slip surface for arbitrary distributed load at the whole part of multi-layer slope, the so-called Swedish method (method by Swedish Society for Geomechanics) is applied in the program in the way presented in Fig. 8.17.

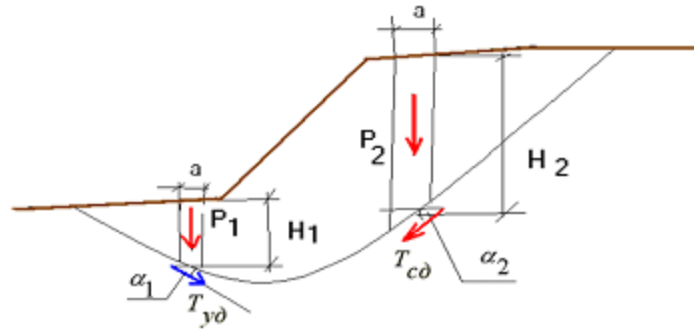


Figure 8.17

Shear force is computed by formula:

$$T_{shear} = P_2 \cdot \sin(\alpha_2) = a \cdot H_2 \cdot 1m \cdot \gamma_{shear} \cdot \sin(\alpha_2) = a \cdot H_2 \cdot 1m \cdot \frac{\gamma_n}{1 - |\rho|} \cdot \sin(\alpha_2)$$

Restraining force is computed by formula:

$$T_{restr} = P_1 \cdot \sin(\alpha_1) = a \cdot H_1 \cdot 1m \cdot \gamma_{restr} \cdot \sin(\alpha_1) = a \cdot H_1 \cdot 1m \cdot \frac{\gamma_n}{1 + |\rho|} \cdot \sin(\alpha_1)$$

where

a – min area of integration (it is agreed that there are 30 fixed points of integration between adjacent boreholes);

γ_n – normative value for unit weight of soil;

1

$1 \pm |\rho|$ – safety factor for soil, different for restraining and shear forces.

Bearing capacity of piles by field test results

The module enables you to check bearing capacity of piles by field test results.

The module supports the following building codes:

- section 7 SP 24.13330.2011,
- section 7 SP 50-102-2003,
- section 5 SNIP 2.02.03-85*,
- sections 5, 6 DSTU B V.2.1-27:2010.

The dialog box contains 6 tabs:


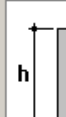

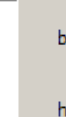
1. Driven piles at probe point;
2. Screw piles for static probing;
3. Drilled piles at probe point;
4. Driven piles at test point of model pile;
5. Driven piles at test point of probe pile;
6. Dynamic pile tests.

Bearing capacity of piles by field test results

Driven piles at test point of model pile Driven piles at test point of probe pile Dynamic pile tests

Driven piles at probe point Screw piles for static probing Drilled piles at probe point

Dimensions of pile section, m

    b h

Penetration of pile toe, m

Probe pile

Partial safety factor for piles in soil

Number of probe points

Parameters of probe points

No. of current probe point

Mean value of soil resistance under probe pile shoe (q_s), kPa

Properties of soil layer

	Layer thickness, m	Soil type	Mean resistance of soil along side surface, kPa
1	3.	clay	321.
2	6.	sand	215.
3			
4			
5			

Bearing capacity of piles, kPa

Figure 8.18

Combined piled-raft foundation

The module enables you to calculate settlement for combined piled-raft (CPR) foundation according to MGSN 2.07-01 Appendix i.

The dialog box of the program is presented in the figure below.

Figure 8.20

Input data

In the appropriate box, define load on foundation and dimensions

Dimensions for raft are defined in metres. If raft is low, select appropriate check box.

The following data is defined for piles:

- number of piles;
- distance (spacing) between piles, m;
- diameter for circular pile or side for rectangular pile, m; (to define the shape for the pile, just click appropriate option button);
- length of pile, m;
- modulus of elasticity for pile, t/m²;

If the pile is incompressible, select appropriate check box.

To define parameters for soil layers, indicate the number of soil layers and click **Define**.

Then you will be able to define the number of current layer and its properties:

- thickness, m;
- modulus of elasticity, t/m²;
- Poisson's ratio.

To modify the colour for the current soil layer, click **Customize colour**.

When you define soil properties and click Apply, the program automatically displays the value for modulus of elasticity for soil under pile toe.

The problem may be saved to the *.psf file.

To start calculation, click **Calculate**.

Calculation

Intermediate data computed in calculation:

- Coefficient for pile settlement **Is**;
- Coefficient **Lambda**;
- Stiffness for single pile, t/m, **K1**;
- Coefficient **Rs**;
- Stiffness for pile group, t/m, **Kp**;
- Mean modulus of elasticity for soil, tf/m², **Es**;
- Mean value of Poisson's ratio for soil **Vs**;
- Ratio of slab length to slab width **Lp/B**;
- Coefficient for area **m0**;
- Stiffness for slab, t/m, **Kc**;
- Total stiffness of foundation, t/m, **Kf**;
- Mean modulus of elasticity for soil under pile toe, tf/m², **Esb**.

Output data

The following data is displayed in the dialog box:

- settlement **Sf**, m, determined by dividing the load by total stiffness of combined piled-raft (CPR) foundation, m;
- settlement **Sf1**, m, determined according to mean modulus of elasticity for soil under pile toe, m;
- load on slab, t, and its part from the total load in %;
- load on piles, t, and its part from the total load in %;

To present a report document in HTML format, click **Report**. The report file contains all intermediate and final results with necessary comments.

Disregard for soil resistance in earthquake analysis

Use this module to determine the effective depth up to which resistance of soil along the side surface of the pile is not considered in earthquake analysis. The program realizes clauses 12.4, 12.5 and clause B.4 Appendix B of SP 24.13330.2011 with modification No.1.

Input data

Disregard for soil resistance in earthquake analysis

Cross-section of pile, m

Diagram showing a rectangular pile cross-section with width b and height h .

b 0.4

h 0.6

Pile type

☒ single pile and with high grillage

☐ fixed with low grillage

Modulus of elasticity for pile material, tf/m²

3e+006

Soils, table B. 1

Soil properties

Layers 3

Thickness layer 1 3 m

Unit weight 1.87 tf/m³

Angle of internal friction 23 °

Unit cohesion 0.2 tf/m²

Factor K ☐ Table B. 1 1900 tf/m⁴

Partial safety factor 2

Seismicity, units

☐ 7 ☒ 8 ☐ 9

M 1.6 tf*m **Q** 25 tf

Output data

Hd 5.86769 m

Buttons: Help, Calculate, Report, Open, Save, Exit

In the dialog box define the following data:

- Dimensions of the cross-section b , h for rectangular pile or internal and external diameters D , d for circular pile.
- Partial safety factor γ_c .
- Seismicity (design value) $S = 7, 8, 9$ units of magnitude.
- Bending moment M (design value) at the soil surface in specific combination of loads, tf*m.
- Shear force Q (design value) at the soil surface in specific combination of loads, tf.
- Pile type: separate pile; with high grillage; fixed with low grillage.
- Modulus of elasticity for pile material, tf/m².

In the **Soil properties** area, define the following:

- number of soil layers;
- thickness of the i -th layer of soil h_i , m;
- unit weight (design value) of the i -th layer of soil γ_{i-i} with account of uplift pressure of water, tf/m³;
- angle of internal friction (design value) for the i -th layer of soil ϕ_{i-i} , degrees;
- unit cohesion (design value) for the i -th layer of soil c_{i-i} , tf/m²;
- factor of proportionality K_i for the i -th layer of soil, it depends on the soil surrounding the pile, tf/m⁴.

To define **Factor Ki**, open the **Soils, table B1** list box and select appropriate soil type. In the **Parameter** dialog box, define additional data – void ratio **e** or liquidity index **IL**. Then tabular value of factor **K** will be displayed in appropriate box and the **Table B1** check box becomes selected automatically.

To input arbitrary value of factor **Ki**, clear this check box and define the value in appropriate box that becomes available.

Calculation

Parameters of pile section.

- rectangular section:
area $F=b \cdot h$; equivalent diameter $D = \sqrt{(4 \cdot F / \pi)}$; moment of inertia $J = b \cdot h^3 / 12$;
- circular section:
diameter of circular pile $D = D$; area $F = \pi \cdot (D^2 - d^2) / 4$ m; moment of inertia $J = \pi \cdot (D^4 - d^4) / 64$;

Coefficients **a1**, **a2**, **a3**:

- for single pile and with high grillage **a1=1.5**; **a2=0.8**; **a3=0.6**;
- for fixed pile with low grillage **a1=1.2**; **a2=1.2**; **a3=0**.

Conventional width of pile **bp** is calculated through diameter of the pile:

If $D \geq 0.8$, then $bp = D + 1$; otherwise $bp = 1.5 \cdot D + 0.5$;

Mean factor of proportionality:

$$K_o = \frac{\sum_{i=1}^n K_i \cdot h_i}{\sum_{i=1}^n h_i}$$

Mean unit weight:

$$\gamma_{Io} = \frac{\sum_1^n \gamma_i * h_i}{\sum_1^n h_i}$$

Reduced value for angle in internal friction:

if $S = 7$, then $\varphi_i = \varphi_i - 2$;

if $S = 8$, then $\varphi_i = \varphi_i - 4$;

if $S = 7$, then $\varphi_i = \varphi_i - 7$;

Mean angle of internal friction:

$$\varphi_{Io} = \frac{\sum_1^n \varphi_i * h_i}{\sum_1^n h_i}$$

Mean cohesion:

$$c_{Io} = \frac{\sum_1^n c_i * h_i}{\sum_1^n h_i}$$

Coefficient of strain a_ε , 1/m :

$$a_\varepsilon = \sqrt[5]{\frac{K_o * b_p}{\gamma_c * EJ}}$$

Effective depth:

$$h_d = \frac{a_1 * (Q + a_\varepsilon * a_3 * M)}{b_p \left(\frac{a_2}{a_\varepsilon} * \gamma_{Io} * \operatorname{tg} \varphi_{Io} + c_{Io} \right)} \leq 3 / a_\varepsilon$$

Output data

In the **Output data** area, you will see computed value of depth **Hd**, m.

To obtain the report file in *.html format, click **Report**. The report file contains results for all calculations.

Disregard for soil resistance in earthquake analysis**Input data**

Design loads at soil surface in specific combination, seismicity 8 units of magnitude	
Bending moment, tf*m	Horizontal load, tf
M	Q
1.60	25.00

Parameters of pile		
single pile, high grillage (a1=1.5; a2=0.8; a3=0.6) partial safety factor 2		
Side of pile out-of-plane of load, m	Side of pile in plane of load, m	Modulus of elasticity, tf/m ²
b	h	E
0.400	0.600	3000000.000

Soil properties, design values					
Layer	Layer thickness, m	Unit weight of soil, tf/m ³	Angle of internal friction, °	Unit cohesion, tf/m ²	Factor of proportionality, tf/m ⁴
No.	L _i	γ _i	φ _i (φ _{ai})	C _i	K _i
1	3.00	1.87	23.00 (19.00)	0.20	1900.00
2	7.00	2.02	41.00 (37.00)	0.40	800.00
3	12.00	1.75	37.00 (33.00)	0.30	1140.00

Output data

EJ, tf*m ²	bp, m	γ _o , tf/m ³	φ _o , °	Co, tf/m ²	Ko, tf/m ⁴	α _e , 1/m	h _d , m	3/α _e , m
21600.003	1.329	1.852	32.364	0.318	1135.455	0.511	13.349	5.868

Effective depth of disregard for soil resistance along the side surface of the pile in earthquake analysis (H _d), m	5.87
---	------

Properties of rubber metal damper

1. [Classification of seismic blocks](#) (hereinafter referred to as SB)
2. [Structures of SB](#)
3. [Main parameters of SB](#)
4. [Stiffness analysis of SB \(Moduli of subgrade reaction\)](#)
5. [SB tests](#)
6. [Dynamic modulus of elasticity E_g and factor of energy dissipation Ψ](#)
7. [Ultimate state of SB](#)

Classification of seismic blocks

1. Classification of seismic blocks (hereinafter referred to as SB)

Rubber metal seismic blocks are classified by design concept and ultimate parameters:

- mainly, by vertical and horizontal stiffness;
- by allowed relative strain in compression and shear.

Properties of rubber metal damper

Properties of damper

Design load on damper - N (kN)

Design horizontal load - Q (kN)

Factor of energy dissipation - Psi

Relative strain of damper (%) in :

compression Ksi_Z shear Ksi_Tau

Ultimate compressive stress Rc (MPa)

Load factor

☒ Type-1 Solid cylindrical damper

☐ Type -2 Hollow cylindrical damper with lead mandrel

☐ Type -3 Hollow cylindrical damper with high damping mandrel

Geometry of damper (mm)

Outer diameter of rubber element - D (mm)

Inner diameter - d (mm)

Thickness of one layer of rubber H1

Number of rubber layers H (mm)

Unit weight of rubber, mandrel (kN/m3)

Design parameters of seismic block (SB)

Coef. β_x Stresses (MPa) σ_o Subgrade modulus (MN/m) Cx

Coef. β_z τ_o Cz

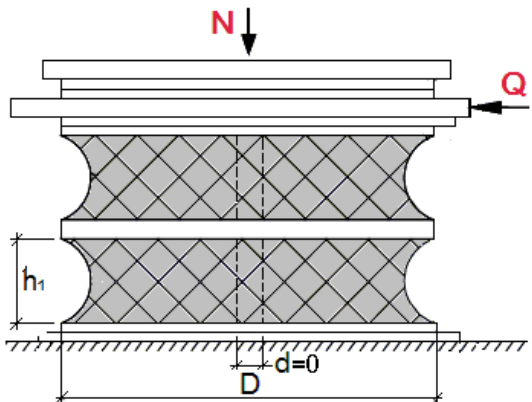
Ultimate load on damper Nstab. (kN) Eoo (MPa) Goo (MPa)

Calculate

Report

Help

Exit



Rubber-metal damper

Figure 1. Dialog box of the module for stiffness analysis of dampers

Structures of SB

2. Structures of SB

There are two main types of seismic blocks (SB):

The *first type* is sandwich construction that consists of alternating metal and rubber plates connected during vulcanization process. Such SB are mentioned for large vertical loads from 1000 kN up to 20000 kN and more. Their disadvantage: prohibitive tangential stresses appear during the large load; they cause tensile stresses in the rubber.

The *second type* (see Fig.2) is sandwich construction where rubber elements are placed freely in the metal moulds with clearance Δ obtained in calculation. In large vertical loads, the rubber fills the free volume and its free surface will be of a convex shape; in this case, tangential stresses increase slightly.



Figure 2.a. Rubber seismic block (Ukrainian patent [2]) before load application



Figure 2.b. General view (from bottom to top) of the support slab of the press, the lower steel plate with the ring, the lower rubber element (50 mm height) with an opening and the lead mandrel (diameter 70 mm) after tests of rubber SB on the press by cyclic compressive loads from 3000 kN to 9000 kN.

2.1. Rubber metal SB should have connecting plates with a thickness at least 20-25mm in order to fix the block to the lower and upper part of the building.

2.2. Rubber metal SB may be solid (see Fig.1.a) and with an opening (see Fig.1b) in which either a lead mandrel or a highly damping rubber shell filled with copper balls or other material is installed.

Main parameters of SB

3.1. Design documentation should contain the following parameters of SB:

- label and type of the rubber metal block;
- diameter by rubber element;
- total height of the rubber elements;
- static stiffness in compression - Cz and in shear- Cx;
- factor of energy dissipation Ψ .

As an example, in table 1 you will find main parameters of three types of solid (without mandrel) SB.

Table 1.

Label of SB (number, height of rubber elements, mm)	Diameter of rubber elements SB, mm	Total height of rubber layers, mm	Vertical stiffness in compression, MN/m	Horizontal stiffness * in shear, MN/m	Ψ
SB 2×120	400	240	5.1	1.08	0.7
SB 2×70	400	140	15.8	1.24	0.7
SB 2×50	500	100	100.0	0.38	0.8

* for vertical load 300 kN

Stiffness analysis of SB (moduli of subgrade reaction)

4.1. Analysis of solid and hollow cylindrical SB should be carried out in compression and in shear.

Vertical and horizontal moduli of subgrade reaction Cz, Cx are determined. They respond to the meaning of stiffness per 1r.m. of 1-node FE of elastic spring.

4.2. Analysis of subgrade moduli for the solid cylindrical SB is carried out by the following formulas ($C_z = C_n$, $C_x = C_T$, U_z):

– in compression

$$C_n = \beta_n \frac{\pi R^2 E_{\infty}}{h}; \quad (1)$$

$$\beta_n = 1 + 0,83 \left(\frac{R}{h} \right)^2; \quad (2)$$

– in shear

$$C_{\tau} = \beta_{\tau} \frac{\pi R^2 G_{\infty}}{h}; \beta_{\tau} \approx 1,0$$

4.3. Analysis of subgrade moduli for the hollow cylindrical SB is carried out by the following formulas

– in compression

$$C_n = \beta_n \frac{G_{\infty} \pi (R_1^2 - R_2^2)}{h}; \quad (3)$$

– in shear

$$C_{\tau} = \beta_{\tau} G_{\infty} (1 - \alpha_1^2) \rho R_1 \quad (4)$$

$$\beta_{\tau} = [1 + (0,336 + 1,15 \alpha_1^{1,72}) z_0^{1,16}]^{-1} \quad (5)$$

$$z_0 = \frac{h}{R_1}; \alpha_1 = \frac{R_2}{R_1}; \quad (6)$$

Notation:

C_n, C_{τ} – stiffness of SB in vertical load and shear;

β_n, β_{τ} – coefficients of stiffening at butt ends; coefficients are listed in the table;

R – radius of solid SB;

R_1, R_2 – inner and outer radius of hollow SB respectively;

h – height of the rubber element;

E_{∞}, G_{∞} – static (quasi-equilibrium) modulus of elasticity in compression and static (quasi-equilibrium) shear modulus respectively.

SB tests

5.1. General requirements to physical and mechanical tests.

The following building codes describe the general requirements: GOST 269-66; GOST 9982-76; GOST 11053-75; GOST 23326-78.

5.2. Static modulus of elasticity E_{∞} for SB is determined in 100% design load by formula (ISO - 2008):

$$E_{\infty} = \frac{\beta P_{\infty} h}{F \Delta}, \quad G_{\infty} = \frac{P_{\infty} h}{2 F \Delta} \quad (7)$$

where P_{∞} – load value;

h – height of the rubber element (mm);

F – compression area;

Δ – strain of the rubber element (mm);

β – coefficient of stiffening at butt ends;

Static (quasi-equilibrium) shear modulus G_∞ is determined in a similar formula (where $\beta = 1$):

Dynamic modulus of elasticity and factor of energy dissipation

6. Dynamic modulus of elasticity E_g and factor of energy dissipation Ψ are determined with the spin-pit test in harmonic vibrations with amplitude not less than 25% from design load and frequency 0.5 – 5.0 Hz depending on the spin-pit shape; factor of energy dissipation is determined by dynamic hysteresis loop.

E_g and Ψ may be determined in cyclic load with frequency 0.1 Hz. In this case, modulus of elasticity E_g or shear modulus G_g is determined after the third cycle of load. Factor of energy dissipation Ψ may be determined for natural vibrations. Logarithmic decrement of damping δ ($\Psi=2\delta$) is also computed.

Ultimate state of SB

7. Ultimate state of SB

7.1. In analysis of ultimate (allowed) parameters of SB, the *relative strain in rubber element* should be used in vertical load ($\xi_b = Psi_Z$) and horizontal displacement ($\gamma_r = Psi_X$).

7.2. Engineering practice enables us to make the following conclusion: long-term usage of rubber and rubber metal SB, as well as elastic links of vibrating machines (with frequency of dynamic load $\omega < 15$ Hz) is possible if the relative strain:

in compression $\xi_b \leq 20\%$; in shear $\gamma_r \leq 35 - 40\%$.

In this case, during more than 55 years of maintenance, modulus of elasticity is increased not greater than 50-60% (stiffness in compression is also increased).

7.3. For seismic protection of buildings, the following ultimate values should be accepted for SB:

in compression $\xi_b \leq 10 - 15\%$; in shear $\gamma_r \leq 50 - 60\%$.

7.4. Stiffness in torsion for the solid SB relative to its vertical axis is determined as:

$$U_z = G_\infty \cdot J_p ; \quad J_p = 0.25 \cdot \pi \cdot D^4 ; \quad **$$

where J_p – polar moment of inertia of the circular section.

Stiffness in torsion for the hollow SB is determined as the sum of stiffnesses (mandrel U_{z1} and circular section): $U_{z1} + U_{z2}$

$$U_{z2} = G_\infty \cdot J_{po} ; \quad J_{po} = \pi \cdot \frac{D^4}{32} \cdot \left[1 - \left(\frac{d}{D} \right)^4 \right] \quad **$$

J_{po} – polar moment of inertia of the circular section.

** These values of the stiffness in torsion are approximate and require experimental verification.

The dialog box of the module is presented in Fig.1.

Output data is saved to the *Damper.html* file.

Soil subsidence

Soil subsidence

The module is meant to calculate subsidence of soil.

The following tabs are available in the dialog box:

Design concept tab - to define input data about foundation.

Geology tab - to define properties for soil layers necessary for calculation.

Subsidence tab - to define input data about subsiding properties of soil.

Results tab - to display the output data of calculation. This tab will be available when the calculation is complete.

To save and download calculation data, use the **Save** and **Open** buttons respectively.

To start calculation, click **Calculate**.

To generate the report file, click **Report**.

Special aspects of calculation procedure

Calculation of soil subsidence will be performed up to the soil layers defined as '*subsiding*'. In this case, table of soil tests in subsidence should contain data about relative subsidence of soil at certain depth. If this data is not available, calculation of soil subsidence will be limited to max depth defined in the table. If total pressure in soil, exceeds max test pressure defined in the table, then necessary values of relative subsidence will be obtained by extrapolation. Values of relative subsidence for intermediate values of pressure and depth will be obtained by linear interpolation.

For soil layers defined as *Subsiding* or *Water-saturated*, unit weight is considered as for complete water saturation. It is calculated automatically based on unit weight of soil in natural environment, void ratio and natural moisture of soil.

Subsidence of soil is computed from external load and from dead weight of soil. In calculation of soil subsidence, the program does not consider additional settlements of soil below the subsidence stratum arising when: a) stress in soil is increased; b) modulus of elasticity of soil is reduced when the moisture of soil is increased. Additional loads from friction along the side surface should be considered in total vertical load on foundation.

Type of soil properties is determined by the subsidence from dead weight of soil without account of external load.

Input data

Design concept

Calculation of soil subsidence

Design concept | Geology | Subsidence | Results

Parameters of foundation

Shape of foundation

- ☒ Rectangular
- ☐ Circular
- ☐ Strip

Width of foundation (b) m

l/b ratio of foundation ($\eta=l/b$)

Depth of foundation (d) m

Unit weight of soil above base of foundation (g_0) t/m³

Vertical load (P) t

Building code

- ☒ SP 22.13330.2016

Open Save Calculate Report Help

On the **Design concept** tab define input data about foundation:

- shape of foundation (rectangular, circular, strip);
- width of foundation b ;
- l/b ratio of foundation η ;
- depth of foundation d ;
- unit weight of soil above base of foundation g_0 ;
- vertical load P .

On this tab it is necessary to define the building code.

Geology

Calculation of soil subsidence

Design concept | **Geology** | Subsidence | Results

Number of soil layers (n): 3

Properties of soil layer:

- Active layer No. (i): 1
- Soil layer: [Red box]
- Thickness of layer (h_i): 1.5 m
- Unit weight of soil in natural environment (g_i): 1.8 t/m³
- ☐ Subsiding
- ☒ Water-saturated
- Void ratio (e_i): 0.3
- Natural moisture (w_i): 0.6

Diagram labels: 1 (1.5m), 2 (5.7m), 3 (2.8m), 10.0m

Buttons: Open, Save, Calculate, Report, Help

On the **Geology** tab, define input data about geological elements of soil:

- number of soil layers n ;
- thickness of soil layer h_i ;
- unit weight of soil layer in natural environment g_i ;
- subsidence of soil layer;
- water-saturation of soil layer;
- void ratio of soil layer e_i ;
- natural moisture of soil layer w_i .

Engineering geological elements are assigned from the foundation base.

Subsidence

Calculation of soil subsidence

Design concept | Geology | **Subsidence** | Results

☐ Soaking of small area from the top

Width of soaking: m

Soil tests for subsidence

	Samples from depth, m	Relative subsidence of soil ε at pressures P_i , t/m ²					
		5,000	10,000	15,000	20,000	25,000	30,000
1	1,000	0,014	0,015	0,019	0,023	0,022	0,0
2	3,000	0,011	0,015	0,014	0,016	0,017	0,0
3	5,000	0,025	0,031	0,036	0,034	0,035	0,0
4	7,000	0,019	0,024	0,027	0,029	0,030	0,0
5	9,000	0,008	0,010	0,011	0,014	0,013	0,0
6	11,000	0,005	0,007	0,010	0,013	0,012	0,0
7	13,000	0,007	0,008	0,008	0,012	0,014	0,0
8							
9							
10							
11							
12							

Note: The depth and pressure values should be arranged in ascending order, starting from the first non-zero value. Breaks or zero values are not allowed for the table. Depth are measured from the foundation base.

Open Save Calculate Report Help

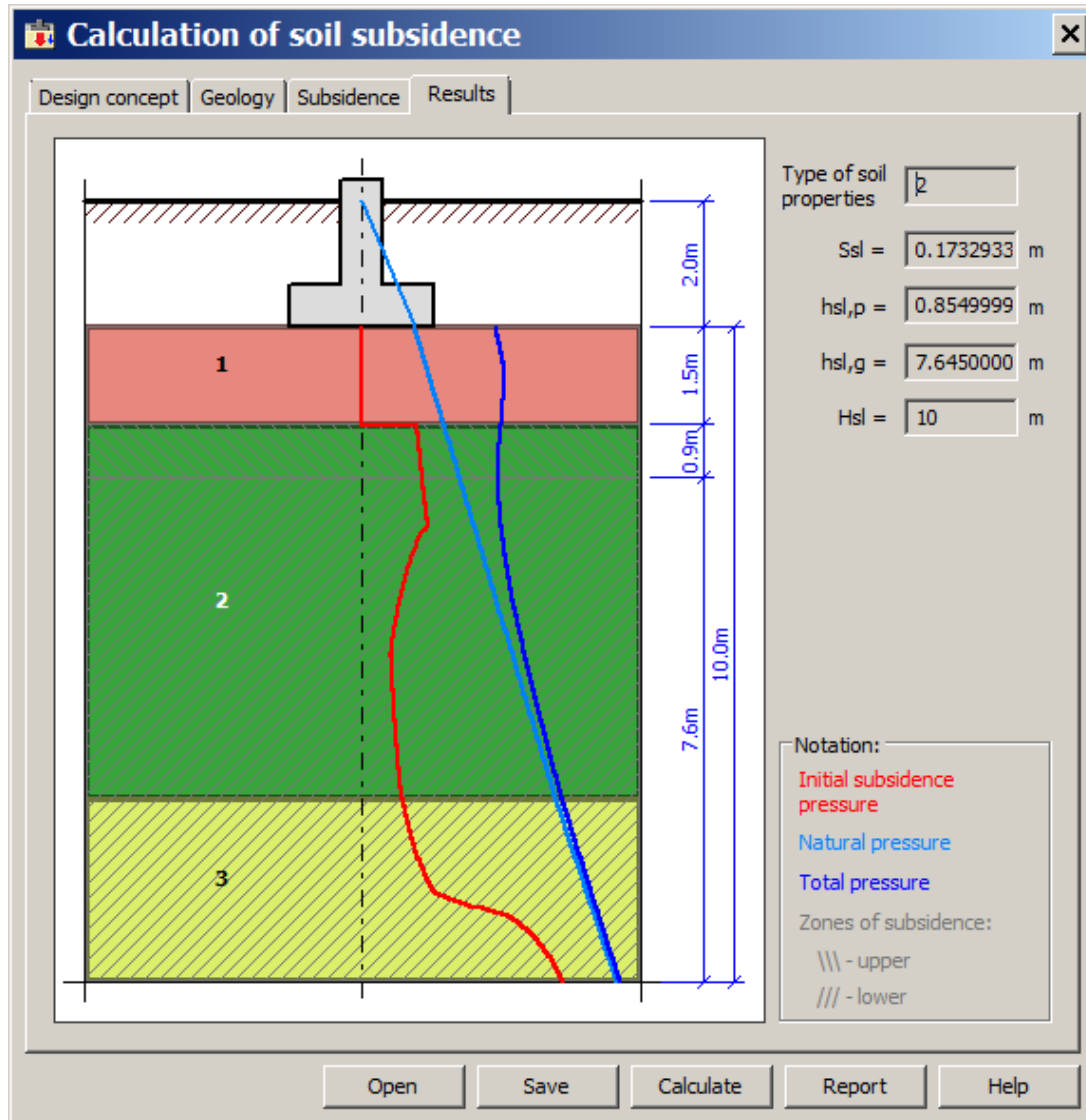
On the **Subsidence** tab, define input data about subsiding properties of soil.

If a small area of soil is soaked from the top, then width of soaking area B_w is defined. Define data for soil tests in subsidence in tabular format:

- samples from depth h ;
- pressures at which tests of soil samples were carried out, P_i ;
- relative subsidence of soil samples ε , taken from defined depth at specified pressures.

The depth and pressure values should be arranged in ascending order, starting from the first non-zero value. Otherwise, data will be organized automatically. Matrix of values should be of rectangular shape, breaks or zero values are not allowed. Zero elements in row of pressure and in column of depth and corresponding columns and rows will be deleted automatically. Depth for making samples should be measured from the foundation base.

Results (Output data)



On the **Results** tab, you will see the output data of calculation:

- type of soil properties;
- soil subsidence S_{sl} ;
- total height of upper subsidence zone $h_{sl,p}$;
- total height of lower subsidence zone $h_{sl,g}$;
- total height of subsidence stratum H_{sl} .

Output data is illustrated on schematic presentation. There are graphs of initial subsiding pressure, natural pressure and total pressure of soil. The upper and lower subsidence zones are indicated with hatching. To find out detailed information about calculation, look at the **Tracing routine** section in the **Report**.

Settlement of a single pile by DBN

Use this module to determine the settlement of a single pile according to DBN B.2.1-10:2009 Modification No.1.

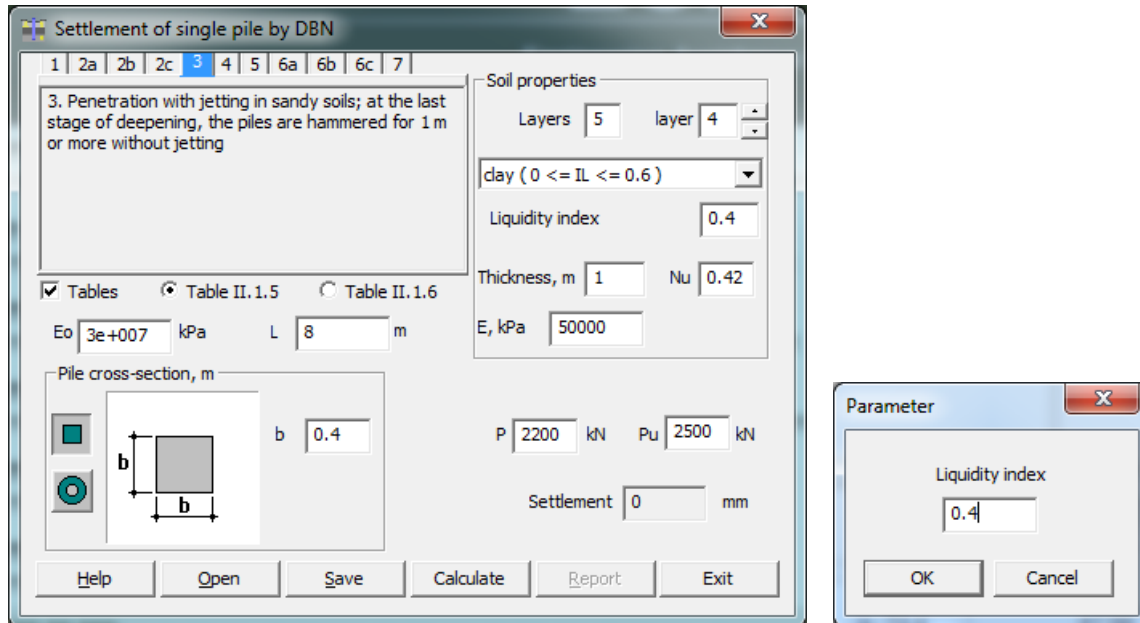


Figure 1

Input data

When you select the **Tables** check box (see Fig.1), the upper left area of the dialog box becomes available. There you will see tabs with numbers of paragraphs in tables from DBN (paragraph 1.5 or paragraph 1.6) and you could select the pile type and method for its penetration. Text of selected paragraph from the table is displayed as a comment (see Fig.1). The tables p.1.5 and p.1.6 are presented below in this text.

In the **Soil properties** area, define the number of soil layers and the No. of layer for which you will select the name from the drop-down list, thickness, Poisson's ratio and modulus of elasticity.

Factors **kf1** or **kf2** are determined automatically from these tables according to selected paragraph for the specified pile type and name of soil layer. Factors **kp1** and **kp2** below the pile toe will be also determined from tables DBN - p.1.7 and p.1.8.

For the clay soil it is necessary to define liquidity index I_L .

Table p.1.5. Partial safety factor for soil along side surface of pile **kf1**

Method for penetration of driven pile and shell-type pile without soil excavation	Partial safety factor for soil along side surface of pile kf1
1. Penetration of solid and hollow piles with a closed pile toe by mechanical (suspended) method with steam-wind and diesel hammers.	1.4
2. Penetration by driving and forcing into previously drilled leader boreholes; the pile toe is buried at least 1 m below the bottom of the borehole when its diameter a) equal to the side of square pile b) 0.05 m less than the side of square pile c) 0.15 m less than the side of square pile or diameter of pile with circular section (for power transmission lines).	0.7 0.9 1.4
3. Penetration with jetting in sandy soils; at the last stage of deepening, the piles are hammered for 1 m or more without jetting.	1.3
4. Vibro-penetration of shell-type piles, vibro-penetration and vibro-driving of pile into the soil: a) sand with average density: coarse, medium, fine sand, sandy silt; b) clay soil with liquidity index $I_L = 0.5$: sand loam, clay loam, clay; B) clay soil with liquidity index $I_L \leq 0$.	1.4 1.4 1.4 1.3 1.3 1.5 1.4
5. Penetration (by hammers of any type) of hollow RC piles with an open pile toe: a) when a pile cavity diameter is equal to 0.4m or less; b) the same, from 0.4m up to 0.8m.	1.4 1.4
6. Penetration (by any method) of hollow circular piles with a closed pile toe to a depth of 10 m or more, then making a springing at the pile toe into medium-density sandy soils and in clay soils with liquidity index $I_L \leq 0.5$ when diameter of springing is equal to: a) 1.0 m regardless of the soil type; b) 1.5 m in sand and sand loam; c) 1.5 m in clay loam and clay.	1.4 1.4 1.4
7. Penetration of pile by forcing it into: a) sand with average density, coarse, medium and fine sand; b) sandy silt; c) clay soil with liquidity index $I_L \leq 0.5$; d) the same, $I_L \geq 0.5$	1.4 1.1 1.4 1.4

Table p.1.6. Partial safety factor for soil along side surface of pile **kf2**

Type of pile and method of pile installation	Partial safety factor for soil kf2			
	sand	sand loam	clay loam	clay
1. Bored pile when staffing a standard pipe with drive point	1.1	1.1	1.1	1.2
2. Bored pile, vibration stamped	1.3	1.3	1.3	1.5
3. Drilled pile, especially with concreted widening: a) if there is no water in the borehole (dry method), as well as when using casing standard pipes or drilled injection pile of large diameter in stable soil; b) under water or under mud, and drilled injection pile of large diameter in unstable soil; c) hard concrete mix with deep vibration (dry method).	1	1	1	1
	0.9	0.9	0.9	1
	1.1	1.1	1.1	1.1
4. Bored cast in situ, hollow circular pile if there is no water in the borehole with the help of mandrel.	1.1	1.1	1.1	1.2
5. Shell-type pile driven with vibration and soil excavation	1.4	1.3	1	1
6. End-bearing pile	1	1	1	1
7. Drilled injection pile made under protection of casing pipes or bentonite mortar with pressure testing of 200-400 kPa	1.3	1.1	1.1	1.3

When the **Tables** check box (see Fig.2) is selected, then the name for the soil layer is not assigned. In this case it is possible to define arbitrary properties for the soil layers including factors **kf** (**kf** = **kf1** or **kf** = **kf2**) and **kp** (**kp** = **kp1** or **kp** = **kp2**) in appropriate boxes.

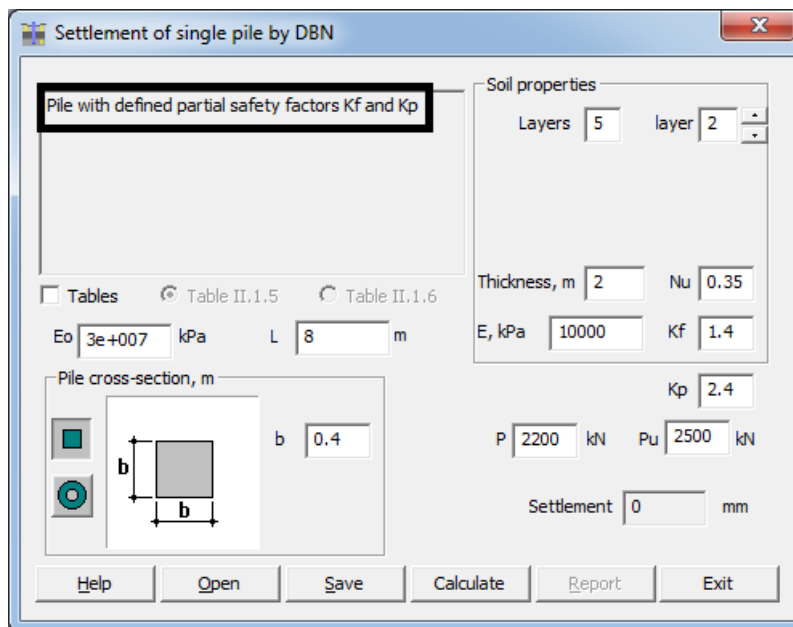


Figure 2

Define modulus of elasticity for the pile **Eo** (kPa) and the pile length **L** (m).

In the **Pile cross-section** area of the dialog box, select the type of pile section – square or ring (circle) – and define appropriate parameters.

In appropriate boxes, define the load on pile **P** (kN) and **Pu** – ultimate strength of pile from **Pe** (kN).

To start calculation, click **Calculate**.

Input data may be saved to the *.dbn file.

To download the input, click **Open**.

Calculation

The following parameters are calculated:

do – diameter of pile, m; for the square pile diameter is equal to the side of the square;

ro = do/2 – radius of pile, m.

Ef – mean modulus of elasticity for soil along the side surface of the pile, kPa;

V – mean Poisson's ratio for soil along the side surface of the pile;

Kf – mean partial safety factor along the side surface; the factor is calculated through factors **kf1** and **kf2**;

Ep – mean modulus of elasticity for soil below pile toe, kPa;

$$E_f = \frac{\sum_{i=1}^n E_i * h_i}{\sum_{i=1}^n h_i}; \quad v = \frac{\sum_{i=1}^n v_i * h_i}{\sum_{i=1}^n h_i}; \quad k_f = \frac{\sum_{i=1}^n k_{f1,2i} * h_i}{\sum_{i=1}^n h_i}; \quad E_p = \frac{\sum_{i=1}^m E_i * h_i}{\sum_{i=1}^m h_i};$$

where **n** – number of soil layers along the pile length;

m – number of soil layers within the limits from **do** above and **4*do** below the pile toe;

KE = Ef / Ep – ratio of mean modulus of elasticity along the side surface to modulus of elasticity below the pile toe; if **KE < 1**, then it is accepted that **KE = 1**;

C – coefficient of settlement according to the table p.1.1 depending on **ro/L** and **KE**;

B – coefficient that determines the part of load transmitted with the pile toe, table p .1.2;

E – reduced modulus of elasticity for soil, kPa;

$$E = (1 - B) * k_f * E_f + k_p * B * E_p;$$

ro / L – ratio of pile radius to pile length;

Pu – ultimate strength of pile - load in which bearing capacity of soil **Fd** is reduced, it is allowed to take **Pu = 1.25*Fd**;

Pe – load that sets the limit for linear part of settlement of the pile head; this settlement is caused by the settlement of pile shaft together with the settlement of soil around the pile shaft; it is accepted as **Pe = Pu / 2**;

Se – elastic part of pile settlement from load **Pe**, m

$$S_e = 2 * (1 + v) * \frac{P_e * C}{E * L} + \frac{P_e * L * (1 + B)}{2 * E_o * F};$$

S1 – settlement of single pile under load **Pe**, m.

$$S1 = \frac{Se^* P}{P_u - P};$$

Output data

The settlement of single pile **S1** is determined in calculation.

The value of the settlement will be displayed in the **Settlement** box in the dialog box (see Fig.3).

Figure 3

To present a report document in HTML format, click **Report** (see Fig.4).

The report file contains all intermediate values for parameters as well as settlement value and the input data.

Design loads					
Current load, kN			Ultimate strength of pile, kN		
P			Pu		
2200.00			2500.00		

Parameters of pile		
Pile side, m	Real penetration (depth) of the pile into soil, m	Modulus of elasticity for pile shaft, kPa
b	L	Eo
0.400	8.00	30000000.00

Soil properties (design values)					
Layer No.	Layer thickness, m L _i	Modulus of elasticity, kPa E _i	Poisson's ratio ν _i	Partial safety factor	
				along side surface of pile K _{fi}	below pile toe K _p
sand of medium density					
1	4.00	8000.00	0.30	1.30	
clay (IL < 0)					
2	2.00	10000.00	0.35	1.30	
sandy silt					
3	2.00	5000.00	0.42	1.30	
clay (0 ≤ IL ≤ 0.6); I _L = 0.40					
4	1.00	5000.00	0.42	1.30	2.16667
coarse sand					
5	8.00	9000.00	0.40	1.30	

Output data												
B	C	k _f	k _p	E _p , kPa	E _f , kPa	k _e	ν	r _o /L	E, kPa	P _e , kN	s _e , m	F, m2
0.072	0.645	1.3	2.17	6.2e+003	7.75e+003	0.8	0.343	0.025	1.03e+004	1.25e+003	0.0273	0.16

Settlement (S _l), mm	
201	

Figure 4

Loads and actions

Loads and actions

The chapter contains modules that enable you to compute loads according to SNIP 2.01.07– 85 and DBN V.1.2-2:2006:

[Load factors](#)

[Dead weight of multi-layer coating](#)

[Snow loads](#)

[Wind loads](#)

[Ice loads](#)

[Climatic thermal loads](#)

[Hazardous energy combinations of forces \(EnergyCF\)](#)

[Resonance check for wind turbulence.](#)



Figure 9.1

Load factors

The module contains reference tables for load factors:

- for weight of building structures and soils (table 1, SNIP 2.01.07-85* 'Loads and actions');
- for weight of equipment (table 2, SNIP 2.01.07-85* 'Loads and actions').

Load factors (SNIP 2.01.07-85*)

For weight of building structures and soils | For weight of equipment

Building structures and types of soil	Load factor
Structures:	
steel	1.05
concrete (with average density greater than 1600 kg/m ³), reinforced concrete, masonry and RC masonry, timber	1.1
concrete (with average density 1600 kg/m ³ and less), insulation, levelling and finishing layers (slabs, materials in rolls, filling-up, strainers, etc.) constructed as:	
prefabricated	1.2
cast-in-place	1.3
Soils:	
in natural bedding	1.1
man-made	1.15

Notes:

1. When you check the structure by stability of exterior equilibrium, it is necessary to define load factor (for weight of structure or its part) as equal to 0.9. The same calculation should be made when minimizing weight of structure and soils may impair service conditions for the structure.
2. When determining loads from soil it is necessary to consider loads (from stored materials, equipment and vehicles) transferred to soil.
3. For steel structures where forces from dead weight exceed 50 % from total forces, load factor should be taken as equal to 1.1.

Exit Help

Load factors (SNIP 2.01.07-85*)

For weight of building structures and soils For weight of equipment

Weight	Load factor
Fixed equipment	1.05
Isolation of fixed equipment	1.2
Fillers for equipment (including reservoirs and pipelines):	
liquid	1.0
suspended load, sludge, granular solid	1.1
truck and power truck (with cargo)	1.2

Notes:

1. Load from weight of equipment should contain dead weight of equipment or vehicle (including gear system, permanent devices, support devices, materials for surface levelling), weight of isolation, fillers for equipment possible during maintenance, etc.
2. Number of trucks considered simultaneously and their location on floor slab for analysis of different elements should be taken according to draft proposal for the structure based on technology solutions. It is allowed to consider dynamic influence of vertical loads from trucks by multiplying normative values of static loads by dynamic factor equal to 1.2.
3. If actual loads on floor slabs are replaced with equivalent uniformly distributed loads, the latter ones should be determined in analysis and assigned according to the type of structural element (slab, secondary beam, beam, column, foundation). Assigned values of equivalent loads should provide bearing capacity and stiffness of elements in structure that are required by specifications of actual load application to these elements. Total normative values of equivalent uniformly distributed loads for industrial premises and warehouses should be taken as equal to:
 - for slabs and secondary beams – not less than 3,0 kPa (300 kgf/m²).
 - for beams, columns and foundations – not less than 2,0 kPa (200 kgf/m²).
 Increase in loads from equipment and stored materials at a later time is allowed for feasibility study of the project.

Exit Help

Dead weight of multi-layer coating

The module is mentioned for computation of normative and design loads from dead weight of the coat consisting of several layers. Resistance to heat transfer in multi-layer coat may be computed, if required. Calculation is made according to SNIP 2.01.07-85 'Loads and Actions' and SNIP II-3-79* 'Building Heat Engineering'.

When you define input data, the coating of user-defined materials is generated.

Dead weight and resistance to heat transfer for multi-layer coating

Measurement units: kg/m^2

Structural elements: roof and floor slab

Material name	Material density, kg/m^3	Load factor
Perlite cement mortar	1000.0	1.3

Input data for thermal analysis:

Service conditions (suppl.1,2 SNIP): A

Inner surface: 1. Walls, ceilings, smooth

Outer surface: 2. Floor slabs above cold

Air space (suppl.4 SNIP): 0.14 $\text{m}^2\text{°C/W}$

☐ Consider ultimate resistance $\text{m}^2\text{°C/W}$

User-defined coating

Add item Delete item Save coating

N	Material name	Material density, kg/m^3	Thickness [m]	Load factor
3	Perlite cement	1000.0	0.10	1.0

Manufactured and user-defined coatings

N	Name of coating	Added on	Added by
1	rsts	13/09/2016	LIRA

Delete coating

Output data

Normative load: 154 kg/m^2

Design load: 200.2 kg/m^2

Resistance to heat transfer: 0.73785512 $\text{m}^2\text{°C/W}$

Calculate Report Exit Help

Figure 9.2

Input data

Select the **Measurement units** for the output data in the appropriate box.

In the **Structural elements** box, select tables of structural elements for materials: roofs and floor slabs, walls, thermal insulation or other.

Then, select with the pointer necessary material in the table.

To add selected material to user-defined coating, click **>> Add**.

You could select materials simply by changing the tables by turns. The next layer is added at the end of user-defined coating.

To add manufactured or previously defined coating into the current user-defined coating, select appropriate coating and add it with the **Add** button ">>". This button becomes available when you select name of coating in the table.

You could add several manufacture or previously defined coatings into the current user-defined coating. The next coating will be added at the end of user-defined coating.

To add material that is not available in any of structural element tables, it is necessary to add empty row to the user-defined coating. To do this, click the row above which you should add empty row. The **Add item** button becomes available. Click this button to add the empty row above the selected one.

To edit cells of the added row (just as any other cell), double-click appropriate cell. In this case, the background of the cell in the edit mode will be of system colour **Window text** (for standard Windows, it is white).

To delete item from the user-defined coating, click the row that should be deleted. Then **Delete item** button becomes available. Click this button to delete the row.

Define input data for thermal analysis.

To take account of (or to ignore) coefficients for heat transfer of inner and outer surfaces of enclosing structures, in the **Input data for thermal analysis** area, select (or remain clear) appropriate items from the lists.

These are values of heat transfer coefficients for inner and outer surfaces of enclosing structures. These values are taken from tables 4 and 6 SNIP II–3–79* respectively.

To consider the **air space** in the user-defined coating, define the value of resistance to heat transfer of the air space in the appropriate box.

To save the user-defined coating, click **Save coating**. In another dialog box that appear, define **Name of coating** and **Additional data about coating**. Name of coating - short name for the coating (up to 40 characters) that has certain meaning and allows you to identify the coating in future. Additional data about coating - it may be the surname of the customer who created the coating, company name, etc. (up to 50 characters).

When you click **Calculate**, if the coating is not saved, the program automatically suggests that you save it.

Output data

Output data contains normative load, design load and resistance to heat transfer.

To present a report document in HTML format, click **Report**.

Dead weight of multi-layer coating "rsts"

Material name	Normative load, [kg/m ²]	Load factor	Design load, [kg/m ²]
Cement and sand mortar 1800.000[kg/m ³]*0.010[m]	18.000	1.300	23.400
Cement and sand mortar 1800.000[kg/m ³]*0.020[m]	36.000	1.300	46.800
Perlite cement mortar 1000.000[kg/m ³]*0.100[m]	100.000	1.300	130.000
TOTAL	154.000	-	200.200

Resistance to heat transfer for multi-layer coating "rsts"

Service conditions (suppl.1,2 SNIP): A

Material name	Resistance to heat transfer for layer, [m ² *°C/W]
Cement and sand mortar 0.010[m]/0.760[W/m ² *°C]	0.013
Cement and sand mortar 0.020[m]/0.760[W/m ² *°C]	0.026
Perlite cement mortar 0.100[m]/0.260[W/m ² *°C]	0.385
Inner surface 8.700[W/m ² *°C]	0.115
Outer surface 17.000[W/m ² *°C]	0.059
Air space (suppl.4 SNIP)	0.140
TOTAL	0.738

Figure 9.3

Snow loads

This module is meant to compute snow loads on buildings and structures according to SNIP 2.01.07-85* (1987, 2003) and DBN V.1.2-2:2006. The program enables you to compute normative and design values of snow load on horizontal projection of roof according to schematic presentations mentioned in the table of mandatory Application 3 SNIP. For calculation by DBN V.1.2-2:2006 it is possible to compute design values of ultimate, service and quasi-permanent snow load.

The following types of load are realized: 1, 2, 2', 3, 4, 5, 6, 7, 10, 11, 12.

Figure 9.4

Input data

Select necessary building code in the appropriate list.

In the **Region of the site** area, select the **Snow region** in the list, the values for **S₀** and **V** will be displayed automatically according to selected building code.

To calculate the S_0 and V values manually, in the **Snow region** list, select **User** (which means User-defined).

Define **Type of structure** in the appropriate list.

According to the type of structure, define (or edit) parameters of the structure.

For certain structures, in the **Structure** box it is necessary to select zone where the load is applied and select **Additional data**.

Input load factor γ_f or leave the default value (for calculation by SNIP).

Define appropriate data in the edit boxes.

To start calculation, click **Calculate**.

Output data

Output data is presented graphically on the screen at the right part of the dialog box. When you move the pointer along schematic presentation (graph), you could see values of snow load along the width of structure.

Output data may be presented as report that contains model of the structure and table of snow loads along the width of structure.

To generate and preview report file in HTML format, click **Report**.

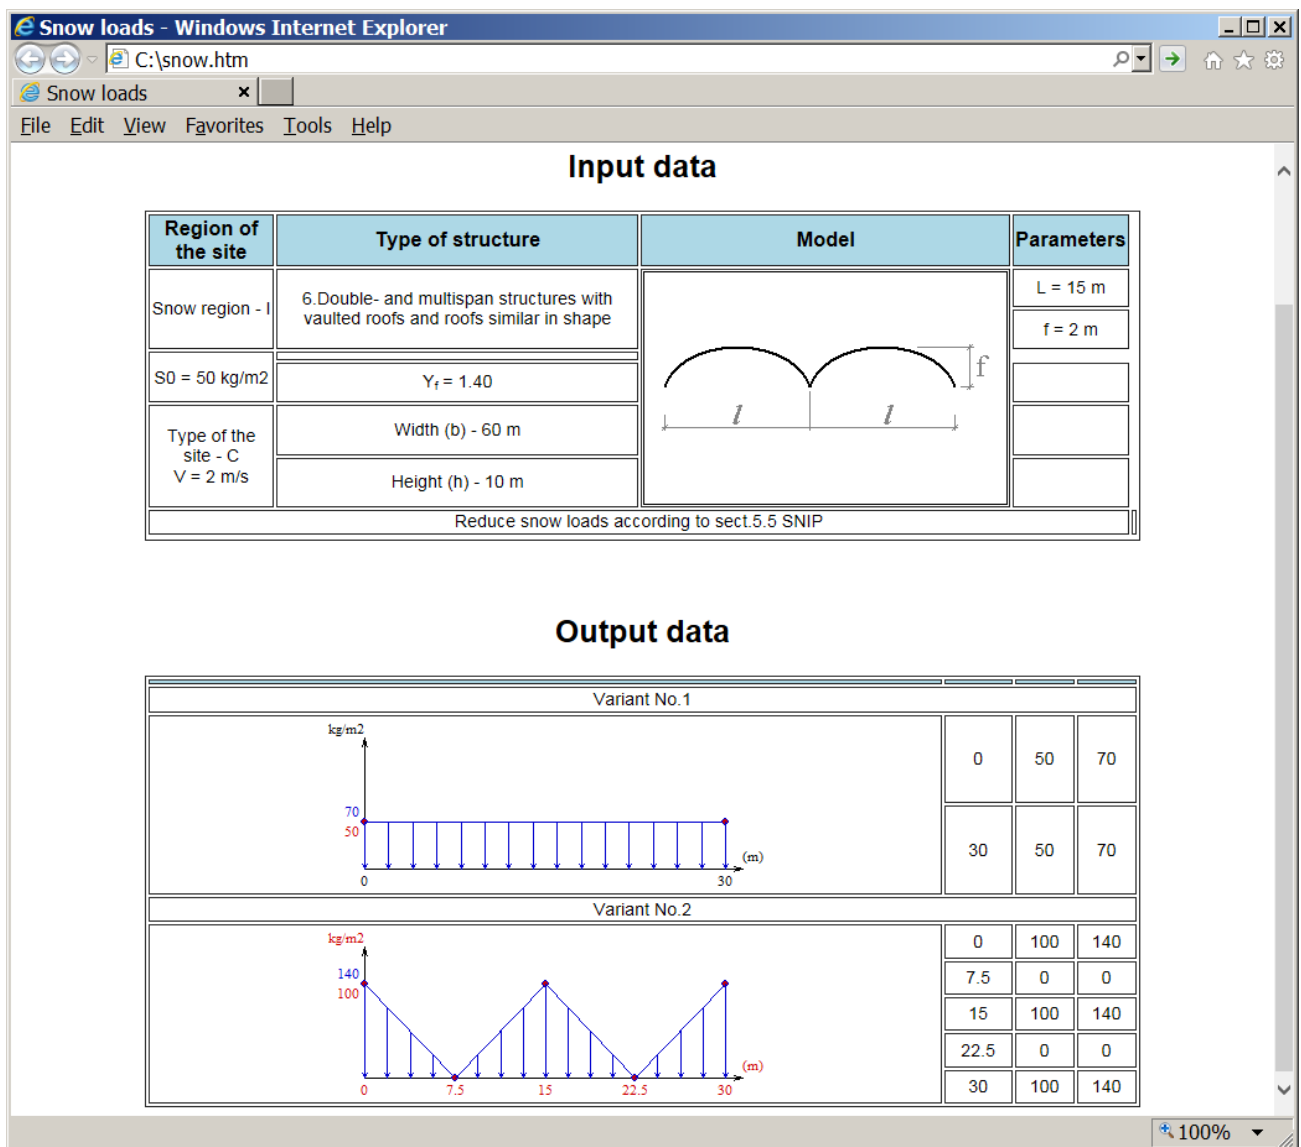


Figure 9.5

Wind loads

This module is meant to compute wind loads on buildings and structures according to SNIP 2.01.07-85* and DBN V.1.2-2:2006.

The program enables you to compute normative and design values of average component of wind load with account of aerodynamic coefficient by schematic presentations mentioned in corresponding Appendix to building code.

The following types of load are realized:

for SNIP – 1, 2, 3, 4, 9, 10, 11, 12–a, 12–b, 13–17.

for DBN – 1, 2, 3, 4, 9, 10, 11, 12–a, 12–b, 13, 14, 16-18.

Wind loads



Calculate Report Measurement units Help

Building code: DBN V.1.2-2:2006
 SNIP 2.01.07-85*
 DBN V.1.2-2:2006

Region of the site: Type of the site: I Wind region: I W_0 : 40 kg/m²
 I - open coastline of sea, lake, plains without obstacles, exposed to wind on the part of length not less than 3km

Type of structure: 14. Structures and their elements with circular cylindrical

Diagram showing a cylindrical structure with height H , diameter d , and wind direction angle α . The diagram also shows a cross-section of the structure with a circular hole of diameter d and a distance $\Delta = 0.005M$ from the wall.

Wind direction:  Wind direction: 

Parameters:
 H = 20.00 m d = 2.00 m
 b = 0.01 m α = 90.000 °



Results: Reynolds numbers: $Re_e = 22.31e5$, $Re_m = 51.97e5$.
 Graph showing wind load (kg/m²) vs height (m). The graph shows a curve starting at 0.00 kg/m² at 0.00 m and increasing to approximately 20.00 kg/m² at 20.00 m.

Structure: buildings of masonry and RC skeleton
 Surface: Concrete and RC
 Calculation step: 1 m T, year: 100 η : 0.02

Calculate Report Exit

Figure 9.6

Input data

- In the **Region of the site** area, select **Type of the site** and **Wind region** in the appropriate lists and define normative value of wind force W_0 .
- Define **Type of structure** in the appropriate list.
- According to the type of structure, define wind direction by clicking either  or .
- In the **Surface** list box, select the surface of wind load: left wall of the structure, right wall, etc.
- Define **Calculation step** and load factor γ_f .
- Define appropriate data in the edit boxes.
- To start calculation, click **Calculate**.

Output data

Output data is presented graphically on the screen at the right part of the dialog box. When you move the pointer along schematic presentation (graph), you could see values of wind load along the height of structure.

Output data may be presented as report that contains model of the structure and table of wind loads and their location relative to the ground surface.

To generate and preview report file in HTML format, click **Report**.

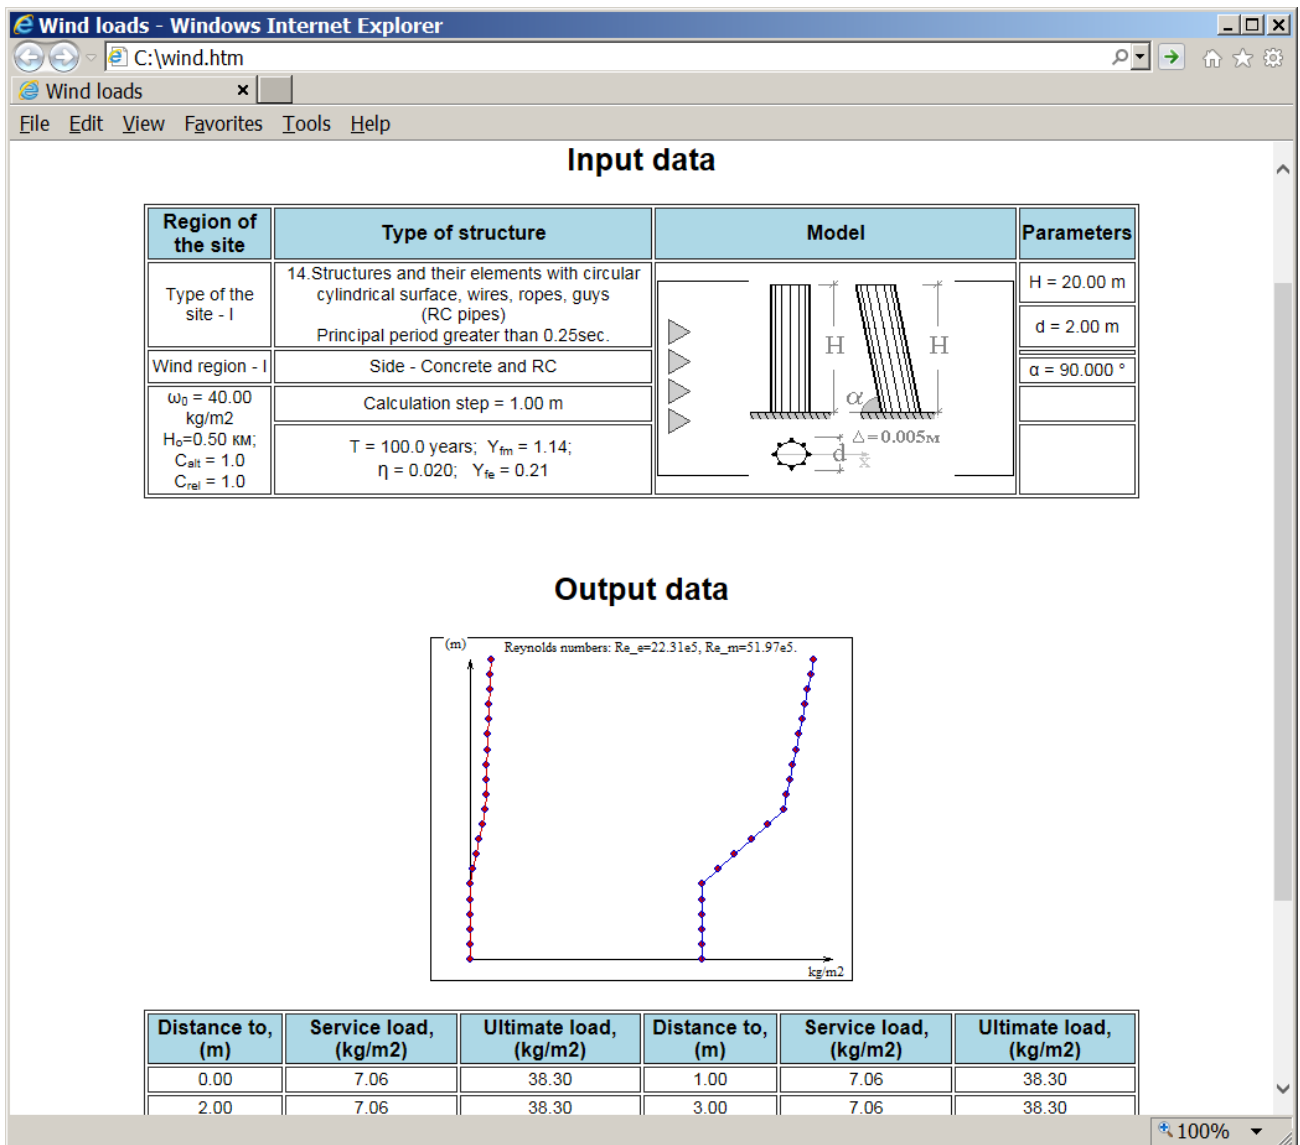


Figure 9.7

Ice loads

The module is meant to compute ice loads according to SNIP 2.01.07-85* and DBN V.1.2-2:2006.

The program enables you to compute normative and design values of linear and surface ice load.

Input data

Select the **Measurement units** in the appropriate box.

Select the building code in the appropriate box.

- In the **Element type** area of the dialog box, select **Circular section** option and define diameter.
- Select the **Ice region** in the list; in this case the values **b** (thickness of ice layer) will be displayed automatically. If you define **b** manually and leave this edit box, the ice region will be modified to **User** (user-defined).
- For calculation by DBN, in the same way select the **Ice region according to values of wind pressure**. In this case the value **W_b** (characteristic value of wind pressure for ice load) will be displayed automatically. In the appropriate box define **T** - average repetition period for ultimate design value.
- Define **h** – height above ground level where the ice load should be calculated.
- To start calculation, click **Calculate**.

Ice loads

Calculate Report Measurement units

Building code
 SNIP 2.01.07-85*
 SNIP 2.01.07-85*
 DBN V.1.2-2:2006

Element type
☒ Circular section with $d \leq 70$ mm ☐ Other element
 $d =$ 5 mm

Ice region
 I $b =$ 3 mm
 (b - ice layer thickness)
 $h =$ 10 m
 (h - height above ground level)

$Y_f =$ 1.3

Output data
 $I_{norm.} =$ 0.077 kg/m
 $I_{des.} =$ 0.1 kg/m

Calculate Report Close

Figure 9.8

Output data

Output data is presented graphically on the screen. It also may be presented as report that contains input data and table with loads values.

To generate and preview report file in HTML format, click **Report**.

Ice loads
(SNIP 2.01.07-85*)

Input data	
Element type	Circular section with $d \leq 70$ mm
Diameter of wire, rope (d)	5 mm
Ice region	I
Ice layer thickness (b)	3 mm
Height above ground level (h)	10 m
Load factor (γ_f)	1.3

Output data	
Normative value of ice load, i_n	0.077 kg/m
Design value of ice load, i_d	0.1 kg/m

100%

Climatic thermal loads

The module is meant for computation of climatic thermal loads on building structures according to SNIP 2.01.07-85* and DBN V.1.2-2:2006 'Loads and Actions'.

The data from the following documents is also considered in calculation:

- appendix 7 SNIP II-3-79* that contains coefficients for absorption of solar radiation by material of external surface of enclosing structure;
- appendix 5, 6, 7 SNIP 2.01.01-82 that contains maximum values of total (direct and diffuse) solar radiation.

Normative and design values of changes in mean temperatures are computed. It is also possible to compute mean daily temperatures of external air and initial temperature when the structure is closed to complete system.

Climatic thermal actions

File View Help

Building code: SNIP 2.01.07-85*
SNIP 2.01.07-85*
DBN V.1.2-2:2006

Define formulas for calculation

Building structures	Buildings and structures during maintenance		
	Unheated buildings (no technological heat source) and open structures	Heated buildings	Buildings with artificial climate or constant technological heat sources
Not protected from solar radiation (including external enclosing)	$t_w = t_{ew} + \theta_1 + \theta_4$		$t_w = t_{iw} + 0,6(t_{ew} - t_{iw}) + \theta_2 + \theta_4$
	$\xi_w = \theta_5$		$\xi_w = 0,8(t_{ew} - t_{iw}) + \theta_3 + \theta_5$
	$t_c = t_{ec} - 0,5\theta_1$		$t_c = t_{ic} + 0,6(t_{ec} - t_{ic}) - 0,5\theta_2$
	$\xi_c = 0$		$\xi_c = 0,8(t_{ec} - t_{ic}) - 0,5\theta_3$
Protected from solar radiation (including internal)	$t_w = t_{ew}$		$t_w = t_{iw}$
		$\xi_w = 0$	
	$t_c = t_{ec}$		$t_c = t_{ic}$
		$\xi_c = 0$	

Done NUM

Figure 9.9

Input data

In the **Define formulas for calculation** table, click appropriate rows (columns) and select formulas for calculation of thermal loads by type of buildings during maintenance (**Unheated buildings (no technological heat source) and open structures**, **Buildings with artificial climate or constant technological heat sources**) and building structures (**Not protected from solar radiation (including external enclosing)**; **Protected from solar radiation (including internal)**).

Define input data for calculation of parameters: $t_{ew}, t_{ec}, t_{ow}, t_{oc}$.

Click the **Increments of Mean Temperatures and Temperature Drop** button  on the toolbar.

Select with the pointer increment of temperature for building structures (**steel or reinforced concrete, concrete, masonry and masonry reinforcing with specific thickness**).

Click the **Absorption coefficient for solar radiation** button  on the toolbar and select with the pointer appropriate **Material for external surface of enclosing structure** in the table.

Click the **Total daily radiation, Smax** button  on the toolbar.

In the appropriate list box, define the type and orientation of surface, select with the pointer necessary value of latitude.

Click the **Coefficients K and K1** button  on the toolbar.

Select with the pointer the row with type and orientation of surface and in another table, the row with building structures.

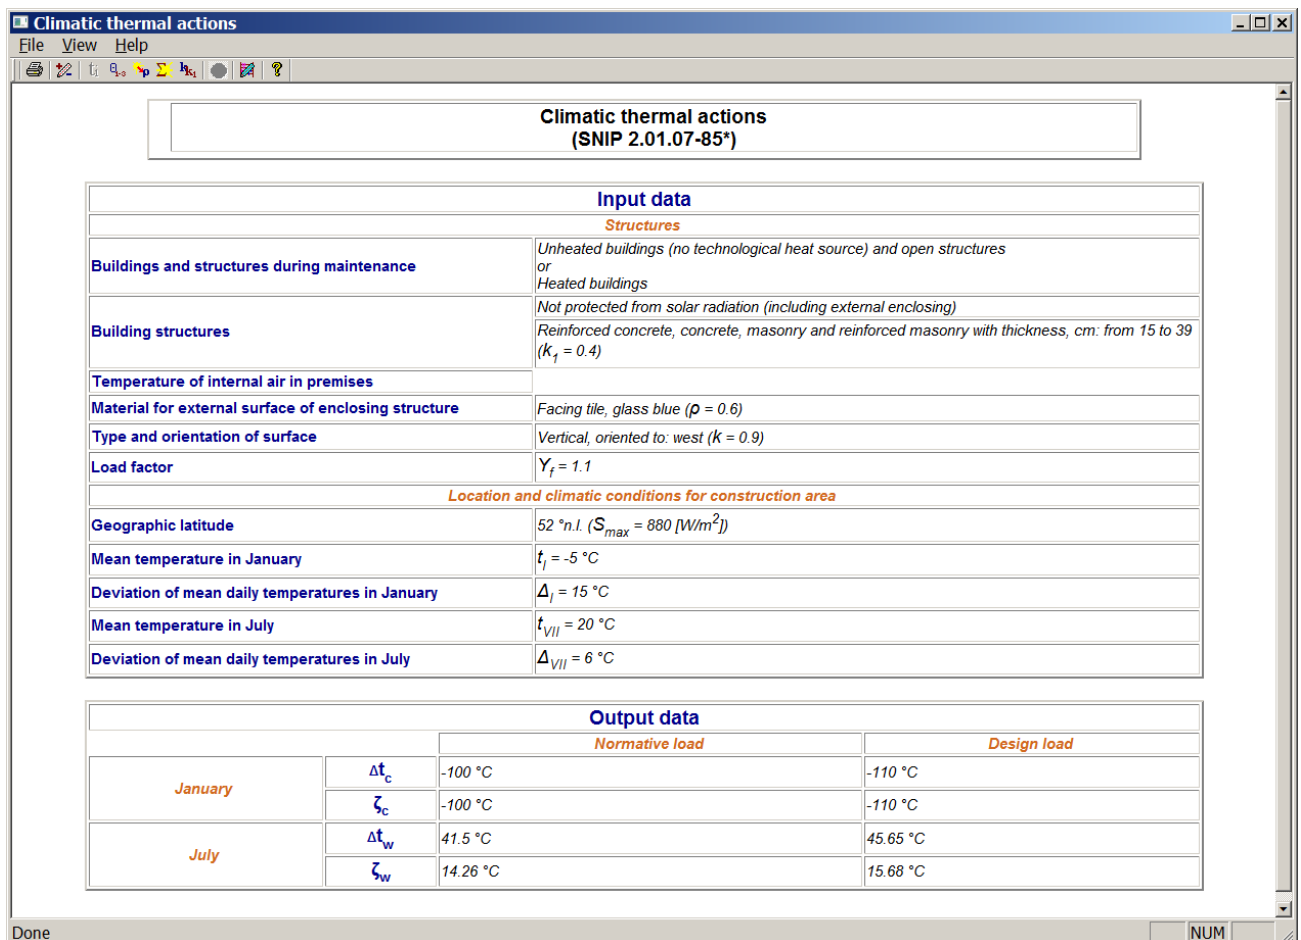
To show or hide the input data on the screen (current state of the problem), use the

Show/hide input data  button on the toolbar.

Click the **Calculate** button  on the toolbar.

Output data

After calculation, the program generates report that contains input and output data. It is possible to save or print the report file (**FILE/Save report**, **FILE/Print**).



Climatic thermal actions (SNIP 2.01.07-85*)

Input data	
Structures	
Buildings and structures during maintenance	Unheated buildings (no technological heat source) and open structures or Heated buildings
Building structures	Not protected from solar radiation (including external enclosing) Reinforced concrete, concrete, masonry and reinforced masonry with thickness, cm: from 15 to 39 ($K_1 = 0.4$)
Temperature of internal air in premises	
Material for external surface of enclosing structure	Facing tile, glass blue ($\rho = 0.6$)
Type and orientation of surface	Vertical, oriented to: west ($k = 0.9$)
Load factor	$Y_f = 1.1$
Location and climatic conditions for construction area	
Geographic latitude	$52^\circ \text{ n.l. } (S_{\text{max}} = 880 \text{ [W/m}^2\text{)})$
Mean temperature in January	$t_j = -5^\circ \text{C}$
Deviation of mean daily temperatures in January	$\Delta_j = 15^\circ \text{C}$
Mean temperature in July	$t_{\text{VII}} = 20^\circ \text{C}$
Deviation of mean daily temperatures in July	$\Delta_{\text{VII}} = 6^\circ \text{C}$

Output data			
		Normative load	Design load
January	Δt_c	-100 °C	-110 °C
	ζ_c	-100 °C	-110 °C
July	Δt_w	41.5 °C	45.65 °C
	ζ_w	14.26 °C	15.68 °C

Figure 9.10

Hazardous energy combinations of forces (EnergyCF)

The module enables you to determine hazardous combinations of forces in bar section (plane eccentric tension-compression) according to criterion of extreme energy in the section.

Energy of section in the i -th load case is described by formula:

$$U_i = \frac{1}{2E} \left(\frac{N_i^2}{F} + \frac{M_i^2}{J} \right),$$

where $i=1 \div n$; n – number of independent load cases; N_i – axial force; M_i – bending moment; E – modulus of elasticity; F – area of section; J – moment of inertia for section. It is considered that forces in the section are computed in liner elastic analysis.

Energy of section in the i -th load case may be presented as

$$U_i = \frac{1}{2E} (X_i^2 + Y_i^2),$$

where $X_i = \frac{N_i}{\sqrt{F}}$, $Y_i = \frac{M_i}{\sqrt{J}}$ components of vector $[R_i] = [X, Y]_i$. This makes it possible to manage the process of determining hazardous combinations of forces as the search for vectors with max length among all possible vector sums $[R_i]$.

Section energy from combinations of load cases reaches extreme values at the vertices of polygon (convex closed shell with discrete set of all vector sums $[R_i]$). Number of vertices in polygon-shell is equal to $2n$, while total number of vector sums equals to 2^n ($2n \ll 2^n$).

The program generates polygon-shell with $2n$ vertices. For every vertex, the program generates the sum of components X , Y and the list (combination) with numbers of load cases mentioned in this sum. For vertices, the following values are also computed: energy

$$\sigma = \frac{N}{F} + \frac{M}{W}$$

of section U , axial force N , moment M and stress σ . Theoretical base and algorithm for calculation are described in detail in [6, 7].

Input data

The program window is presented in the figure below.

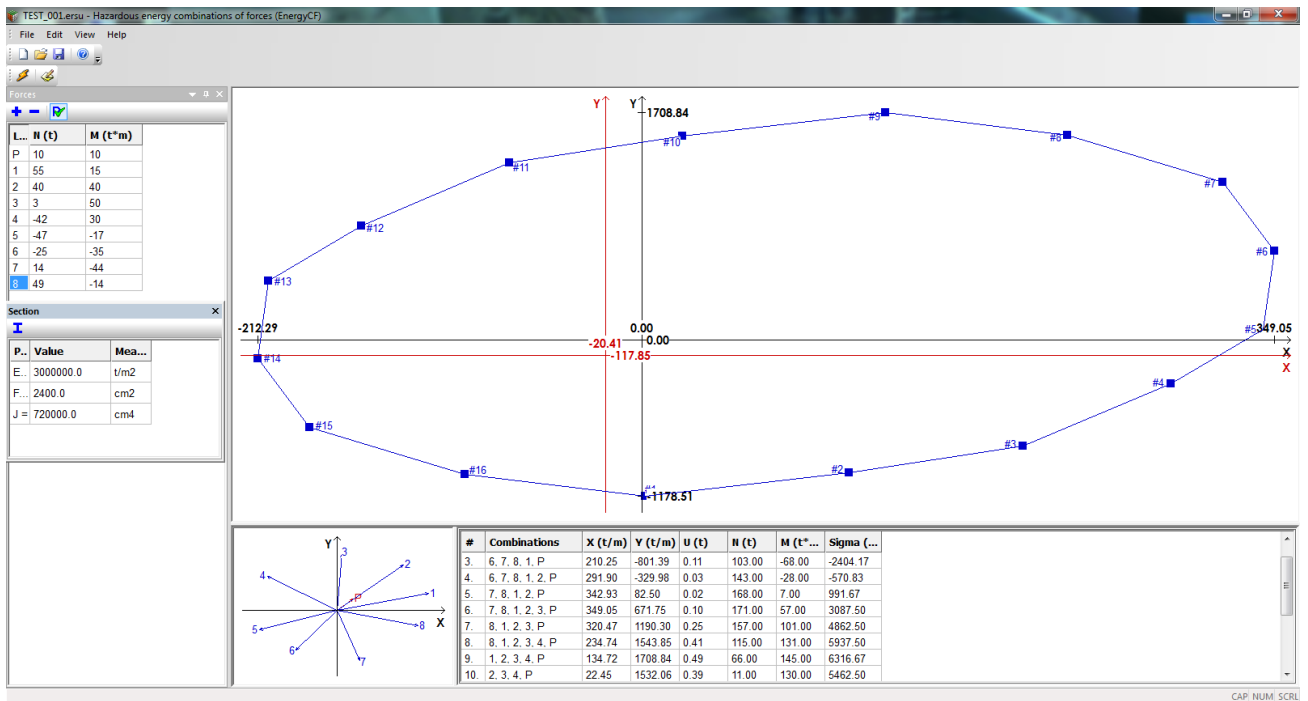



Figure 9.11

Forces

In the first row of the **Forces** table, define forces **N** and **M** from dead load case. All components of the dead load case are denoted with index **P**. To define forces from dead

load case, click the **Account of dead load case** button  on the toolbar of this table. If this button is not active, then the row of forces from the dead load case remains unavailable and calculation will be made without account of dead load case.

From the second row, define forces from other load cases in ascending order of their numbers beginning from the first one. To add or delete rows in the table, use the **Add**



and **Delete**



buttons on the standard toolbar.

L...	N (t)	M (t*m)
P	10	10
1	55	15
2	40	40
3	3	50
4	-42	30
5	-47	-17
6	-25	-35
7	14	-44
8	49	-14


a)

L...	N (t)	M (t*m)
P	10	10
1	55	15
2	40	40
3	3	50
4	-42	30
5	-47	-17
6	-25	-35
7	14	-44
8	49	-14


b)

Figure 9.12

Section properties

In the **Section** table, define modulus of elasticity for material **E**, area of section **F** and moment of inertia for the section **J**. When you click the **Section** button , the **Parametric sections** program appears on the screen. There you could compute values **F** and **J**. Computed values will be automatically displayed in the appropriate boxes. Section

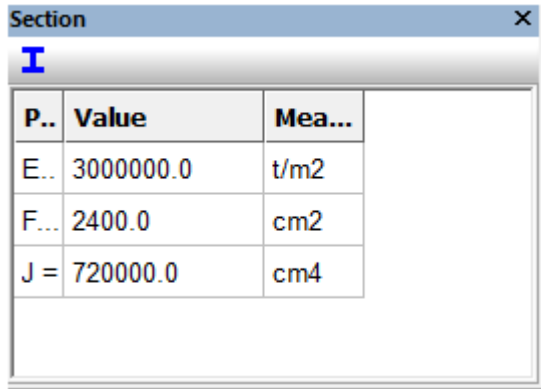modulus is computed by formula
$$W = \sqrt{\frac{F * J}{3}}$$
.



P..	Value	Mea...
E..	3000000.0	t/m2
F...	2400.0	cm2
J =	720000.0	cm4

Figure 9.13

To start calculation, click the **Calculate** button  on the standard toolbar.

Output data

After calculation you will see convex shell with hazardous combinations of forces computed at vertices of the shell. Shell and axes **X**, **Y** are coloured blue.

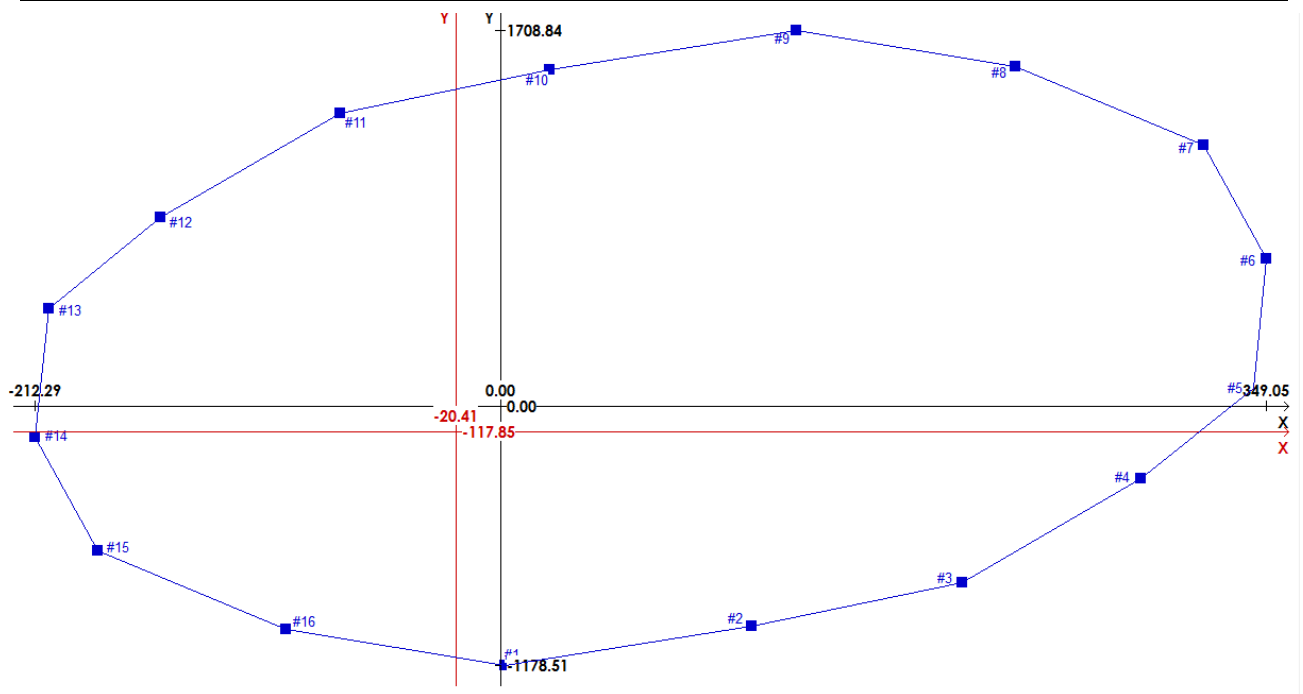


Figure 9.14

If the dead load case is taken into account, then centre of the shell (intersection of blue axes **X**, **Y**) is moved in parallel direction against direction of vector $[R_p]$ by the value of its length. It is displayed with the second pair of axes **X**, **Y** coloured red.

The table of results contains: numbers of load cases included into appropriate combination, sums of components **X** and **Y** at the vertices of shell, appropriate forces **N** and **M**, stresses **Sigma** and energy **U**.

#	Combinations	X (t/m)	Y (t/m)	U (t)	N (t)	M (t*...)	Sigma (...)
1.	5, 6, 7, 8, P	2.04	-1178.51	0.23	1.00	-100.00	-4162.50
2.	5, 6, 7, 8, 1, P	114.31	-1001.73	0.17	56.00	-85.00	-3308.33
3.	6, 7, 8, 1, P	210.25	-801.39	0.11	103.00	-68.00	-2404.17
4.	6, 7, 8, 1, 2, P	291.90	-329.98	0.03	143.00	-28.00	-570.83
5.	7, 8, 1, 2, P	342.93	82.50	0.02	168.00	7.00	991.67
6.	7, 8, 1, 2, 3, P	349.05	671.75	0.10	171.00	57.00	3087.50
7.	8, 1, 2, 3, P	320.47	1190.30	0.25	157.00	101.00	4862.50
8.	8, 1, 2, 3, 4, P	234.74	1543.85	0.41	115.00	131.00	5937.50
9.	1, 2, 3, 4, P	134.72	1708.84	0.49	66.00	145.00	6316.67
10.	2, 3, 4, P	22.45	1532.06	0.39	11.00	130.00	5462.50
11.	2, 3, 4, 5, P	-73.48	1331.72	0.30	-36.00	113.00	4558.33
12.	3, 4, 5, P	-155.13	860.31	0.13	-76.00	73.00	2725.00
13.	3, 4, 5, 6, P	-206.17	447.83	0.04	-101.00	38.00	1162.50
14.	4, 5, 6, P	-212.29	-141.42	0.01	-104.00	-12.00	-933.33
15.	4, 5, 6, 7, P	-183.71	-659.97	0.08	-90.00	-56.00	-2708.33
16.	5, 6, 7, P	-97.98	-1013.52	0.17	-48.00	-86.00	-3783.33

Figure 9.15

When you click any vertex on the shell, the vertex will be coloured red and the correspondent row in the table will be coloured blue.
 When you click any row in the table, appropriate vertex of a shell will be coloured red.

Input vectors $\begin{bmatrix} X \\ Y \end{bmatrix}$ are displayed next to the table.

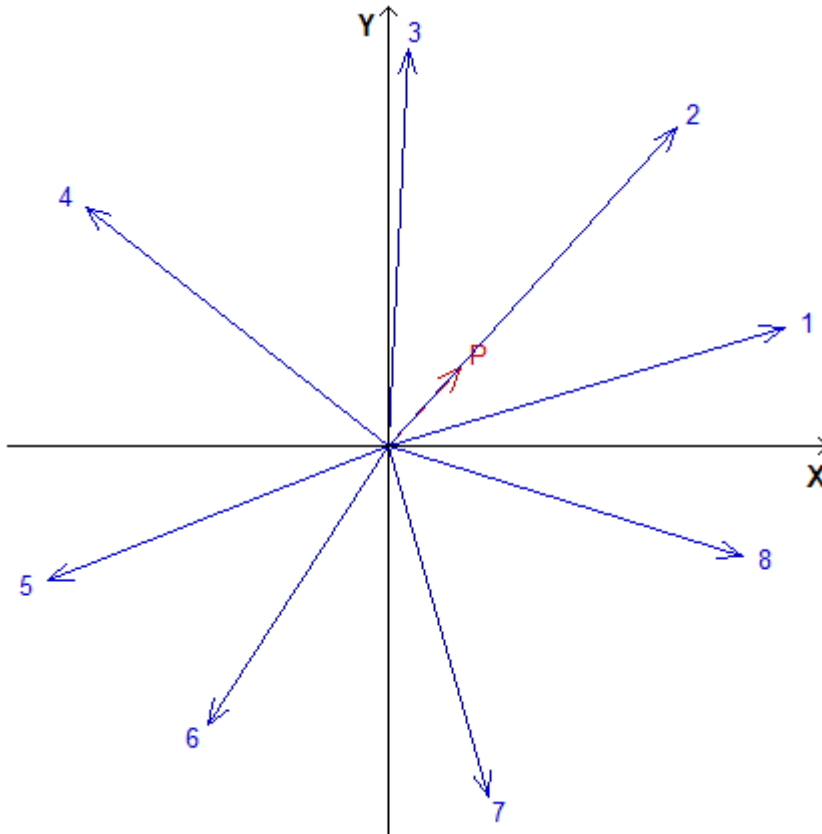



Figure 9.16

To generate report file in HTML format, click **Report** button  on the toolbar.

Resonance check for wind turbulence

The module enables you to check buildings and structures for resonance wind turbulence according to SP 20.13330.2011 and DBN V.1.2-2:201X.

Resonance check for wind turbulence

Building code: SP 20.13330.2011 Wind region: VII

Height of structure (H), m: 312 Type of site: A

Characteristic lateral dimension of structure in direction perpendicular to wind direction (d), m: 25 Type of structure: pipes and masts with no guy cable

parallel to wind direction (b), m: 22 Logarithmic decrement of vibrations: 0.05 (steel structures)

☐ circular structure Number of mode shapes: 4

Strouhal number: 0.11 Frequencies for mode shapes (defined in ascending order), Hz: 0.12 0.145 0.17 0.22

Output data

	Frequencies, Hz	Critical wind speed, m/c	Coefficient for wind speed	Intensity of wind load, kN/m
1	0.12	27.272727	0.444108	963.715926
2	0.145	32.954546	0.536631	1407.092177
3	0.17	38.636364	0.629154	1934.124324
4	0.22	50.	0.814199	1766.812563
5				
6				

Max wind speed, m/s: 61.4101

Coefficient for type of site: 2.62527

Calculate Report Help Exit

Figure 9.17

Input data

Select necessary building code from the list.

Define the following data:

- **H** – height of structure;
- **d** – characteristic lateral dimension of structure in direction **perpendicular** to wind direction;
- **b** – characteristic lateral dimension of structure in direction **parallel** to wind direction;
- shape of structure – circular or not;
- wind region: Ia, I, II, III, IV, V, VI, VII (for SP) or 1, 2, 3, 4, 5 (for DBN);
- Strouhal number St :
 - for circular cross-sections $St = 0.2$;
 - for sections with sharp edges $St = 0.11$;
 - it is allowed to define arbitrary value.
- number of mode shapes (by default 1);
- frequencies f_i in Hz for $1 \leq i \leq K$ mode shapes (defined in ascending order);
- type of structure; equivalent height Z_e is determined according to this type:
 - pipes and masts with no guy cables – $Z_e = 0.8 \cdot H$;
 - buildings and structures with smoothly varying shape of cross section – $Z_e = 0.8 \cdot H$;
 - other buildings and structures – $Z_e = H$.
- type of site: A, B, C (for SP) or I, II, III, IV (for DBN);

- logarithmic decrement of vibrations:
 - for steel structures $\delta = 0.05$;
 - for reinforced concrete structures $\delta = 0.10$.

Output data

The following data is computed and displayed on the screen:

- **Vmax(Z_e)** – max wind speed, m/s;
- **Vcr,i** – critical wind speed for every mode shape, m/s;
- **kvi = Vcr,i / Vmax(Z_e)** – coefficient for wind speed for every mode shape;
- **Fi(z)** – intensity of wind load for resonance wind turbulence for every mode shape in direction perpendicular to average wind speed, kN/m;
- **Cy,cr** – aerodynamic coefficient (in the report file);
- **k(Z_e)** – coefficient for type of site;
- Ratio **H/d**;
- Ratio **b/d**.

Important. Speed coefficient **kvi** is required to determine average (**Wm,cr**) and pulsation (**Wp,cr**) components of resonance in direction parallel to wind speed: **Wm,cr = kvi² * Wm**; **Wp,cr = kvi² * Wp**.

To present a report document in HTML format, click **Report**.

Deflections

Deflections

This chapter contains module that enables you to calculate inelastic deflections in multispans continuous beam for arbitrary live and short-term loads.

[Analysis of inelastic deflections](#)

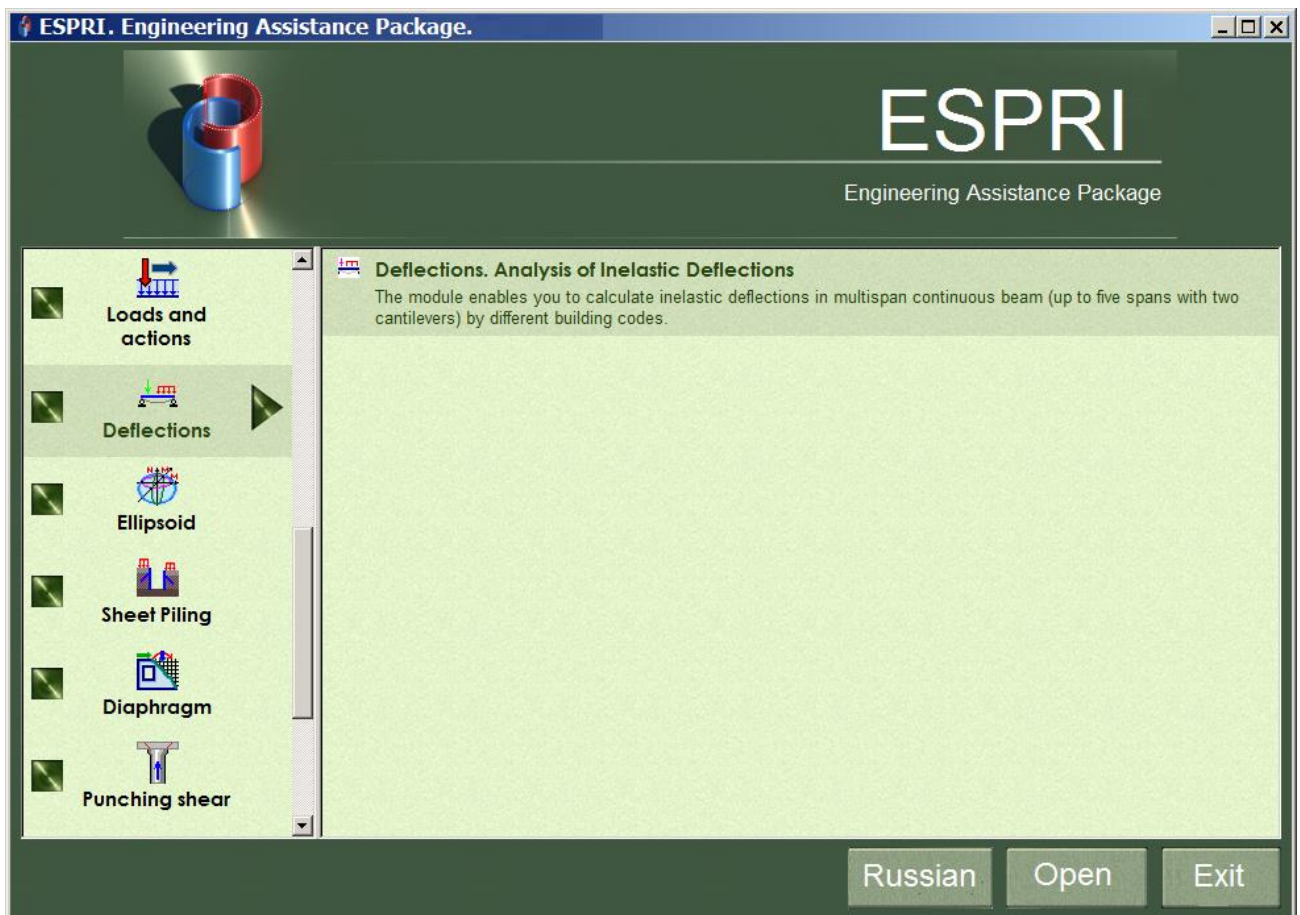


Figure 10.1

Analysis of inelastic deflections

The module enables you to calculate inelastic deflections in multispans continuous beam (up to five spans with two cantilevers) for arbitrary live and short-term loads.

The following building codes are supported: SNIP 2.03.01-84*, SNIP 52-01-2003, Eurocode 2, DSTU 3760-98, TSN-102-00*.

Analysis of inelastic deflections

Input data | Output data

Parameters

Number of spans: 2

Left cantilever: ☒ Right cantilever: ☒

Span	Length (m)	Flexural stiffness (tm ²)	Mass per 1r.m. (t/m)
1st span	6	1426.39	0.127125
2nd span	4	1426.39	0.127125
3rd span	0	0	0
4th span	0	0	0
5th span	0	0	0

Options

Units of measurement: t

☐ Uniform beam

Supports

Type: ☐ ☐ ☐

Current support: 1

Stiffness for translation: 10000 t/m

Stiffness for rotation: 0.0 tm

Loads

Current span: 0

Load type: ☒ Force ☐ Moment

P = 2.2 t/m

P1 = 0.0 t/m

a = 0.0 m

b = 0.0 m

Load case No. 1

Name: Dead

☐ Account of dead weight in load case

Table of defined loads for the current load case

Load type	Span	P	P1	a	b
concentr. load	1	10	0	3	0
distrib. load	1	2.2	0	0	0
distrib. load	2	2.2	0	0	0

Open Save Exit Help

Figure 10.2

Input data

- In the **Parameters** area, in the **Number of spans** box, select number of spans and, if required, select appropriate check boxes to define the presence of the left or right cantilever.
- In the **Options** area, define units of measurement for loads and stiffness – **t** or **kN**.
- In the appropriate boxes, define span (cantilever) values in **m**.
- In the **Parameters** area, when you click the button, the **Stiffness types** dialog box appears on the screen. In this dialog box, define type of section and its parameters, class of concrete and class of reinforcement, arrange reinforcement in sections (areas of upper and lower reinforcement with distances to them) for zones; length of zones may be defined either in absolute (**m**) or in relative (%) coordinates (e.g. length of the current zone 0,25 means that the section will be defined for the first quarter of the current span; for the second defined section, length of the current zone is equal to 0,5 – this section is assigned to the second quarter of the span, etc.)

Important. Option to select building code is available only for the **first span**. Selected building code is automatically assigned to all spans of the beam. Building code should be selected before defining the data about reinforcement zones (for the new problem) or when all data about reinforcement zones is deleted (for analysed problem) as building code and section are defined there.

Click **Parameters >>** to define specific parameters according to selected building code. When necessary parameters are defined, click **Close**.

Stiffness types (1st span of length - 6m)

Define section

Section type: ☐ ☒

h = 300 mm
 hf = 0 mm
 h'f = 30 mm
 b = 85 mm
 bf = 85 mm
 b'f = 720 mm

Diagram of T-section with dimensions: a_1 , a_2 , a'_1 , a'_2 , b , b_f , b'_f , h_f , h . Reinforcement areas: $A's_1$, $A's_2$, A_s2 , A_s1 .

EI_o = 1426.38950318569 tm²

Code: SNIP 52-01-2003

Concrete and reinforcement

Reinforcement class: A300

a₁ = 31 mm, A_{s1} = 380 mm²
 a₂ = 0 mm, A_{s2} = 0 mm²
 a'₁ = 0 mm, A_{s'1} = 0 mm²
 a'₂ = 0 mm, A_{s'2} = 0 mm²

Concrete density: 2700 kg/m³

Defined zones

Section...	Length	Conc...	Reinf...
T-sec...	6	B25/...	A300...

Buttons: Add, Edit, Delete

Lengths of zones

☒ Absolute
☐ Relative

Length of current zone: 0.0 m

Buttons: Parameters >>, Close

Figure 10.3

- In the **Supports** area, in the **Current support** box or by direct click on schematic presentation, select supports that boundary conditions should be applied to, define the type of boundary condition (it will be displayed on schematic presentation) and stiffness for translation or rotation, if required.
- Select number of current load case (up to 3 load cases). Dead and Live load cases will be treated as long-term load cases while short-term – as short-term ones. In this case Live and Short-term load cases will be applied span-by-span to beam to find out extreme values of deflections.
- In the **Loads** area, in the **Current span** box or by direct click on schematic presentation, select spans that the load should be applied to (it will be displayed on schematic presentation).
- In the **Loads** area, select the load type by clicking appropriate button, define necessary parameters and click **Add** under the **Edit load**.
- To modify parameters of load, select the load in the table of loads, input new parameters in the **Loads** area and click **Edit** under the **Edit load**.
- To delete load from the current span, select appropriate load in the table of loads. Then in the **Delete loads** area, click **current**. To delete all loads from the current span, in the **Delete loads** area, click **from span**.
- To add dead weight in the current load case, select appropriate check box.

– When the input data is defined, to start calculation, click **Calculate**.

Output data

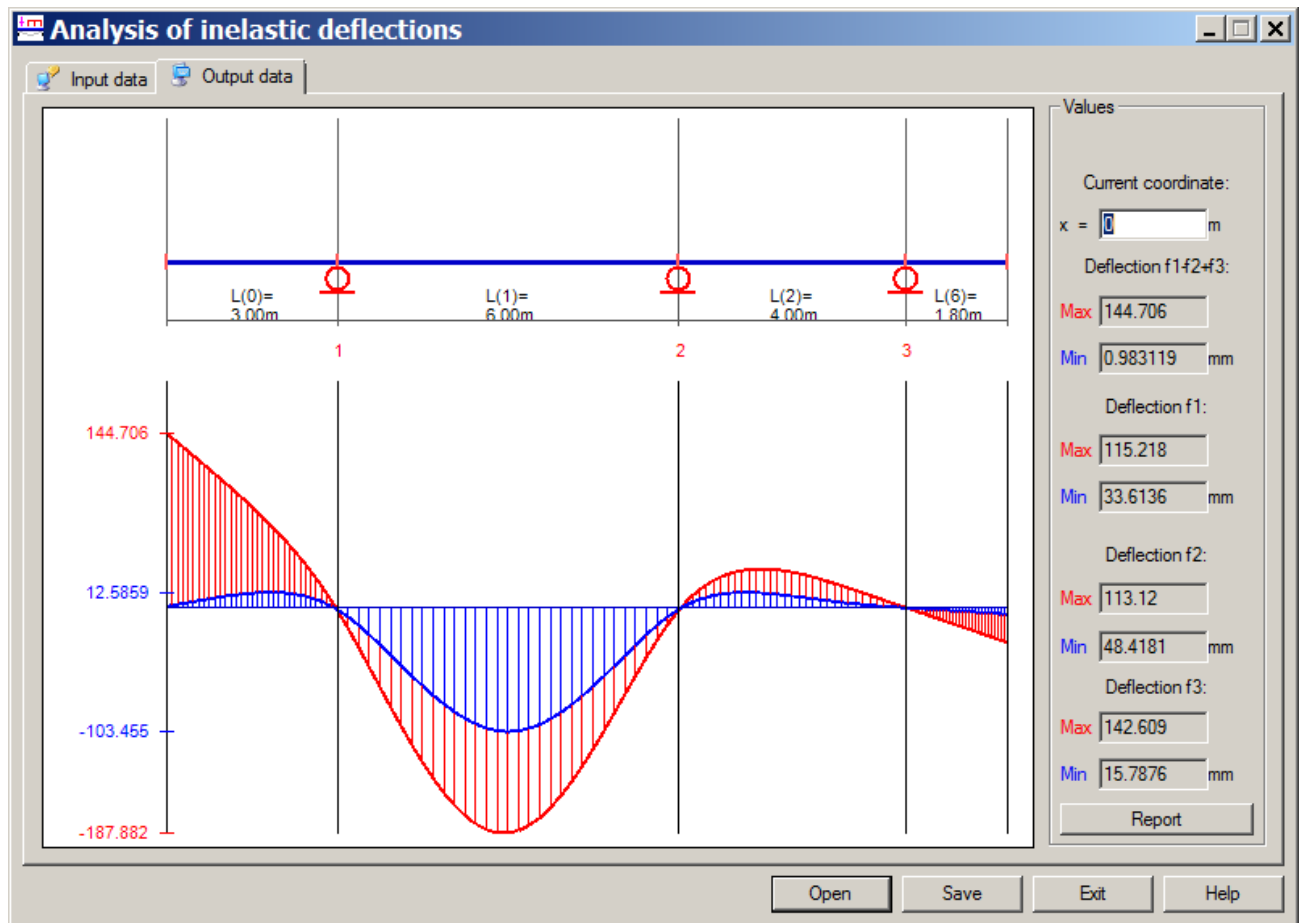


Figure 10.4

On the **Output data** tab you will see the diagram of deflections with extreme values.

To find out ordinates of diagrams at any point of beam, drag the pointer across the diagram and view the ordinate for the diagrams of: complete deflections (**f1-f2+f3**), deflections from short-term action of the whole load (**f1**), deflections from short-term action of dead and live loads (**f2**) and deflections from long-term action of dead and live loads (**f3**).

To present a report document in HTML format, click **Report**.

Ellipsoid

Ellipsoid

The chapter contains module that enables you to estimate strength of reinforced concrete (RC) sections in axial force and bending moments.

[Ellipsoid. Bearing capacity of RC elements](#)

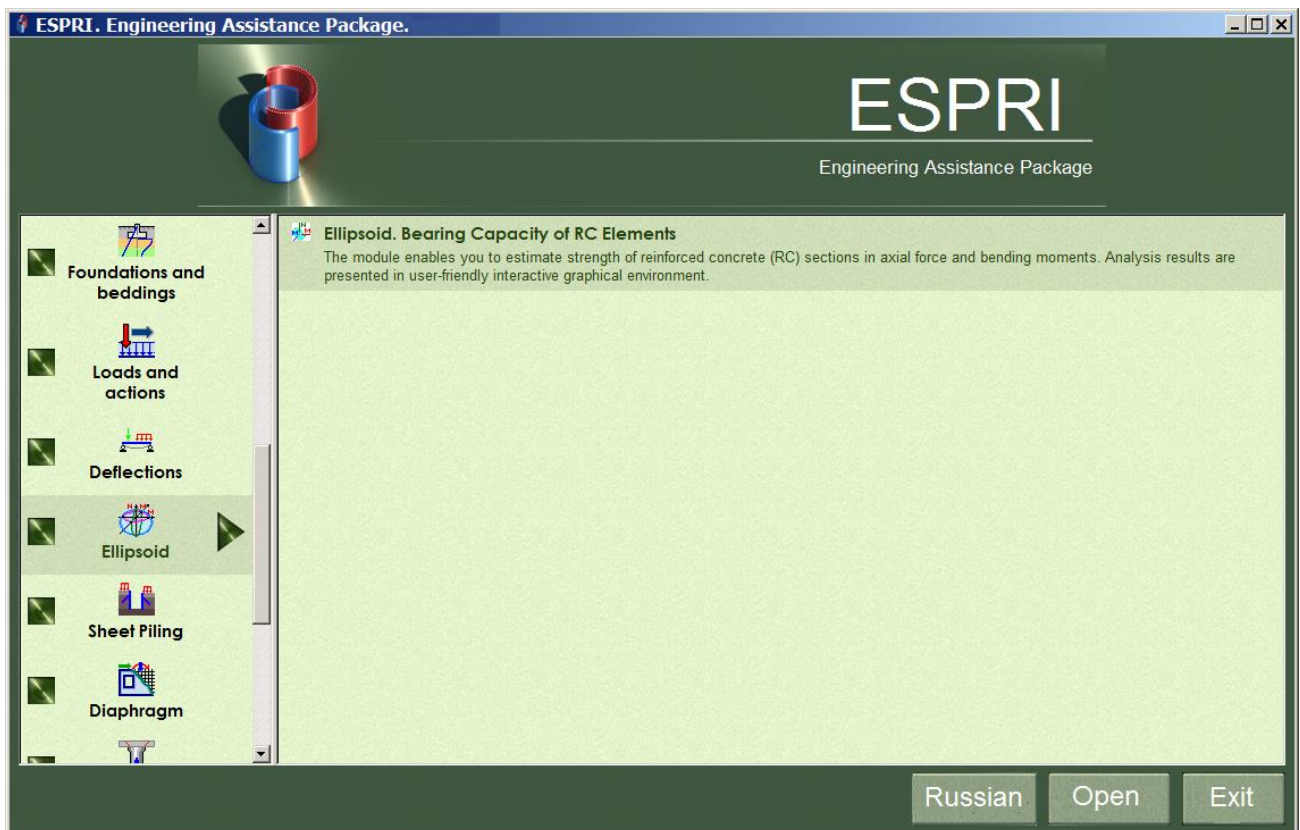


Figure 11.1

Ellipsoid. Bearing capacity of RC elements

The module enables you to estimate strength of reinforced concrete (RC) sections in axial force and bending moments according to SNIP 2.03.01-84* 'Concrete and Reinforced Concrete Structures'. The surface of bearing capacity is generated for the section with defined parameters.

In addition, for the loads specified in the table it is possible to calculate reserve factors by bearing capacity. Reserve factor is the ratio of bearing capacity of the section to defined forces. This factor indicates how many times the real forces may be increased until they exceed the bearing capacity of the section.

Input data

– In the **Column section** area, define the section for element of RC structure and define its geometric properties.

Figure 11.2

- To arrange reinforcement, select (with the pointer) the element on schematic presentation and then define diameter (diameters), location and spacing in the appropriate boxes. When you select certain elements, the **Arrange uniformly** check box becomes available. If this check box is selected, then defined number of rebars will be automatically arranged uniformly according to reinforcement pattern and defined location.
- In the appropriate boxes define additional data according to SNIP 2.03.01-84* : class of concrete and hardening process for concrete; if necessary, select appropriate check boxes to take account of short-term and/or earthquake loads; define partial safety factors, etc.
- When the input data is defined, click **Calculate**.

Output data

The output data is presented as the surface of bearing capacity for the specified section.

According to results of calculation it is possible to check bearing capacity of the section for the loads specified in the table.

To preview projections M_yM_z , M_yN , M_zN , dimetric projection of the surface or all views simultaneously, click appropriate button. You could define certain point that should be checked (necessary values of forces) in the appropriate boxes. When the certain point (forces) is defined, to display projections, click **Redraw**. In this case the program generates three orthogonal projections that pass through the specified point. The point is presented on the ellipsoid and on its projections. If the specified point is located inside the ellipsoid surface, then the section is adequate for the specified forces.

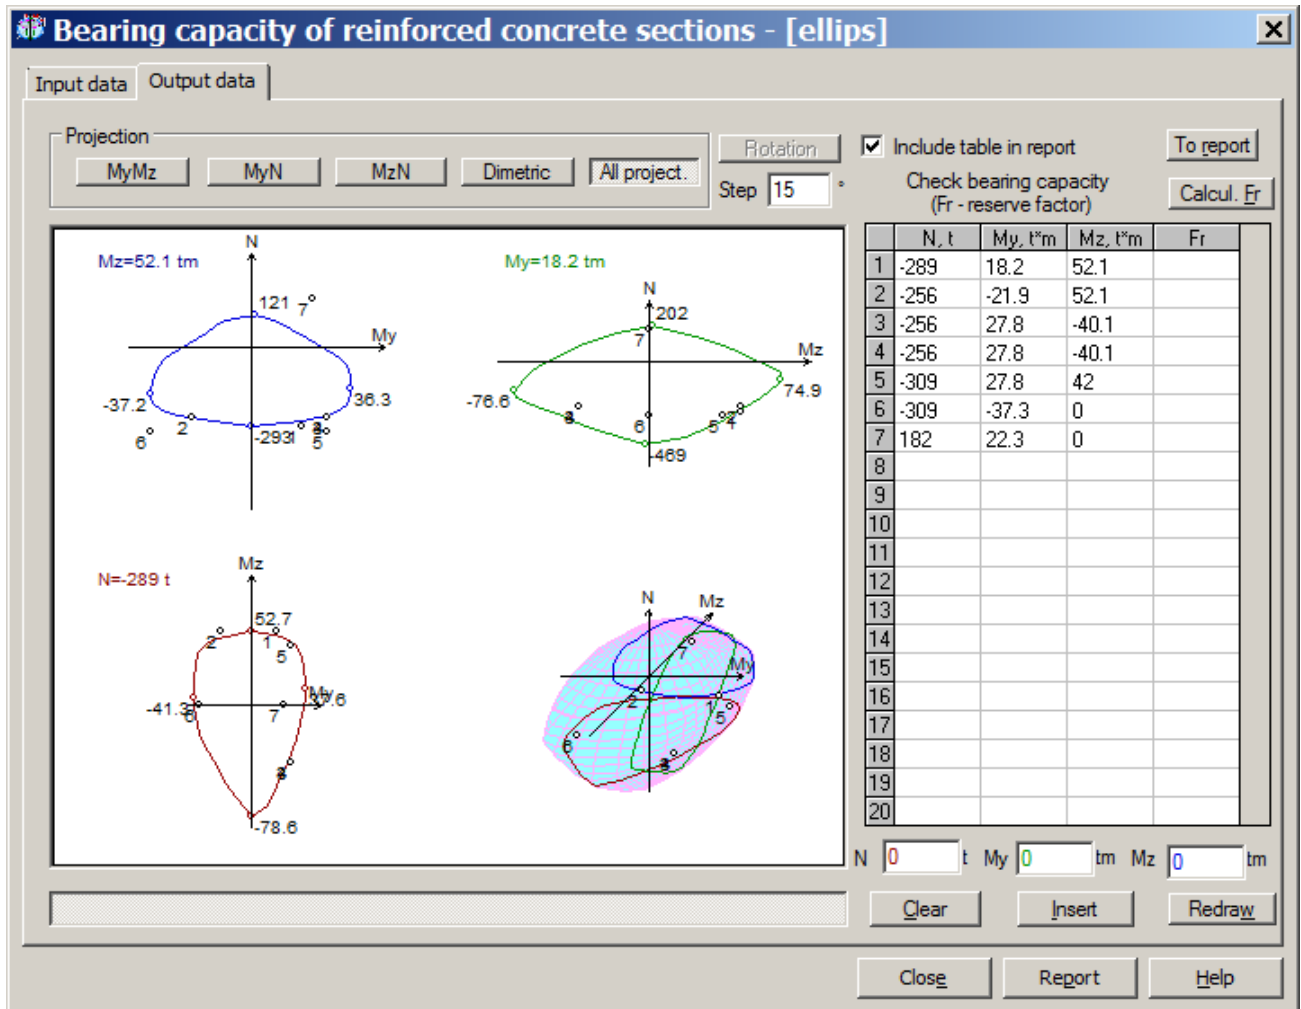


Figure 11.3

To add the specified forces to the table, click **Insert**.

To calculate reserve factors for loads specified in the table, click **Calculate Fr**.

If several rows of the table are filled in, then to display the point with certain forces and contours of planes that pass through it, select appropriate row in the table and click **Redraw**.

In the mode for preview of **Dimetric** projection, it is possible to rotate the image. To do this, click **Rotation** or click [F11]. To cancel this mode, just click **Rotation** once again (to make

it not active) or click [Esc]. Step of rotation angle may be defined in appropriate box. The rotation is made in the following way:

- about vertical axis - click to the left (right) from the image (keys [←], [→]);
- about horizontal axis - click above (below) the image (keys [↑], [↓]);
- about axis that is orthogonal to the screen - [CTRL] key + click above (below) the image (keys [HOME], [END]).

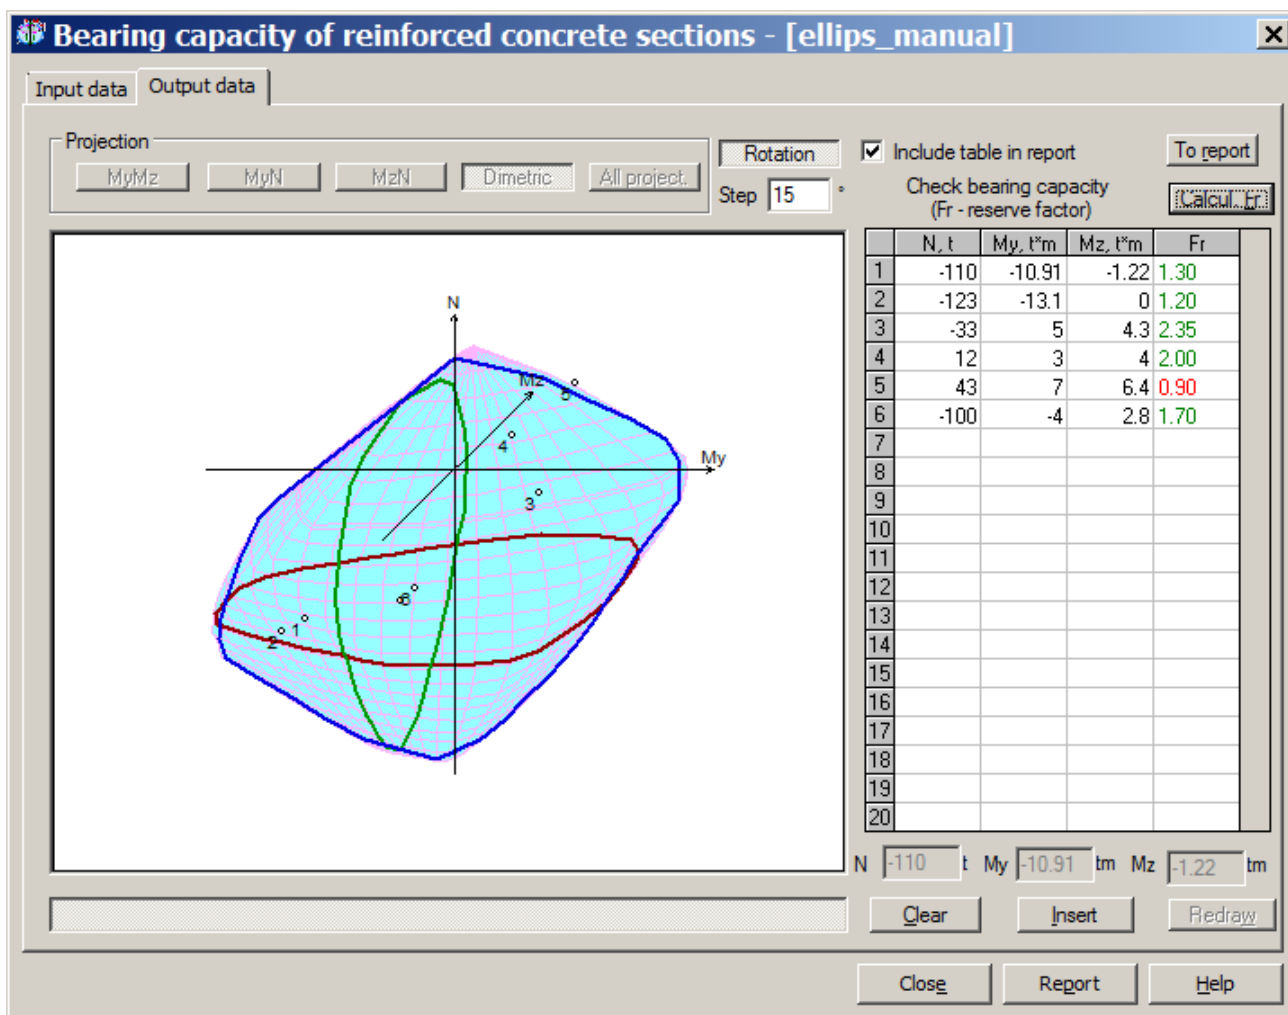


Figure 11.4

When you move the pointer across the projection image, the force values are displayed at the bottom of the dialog box. When you click certain point, the program redraws projections for this point and the values are displayed in the appropriate boxes below the table. To copy these values to the table, click **Insert**. The data will be inserted above the current row.

To delete certain rows or cells, select them with the pointer and click **Clear**. If there is no selected area, then the current cell is cleared. Then all rows that are not empty will be raised and reserve factors are recalculated.

When you change the row of the table (select another row), the values from all rows that are not empty will be displayed in the edit boxes below the table. To redraw projections for these values, click **Redraw**.

Report

To present a report document in HTML format, click **Report**.

To paste the current images of projections to the report file, click **To report**. In this case, if the **Include table in report** option is selected, then the table will be also included into report file. If parameters or type of section are modified, the report will be generated once again. You could save or print the report file.

Sheet piling

Sheet piling (chapter)

The module is meant to analysis of substructure erected according to the 'wall in soil' method. Design model is plane and contains soil, elements of sheet piling, H-braces and anchorage. It is necessary to define dimensions and properties of soil, dimensions of pit and elevations of pit excavation, loads on soil, dimensions and material properties, sections of sheet piling and anchors as well as pretension forces in anchorage.

In the current version of the program it is allowed to define not more than 5 elevations for pit excavation, 4 H-braces and 4 anchors from every side of sheet piling.

When the input data is defined, the soil is automatically triangulated with appropriate dividing of sheet piling elements and taking account of locations for H-braces and anchors. The soil is simulated with triangular FE of soil, sheet piling – with bar elements, H-braces and anchors – with bar elements that take pretension.



Figure 12.1

Calculation is made sequentially by stages. At the first stage, the whole model (no anchors and no pit excavation) is analysed on dead weight and defined load. Analysis results for the first stage correspond to initial stress state of design model (stresses in soil prior to commencement of the work).

Then number of stages is determined automatically and depends on defined elevations for pit excavation and elevations for H-braces and anchors. That is, until the soil is not excavated (disassemblage of soil elements), the H-braces and anchors could not be installed (assemblage of anchors and/or H-braces). The H-braces should be installed before anchors.

During calculation the stresses are accumulated (by stages) on elements of soil and forces – in elements of sheet piling, H-braces and anchors. By default, displacements of nodes are not accumulated. To do this, select appropriate check box in the **Settings** dialog box.

For example, the following order of stages may be defined:

stage 1 – soil;

stage 2 – sheet piling (assemblage) and the 1st excavation of soil (disassemblage);

stage 3 – installing of the 1st H-brace (assemblage);

stage 4 – installing of the 1st pair of anchors – left and right (assemblage); etc.

the last stage – the last excavation of soil (disassemblage).

Unequal number of anchors to the left and to the right is allowed. Location of the left and right anchors relative to the sheet piling may not coincide.

Sheet piling (module)

When input data is defined, the dialog box contains two tabs: **General model** and **Pit excavation**.

General model (Fig. 12.2)

On this tab you define parameters of soil. Schematic presentation is modified automatically according to defined data.

In the **Dimensions** area of the dialog box, define dimensions of the pit and neighbouring soil that is considered in analysis:

- pit width;
- depth of pit (pit bottom) measured from ground elevation;
- horizontal dimension of soil to the left from pit;
- horizontal dimension of soil to the right from pit;
- bottom elevation of soil.

Important. Ground elevation is determined automatically when you input elevations for soil layers under **Soil properties for layer**.

Sheet piling - Shpunt_2019_B

General model | Pit excavation

Dimensions

Pit width: 25 m

Pit bottom: -24 m

To the left from pit: 30 m

To the right from pit: 30 m

Bottom elevation: -28 m

Loads

☐ Triangulation

Soil properties for layer:

Upper elevations (m): 5 2 Layer 1 Layers 3

Modulus of elasticity: 800 t/m² Poisson's ratio: 0.3

Unit weight: 1.6 t/m³ Unit cohesion: 0.1 t/m²

Angle of internal friction: 30 ° Ultimate tension: 0.01 t/m²

Unloading factor: 3

Sheet piles

Left Right

Z, m: -25 -25

EF, t: 1.2e+006 1.2e+006

EI, tm²: 120000 120000

Number of subdivisions: 10 10

Open Save Report Settings Calculate Exit Help

Figure 12.2

In the **Soil properties for layer** area, define total number of soil layers. Soil numbers are defined in the **Layer** box.

For every layer the following data should be defined:

- extreme left and extreme right upper elevations of soil layer;
- modulus of elasticity;
- Poisson's ratio;
- unit weight;
- angle of internal friction;
- unloading factor (correction factor to modulus of elasticity for soil along unloading path);
- unit cohesion;
- ultimate tension (ultimate strength of soil in tension).

In the **Sheet piles** area of the dialog box, define the following values:

- Z – depth of penetration;
- EF – axial stiffness of one running metre;
- EI – flexural stiffness of one running metre.

Density of model subdivision (at places where finite elements of soil join the sheet piling) depends on the **number of subdivisions** in appropriate boxes for the left and right sheet piling (by default, 10).

When you click **Loads** button, in another dialog box (see Fig. 12.3) you could define parameters for zones of **vertical and horizontal loads**.

Vertical uniformly distributed loads are applied to the soil surface – to the left of the left sheet piling and to the right of the right sheet piling.

In the corresponding boxes, define these values:

- A – the nearest distance from pit edge to the load;
- B – load application zone;
- q – uniformly distributed load.

Horizontal trapezoidal loads (for example, pressure of water) are defined in tabular format to the left and right (see notation in Fig. 2) sheet piling. The following data should be defined in the table:

- Attribute of pile sheeting: 1- left, 2 - right;
- Q1, Z1 – initial value of trapezoidal load and distance from this load up to zero level of soil surface;
- Q2, Z2 – final value of trapezoidal load and distance from this load up to zero level of soil surface.

Horizontal load is considered positive if it acts from right to left.

Loads

Loads applied to surface

	Left	Right	
A	2	2	m
B	10	5	m
q	1	0.5	t/m2

Horizontal loads on sheet piling (1-left, 2-right)

	Sheet piling	Q1	Z1	Q2	Z2
1	1	-1	-3	-3	-13
2	2	1	-3	3	-13
3	1	-3	-16	-5	-27
4	2	3	-16	5	-27
5					
6					
7					
8					

Apply Cancel

Figure 12.3

Important. To visualize FE design model (before calculation), select the **Triangulation** check box.

Pit excavation (Fig. 12.4)

On this tab it is possible to define number of elevations (not more than 4) for pit excavation. When you define number of elevations, you could input values for the elevations in the appropriate boxes.

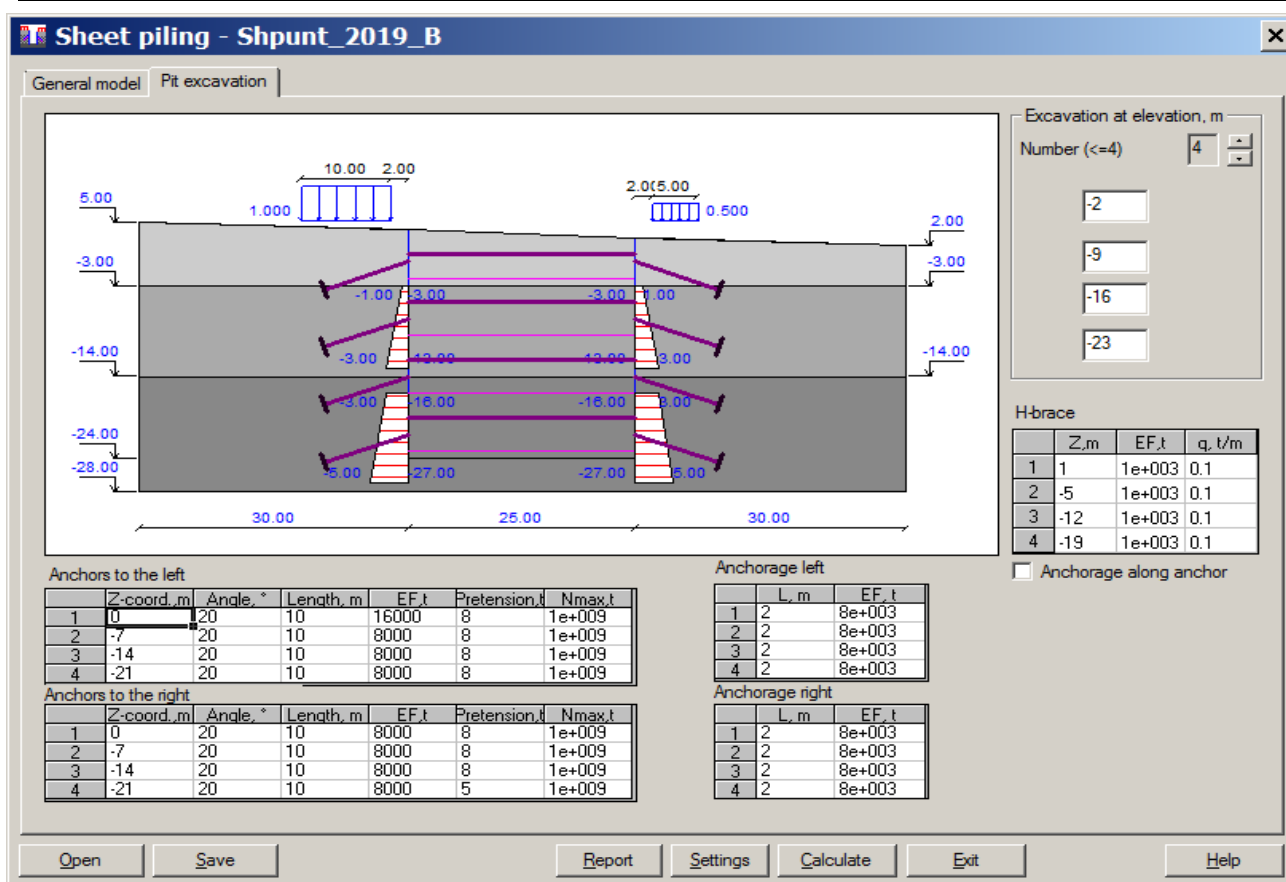


Figure 12.4

In the **Anchors to the left** and **Anchors to the right** tables, define these parameters:

- Z-coordinate – elevation at which anchor connects the sheet piling;
- slope angle of anchor to horizontal line;
- length of anchor;
- EF – axial stiffness;
- pretension;
- Nmax – max allowed value for pretension.

In the **Anchorage left** and **Anchorage right** tables, define length and stiffness for anchorage. In this case, if the **Anchorage along anchors** check box is NOT selected, then anchorage is perpendicular to the anchors (see Fig.12.4). Otherwise, along anchors.

In the **H-braces** table, define the following parameters:

- Z-coordinate – coordinate for location of H-brace;
- EF – axial stiffness;
- q – longitudinal load (per 1r.m.) in H-brace.

Click the **Settings** button in order to define parameters for automatic triangulation – area and min allowed angle between triangle sides. By default, the area is taken as equal to 2.5m^2 , and angle – 27° . Here you could also define parameter for **Iteration** – max number of iterations per step, by default it is equal to 500 and not greater than 32000. If the **Accumulate displacements** check box is selected, then nodal displacements will be

summed up by stages of analysis. By default, this check box is not selected and displacements are not summed up.

To save or open the existing problem, use appropriate buttons in the dialog box.

To start calculation, click **Calculate**.

To determine number of calculation stages

To illustrate the process, the algorithm for determining number of stages automatically is described for design model presented in Fig. 12.4.

Sheet piling of the soil is fixed with 4 anchors at the left and with 4 anchors at the right. Pit excavation is made with 4 excavations of soil.

For the specified problem, 14 stages of calculation will be determined automatically:

- 1 – soil, analysis on dead weight and load;
 - 2 – sheet piling (assemblage) and the 1st excavation of soil (disassemblage);
 - 3 – installing of the 1st H-brace (assemblage);
 - 4 – installing of the 1st pair of anchors – left and right (assemblage); etc.;
- and so on
- 14 – the last excavation of soil.

When calculation is complete, the **Output data** tab becomes available in the dialog box (see Fig. 12.5). Output data is presented graphically for every stage. When you click appropriate buttons in the **Soil** area, the following data is displayed on the screen:

- deformed shape of soil;
- contour plots of horizontal (X), vertical (Z) and combined (L) displacements;
- contour plots of normal (N_x , N_z) and shear (T_{xz}) stresses;
- state of soil at the final stage.

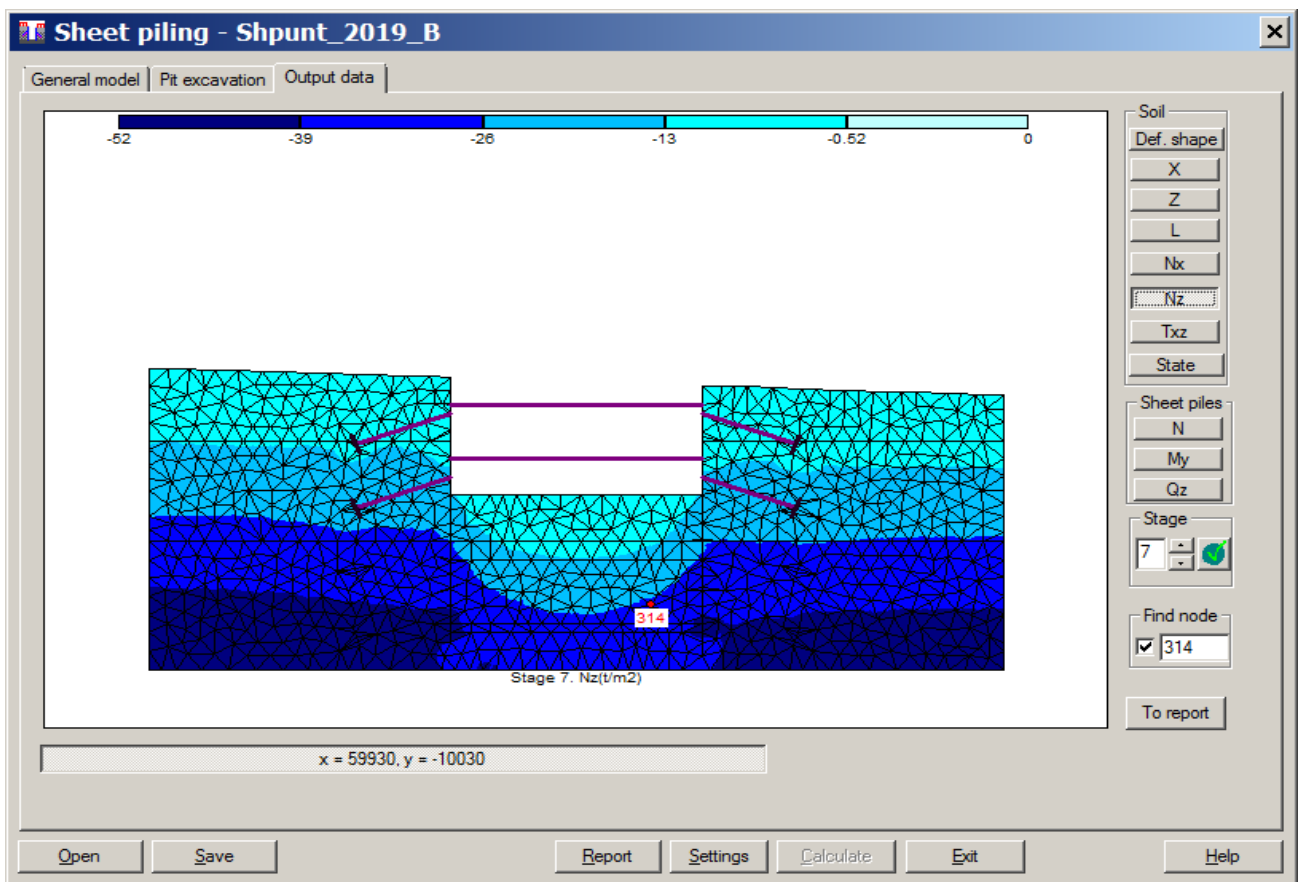


Figure 12.5 Contour plot of vertical stress N_z at stage 7

To display diagrams with moments, axial and shear forces in sheet piles, click appropriate buttons under the **Sheet piles**. When you click certain sheet pile, you will see separate window where all these diagrams are displayed together.

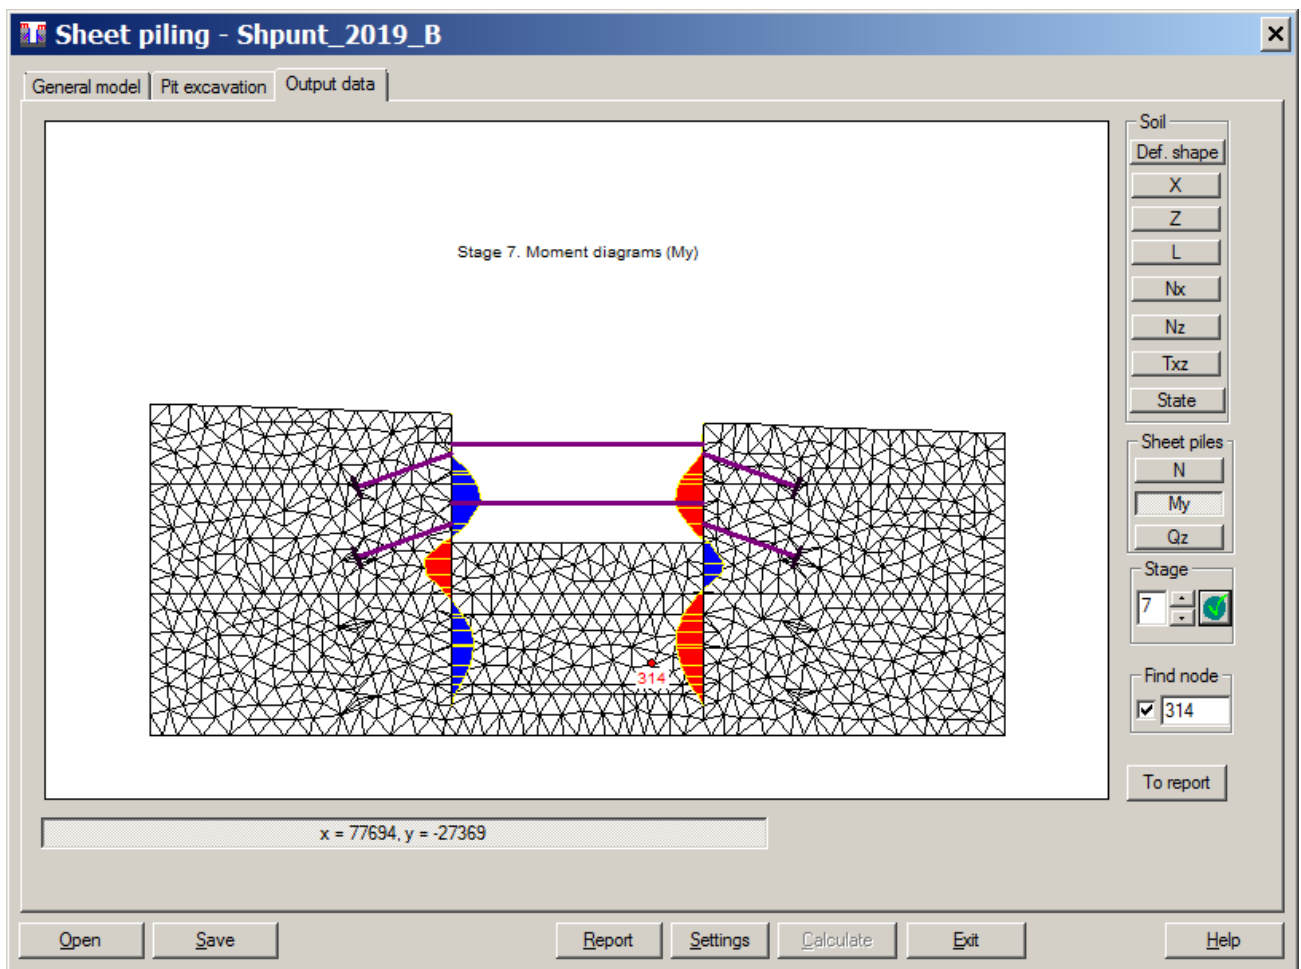


Figure 12.6

Forces in H-braces and anchors are displayed in the box below schematic presentation when you locate the pointer over certain H-brace or anchor in the mode for axial force diagrams (button **N** is active).

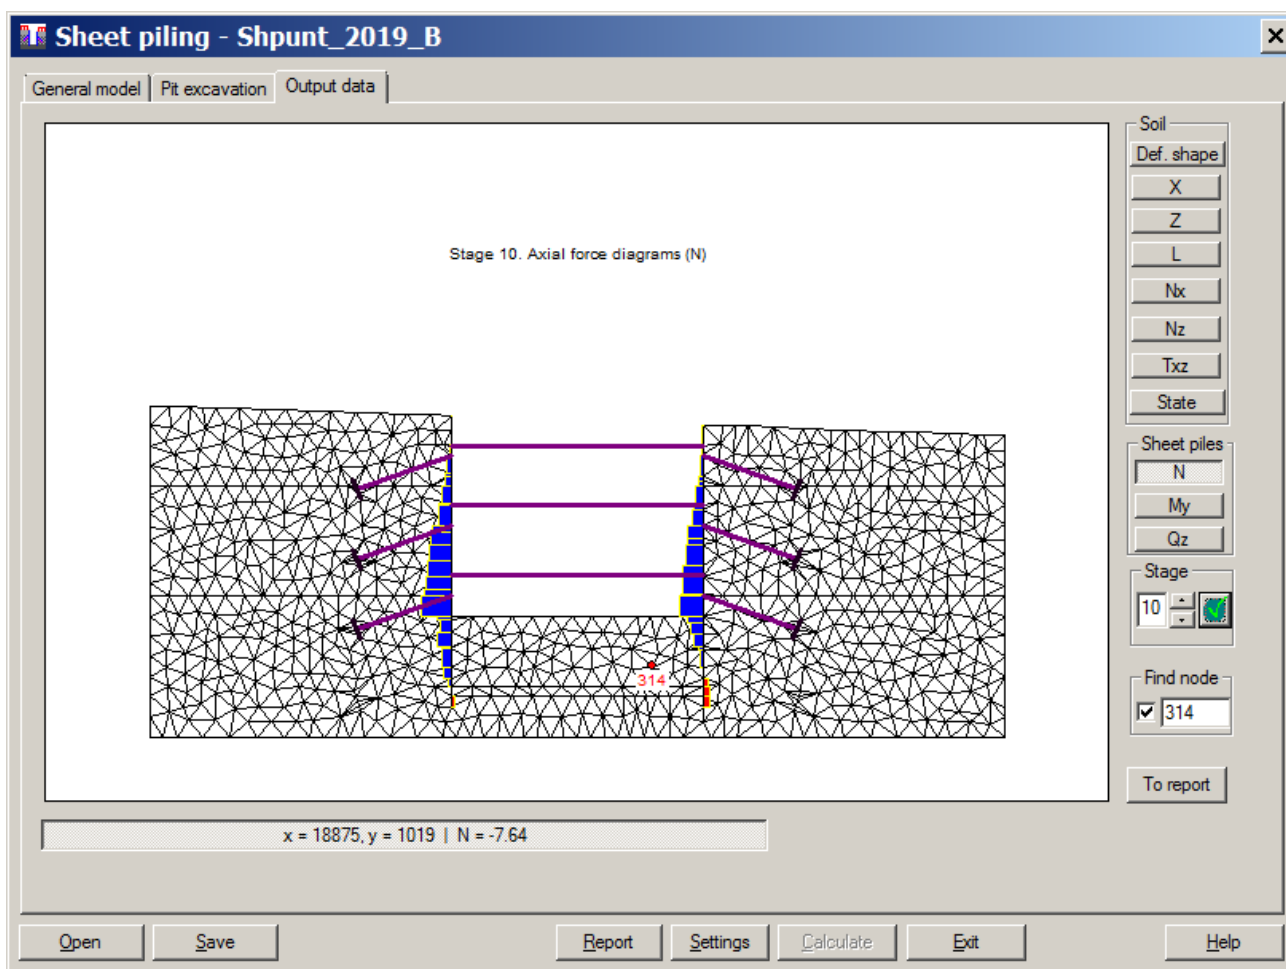


Figure 12.7

During calculation procedure, the protocol is displayed on the screen. In the iteration process, the warning about residual may appear in the protocol at any stage of calculation. For example, 'Max residual at node A. Type of restraint B. Number of executed iterations C. Residual D%'. Node with number A may be selected on the model. To do this, in the **Find node** area, input the node No. and select appropriate check box. The node will be coloured red on the model.

To add certain data to the Report file, click **To report**.

To present a report document in HTML format, click **Report**.

After calculation, three files for the problem are generated:

- NAME.wlg – design model in directory ...\\ESPRI_2018\\Walling\;
- NAME.txt – text file in format for LIRA-SAPR input data;
- NAME.mnt – assemblage tables in format required for analysis in LIRA-SAPR.

The last two files may be copied from directory ...\\ESPRI_2018\\Walling\\DATA to directory with text files in order to import and carry out analysis in [LIRA-SAPR](http://www.liraland.com) later on.

Diaphragm

Diaphragm

This chapter contains module that enables you to compute ultimate shear strength of RC diaphragms in static, earthquake and cyclic loads. The program is experimental one.

[Strength of RC diaphragm in earthquake loads](#)

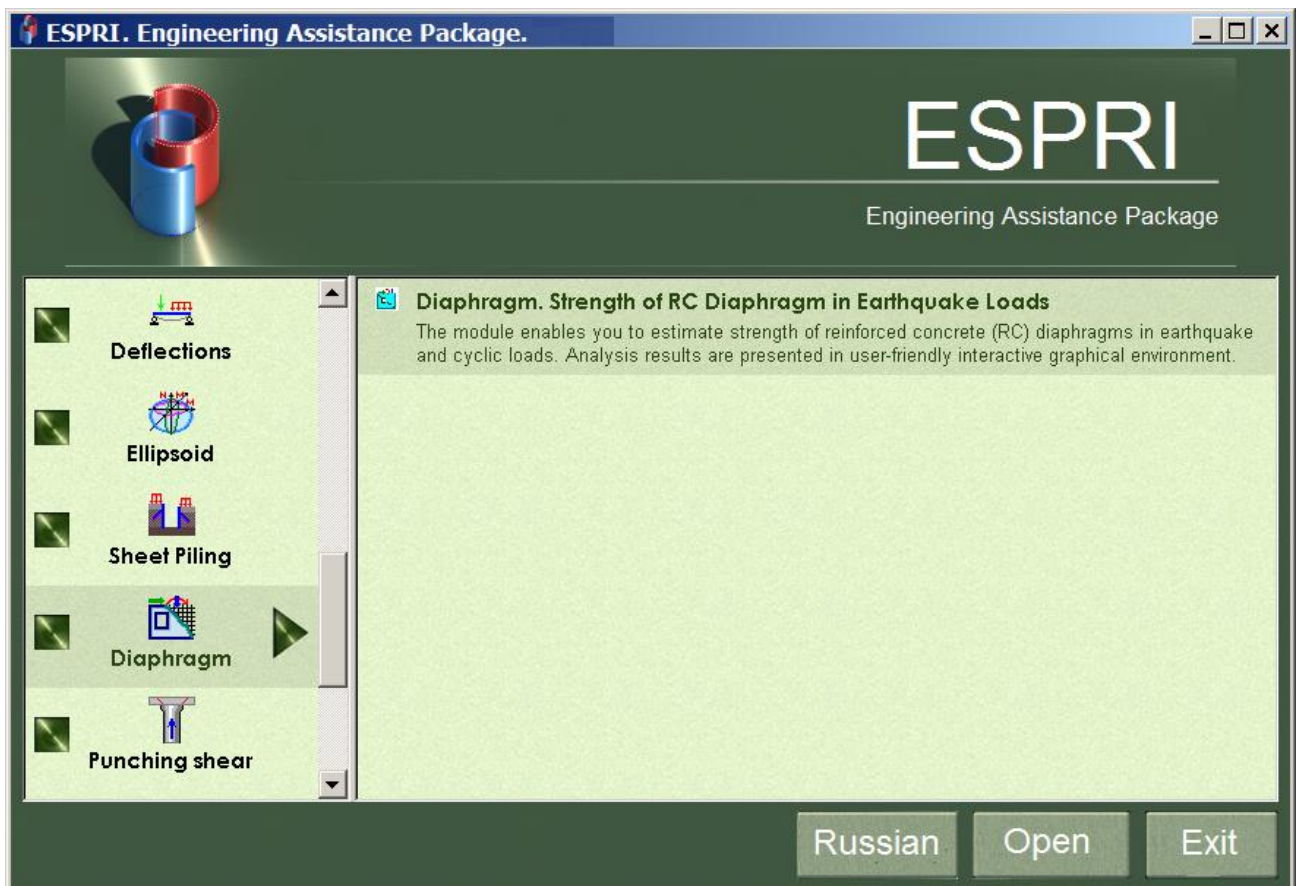


Figure 13.1

Strength of RC diaphragm in earthquake loads

The module enables you to compute ultimate shear strength of RC diaphragms in static, earthquake and cyclic loads. The program is experimental one.

In the output data you will obtain the bearing capacity curve (strength diagram) for the diaphragm. Reserve factor is computed for the specified forces N , Q , M and number of load cycles.

Input data (geometry, reinforcement parameters, partial safety factors, loads) is defined in the dialog box (see Figure 13.2).

Strength of diaphragm in earthquake and cyclic loads

Parameters of reinforcement

Class al. X: A-3, Class al. Z: A-3

Percentage of reinforcement (%)

Envelope: 0.2, Fx: 0.5, Fz: 0.5

Diagonal: 0, Fenv: 0, Fdg: 0

Diameter, spacing of reinf. (mm)

8, 150, X, Z, 12, 100

Poisson's ratio: 0.18, Seismicity (units m.): 7

Loads on wall: N, Q, M (tf, tf, tf/m)

Storey No.: 1, Numb. of cycl.: 10

Total forces

N: -400.00, Q: 200.00, M: 800.00

Duration part

N_{lt}: -285.71, Q_{lt}: 142.85, M_{lt}: 571.428

Nonlinear reactions after 1st losses ->

N: -400.00, Q: 200.00, M: 800.00

Earthquake load

☒ Earthquake load

☐ Cyclicity

Concrete class: B25 TA

Building code: SNIP 2.03.01-84

Partial safety factor

K_{Pc1}, c₂: 0.9

K_{Pr1}, r₂: 0.95

K_{us} - of concrete seam (0.9, 0.7, 0.5...): 0.7

Geometric properties of diaphragm (m)

L: 6, H: 3.3, Dt: 0.2, bopn: 0, hopn: 0, b1: 0, h1: 0, b2: 0, h2: 0

Coef. Hdes: 1, Coef. open: 1

Weight coef. of theories: 1 1 1 1 1 1 1 1 0

Design parameters of material SLS

R_c, R_r (-, +): 1890.000, 163.000

R_{ax}, R_{az}: 40000.00, 40000.00

Inelastic displacem. U_x(mm): 18.0902

Data about diaphragm

Skew angle: 601.9888°

Strength diagram: ☐

Reserve factor: 1.296302

Ultimate forces

N: -2247.738

Q: 259.2604

M: 1083.057

Buttons: Calculate, Report, Help

Figure 13.2

Assumptions and methods for calculation

Method of limit equilibrium is implemented in the program together with empirical methods for determining ultimate strength of RC diaphragms with cracks, such as:

- by dependencies of Uniform Building Code (UBC), USA;
- by dependencies of O. Hernandez, F. Barda, T. Tassios, M. Hirose, ATC-3, etc.;
- TsNIIEPzhilisha Goskomarhitectura;
- modified method RSN-13-87 (not realized in current version);
- certain provisions of Eurocode 8;
- certain provisions of SNIP 2.03.01-84* and building code CEB-FIP (Euro-International Concrete Committee – International Federation for Prestressing).

Database with bearing capacities for diaphragm in arbitrary combination of loads N_i , Q_i , M_i is generated as an open system, so you could easily modify it and add new methods. It is also possible to ignore certain methods in calculation with the help of weight factors (not realized in current version).

Input data

Geometry for diaphragm

- **L, H, Dt** – length, height, thickness in m;
- **b_{opn.}, h_{opn.}** – width and height of an opening (not realized in current version);
- **b1, h1; b2, h2** – thickness and length of adjacent columns, walls (when there are adjacent walls, it is recommended to include in calculation no more than **h1, h2 $\approx 3 \div 6 \cdot Dt$**).

Materials

Concrete – normative values of material strength corresponding to concrete classes B3.5 - B60 by SNIP 2.03.01-84*;
 Heavyweight concrete of classes: B3.5 – B1000 by SP 52.03.01-2004 (Russian Federation) ;
 Heavyweight concrete of classes: C8\10 – C50\60 by SNB 5.03.01-2004 (Republic of Belarus) ;
 Heavyweight concrete of classes: C8\10 – C50\60 by DBN V.2.6.98-2009 (Ukraine) ;
 Reinforcement – class A-I \div AV, B-I, B-II by SNIP 2.03.01-84* and A240, A400 by DSTU 3760-98 (A500 is not included in the database as this class of reinforcement is not allowed for structures subjected to earthquake loads).

Loads

Loads - **Ni, Qi, Mi** and **N long-term, Q long-term, M long-term** – total values of loads and their long-term part for the *i*-th storey (in this version analysis of one storey is allowed).
 Loads – static Kw=1; earthquake (Kw=10 - by default for earthquake); low-cycle Kw ≤ 50 .
 If Ni=0, analysis is carried out for the dead weight of the wall.

Notation for loads in output data file:

- Nz – axial compression force for diaphragm («-» **compression**); (tf)
 - Qx – shear force (sign variable); (tf)
 - Mxz – bending moment in the plane of diaphragm; (tf*m).
- (If Mxz=0, then Mxz is taken as equal to Mxz= Qx* H)
- Sei – design value for seismicity of the site 0, 7, 8, 9 units of magnitude;
 - Kw – number of cyclic loads (Kw = 1 - 50);
 - KPc12 – partial safety factor for concrete according to serviceability limit state (SLS);
 - KPr12 – partial safety factor for reinforcement according to serviceability limit state (SLS);
 - KUS – partial safety factor for diaphragm, concrete joint, etc.

Recommendations: how to assign values

to take account of cyclicity of loads, reduce shear strength along construction joint according to [1] we recommend:

- a) KUS_a=0.9 for special processing of joint, otherwise KUS_a=0.7;
- b) for design seismicity: 7, 8, 9 units of magnitude - respectively:
 KUS_b=0.9, 0.75, 0.6; without KUS_b=1.0;
- c) in the presence of construction joint in the section - in seismicity 7, 8, 9
 KUS_c = 0.7, 0.6, 0.5.
- d) for hollow and ribbed elements: KUS_d=0.9;

In the presence of several above-mentioned factors in groups a), b), c), d),... the total coefficient KUS is computed as:

$$KUS = KUS_a * KUS_b * KUS_c * KUS_d * * KUS_i.$$

Output data (repeated for number of storeys):

Ni – axial force varied from 0 to Nlim (ultimate);

eo – eccentricity of longitudinal force Ni (m);

TUi – actual shear stress (tf/m²);

TUr – design value for strength of diaphragm in shear;

TU1 – strength by Uniform Building Code of USA (UBC) 1973.

TU2 – --/-- by method of F. Barda, J. Hanson, W. Corley, 1977.

TU3 – --/-- by method of O. Hernandez, M. Zermeno, 1980.

TU4 – --/-- by method of T. Tassios, J. Lefas, S. Lulurgas, 1982.

TU5 – --/-- by method of M. Hirose (ver. 1.05.0 and later), 1980.

TU6 – --/-- by method of ATC-3 (Seismic Evaluation and Retrofit of Concrete Buildings), 1978.

TU7 – --/-- by method of NIISP, NIISK (ver.4.0 or later), 2010.

TU10 – --/-- by method of Eurocode 8 (ver.4.0 or later), 2002.

Dtau – reduction of reaction in cyclic load $\Delta \tau_n$

TUC – mean value of diaphragm strength: $TUC = (TU1 + \dots + TUi) / i$;

TUR – design min strength of diaphragm in shear with account of cyclicity (reduction of reaction);

$TUR = (TUC + TU1 + \dots + TUi - T_{max} - T_{min}) / (i - 1) - Dtau$;

ALFA – coefficient for shear influence $\alpha_s = M_i / (Q_i * L)$;

Nmax – max axial force in uniaxial compression;

Nlim – ultimate axial compression force when α_s ;

Qlim – ultimate shear force with account of cyclicity, completeness of stress diagram in concrete and service conditions for diaphragm, construction joint, etc.;

Mlim – ultimate bending moment Mxz, tf*m;

Qcr – shear force at crack origin, t;

Acr – approximate width of crack propagation for the main crack, mm;

TETA – max skew angle of diaphragm, rad;

Ux – max displacement of diaphragm top along the X-axis, mm;

SO – actual average axial stress (NZ)

SGstr. – max compressive stress in concrete strip;

Psi_c – relative length of compressed section;

SG1 – principal tensile stress (1st principal plane);

SG2 – principal compressive stress (2nd principal plane);

ALFAT – slope angle of the main crack in degrees (positive value if clockwise);

SG_max,min – max and min fibre stress;

Kreserve. – reserve factor for strength of diaphragm;

Output data is presented in the text file *Stena_Sei.htm*.

Design strength of diaphragm in shear with account of cyclicity is determined according to dependencies below.

Main dependencies for strength of wall

Designation in output data	Dependence
TU1	<p>1. by Uniform Building Code of USA (UBC) [2]:</p> $\tau_u = \tau_c + \tau_h \tau_{sy};$ $\tau_c = \min \left\{ \begin{array}{l} 0,25(\sqrt{f_c} + \sigma_0) \\ 0,05\sqrt{f_c} + (0,10\sqrt{f_c} + 0,2\sigma_0)/(a_s - 0,5) \end{array} \right\}$ <p>where</p>
TU2	<p>2. by dependences of Barda F., Hanson J., Corley W. [2, 9]:</p> $\tau_u = 0,2\sqrt{f_{cc}}(3,2 - a_s) + (1/4)\sigma_0 + \rho_v f_{sy};$
TU3	<p>3. by dependences of Hernandez O.B., Zermeno M.E. [2, 10]:</p> $\tau_u = \tau_c + \tau_s;$ $\tau_c = \sqrt{\tau_{oc}(\tau_{oc} + \sigma_0)}; \quad \sigma_0 \leq 5\tau_{oc};$ $\tau_s = \rho_h f_{sy} \quad \text{if} \quad a_s > 1,25; \quad \tau_{oc} = (0,5 - 0,1a_s^2)\sqrt{f_c} > 0,16\sqrt{f_c},$ $\tau_s = \rho_h \left(a_s - \frac{1}{4}\right) f_{sx} + \rho_v \left(\frac{5}{4} - a_s\right) f_{sy} \quad \text{if} \quad 0,25 \leq a_s \leq 1,25;$ $\tau_s = \rho_v f_{sy} \quad \text{if} \quad a_s < 0,25;$
TU4	<p>4. by dependences of Tassios T., Lefas J., Lulurgas S. [2, 11]:</p> $\tau_u = 0,5(1 - 0,1a_s^2) \left[\sqrt{f_c} + \sigma_0 + \rho_h f_{sy} \right] \quad \text{if} \quad a_s > 1,25;$ $\tau_u = 0,6\sqrt{f_c} + \rho_h f_{sy} + \frac{1}{4}\sigma_0 \quad \text{if} \quad a_s < 1,25$
TU5	<p>5. by dependences of Hirosawa M.</p> $\tau_u = 0,08 \left[\frac{0,0679 (100 \rho_l)^{(0,23)} (f_c + 180)}{\sqrt{a_s + 0,12}} + 2,7 \sqrt{\rho_h f_{sy}} + 0,1 \sigma_0 \right];$
TU6	<p>6. by dependences ATC-3 (Seismic Evaluation and Retrofit of Concrete Buildings) (USA)</p>

	$\tau_u = 0,165 \sqrt{f_c} + 0,25 \sigma_0 + \rho_h f_{sy} \leq 0,83 \sqrt{f_c};$
TU7	<p>7. by dependences of NIISK, NIISP (Ukraine) [12, 13]</p> $\left(\frac{N_i}{N_{pr}} \right)^2 + \left(\frac{Q_i}{Q_{pr}} \right)^2 - 1 = 0; \quad \tau_u = \tau_c + \tau_s;$ <p>if $a_s \geq \sqrt{2}, \sigma_0 \leq 2 f_c / 3;$</p> $\tau_c = \left(1 - 0,2 a_s^2 \right) \left[\sqrt{f_c} + \frac{1}{4} \sigma_0 \right] \geq 0,2 \sqrt{f_c};$ $\tau_s = 0,195 \rho_h f_{sx} + 0,8 p_v f_{sy} + 0,05 \rho_l f_{sy}; \quad \text{if } \rho_h, \rho_v \leq 0,005 (0,5\%); \rho_l \leq 0,035 (3,5\%).$ <p>otherwise if $a_s < \sqrt{2}$</p> $\tau_c = 0,25 \sqrt{f_c} + \frac{1}{4} \sigma_0 \geq 0,25 \sqrt{f_c} \quad \text{if } \sigma_0 \leq 0,5 f_c;$ $\tau_s = \rho_h \left(a_s - \frac{1}{3} \right) f_{sx} + \rho_v (1,25 - a_s) f_{sy} + 0,05 \rho_l f_{sy}; \quad \text{if } 0,333 \geq a_s \geq \sqrt{2};$ $\tau_s = \frac{1}{3} \rho_h f_{sx} + \frac{2}{3} \rho_v f_{sy}; \quad \text{if } a_s < 0,333;$ $Q_{pr} = \gamma_b \tau_u^* \omega^* A_b;$
TU8	<p>8. by modified dependencies RSN-13-87 for Moldova [12, 19]</p> $Q_u = Q_{bc} + \sum_{i=1}^n R_{swi} A_{swi} \leq \gamma_{kus} Q_r$
TU10	<p>10. by dependences of Eurocode 8</p> $V_R = \left[\left(\frac{L-x}{2a_s} \right) \min(N, 0,55 A_c f_c) + (1 - 0,05 \min(5, \mu^{pl}))^* \right. \\ \left. [0,16 \max(0,5, 100 p_v) (1 - 0,16 \min(5, \alpha_s / L)) \sqrt{f_c} A_c + V_w] \right] / \gamma_{el};$

	$V_{Rmax} = \left[\frac{(1 - 0.06 \min(5, \mu^{pl})) \left(1 + 1.8 \min \left(0.15, \frac{N}{A_c f_c} \right) \right)}{(1 + 0.25 \max(1.75, 100 p_v)) [1 - 0.2 \min(2, \alpha_s / L) \sqrt{f_c} d Z]} \right] / \gamma_{el},$ <p><i>if $\alpha_s / L \leq 2.0$</i></p> $V_{Rmax} = 4/7 \left[\frac{(1 - 0.02 \min(5, \mu^{pl})) \left(1 + 1.35 \min \left(0.15, \frac{N}{A_c f_c} \right) \right)}{(1 + 0.45(1.75, 100 p_v)) \sqrt{\min(40, f_c)} \delta Z \sin 2\alpha} \right] / \gamma_{el}$ <p>$Q_{pr} = V_{Rmax}$;</p> <p>α - angle between diagonal of diaphragm and axis of column: $\tan(\alpha) = 0.5L / (M_i / Q_i)$</p>
	where
	τ_c – strength of concrete strip between cracks, flexural and shear strength and dowel effect of concrete with cracks;
	τ_s – strength of reinforcement in diaphragm with cracks;
ALFA	α_s – coefficient for influence of shear $\alpha_s = M \setminus (Q * L)$;
RBC	f_c – concrete strength in compression according to serviceability limit state, (MPa) ;
RBR	f_r – concrete strength in tension according to serviceability limit state, (MPa);
RAX	f_{sx}, f_{sy} – normative yield strength for horizontal / vertical reinforcement;
RAZ	f_{tx}, f_{ty} – normative fracture limit for horizontal / vertical reinforcement;
FAX	ρ_h – coefficient for horizontal reinforcement (%Fx/100);
FAZ	ρ_v – coefficient for vertical reinforcement (%Fz/100);
FOK	ρ_l – coefficient for envelope reinforcement (%Fok/100);
SO	σ_0 – average stress;
TUR	τ_u – strength of wall in shear, (MPa);

	V_{Rmax} – max strength of wall in shear in cyclic loads according to Eurocode 8;
	V_w – portion of transverse reinforcement in strength in shear: $V_w = \rho_h \delta Z f_{sx}$;
	γ_{us} – partial safety factor of concrete joint;
	Z – lever arm for rectangular section: $Z = 0.8L$

According to dependences of Tassios T., Lefas J., Lulurgas S. [9, 18], stress at crack origin in (MPa) when $\alpha_s > 1$ will be:

$$\tau_{cr} = 0.3(2.6 - a s^2) [0.1 + 20 \rho v] \sqrt{f_c} + 2 \rho v^2 10^4, \text{ otherwise}$$

$$\tau_{cr} = 0.5(1.5 - a s^2) [0.3 + 20 \rho v] \sqrt{f_c} + 3 \rho v^2 10^4.$$

Cyclicity of earthquake loads is taken into account by idealized model of hysteresis of reinforced concrete walls (see Figure 13.4).

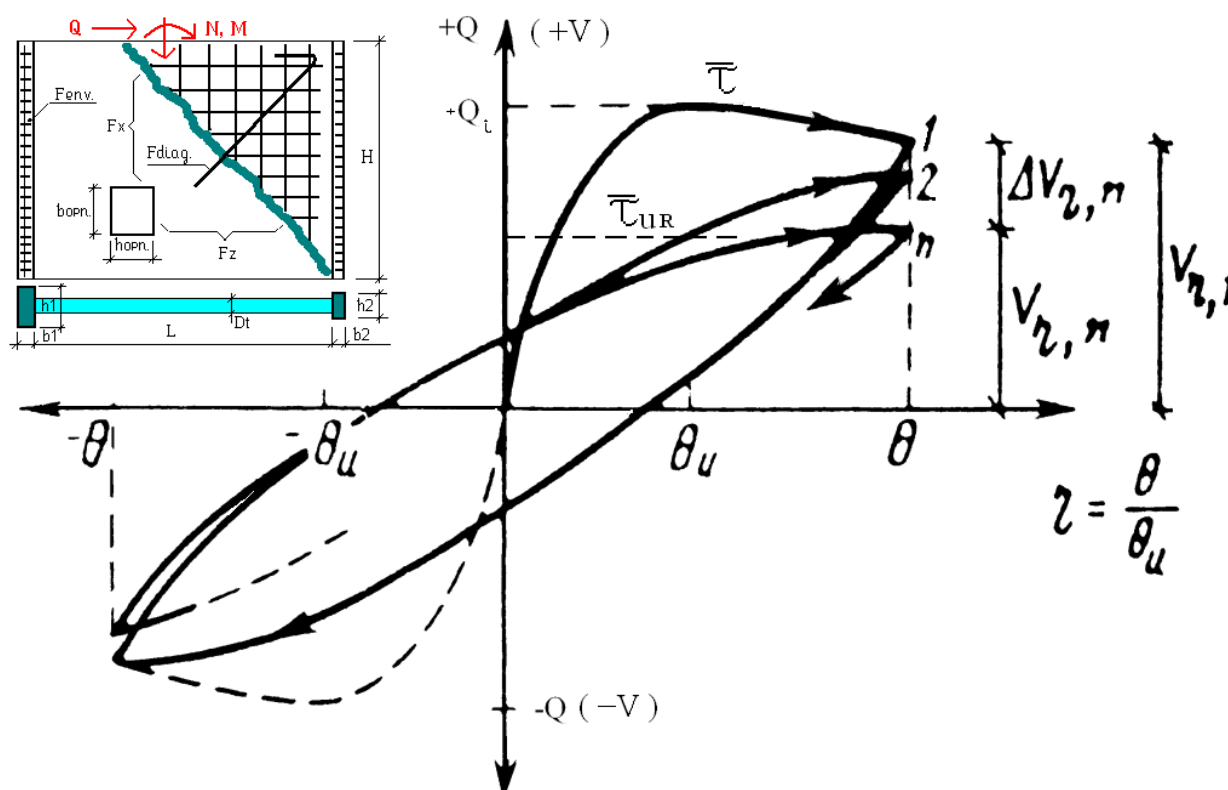


Fig. 13.3 Parameters of deformation in wall:

θ – angular deformation; τ_{ur} – design min strength of diaphragm in shear with account of cyclicity;

τ_n / τ_1 – reduction of reaction after n –cycles with amplitude $\pm \theta$;

ΔV – degradation of reaction ($\Delta\tau_n$).

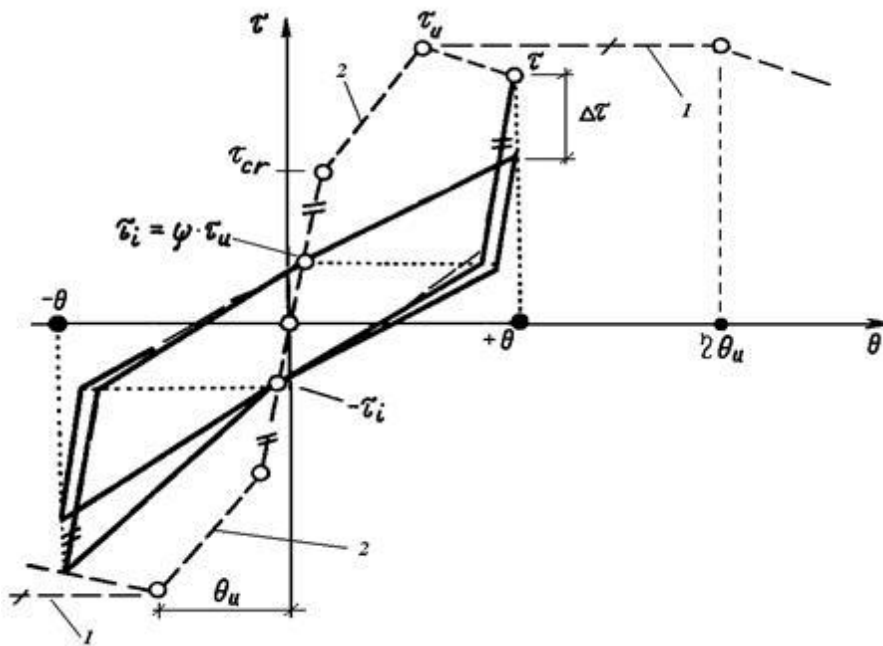


Fig. 13.4 Idealized model of hysteresis.

1 – skeleton curve of cyclic load in bending;

2 – skeleton curve of cyclic load in shear;

τ_{cr} – average shear stress at crack origin;

$\Delta\tau_n$ – degradation of shear stress [DTAU] for n -cycles of loading:

$$\Delta\tau_n = \beta_d \cdot \sqrt[4]{n \cdot \tau_i}, \text{ where } \beta_d \text{ – coefficient of reaction degradation according to [9].}$$

Strength diagram for the diaphragm along **N~Q** and **N~M** according to above-mentioned criteria is presented graphically (see Fig.13.5).

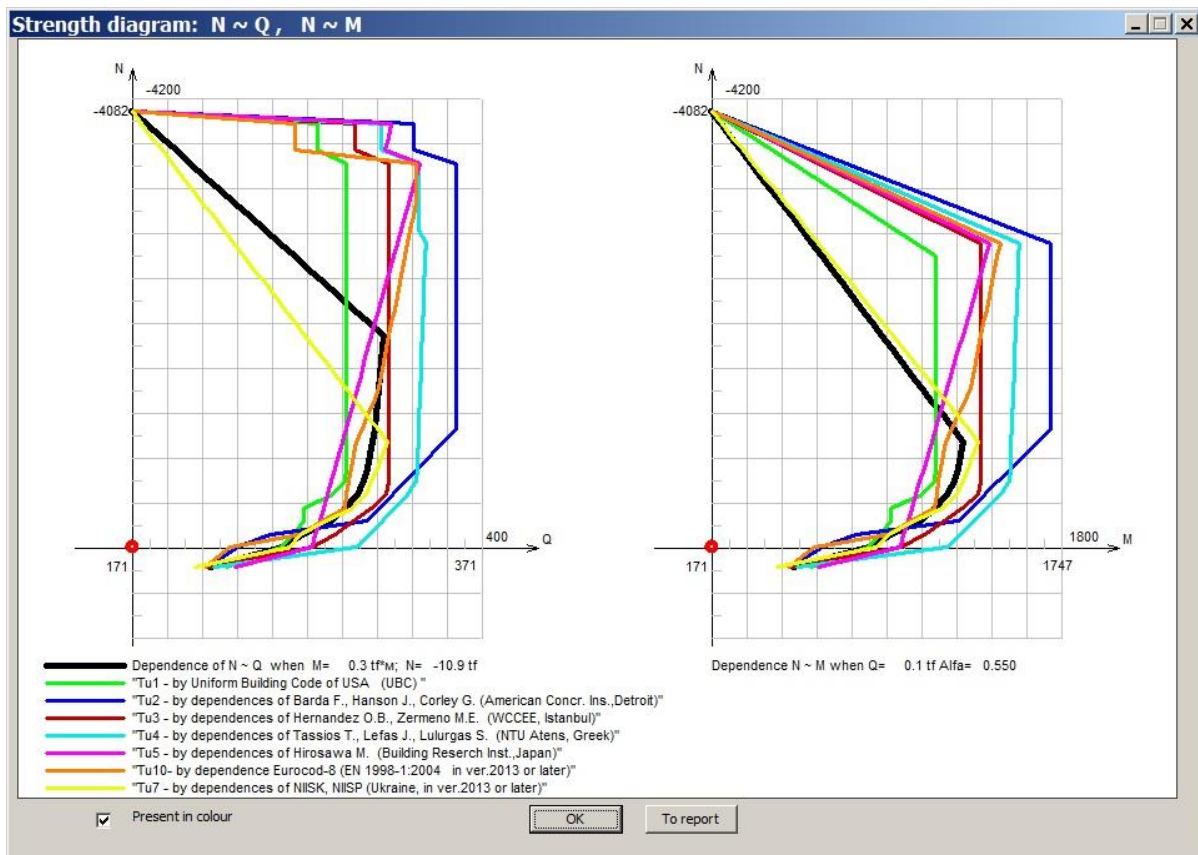


Fig. 13.5 Strength diagram for the diaphragm along $N \sim Q$ and $N \sim M$.

Punching shear

Punching shear

This chapter contains modules for punching shear analysis of reinforced concrete slabs along arbitrary and rectangular contour.

The following building codes are supported:

- SNIP 2.01.03-84*;
- SNIP 52-01-03;
- provisions of scientific and technical report made by GUP NIIZHB (contract No. 709 of October 01, 2002);
- Eurocode 2.

The chapter contains the following modules:

[Punching shear for arbitrary contour](#)

[Punching shear for rectangular contour](#)

[Punching shear analysis \(Eurocode\)](#)

[Punching shear analysis \(Belarus\)](#)

[Punching shear for circular contour \(Eurocode\)](#)



Figure 14.1

Punching shear for arbitrary contour

This module enables you to carry out punching shear analysis of floor slabs and foundation slabs.

Shape of the punching shear contour is determined automatically depending on the type of column section. The following sections of columns are available: circular, rectangular, T-section, angle section and cross section. Dimensions of punching shear contour are computed depending on specified slope angle of punching shear pyramid (by default, this angle is equal to 45 degrees).

Open contour (there is an opening in the slab or the column is located at the slab edge) is generated by cutting off certain part from the contour. Cut-off part is simulated with straight line that passes through the point with specified coordinates and at specified slope angle to the horizontal X-axis.

Punching shear for arbitrary contour

Geometry, cm

☐ Circular ☐ Rectangular ☐ T-section ☐ Angle section ☐ Cross section

b1: 30, h1: 24
 b2: 21, h2: 33
 b3: 54, h3: 57
 Slab thickness (H): 33

Code: SNIP 52-01-03
 Reinforcement class: A400
 Distance to reinf., cm: 3
 Spacing of rebars, cm: 10
 Concrete class: B30
 Rbt, t/m2: 122

Parameters of cut off

Nº	x, cm	y, cm	angle, deg
1	75	0	90

x: 75, y: 0, angle: 90
 Add Edit Delete

Forces

F, t: -172
 Mx, t*m: 1.23
 My, t*m: -2.12

Output data

Area of reinforcement with specified spacing, cm2: 1.71755
 Total area of reinforcement, cm2: 60.0883

Slope angle between side faces of punching shear pyramid and XOY-plane, deg: 35
☒ Calculate by code
☐ Calculate by qsw

Calculate Exit Help Report

Figure 14.2

Punching shear contour is computed for concentrated load F and concentrated moments M_x and M_y applied at the gravity centre of column. The following **sign convention** is accepted:

- positive load F is directed upwards (along the Z-axis),
- positive moments M_x and M_y are located in the XoZ and YoZ -planes respectively and are directed anti-clockwise if you look from the end of the Y and X-axes.

Section moduli of contour that should be considered in calculation are determined depending on direction of specified moments M_x and M_y .

The following provisions are considered in calculation:

- 1) all calculations are made relative to central (but in general case, not principal) axes of contour X and Y; these axes pass through its gravity centre and are parallel to faces of section for (non-circular) column;
- 2) specified concentrated load F is applied at the gravity centre of the column;
- 3) moment M_x acts along the X-axis (about the Y-axis) while moment M_y – along the Y-axis (about the X-axis);
- 4) concentrated load cannot be equal to zero;
- 5) both moments may be equal to zero;
- 6) positive eccentricities are located at positive values of appropriate coordinates;
- 7) if gravity centres of column and punching shear contour do not coincide, design momenta with account of sign convention are computed;
- 8) bearing capacity of concrete and reinforcement in punching shear zone is checked by absolute values of the specified load and design moments.

Reinforcement is computed if the following conditions are **not** satisfied:

- 1) $F \leq F_{b,ult}$;
- 2) $\frac{F}{F_{b,ult}} + \frac{M_x}{M_{bx,ult}} + \frac{M_y}{M_{by,ult}} \leq 1$;
- 3) $\frac{M_x}{M_{bx,ult}} + \frac{M_y}{M_{by,ult}} \leq \frac{F}{F_{b,ult}}$.

The check below is made in calculation:

$$\frac{F}{F_{b,ult} + F_{sw,ult}} + \frac{M_x}{M_{bx,ult} + M_{sw,x,ult}} + \frac{M_y}{M_{by,ult} + M_{sw,y,ult}} \leq 1, \text{ where}$$

$F_{b,ult}$ – ultimate axial force that concrete of design cross-section of slab may take;

$M_{bx,ult}$ – ultimate moment in concrete about the Y-axis (in plane that passes through the X-axis);

$M_{by,ult}$ – ultimate moment in concrete about the X-axis (in plane that passes through the Y-axis);

$F_{sw,ult}$ – ultimate axial force in reinforcement;

$M_{sw,ult}$ – ultimate moment in reinforcement about the Y-axis (in plane that passes through the X-axis);

$M_{sw,ult}$ – ultimate moment in reinforcement about the X-axis (in plane that passes through the Y-axis).

Slab thickness is not limited.

Check for moments that act on open contour is made with min values of W_x and W_y (section moduli for contour).

Area of transverse reinforcement with specified spacing is computed if the following condition is satisfied:

$$0 \leq F_{sw, ult} \leq F_{b, ult}$$

If $F_{sw, ult} > F_{b, ult}$, then the message '*Ultimate force in reinforcement exceeds ultimate force in concrete*' is displayed and reinforcement is not computed.

To display all temporary and final data for the calculation, in the **Output data** area of the dialog box, click **More**.

To present a report document in HTML format, click **Report**.

Input data

To determine punching shear contour, in the **Geometry** area of the dialog box, define the type of column section, its dimensions and thickness of floor slab.

To convert closed contour into an open one, in the **Parameters of cut off** area, define coordinates **X**, **Y** and rotation **angle** for cut off line that passes through the contour and click **Add**. Specified parameters will be displayed in the table. Coordinates for the point are defined in the accepted coordinate system presented on schematic presentation of column section.

To edit parameters of cut off: select appropriate row in the **Parameters of cut off** table, then specify new parameters and click **Edit**.

To delete specified parameters of cut off: select appropriate row in the **Parameters of cut off** table and click **Delete**. In this case, if the row in the table is not selected, the last-defined row will be deleted.

In the upper right corner of the dialog box, specify materials: define class of concrete for the slab or **Rbt** design tensile strength of material of a slab. Define class of reinforcement or **Rsw** design tensile strength of transverse reinforcement.

In the appropriate boxes define concrete cover (distance to reinforcement) and spacing for tensile reinforcement in a slab.

In the **Forces** area, define loads on column - concentrated load **F**, moments **Mx** and **My**.

When input data is defined, click **Calculate**.

Output data

In the **Output data** area of the dialog box you will see values for area of transverse reinforcement with specified spacing and total area of reinforcement

The dialog box titled "Output data (in detail)" displays the following data:

u	3.49848	m	Fb,ult	182.866	t	Fsw,ult	139.7	t
Wx	0.672995	m ²	Mbx,ult	35.1776	t*m	Msw,x,ult	26.8738	t*m
Wy	1.47965	m ²	Mby,ult	77.3414	t*m	Msw,y,ult	59.0848	t*m
						Rsw	29061.4	t/m ²
v=F/Fb,ult+Mx/Mbx,ult+My/Mby,ult						1	qsw	49.9146 t/m
						Asw	1.71755	cm ²
						Asw_sum	60.0883	cm ²

A "Close" button is located at the bottom center of the dialog box.

Figure 14.3

If $F_{sw,ult} > F_{b,ult}$, then the message 'Ultimate force in reinforcement exceeds ultimate force in concrete' is displayed.

To display all temporary and final data for the calculation, in the **Output data** area of the dialog box, click **More**.

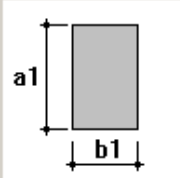
To present a report document in HTML format, click **Report**.

Punching shear for rectangular contour

This module enables you to carry out punching shear analysis of floor slabs and foundation slabs with concentrated load and concentrated moments.

Punching shear for rectangular contour

Geometry, cm



Column

b1 a1


Slab thickness (H)

Slope angle between side faces of punching shear pyramid and XOY-plane

deg

Schematic presentation of cross-section contours in punching shear:

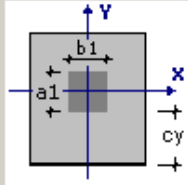- ☐ column inside slab (closed contour);
- ☐ column at slab edge, parallel to Y-axis (open contour);
- ☒ column at slab edge, parallel to X-axis (open contour);
- ☐ column at corner of rectangular slab (open contour);
- ☐ column inside slab near opening (open contour)
- ☐ wall end inside slab (open contour of three parts);
- ☐ wall end at slab edge (open contour of two parts);
- ☐ slab at corner of wall (open contour of three parts).



Cx,cm Cy,cm a0, b0,

Code

Reinforcement class

Concrete class

Rbt, t/m2

Distance to reinf., cm

Spacing of rebars, cm

Forces

F,t

Mx,t*m

My,t*m

Output data

Area of reinforcement with specified spacing, cm2

Total area of reinforcement, cm2

☒ Calculate by code

☐ Calculate by qsw

Figure 14.4

The following design cases are considered:

1. Interaction of slab with rectangular column:

- column inside slab (closed contour);
- column at slab edge that is parallel to the Y-axis (open contour);
- column at slab edge that is parallel to the X-axis (open contour);
- column at corner of rectangular slab (open contour);

- column inside slab near opening (open contour).

2. Interaction of slab with wall:

- wall end inside slab (open contour of three parts);
- wall end at slab edge (open contour of two parts);
- slab at corner of wall (open contour of three parts).

Parameters of punching shear contour are computed depending on specified slope angle of punching shear pyramid (by default, this angle is equal to 45 degrees).

Concentrated load **cannot be** equal to zero.

Both moments **may be** equal to zero.

Values of the specified moments are modified automatically depending on displacement of contour centre relative to the gravity centre of the column.

The following **sign convention** is accepted for loads:

- positive load F is directed upwards (along the Z -axis),
- positive moments M_x and M_y are located in the XoZ and YoZ -planes respectively and are directed anti-clockwise if you look from the end of the Y and X -axes.

Positive eccentricities are located at positive values of appropriate coordinates.

Section moduli of contour (W_x and W_y) that should be considered in calculation are determined depending on the sign of specified moments M_x and M_y .

In calculation of open contour, slab edges are located opposite to direction of the X and Y -axes.

Important. If column is located inside the slab near the opening, it is considered that the opening generates gaps a_0 and b_0 in punching shear contour. Gaps are always located on the right and upper sides of contour. Lengths of gaps and distances from gaps to column axes are defined by the user manually.

a_0 – gap length on right side of contour;

a_2 – distance (with appropriate sign) from the *lower end* of gap a_0 to the Y -axis;

b_0 – gap length on upper side of contour;

b_2 – distance (with appropriate sign) from the *left end* of gap b_0 to the X -axis.

For calculation by SNIP 2.03.01-84*, moments M_x and M_y are ignored.

Bearing capacity of concrete and reinforcement in punching shear zone is checked by absolute values of the specified load and moments.

There are two modes for calculation.

Mode 1. Calculation strictly by building code

If the **Calculation by code** option is selected, calculation will be made according to requirements of selected building code.

SNIP 52-01-2003

Reinforcement is computed if the following conditions are **not** satisfied:

$$1) F_b \leq F_{b,ult};$$

$$2) v = \frac{F_b}{F_{b,ult}} + \frac{M_x}{M_{bx,ult}} + \frac{M_y}{M_{by,ult}} \leq 1;$$

$$3) \frac{M_x}{M_{bx,ult}} + \frac{M_y}{M_{by,ult}} \leq \frac{F_b}{F_{b,ult}}.$$

In this case, if $\frac{M_x}{M_{bx,ult}} + \frac{M_y}{M_{by,ult}} > \frac{F_b}{F_{b,ult}}$, then it is considered that

$$\frac{M_x}{M_{bx,ult}} + \frac{M_y}{M_{by,ult}} = \frac{F_b}{F_{b,ult}}.$$

The check below is made in calculation:

$$4) v = \frac{F_b}{F_{b,ult} + F_{sw,ult}} + \frac{M_x}{M_{bx,ult} + M_{sw,x,ult}} + \frac{M_y}{M_{by,ult} + M_{sw,y,ult}} \leq 1.$$

Notations accepted in the formulas:

$F_{b,ult}$ – ultimate axial force that concrete of design cross-section of slab may take;

$M_{bx,ult}$ – ultimate moment in concrete about the Y-axis (in plane that passes through the X-axis);

$M_{by,ult}$ – ultimate moment in concrete about the X-axis (in plane that passes through the Y-axis);

$F_{sw,ult}$ – ultimate axial force in reinforcement;

$M_{sw,ult}$ – ultimate moment in reinforcement about the Y-axis (in plane that passes through the X-axis);

$M_{sw,ult}$ – ultimate moment in reinforcement about the X-axis (in plane that passes through the Y-axis).

v – check parameter.

SP 63.13330.2012

Reinforcement is computed if the following conditions are **not** satisfied:

$$1) F_b \leq F_{b,ult};$$

$$2) V = \frac{F_b}{F_{b,ult}} + \frac{M_x}{M_{bx,ult}} + \frac{M_y}{M_{by,ult}} \leq 1;$$

$$\frac{M_x}{M_{bx,ult}} + \frac{M_y}{M_{by,ult}} > 0.5 \frac{F_b}{F_{b,ult}},$$

In this case, if

$$\frac{M_x}{M_{bx,ult}} + \frac{M_y}{M_{by,ult}} = 0.5 \frac{F_b}{F_{b,ult}},$$

then it is considered that

The check below is made in calculation:

$$3) V = \frac{F_b}{F_{b,ult} + F_{sw,ult}} + \frac{M_x}{M_{bx,ult} + M_{sw,x,ult}} + \frac{M_y}{M_{by,ult} + M_{sw,y,ult}} \leq 1.$$

In this case, if

$$\frac{M_x}{M_{bx,ult} + M_{sw,x,ult}} + \frac{M_y}{M_{by,ult} + M_{sw,y,ult}} > 0.5 \frac{F_b}{F_{b,ult} + F_{sw,ult}}$$

then it is considered that

$$\frac{M_x}{M_{bx,ult} + M_{sw,x,ult}} + \frac{M_y}{M_{by,ult} + M_{sw,y,ult}} = 0.5 \frac{F_b}{F_{b,ult} + F_{sw,ult}}$$

If $V \leq 1$, then strength of slab in punching shear is provided with concrete.

Mode 2. Calculation by qsw

If the **Calculation by qsw** option is selected, calculation will be made by obtained value of force per r.m. in transverse reinforcement **qsw** with no limitations upwards.

In any mode of calculation, area of transverse reinforcement with specified spacing is computed if the following condition is satisfied:

$$0.25F_{b,ult} \leq F_{sw,ult} \leq F_{b,ult}.$$

If $F_{sw,ult} > F_{b,ult}$, then the message 'Ultimate force in reinforcement exceeds ultimate force in concrete' is displayed and reinforcement is not computed.

If $F_{sw,ult} < 0.25 F_{b,ult}$, then it is considered that $F_{sw,ult} = 0.25 F_{b,ult}$.

Output data:

Asw – area of transverse reinforcement with specified spacing.

Asw_sum – total area of reinforcement.

Output data (in detail)											
a	1.035	m	F _{b,ult}	96.8436	t	M _{x1}	0.62	t*m	M _{y1}	15.3944	t*m
b	0.87	m	F _{sw,ult}	92.9447	t	X _o	0	m	Y _o	0.670638	m
u	2.94	m	M _{bx,ult}	33.8162	t*m	X	0	m	Y	0.51	m
W _x	1.0266	m ²	M _{by,ult}	17.1337	t*m	ex	0	m	ey	0.160638	m
W _y	0.520149	m ²	M _{sw,x,ult}	32.4548	t*m	v	1		q _{sw}	39.5173	t/m
R _{sw}	29061.4	t/m ²	M _{sw,y,ult}	16.4439	t*m				Asw	1.35978	cm ²
									Asw_sum	39.9777	cm ²

Close

Figure 14.5

To display all temporary and final data for the calculation, in the **Output data** area of the dialog box, click **More**. If reinforcement is not required, then value for parameter **v** is displayed according to condition 2). Otherwise, value for parameter **v** is displayed according to condition 4).

To present a report document in HTML format, click **Report**.

Punching shear analysis (Eurocode)

The module enables you to carry out punching shear analysis of rectangular slabs and rectangular foundation slabs according to EN 1992-1-1 (Eurocode 2), DBN V.2.6-98:2009, DSTU B V.2.6-156:2010 (Ukraine) and CH PK EN 1992-1-1:2004/2011 (Kazakhstan).

The following cases (schematic presentations) may be defined:

1. Column inside slab.
2. Column inside slab: opening to the right of the column.

3. Column inside slab: opening above the column.
4. Column at the left edge (of slab) that is parallel to Y-axis.
5. Column at the left edge (of slab) that is parallel to Y-axis: opening to the right of the column.
6. Column at the bottom edge (of slab) that is parallel to X-axis
7. Column at the bottom edge (of slab) that is parallel to X-axis: opening above the column.
8. Column at corner of slab.

For every case, the following variants may be considered:

1. No capital.
2. Capital short – check only along control section outside the capital.
3. Capital long – check along control section within the capital limits.
4. Capital long – check along control section of slab outside the capital.

The dialog box contains two tabs (see the figure below): **Input data** and **Output data**.

Punching shear analysis (Eurocode)

Input data | Output data

Schematic presentation

Column inside slab ☐ No capital

Geometry, mm

cx: 500
cy: 600
H: 90
LHX: 200
LHY: 220
Slab thickness: 180

Coefficient for eccentricity: 1.15
Applied force (Ved), kN: 1800

Materials

Characteristic compressive cylinder strength of concrete (f_{ck}), MPa: 30
Coefficient taking account of long term effects on the compressive strength (acc): 1
Partial safety factor for concrete material properties (γ_c): 1.5
Compressive stress in the concrete from axial load or prestressing (G_{cp}), MPa: 0

Characteristic yield strength of reinforcement (f_{yk}), MPa: 500
Partial safety factor for properties of reinforcement (γ_s): 1.15
Equivalent longitudinal reinforcement ratio (ρ_l): 0.005
Radial spacing of perimeters of shear reinforcement (s_r), mm: 200
Tangential spacing of perimeters of shear reinforcement (s_t), mm: 300
Angle between shear reinforcement and plane of slab (α), deg: 90

Open... Save... Calculate Report Cancel Help

Figure 14.6

Punching shear analysis (Eurocode)

Input data Output data

Design compressive strength of concrete (f_{cd}), MPa

Strength reduction factor for concrete cracked in shear (ν)

Design value of punching shear resistance along the control section ($v_{Rd,max}$), MPa

	capital	slab
A_{sw} , mm ²	2249.59	3965.41
$v_{Ed,c}$, MPa	3.48485	2.96392
u_1 , mm	5592.92	6141.95
R , mm	540	360
u_k , mm	2200	3880

Notes

Cancel Help

Figure 14.7

Input data

1. Geometry

If there is no capital, select the **No capital** check box.

c_x – column dimension along the X-axis, mm;

c_y – column dimension along the Y-axis, mm;

a_x – distance between slab edge and left face of column along the X-axis, mm;

a_y – distance between slab edge and bottom face of column along the Y-axis, mm;

d – effective thickness of slab, mm;

If there is a capital (the **No capital** check box should be clear)

H – height of capital;

LHX – distance from the column face to the edge of the column head along the X-axis, mm;

LHY – distance from the column face to the edge of the column head along the Y-axis, mm;

If there is an opening

Lx – dimension of opening along the X-axis, mm;

Ly – dimension of opening along the Y-axis, mm;

Sx – distance along the X-axis between right face of column and the nearest side of opening, mm; $cx/2 \leq Sx \leq 6 \cdot d$;

Sy – distance along the Y-axis between upper face of column and the nearest side of opening, mm; $cy/2 \leq Sy \leq 6 \cdot d$.

2. Load and materials

β – coefficient for eccentricity (at slab edge 1.4); may be defined manually;

V_{Ed} – applied force, kN.

Concrete

f_{ck} – characteristic compressive cylinder strength of concrete, MPa;

γ_c – partial safety factor for concrete material properties (table 2.1N); by default it is equal to 1.5;

α_{cc} – coefficient taking account of long term effects on the compressive strength; recommended value 1.0 (may be 0.8 – 1.0);

σ_{cp} – compressive stress in the concrete from axial load or prestressing; by default it is equal to 0.

Reinforcement

f_{yk} – characteristic yield strength of reinforcement, MPa;

γ_s – partial safety factor for properties of reinforcement ; by default it is equal to 1.15; may be = 1.0;

ρ_l – equivalent longitudinal reinforcement ratio ;

s_r – radial spacing of perimeters of shear reinforcement, mm;

s_t – tangential spacing of perimeters of shear reinforcement, mm;

α – angle between shear reinforcement and plane of slab, deg.

To start calculation, click **Calculate**.

If **LHX > ax** and/or **LHY > ay**, then calculation is terminated and the program displays the message: '*Capital edge is located outside the slab*'.

If **Sx < LHx** and/or **Sy < LHy**, then calculation is terminated and the program displays the message: '*Distance from the column face to the edge of the column head exceeds the distance from column face to opening*'.

Output data

On this tab you will see results of calculation.

In the appropriate boxes, the following data is displayed:

f_{cd} – design compressive strength of concrete, MPa;

ν_u – strength reduction factor for concrete cracked in shear;

$V_{Rd,max}$ – design value of punching shear resistance along the control section, MPa.

The table displays the following data:

A_{sw} – design area of reinforcement for basic control perimeter (u_1), mm²;

$v_{Ed,c}$ – stress along column face, MPa;

u_1 – length of the basic control perimeter, mm;

R – curvature radius for basic control perimeter, mm;

u_k – perimeter of column section, mm.

	капитель	плита
A_{sw} , мм ²	2249.59	3965.41
$v_{Ed,c}$, МПа	3.48485	2.96392
u_1 , мм	5592.92	6141.95
R , мм	540	360
u_k , мм	2200	3880

Figure 14.8

To present a report document in HTML format, click **Report**. The report file contains all intermediate and final results with necessary comments.

Geometry, mm		
cx	Column dimension along X	500
cy	Column dimension along Y	600
d	Effective thickness of slab	180
LHX	Distance from the column face to the edge of the column head along X	200
LHY	Distance from the column face to the edge of the column head along Y	220
H	Height of capital	90
Materials		
fck	Characteristic compressive cylinder strength of concrete, MPa	30
acc	Coefficient taking account of long term effects on the compressive strength	1
yc	Partial safety factor for concrete material properties	1.5
Gcp	Compressive stress in the concrete from axial load or prestressing, MPa	0
fyk	Characteristic yield strength of reinforcement, MPa	500
ys	Partial safety factor for properties of reinforcement	1.15
pl	Equivalent longitudinal reinforcement ratio	0.005
sr	Radial spacing of perimeters of shear reinforcement, mm	200
st	Tangential spacing of perimeters of shear reinforcement, mm	300
α	Angle between shear reinforcement and plane of slab, deg	90
Load		
β	Coefficient for eccentricity	1.15
VEd	Applied force, kN	1800

Output data			
fcd	Design compressive strength of concrete, MPa	20	
nu	Strength reduction factor for concrete cracked in shear	0.528	
vRd,max	Design value of punching shear resistance along the control section, MPa	5.28	
		capital	slab
u1	Length of the basic control perimeter, mm	5592.92	6141.95
vEd,c	Stress along column face, MPa	3.48485	2.96392
vRd,c	Design value of punching shear resistance without reinforcement, MPa	0.550655	0.591891
vm	Min allowed resistance of concrete, MPa	0.486553	0.542218
vEd	Stress in basic contour, MPa	1.37078	1.87237
uo	Ultimate perimeter of contour in reinforcement zone, mm	13922.8	19429.3
Rp	Curvature radius of ultimate perimeter, mm	1460.74	2204.74
fywd,ef	Effective design strength of punching shear reinforcement, MPa	317.5	295
Asw	Design area of reinforcement, mm ²	2249.59	3965.41
Asw/u1	Area of reinforcement per 1r.m. of basic perimeter, mm ²	0.402221	0.645628

Figure 14.9

Punching shear analysis (Belarus)

The module enables you to carry out punching shear analysis for rectangular floor slabs and rectangular mat foundations according to building code SNB 5.03.01-02 (Belarus).

The following cases (schematic presentations) may be defined:

1. Column inside slab.
2. Column inside slab: opening to the right of the column.
3. Column inside slab: opening above the column.
4. Column at the left edge (of slab) that is parallel to Y-axis.
5. Column at the left edge (of slab) that is parallel to Y-axis: opening to the right of the column.
6. Column at the bottom edge (of slab) that is parallel to X-axis
7. Column at the bottom edge (of slab) that is parallel to X-axis: opening above the column.
8. Column at corner of slab.

For every case, the following variants may be considered:

1. No capital.
2. Capital short – $LH \leq 1.5 \cdot H$.
3. Capital medium – $1.5 \cdot H \leq LH \leq 1.5 \cdot (d+H)$.

4. Capital long – $LH > 1.5 \cdot (d + H)$. In this case, the program carries out a check of two control perimeters: within the capital limits and outside the capital.

Here d – effective height of slab; H – height of capital.

With a capital, the variant for computation is determined automatically.

The dialog box contains two tabs (see the figure below): **Input data** and **Output data**.

Punching shear analysis (Belarus)

Input data | Output data

Schematic presentation

Column at corner of slab ☐ No capital

Geometry, mm

cx 450
cy 500
H 160
LHX 520
LHY 560
Slab thickness 180
ax 400
ay 300

Coefficient for eccentricity 1.5
Punching shear force (VSd), kN 500

Materials

Class of concrete C30/37
Class of reinforcement S240
Type of reinforcing cage Tied
Partial safety factor for concrete material properties (yc) 1.5
Partial safety factor for properties of reinforcement (ys) 1.15
Equivalent longitudinal reinforcement ratio (pl) 0.02
Compressive stress in the concrete from axial load or prestressing (Gcp), MPa 0
Radial spacing of perimeters of shear reinforcement (sw), mm 100

Open... Save... Calculate Report Cancel Help

Figure 14.10

Input data

1. Geometry

Select the necessary schematic presentation from the list. If there is no capital, select the **No capital** check box.

cx – column dimension along the X-axis, mm;
cy – column dimension along the Y-axis, mm;
ax – distance between slab edge and left face of column along the X-axis, mm;
ay – distance between slab edge and bottom face of column along the Y-axis, mm;
d – effective thickness of slab, mm;

*If there is a capital (the **No capital** check box should be clear)*

H – height of capital;
LHX – distance from the column face to the edge of the column head along the X-axis, mm;
LHY – distance from the column face to the edge of the column head along the Y-axis, mm;

If there is an opening

Lx – dimension of opening along the X-axis, mm;
Ly – dimension of opening along the Y-axis, mm;
Sx – distance along the X-axis between right face of column and the nearest side of opening, mm; $cx/2 \leq Sx \leq 6*d$;
Sy – distance along the Y-axis between upper face of column and the nearest side of opening, mm; $cy/2 \leq Sy \leq 6*d$.

2. Load and material properties

β – coefficient for eccentricity: for the column inside the slab – 1.15; for the column at slab edge – 1.4; for the column at corner of slab – 1.5; may be defined manually;
 V_{Ed} – applied force, kN.

Concrete

Select class of concrete from the list. For example, C30/37.

γ_c – partial safety factor for concrete material properties; by default it is equal to 1.5;
 σ_{cp} – compressive stress in the concrete from axial load or prestressing; by default it is equal to 0.

Reinforcement

Select class of reinforcement from the list. For example, S400.

Select the type of reinforcing cage: either welded or tied.

γ_s – partial safety factor for properties of reinforcement; by default it is equal to 1.15; may be = 1.0;
 ρ_l – equivalent longitudinal reinforcement ratio;
 sw – radial spacing of perimeters of shear reinforcement, mm.

To start calculation, click **Calculate**.

If **LHX > ax** and/or **LHY > ay**, then calculation is terminated and the program displays the message: '*Capital edge is located outside the slab*'.

If **Sx < LHX** and/or **Sy < LHY**, then calculation is terminated and the program displays the message: '*Distance from the column face to the edge of the column head exceeds the distance from column face to opening*'.

Output data

On this tab you will see results of calculation.

In the appropriate boxes, the following data is displayed:

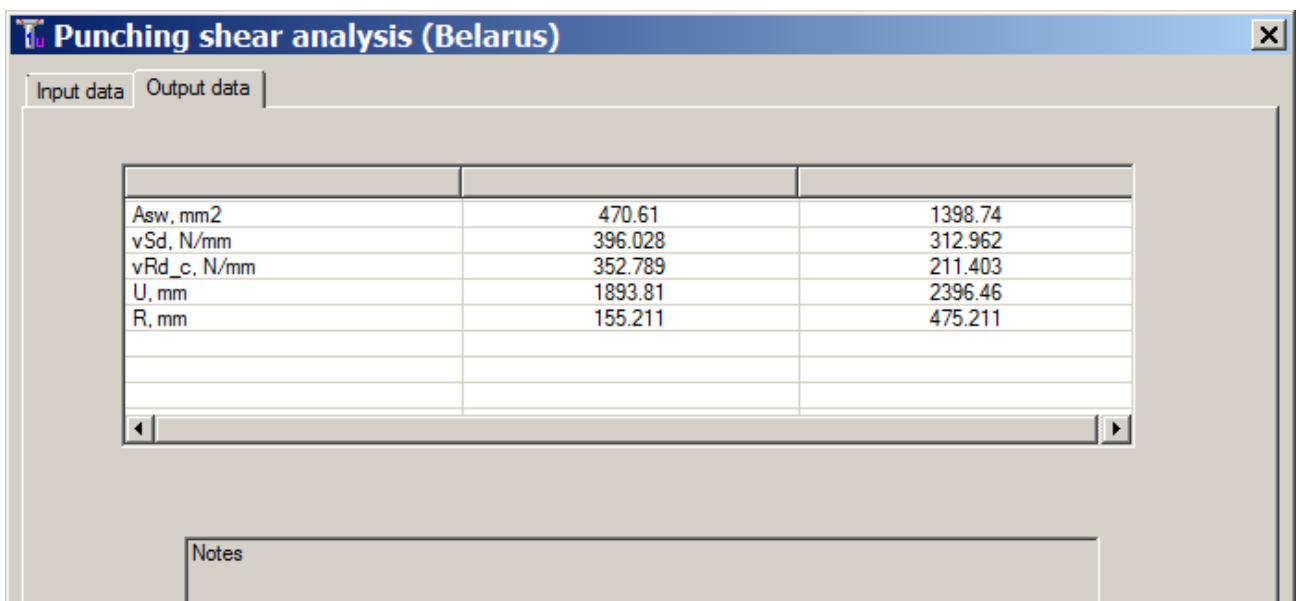
A_{sw} – design area of reinforcement for basic control perimeter (U), mm²;

v_{Sd} – force (per 1r.mm.) along control perimeter, N/mm;

v_{Rd_c} – design value of punching shear resistance (per 1r.mm.) without reinforcement, N/mm;

U – length of the basic control perimeter, mm;

R – curvature radius for basic control perimeter, mm.



A_{sw} , mm ²	470.61	1398.74
v_{Sd} , N/mm	396.028	312.962
v_{Rd_c} , N/mm	352.789	211.403
U, mm	1893.81	2396.46
R, mm	155.211	475.211

Notes

Figure 14.11

To present a report document in HTML format, click **Report**. The report file contains all intermediate and final results with necessary comments.

Input data

Column at corner of slab		
Long capital		
Geometry, mm		
cx	Column dimension along X	450
cy	Column dimension along Y	500
d	Effective thickness of slab	180
LHX	Distance from the column face to the edge of the column head along X	520
LHY	Distance from the column face to the edge of the column head along Y	560
H	Height of capital	160
ax	Distance between slab edge and left face of column along X	400
ay	Distance between slab edge and bottom face of column along Y	300
Materials		
Class of concrete		C30/37
Class of reinforcement		S240
Type of reinforcing cage		Tied
fck	Normative compressive strength of concrete, MPa	30
ftck	Normative tensile strength of concrete, MPa	2
fctm	Tensile strength of concrete (accepted for design procedure), MPa	2.9
fywd	Design strength of transverse reinforcement, N/mm ²	174
yc	Partial safety factor for concrete material properties	1.5
Gcp	Compressive stress in the concrete from axial load or prestressing, MPa	0
ys	Partial safety factor for properties of reinforcement	1.15
pl	Equivalent longitudinal reinforcement ratio	0.02
sw	Radial spacing of perimeters of shear reinforcement, mm	100
Load		
β	Coefficient for eccentricity	1.5
VSd	Applied force, kN	500

Output data

vSd,k	Force along column contour, N/mm		925.926
fcd	Design compressive strength of concrete, MPa		20
nu	Strength reduction factor for concrete cracked in shear		0.528
vmax	Design value of max force along the control section, N/mm		1795.2
U	Length of the basic control perimeter, mm	1893.81	2396.46
vSd	Force (per 1r.mm.) along control perimeter, N/mm	396.028	312.962
vRd,c	Design value of punching shear resistance (per 1r.mm.) without reinforcement, N/mm	352.789	211.403
vmin	Min allowed value of punching shear resistance (per 1r.mm.) without reinforcement, N/mm	295.652	156.522
pw,min	Min reinforcement ratio	0.00193333	0.00193333
psw	Reinforcement ratio	0.002485	0.00583671
Asw1	Min design area of reinforcement, mm2	0	0
Asw	Design area of reinforcement, mm2	470.61	1398.74
Asw/U	Area of reinforcement per 1r.mm. of basic perimeter, mm2/r.mm	0.2485	0.583671

Figure 14.12

Punching shear for circular contour (Eurocode)

The module enables you to carry out punching shear analysis of RC floor slabs and RC foundation slabs with circular column. The following building codes are supported: EN 1992-1-1 (Eurocode 2), DBN V.2.6-98:2009, DSTU B V.2.6-156:2010 (Ukraine) and CH PK EN 1992-1-1:2004/2011 (Kazakhstan).

The following cases (schematic presentations) may be defined:

1. Column inside slab.
2. Column inside slab: opening to the right of the column.
3. Column at the edge of slab.
4. Column at the edge of slab: opening to the right of the column.
5. Column at corner of slab.

For every case, the following variants may be considered:

1. No capital.
2. Capital short – check only along control section outside the capital.
3. Capital long – check along control section within the capital limits.
4. Capital long – check along control section of slab outside the capital.

The dialog box contains two tabs (see the figure below): **Input data** and **Output data**.

Punching shear analysis by Eurocode. Circular column

Input data | Output data

Schematic

Column inside slab

☐ No capital

Geometry, mm

C 400

H 90

LH 220

d 180

Coefficient for eccentricity (beta) 1.15

Applied force (VEd), kN 1000

Materials

Characteristic compressive cylinder strength of concrete (f_{ck}), MPa 30

Characteristic yield strength of reinforcement (f_{yk}), MPa 500

Coefficient taking account of long term effects on the compressive strength (acc) 1

Partial safety factor for properties of reinforcement (γ_s) 1.15

Partial safety factor for concrete material properties (γ_c) 1.5

Equivalent longitudinal reinforcement ratio (ρ_l) 0.005

Radial spacing of perimeters of shear reinforcement (s_r), mm 200

Tangential spacing of perimeters of shear reinforcement (s_t), mm 300

Compressive stress in the concrete from axial load or prestressing (G_{cp}), MPa 0

Angle between shear reinforcement and plane of slab (α), deg 90

Open... Save... Calculate Report

Cancel Help

Punching shear analysis by Eurocode. Circular column

Input data Output data

Design compressive strength of concrete (f_{cd}), MPa

Strength reduction factor for concrete cracked in shear (ν)

Design value of punching shear resistance along the control section ($v_{Rd,max}$), MPa

	capital	slab
A_{sw} , mm ²	982.271	1904.32
$v_{Ed,c}$, MPa	3.38941	2.42101
u_1 , mm	4649.56	4900.88
R_c , mm	740	780
u_k , mm	1256.64	2638.94

Notes

Input data

1. Geometry

If there is no capital, select the **No capital** check box.

C – diameter of column, mm;

a – distance between slab edge and column centre, mm;

d – effective thickness of slab, mm.

If there is a capital (the **No capital** check box should be clear)

H – height of capital;

LH – distance from the column body to the edge of the column head, mm.

If there is an opening

Lx – dimension of opening along the X-axis, mm;

L_y – dimension of opening along the Y-axis, mm;

S – distance between the column centre and the nearest side of opening along the line that connects column centre and centre of the opening, mm; $C/2 \leq S \leq (6 \cdot d + C/2)$.

2. Load and materials

β – coefficient for eccentricity (at slab edge 1.4); may be defined manually;

V_{Ed} – applied force, kN.

Concrete

f_{ck} – characteristic compressive cylinder strength of concrete, MPa;

γ_c – partial safety factor for concrete material properties (table 2.1N); by default it is equal to 1.5;

α_{cc} – coefficient taking account of long term effects on the compressive strength; recommended value 1.0 (may be 0.8 – 1.0);

σ_{cp} – compressive stress in the concrete from axial load or prestressing; by default it is equal to 0.

Reinforcement

f_{yk} – characteristic yield strength of reinforcement, MPa;

γ_s – partial safety factor for properties of reinforcement ; by default it is equal to 1.15; may be = 1.0;

ρ_l – equivalent longitudinal reinforcement ratio ;

s_r – radial spacing of perimeters of shear reinforcement, mm;

s_t – tangential spacing of perimeters of shear reinforcement, mm;

α – angle between shear reinforcement and plane of slab, deg.

To start calculation, click **Calculate**.

If $LH > a$, then calculation is terminated and the program displays the message: '*Capital edge is located outside the slab*'.

If $(S - C/2) < LH$, then calculation is terminated and the program displays the message: '*Distance from the column body to the edge of the column head exceeds the distance from column face to opening*'.

If computed radius of punching shear contour exceeds the slab limits, then analysis is terminated and appropriate warning is displayed on the screen.

Output data

On this tab you will see results of calculation.

In the appropriate boxes, the following data is displayed:

f_{cd} – design compressive strength of concrete, MPa;

ν_u – strength reduction factor for concrete cracked in shear;

$V_{Rd,max}$ – design value of punching shear resistance along the control section, MPa.

The table displays the following data:

A_{sw} – design area of reinforcement for basic control perimeter (u_1), mm²;

$v_{Ed,c}$ – stress along column face, MPa;

u_1 – length of the basic control perimeter, mm;

R – curvature radius for basic control perimeter, mm;

u_k – perimeter of column section, mm.

Punching shear analysis by Eurocode. Circular column

Input data Output data

Design compressive strength of concrete (f_{cd}), MPa

Strength reduction factor for concrete cracked in shear (ν)

Design value of punching shear resistance along the control section ($v_{Rd,max}$), MPa

	capital	slab
A_{sw} , mm ²	982.271	1904.32
$v_{Ed,c}$, MPa	3.38941	2.42101
u_1 , mm	4649.56	4900.88
R_c , mm	740	780
u_k , mm	1256.64	2638.94

To present a report document in HTML format, click **Report**. The report file contains all intermediate and final results with necessary comments.

Input data

Column inside slab		
Long capital		
Geometry, mm		
c	Diameter of column	400
d	Effective thickness of slab	180
LH	Distance from the column face to the edge of the column head along X	220
H	Height of capital	90
Materials		
fck	Characteristic compressive cylinder strength of concrete, MPa	30
acc	Coefficient taking account of long term effects on the compressive strength	1
yc	Partial safety factor for concrete material properties	1.5
Gcp	Compressive stress in the concrete from axial load or prestressing, Mpa	0
fyk	Characteristic yield strength of reinforcement, MPa	500
ys	Partial safety factor for properties of reinforcement	1.15
pl	Equivalent longitudinal reinforcement ratio	0.005
sr	Radial spacing of perimeters of shear reinforcement, mm	200
st	Tangential spacing of perimeters of shear reinforcement, mm	300
α	Angle between shear reinforcement and plane of slab, deg	90
Load		
β	Coefficient for eccentricity	1.15
VEd	Applied force, kN	1000

Output data

fcd	Design compressive strength of concrete, MPa	20	
nu	Strength reduction factor for concrete cracked in shear	0.528	
vRd,max	Design value of punching shear resistance along the control section, MPa	5.28	
		capital	slab
u1	Length of the basic control perimeter, mm	4649.56	4900.88
vEd,c	Stress along column face, MPa	3.38941	2.42101
vRd,c	Design value of punching shear resistance without reinforcement, MPa	0.550655	0.591891
vm	Min allowed resistance of concrete, MPa	0.486553	0.542218
vEd	Stress in basic contour, MPa	0.916057	1.30362
uo	Ultimate perimeter of contour in reinforcement zone, mm	7734.9	10794
Rp	Curvature radius of ultimate perimeter, mm	826.048	1447.92
fywd,ef	Effective design strength of punching shear reinforcement, MPa	317.5	295
Asw	Design area of reinforcement, mm2	982.271	1904.32
Asw/u1	Area of reinforcement per 1r.m. of basic perimeter, mm2	0.211261	0.388566

Toster

TOSTER (Chapter)

This chapter contains module that enables you to carry out static analysis of 2D and 3D bar systems in bending torsion.

[TOSTER. Thin-walled bar systems](#)



Figure 15.1

TOSTER - General notes

Thin-walled bar systems (2D and 3D) have seven degrees of freedom per node: three translations (X, Y, Z), three rotations (UX, UY, UZ) and warping (Ud).

Model of the frame is located in the XOZ-plane. X-axis is horizontal while Z-axis is vertical. Y-axis is directed out of the plane and generates the right Cartesian coordinate system with the X and Z-axes. Let us refer this coordinate system as global or principal one.

Nodal loads – forces and moments are directed relative to the global coordinate system. Force is considered to be positive if it is directed against appropriate axis. Moment is considered to be positive if it is directed clockwise when you look from the end of appropriate axis.

Initial translation is considered to be positive if it acts along direction of appropriate axes.

Initial rotation is considered to be positive if it is directed anti-clockwise when you look from the end of appropriate axis.

Restraints imposed at support nodes are directed relative to the global coordinate system. Full restraint of a node is defined with seven restraints – X, Y, Z, UX, UY, UZ, Ud.

Local coordinate system of every bar is also right Cartesian coordinate system. X1-axis is longitudinal axis of the bar; it passes from the beginning of the bar up to its end through the *gravity centre* of the section. As a rule, node of the model with the smaller number is considered as beginning of the bar while node of the model with the greater number is considered as the end of the bar.

Y1-axis and Z1-axis – principal central axes that also pass through the gravity centre.

Local axes are generated according to the rules below.

For vertical bars:

- if the X1-axis is directed upward, then the Y1-axis is horizontal and directed out of the plane at us and the Z1-axis is directed left-to-right;
- if the X1-axis is directed downward, then the Y1-axis is horizontal and directed out of the plane at us and Z1-axis is directed right-to-left.

For arbitrary oriented bars:

- the Z1-axis is always directed to the upper half-space;
- if the X1-axis is directed left-to-right, then the Y1-axis is horizontal and directed out of the plane from us;
- if the X1-axis is directed right-to-left, then the Y1-axis is horizontal and directed out of the plane at us.

Local load is oriented relative to local coordinate axes. Sign convention for the local load is similar to the sign convention for the nodal load.

If ***gravity centre and rigidity centre of the section do not coincide***, then ***local load*** (that passes through gravity centre of the section rather than through rigidity centre) ***will cause local torsion moment***. It causes warping of the section and bimoment appears in the section.

Since longitudinal axes of bars (X1) considered at nodes of the model pass through gravity centres of their sections, then nodal force will also pass through their common gravity centre. That's why, nodal force in the plane of frame will not cause warping and bimoment.

To define more precisely parameters of bending torsion, it is advisable to provide intermediate division for bars between nodes of the frame. For example, if the model represents one bar fixed at both ends, then it is advisable to divide this bar into two or more bars.

Hinges are not supported in this version of the program.

Angle of pure rotation (rotation angle of principal central axes relative to location accepted by default) is not supported in this version of the program. That's why, assigned sections of bars should be symmetric relative to the local Y1-axis.

Input data

Let's consider the order in which the input data is generated on the example of the frame presented in the Figure below.

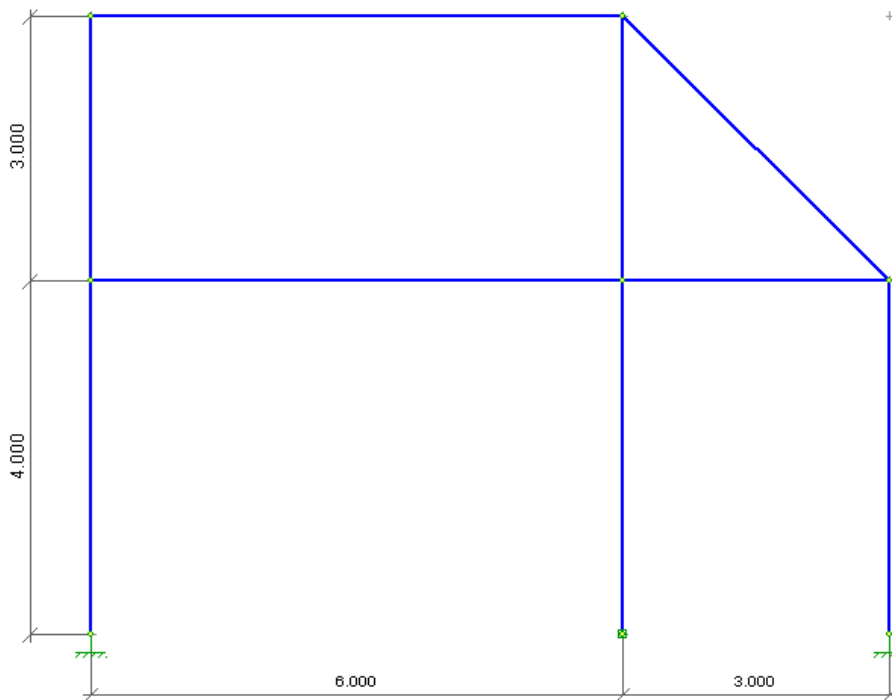


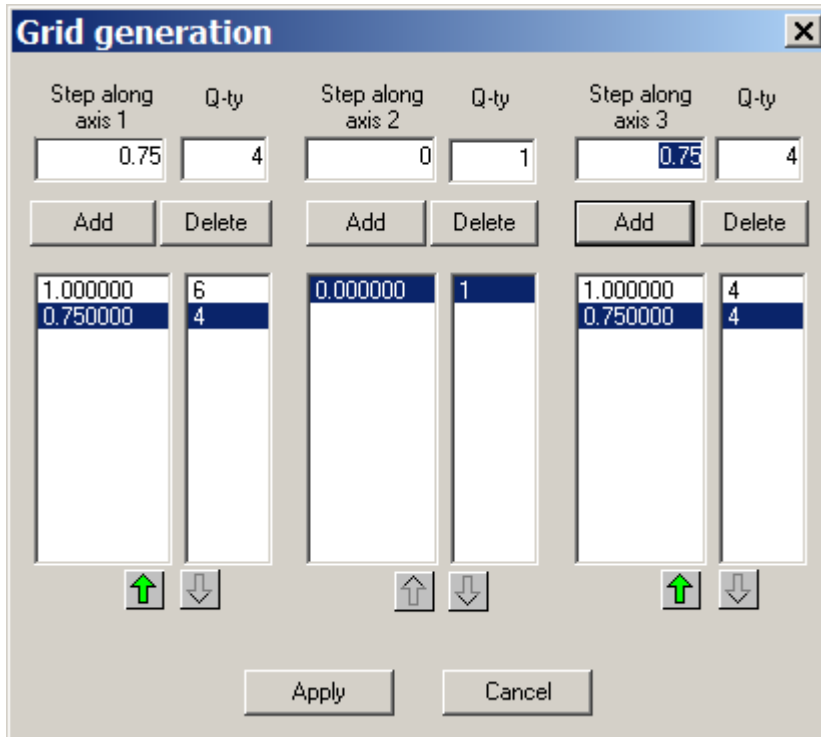


Figure 15.2

Step 1. Generate model geometry

To start the work, on the MODEL menu, click **Grid** (button  on the toolbar). In the **Grid generation** dialog box, define steps along axis 1 (horizontal axis X) and steps along axis 2 (vertical axis Z) with account of intermediate division of bars between nodes – the first span

is divided into 6 elements by 1m and the second span is divided into 4 elements by 0.75m; the first storey is divided into 4 elements by 1m and the second storey is divided into 4 elements by 0.75m. Click **Apply**. Nodes of the grid will be displayed on the screen. They are denoted with grey cross symbols. To present defined dimensions of the grid on the screen, click **Display dimensions** button  .



The dialog box titled "Grid generation" contains three columns for defining grid dimensions along axes 1, 2, and 3. Each column has input fields for "Step along" and "Q-ty", "Add" and "Delete" buttons, a list box, and up/down arrow buttons. At the bottom are "Apply" and "Cancel" buttons.

Step along axis 1		Step along axis 2		Step along axis 3	
Step along	Q-ty	Step along	Q-ty	Step along	Q-ty
0.75	4	0	1	0.75	4
Add	Delete	Add	Delete	Add	Delete
1.000000 0.750000	6 4	0.000000 1		1.000000 0.750000	4 4
↑ ↓		↑ ↓		↑ ↓	
<div>Apply</div> <div>Cancel</div>					

Figure 15.3

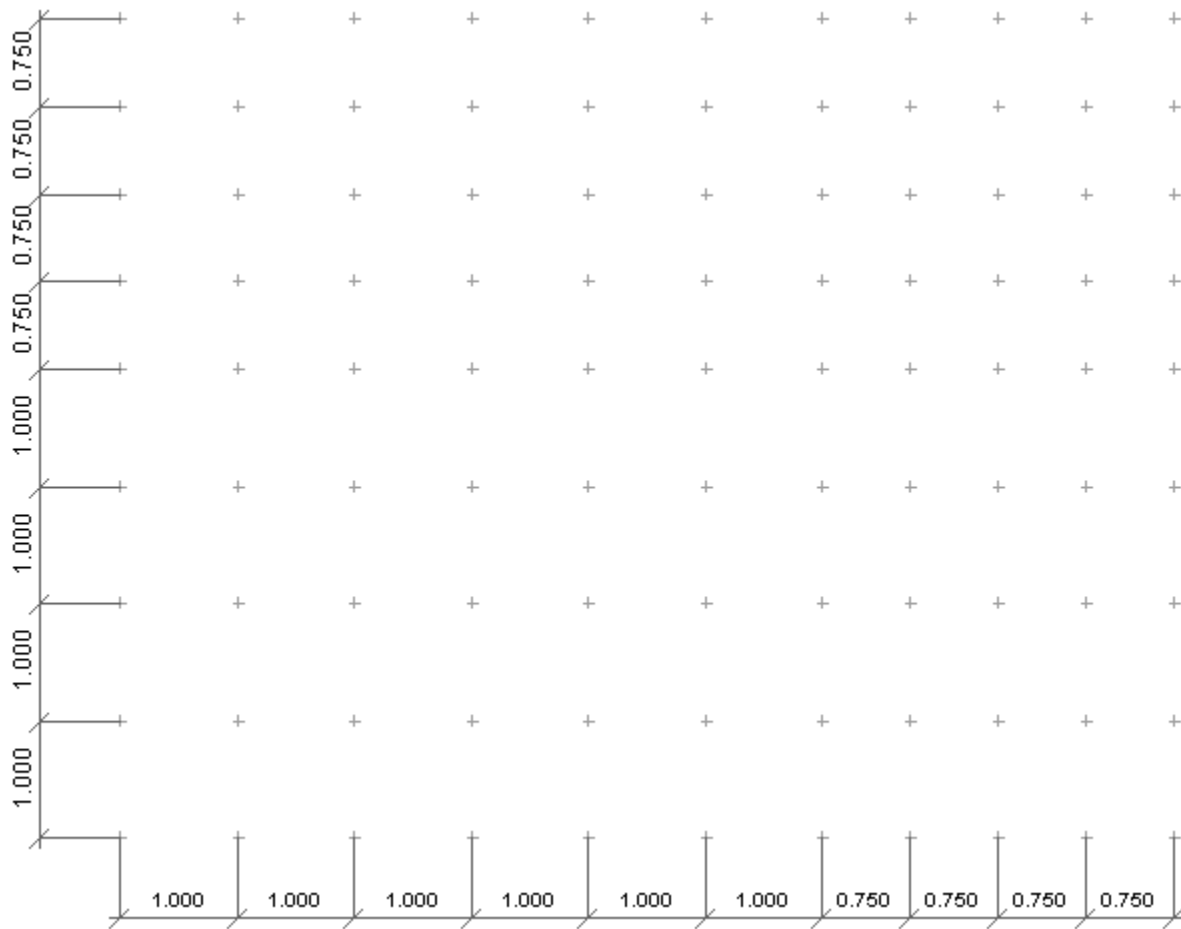


Figure 15.4

To define bars, on the MODEL menu, click **Bars** (button  on the toolbar) and connect nodes of the grid.

When you define bars, the mouse buttons work in the following way.

Left mouse button: the first click – to select the first node, the second click – to select the second node. Right mouse button: to unselect the first node.

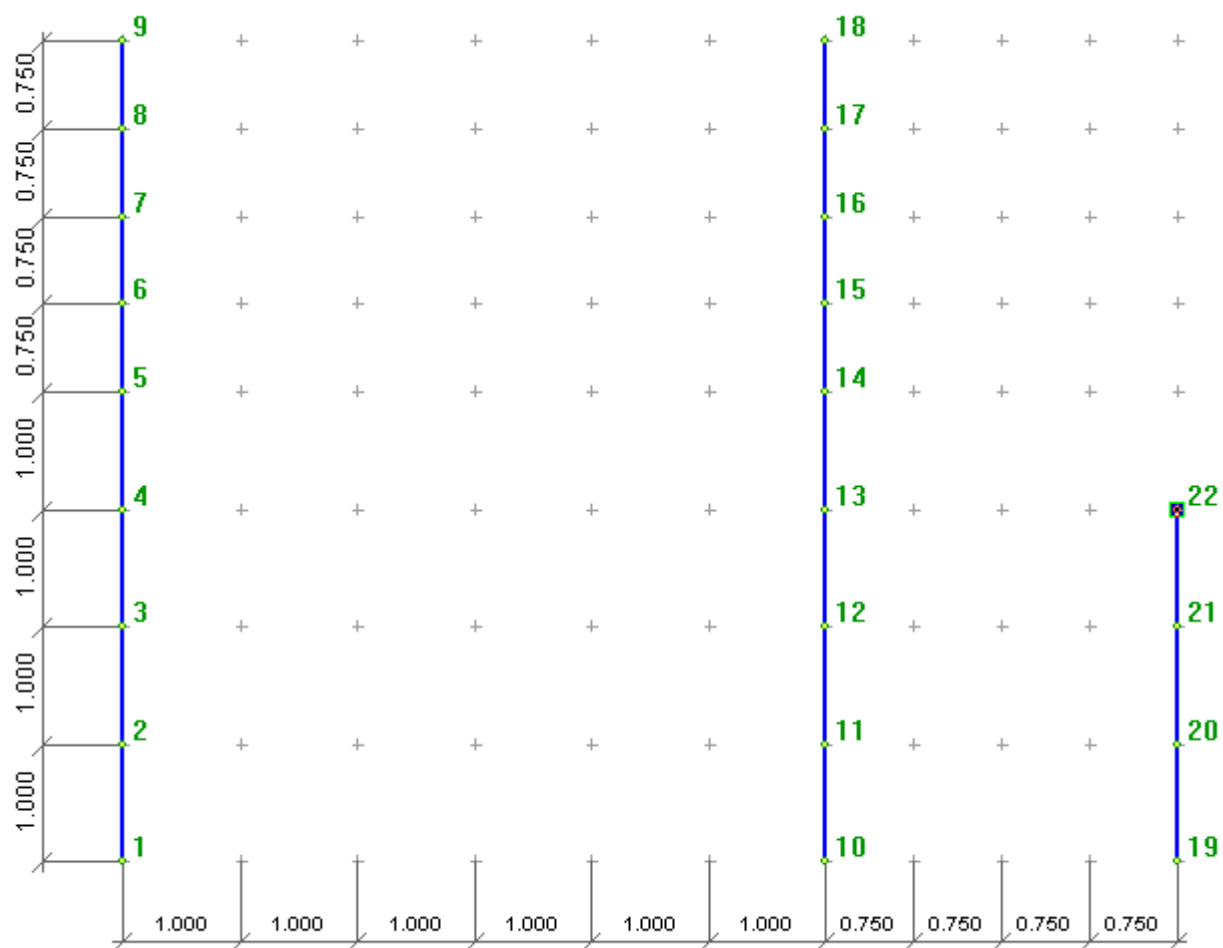


Figure 15.5 a)

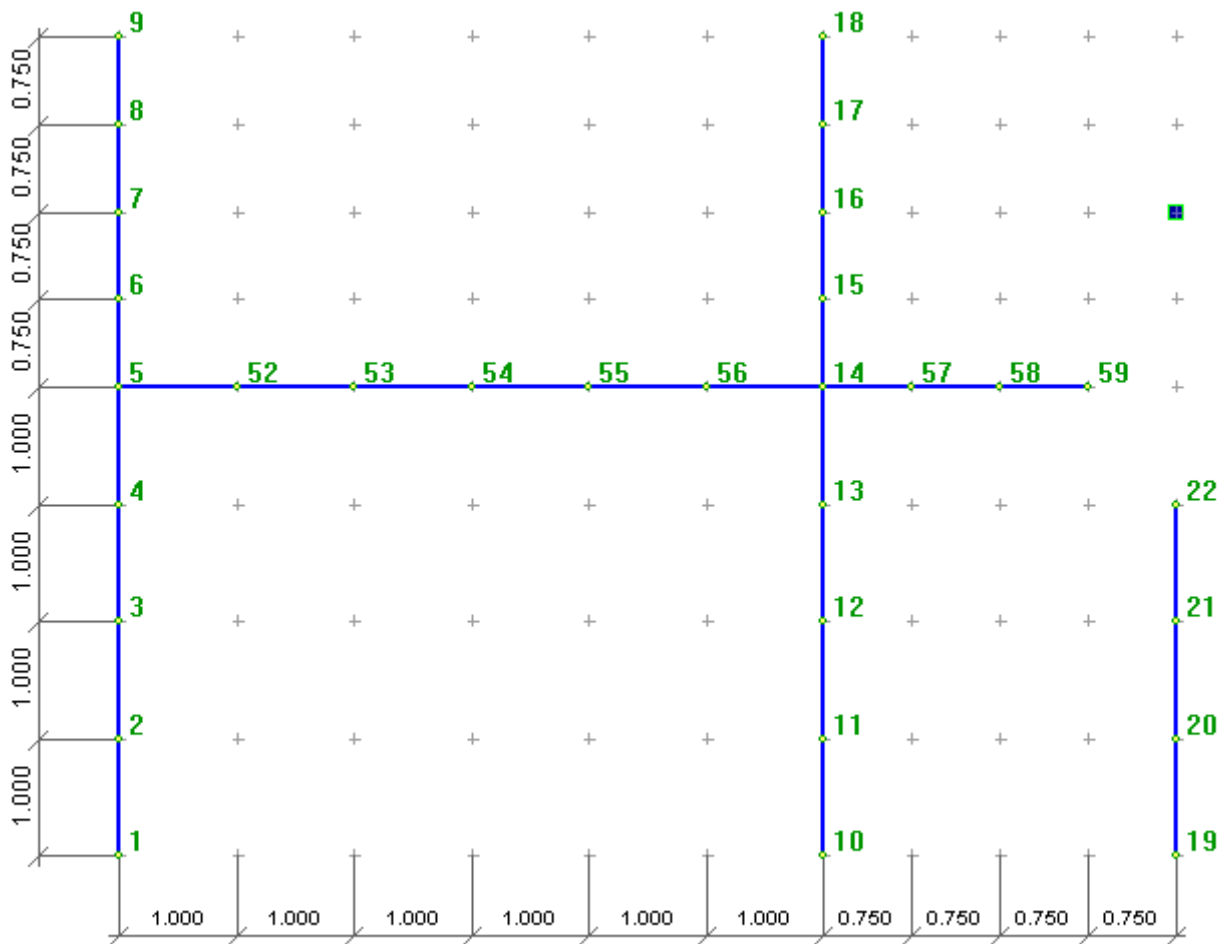







Figure 15.5 b)

Before you define bars it is recommended to present node numbers on the model (click **Display nodes** button  on the toolbar). Node numbers will be displayed in green colour when you define bars.

Since the less number is assigned to the first node, it is recommended to define bars from bottom to top and from left to right in order to unify direction of the X1-axis.

When model geometry is generated, click the **Bars** button  once again in order to make this command (mode) not active.

Click **Display nodes** button  once again in order to make this command (mode) not active and then click **Display bars** button  in order to display numbers for bars. Numbers of bars will be displayed in red.

To hide presentation of grid, click the **Grid** button  once more to make this command (mode) not active.

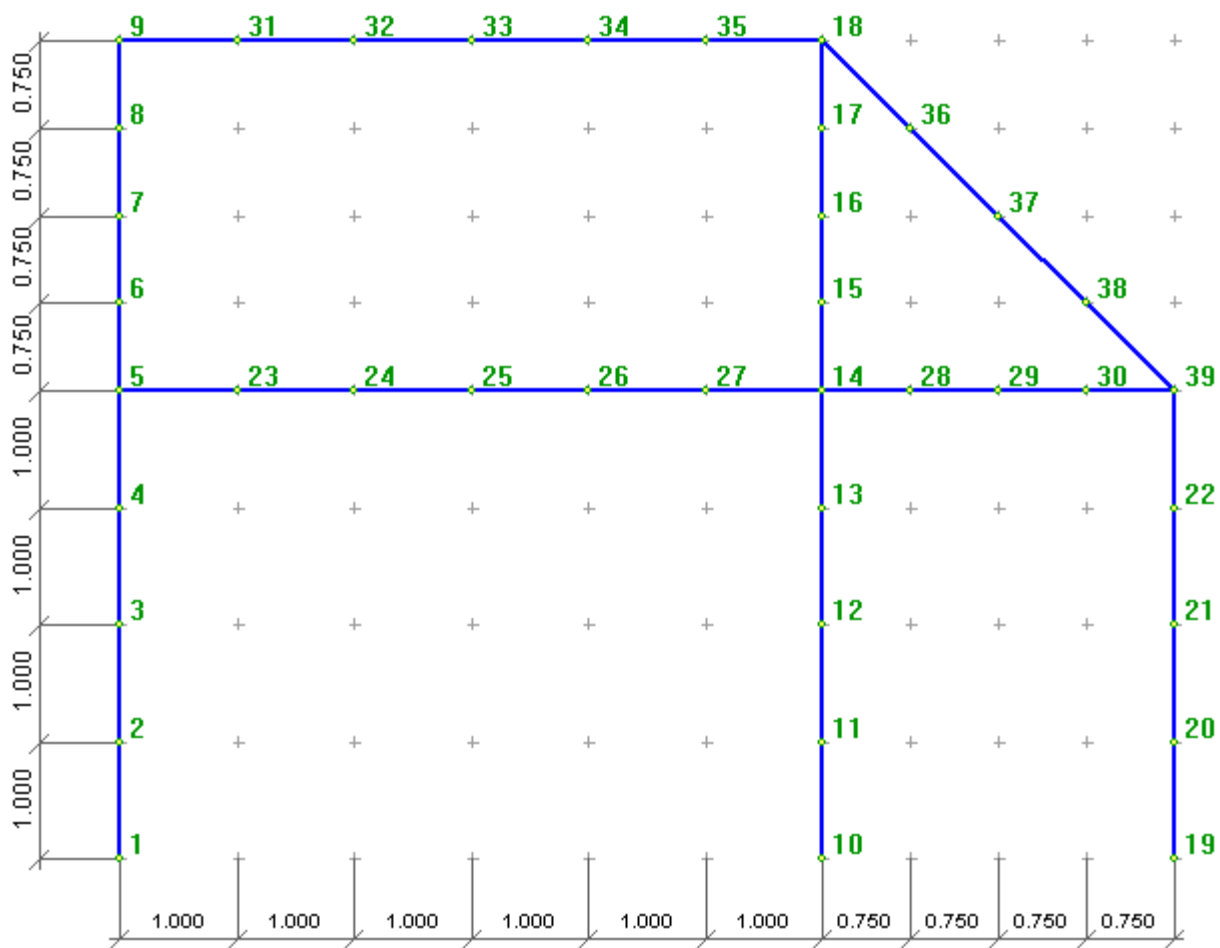





Figure 15.6 a)

Step 2. Define boundary conditions (restraints)

Restraints toolbar 

Define the nodes where the restraint should be imposed on.

In this example, select **Restrain all** option (button  on the toolbar) and define two extreme bottom nodes. Then on the EDIT menu, click **Select nodes** (button  on the toolbar) and select the middle node. On the MODEL menu, point to **Add restraint** and click **Arbitrary**. In the **Assign restraints** dialog box, select X, Y, Z, Ud check boxes and click **Apply**.

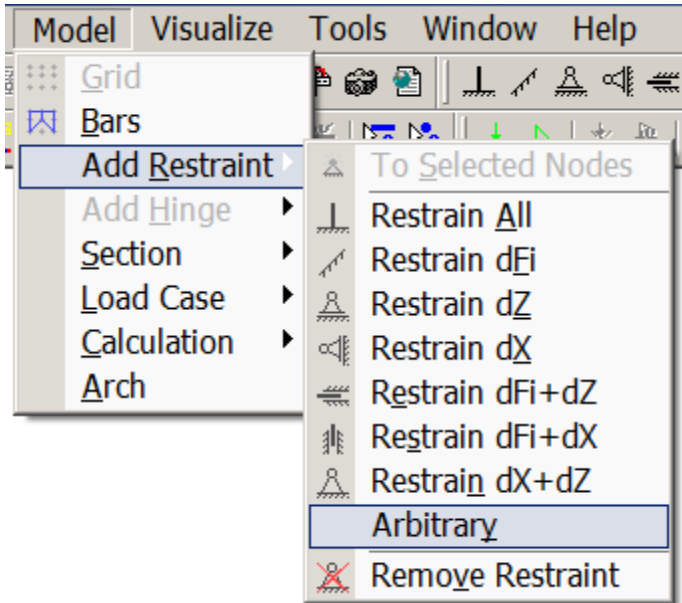


Figure 15.7 a)

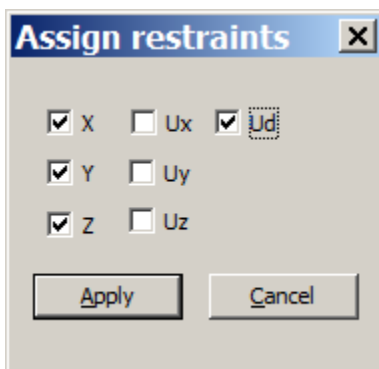



Figure 15.7 b)

Step 3. Define sections for thin-walled bars

To define section of bars, on the MODEL menu, point to **Section** and click **Select section**. (button  on the toolbar). In the **Cross-section** dialog box, click **Add**. In this case, the window of [Parametric thin-walled sections](#) module will be displayed on the screen. The work with this program is [described](#) in this manual.) Select the **C-shape**, define its properties and click **OK**.

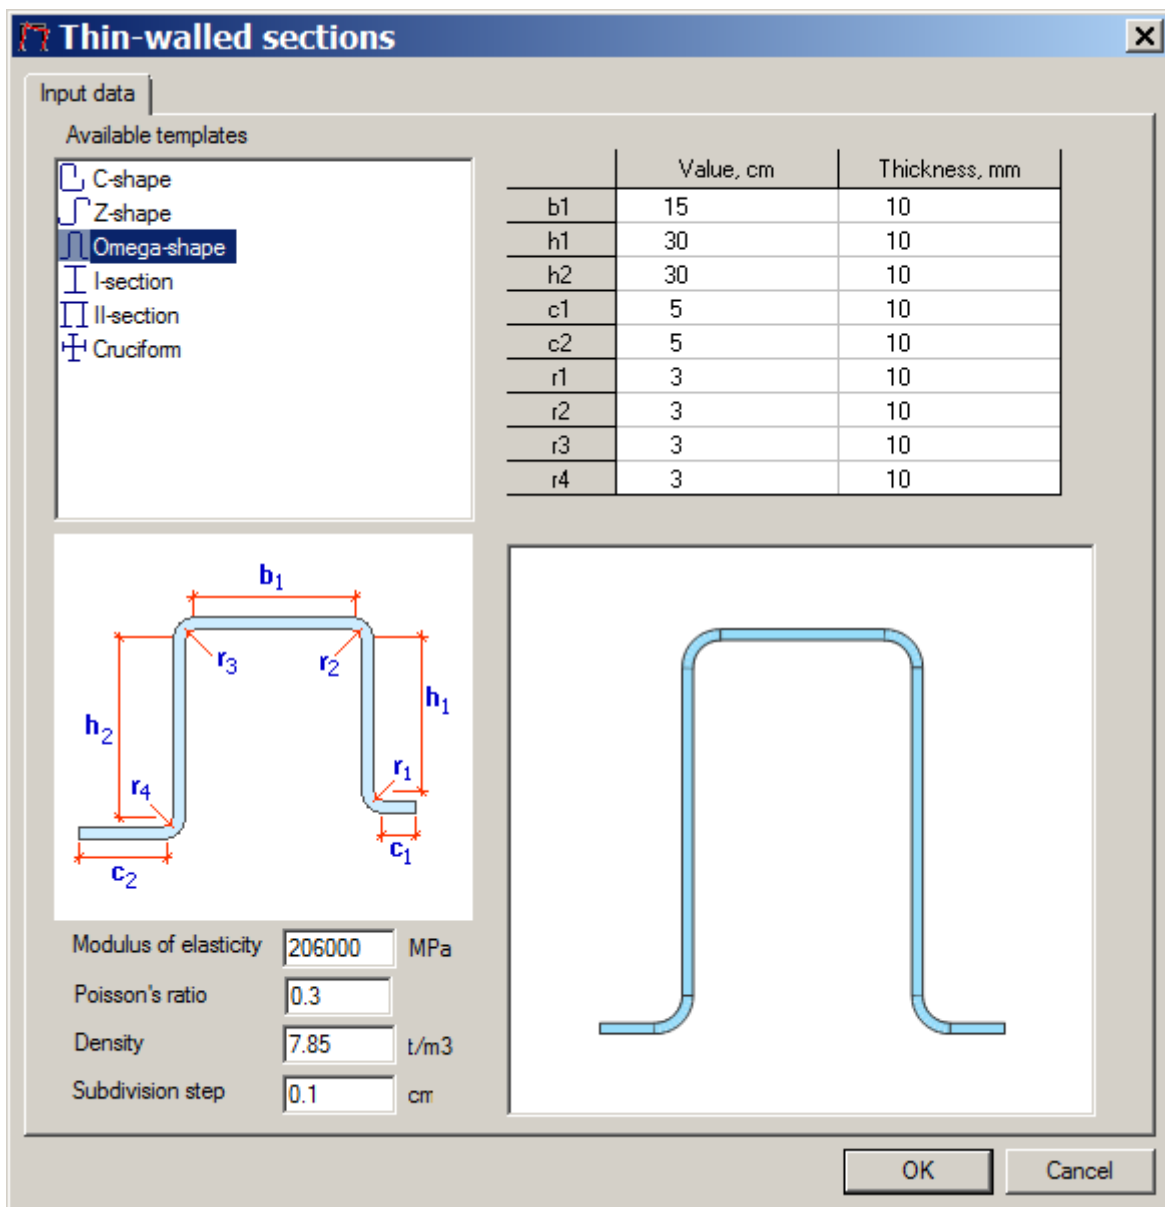


Figure 15.8

After calculation, the **Cross-section** dialog box appears on the screen. In the list of sections, select the **C-shape** and click **Set as current**. Then click **Apply**.

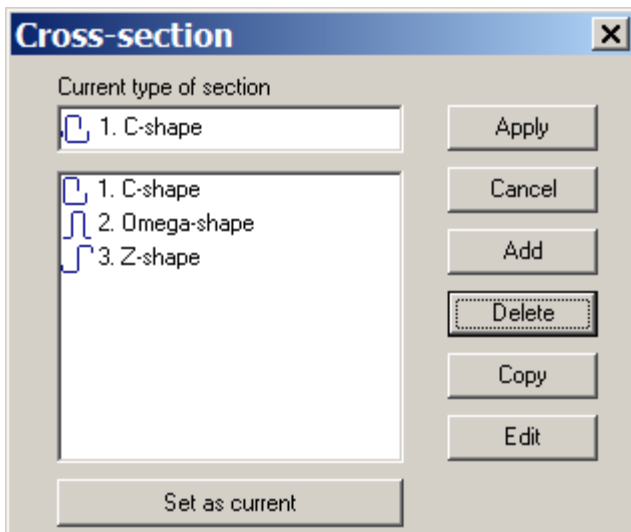






Figure 15.9

To assign current section to the bars of the model, you could follow one of the sequence presented below.

1) the first sequence of commands:

- On the EDIT menu, click **Select bars** (button  on the toolbar).
- Select with the pointer appropriate bars.
- On the MODEL menu, point to **Section** and click **Assign section** (button  on the toolbar).
- On the MODEL menu, point to **Section** and click **Apply to selected bars** (button  on the toolbar).

2) the second sequence of commands:

- On the MODEL menu, point to **Section** and click **Assign section** (button  on the toolbar).
- Select appropriate bars in order to assign the section to them.
- Click **Assign section** once again to make this command not active.

The first method is useful when you define section for many bars.

The second sequence - when you define the section for certain selected bars.

To define numerical stiffness properties, in the **Cross-section** dialog box, hold down the SHIFT key and click **Add**. In the **Numerical** dialog box, define appropriate values.

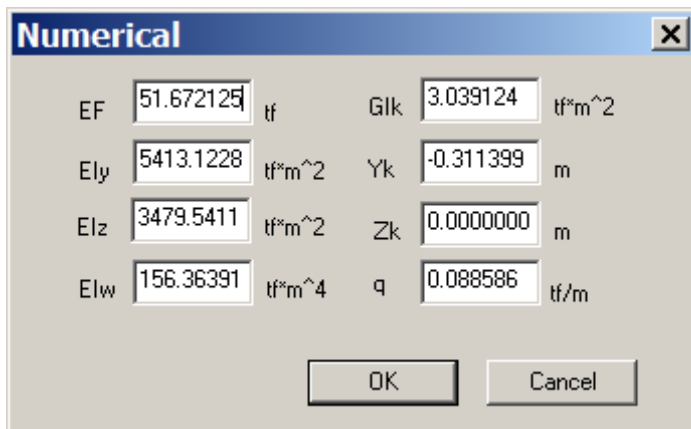


Figure 15.10

EF – axial stiffness;
 Ely – flexural stiffness in plane;
 Elz – flexural stiffness out of plane;
 Elw – warping stiffness;
 GIk – torsional stiffness;
 Yk, Zk – coordinates of rigidity centre in the Y1, Z1 axes;
 q – unit weight.

To display (**Numerical** dialog box) and edit stiffness values (computed in the [Parametric thin-walled sections](#) module), in the **Cross-section** dialog box, hold down the SHIFT key and click **Add**.

Step 4. Define loads

Let's define two load cases:

- 1) dead weight;
- 2) loads at nodes and bars of design model.

To define dead weight, on the MODEL menu, point to **Load case** and click **Add dead weight**. If material density (or unit weight) is not defined, then you will see appropriate warning and the dead weight will not be added.

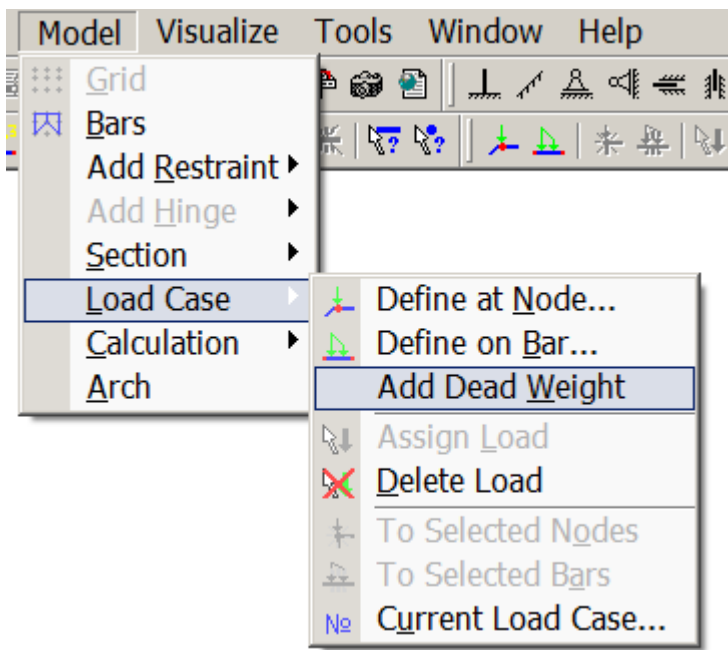


Figure 15.11

Load for the first load case is presented in the figure below.

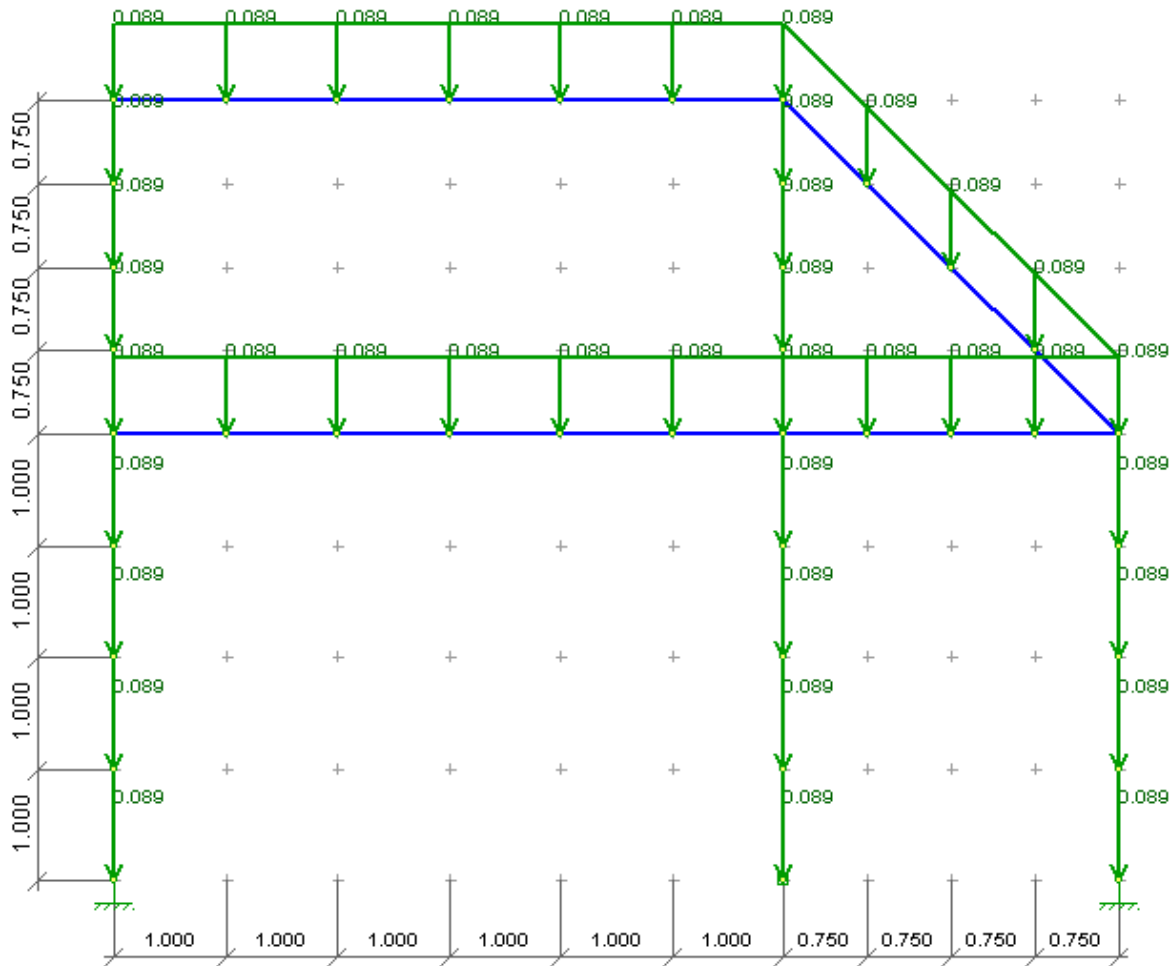



Figure 15.12

To define the second (the third, the fourth, ...) load case, on the MODEL menu, point to **Load case** and click **Current load case** (button  on the toolbar). Load for the second load case is presented in figure below.

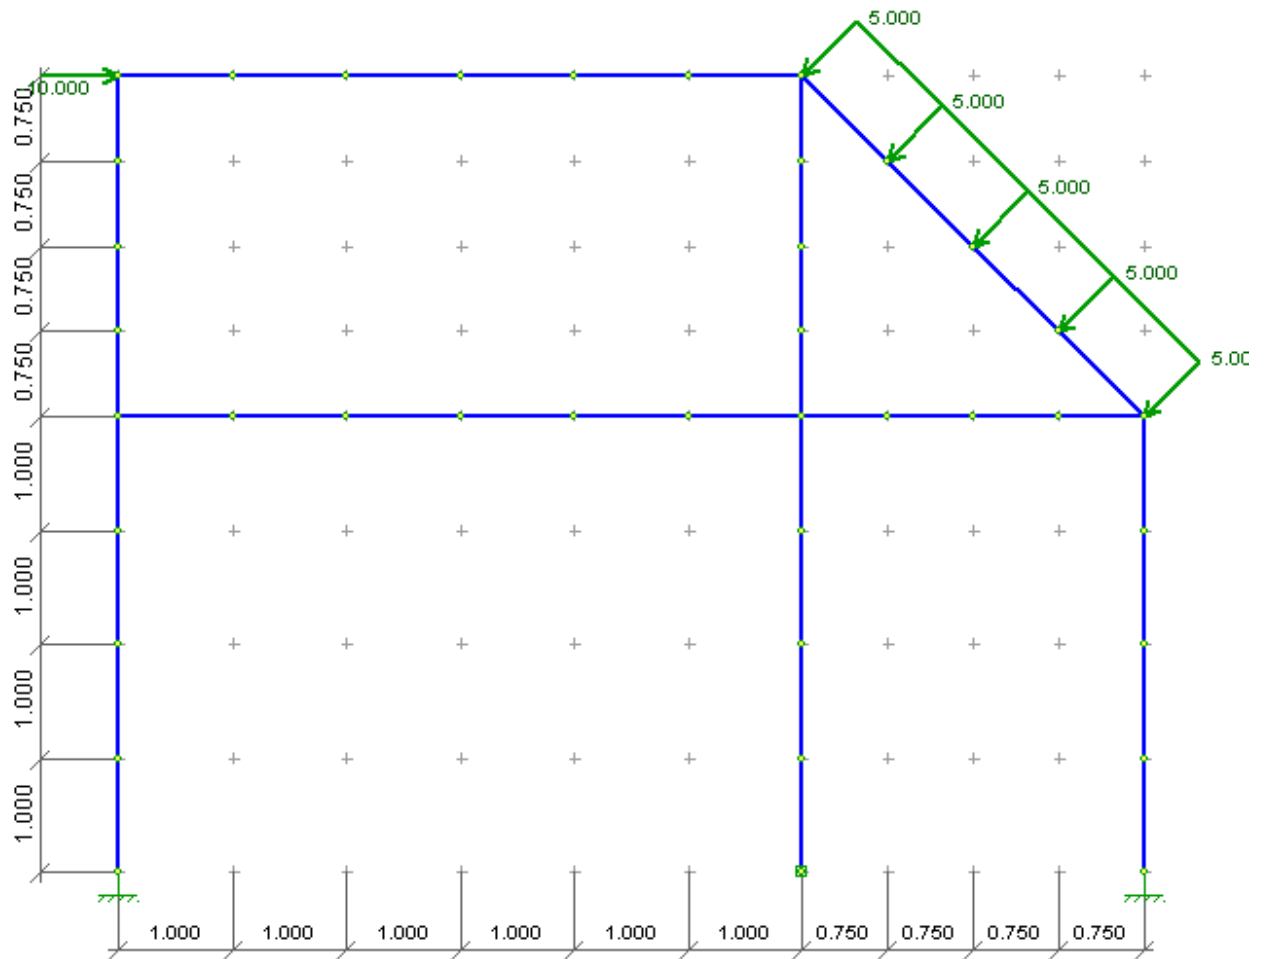



Figure 15.13

In the dialog box, define the number of the current load case.

To define nodal loads and initial displacements, on the MODEL menu, point to **Load case** and click **Define at node** (button  on the toolbar).

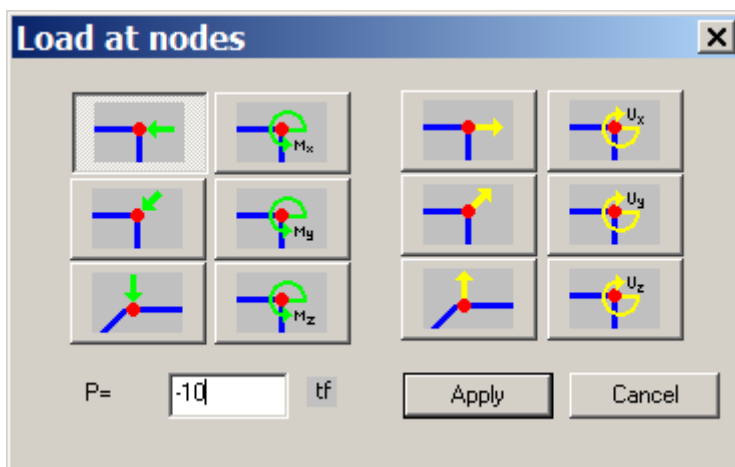




Figure 15.14

In the **Load at nodes** dialog box, define horizontal load $P = -10$ tf. Click **Apply**.

Then on the MODEL menu, point to **Load case** and click **Assign load** (button  on the toolbar) and define the node where load should be applied to (in this example it is the upper left node).

In the **Load at nodes** dialog box, buttons with green arrows corresponds to loads relative to approximate axis in global coordinate system while buttons with yellow arrows - to cinematic load (initial displacements of nodes). One important point to remember is that initial displacements of nodes may be assigned only to nodes in which there are no restraints.

To define loads on bars (or span loads), on the MODEL menu, point to **Load case** and click **Define on bar** (button  on the toolbar).

In the **Load on bars** dialog box, define uniformly distributed load on inclined bars along the whole length in local coordinate system along the Z1-axis. The load value should be 5 tf/m. Click **Apply**.

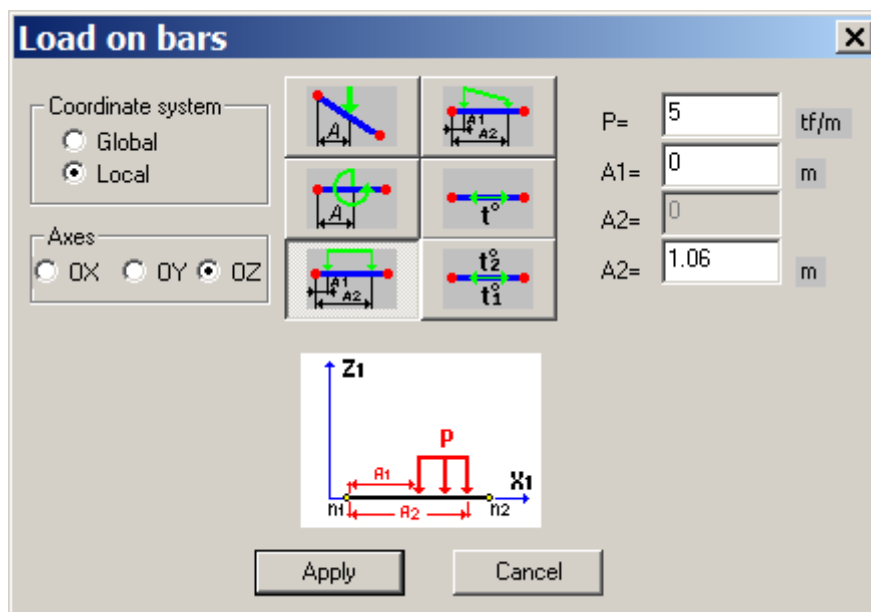




Figure 15.15

When all loads are defined, click **Assign load** button  once again in order to make this command not active.

In the **Load on bars** dialog box it is possible to define the following types of loads relative to global or local axes X(X1), Y(Y1), Z(Z1) at certain distance from beginning of the bar:

- concentrated load;
- concentrated moment;
- uniformly distributed load;
- trapezoidally distributed load;
- uniform heating along the local X1-axis;

– nonuniform heating of upper and lower (relative the Z1-axis) fibres of the section.
To ensure the right distance for load, on the **TOOLS** menu, use the **Length** command (button  on the toolbar) in order to measure the length of inclined bar.

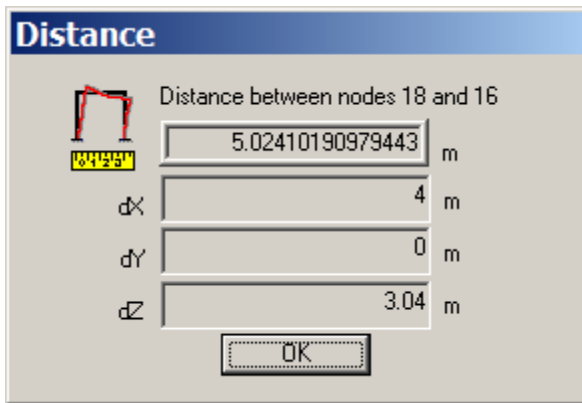











Figure 15.16

To start calculation, on the **MODEL** menu, point to **Calculation** and click **Analyse problem** (button  on the toolbar).

When you obtain message that calculation is complete, it is possible to evaluate analysis results.



Options to edit the model






Principal commands (modes) to edit the model are presented on the **EDIT** menu.

-  Undo
-  Select nodes
-  Select bars
-  Delete nodes
-  Delete bars
-  Remove restraint
-  Delete hinge
-  Delete load (**MODEL** menu / **Load case**)







Options to visualize the model

All commands to visualize the model are presented on the **VISUALIZE** menu. With the help of these commands you could show or hide the following data:

-  Numbers of nodes
-  Numbers of bars

-  Dimensions of the specified grid
-  Restraints
-  Hinges
-  Loads
-  Load values

Tools

-  Length between two nodes
-  Angle by three nodes .
-  Information about bar
-  Information about node
-  Zoom - to enlarge the model fragment
-  Fit in window - to display all objects on the screen

The EDIT menu contains the **Pack model** command. Use this command to delete nodes and elements that were eliminated from design model by the user.

Important. After the pack procedure all previous **Undo** and **Redo** actions will be unavailable. The **Undo/Redo** history will start once again from this procedure.

Circular arc

On the MODEL menu, click **Arch**. In the dialog box (see Fig. 15.18), define coordinate of the centre of circle (X_o , Y_o), radius of arch (R), number of bars (N), initial and final angles (A_1 , A_2) in degrees (measured anti-clockwise from the X-axis of the global coordinate system when you look at the screen). Click **Apply**.

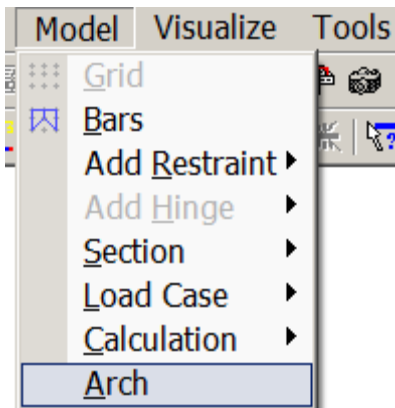


Figure 15.17

When you define parameters of arc (as presented in Figure 15.18a), the arc will be presented on the screen. Nodes and elements of the arc will be numbered from right to left. To obtain automatic numbering of nodes and elements from left to right, specify $A1 = -180^\circ$ and $A2 = -360^\circ$.

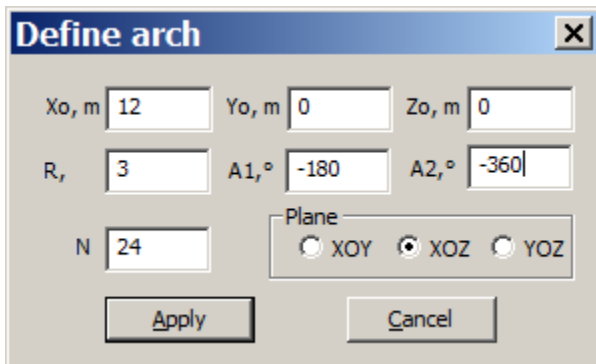


Figure 15.18 a)

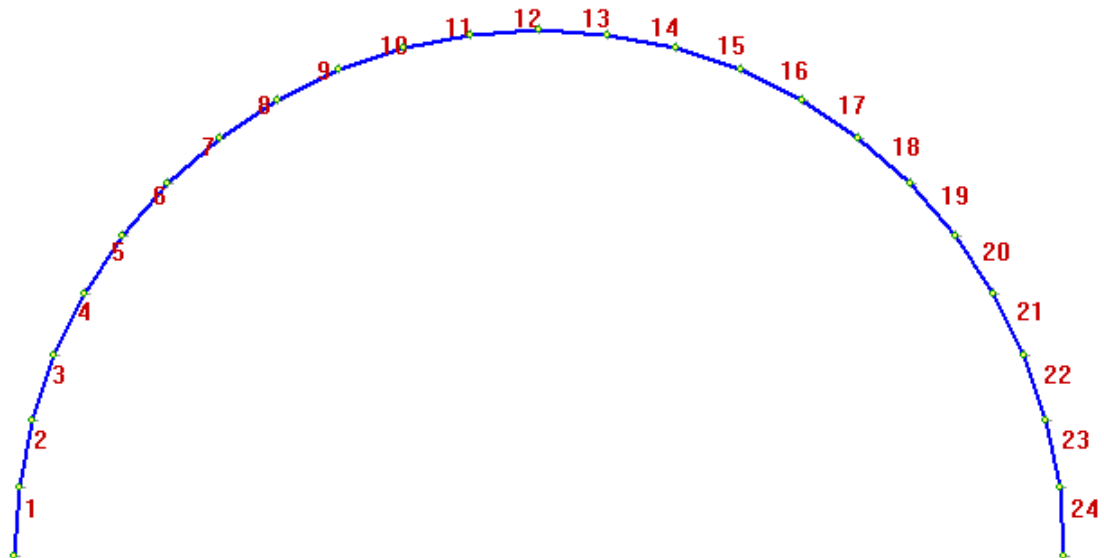


Figure 15.18 b)

Stiffness properties, restraints and loads are defined as described earlier. In the picture below you will see combination model with dead weight applied to it.

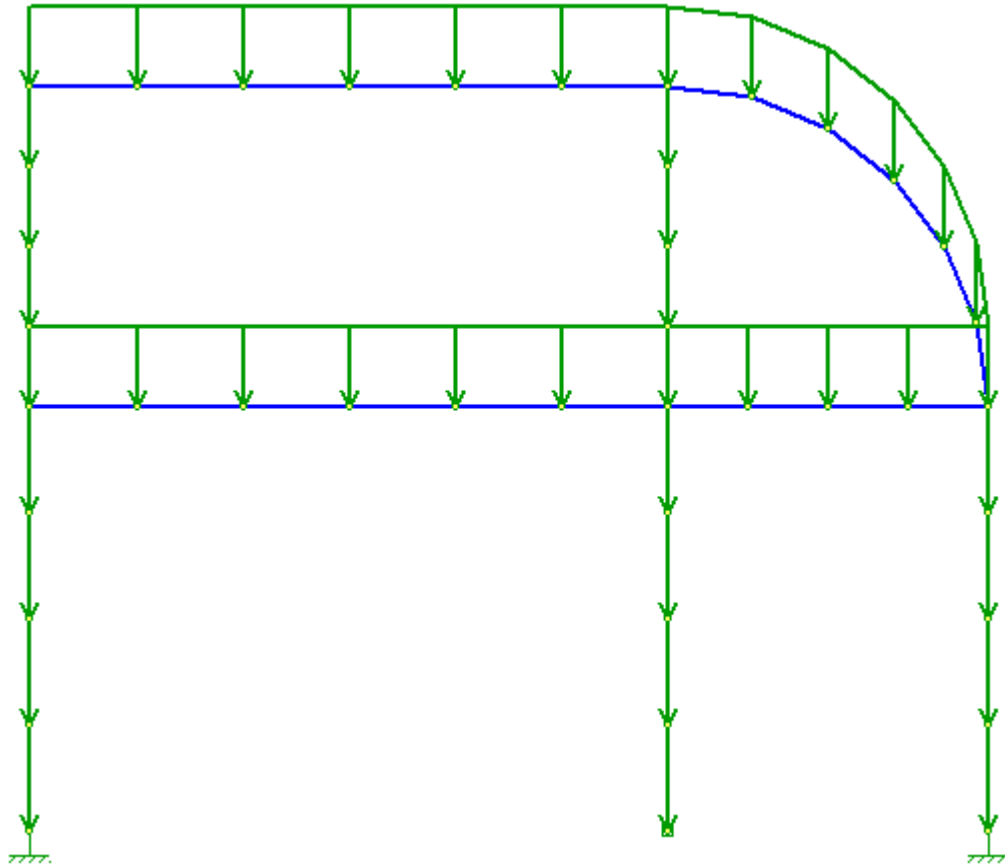



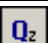
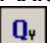






Figure 15.19

Output data

Define the number of the load case that you would like to evaluate (button  on the toolbar).

To display the output data, on the MODEL menu, point to **Calculation** and click one of the following commands to display appropriate data on the screen:

-  Deformed shape;
-  Axial force diagram N;
-   Shear force diagram Qz, Qy ;
-    Moment diagram Mx, My, Mz ;
-  Warping moment diagram B.

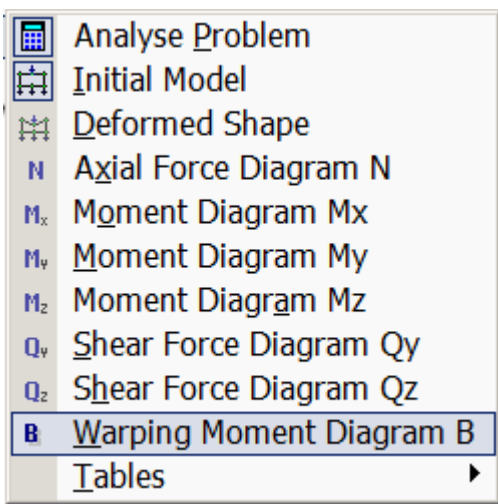




Figure 15.20

To display numerical values of nodal displacements and forces in bars, on the MODEL menu, point to **Calculation / Tables** and click **Nodal displacements**  or **Internal forces at bar ends**  .

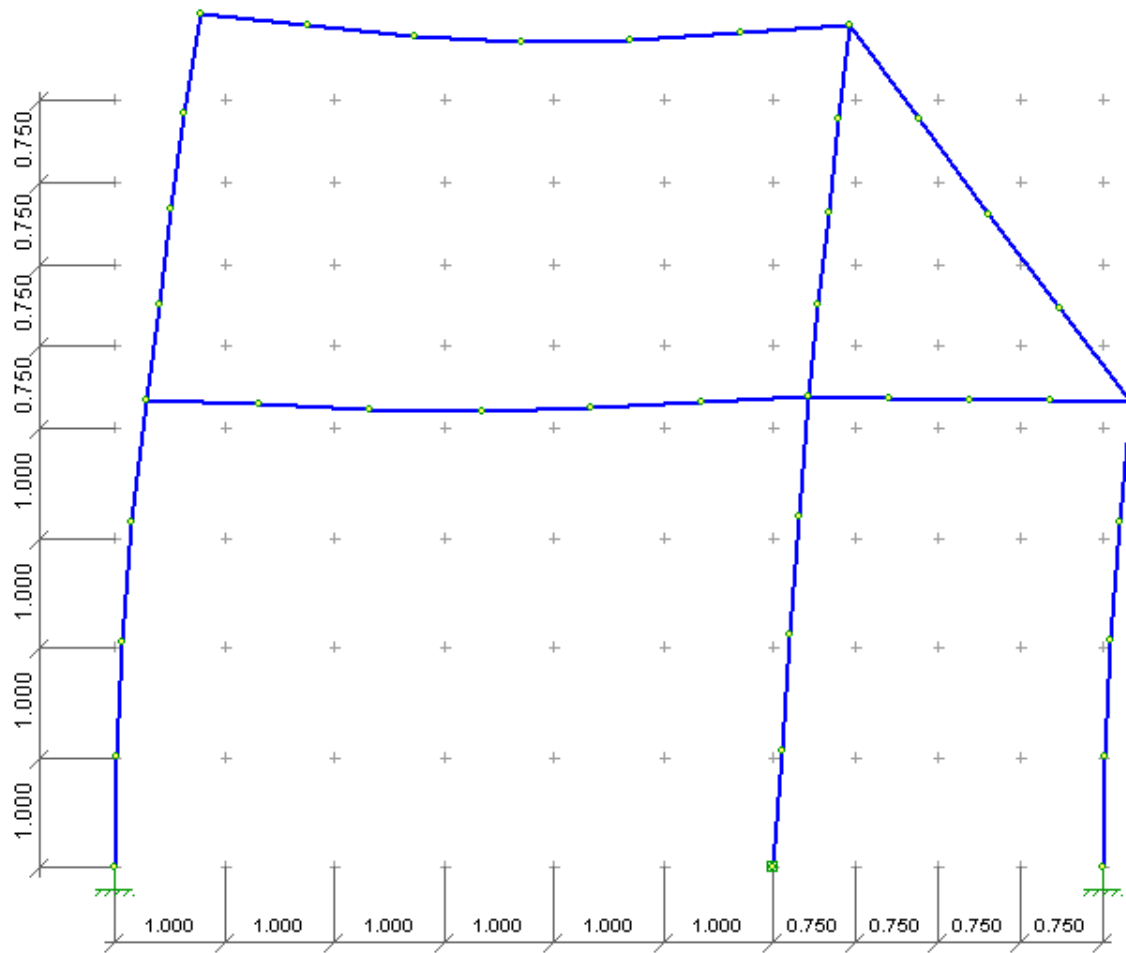


Figure 15.21 a) Deformed shape from load case 1

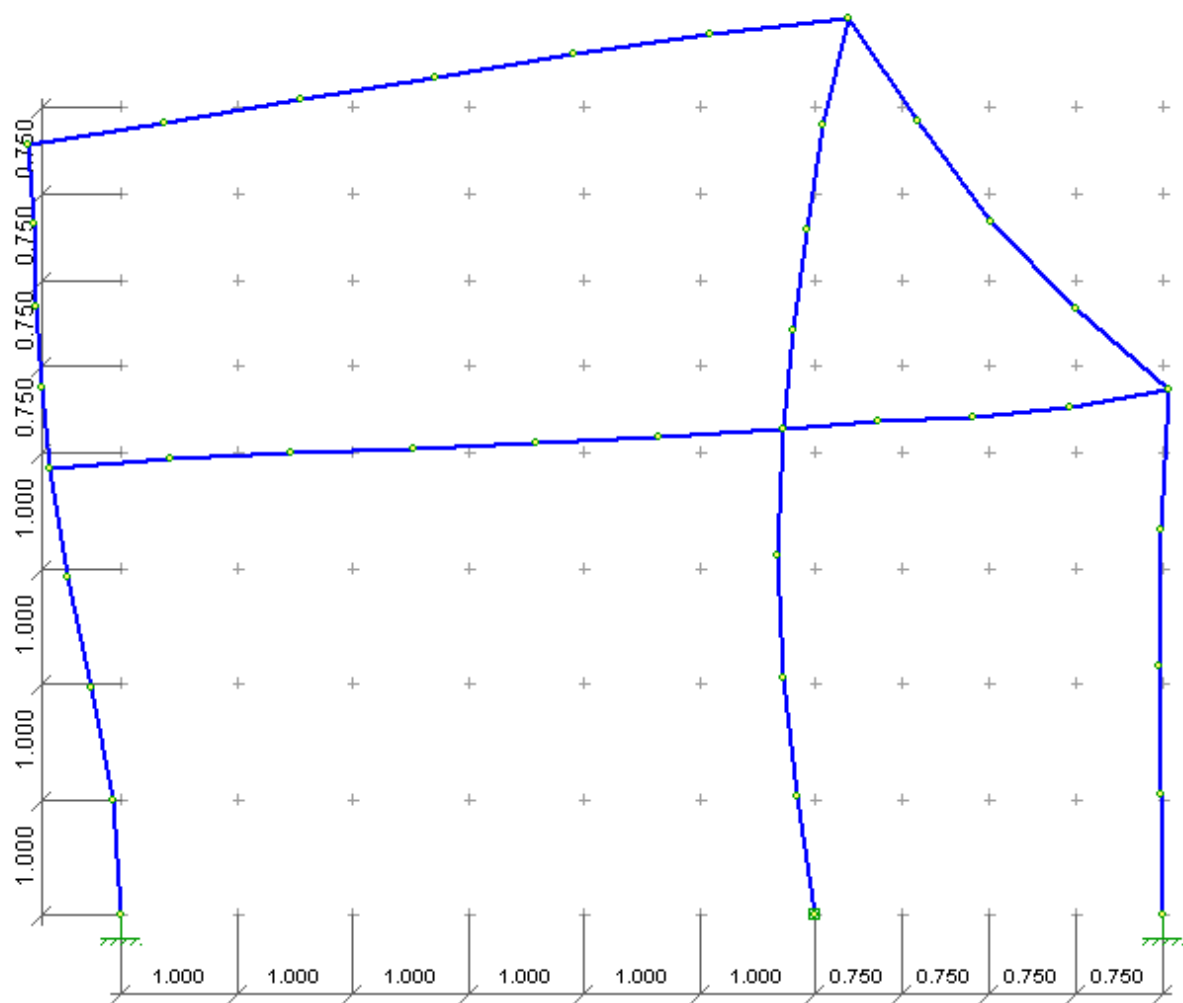


Figure 15.21 b) Deformed shape from load case 2

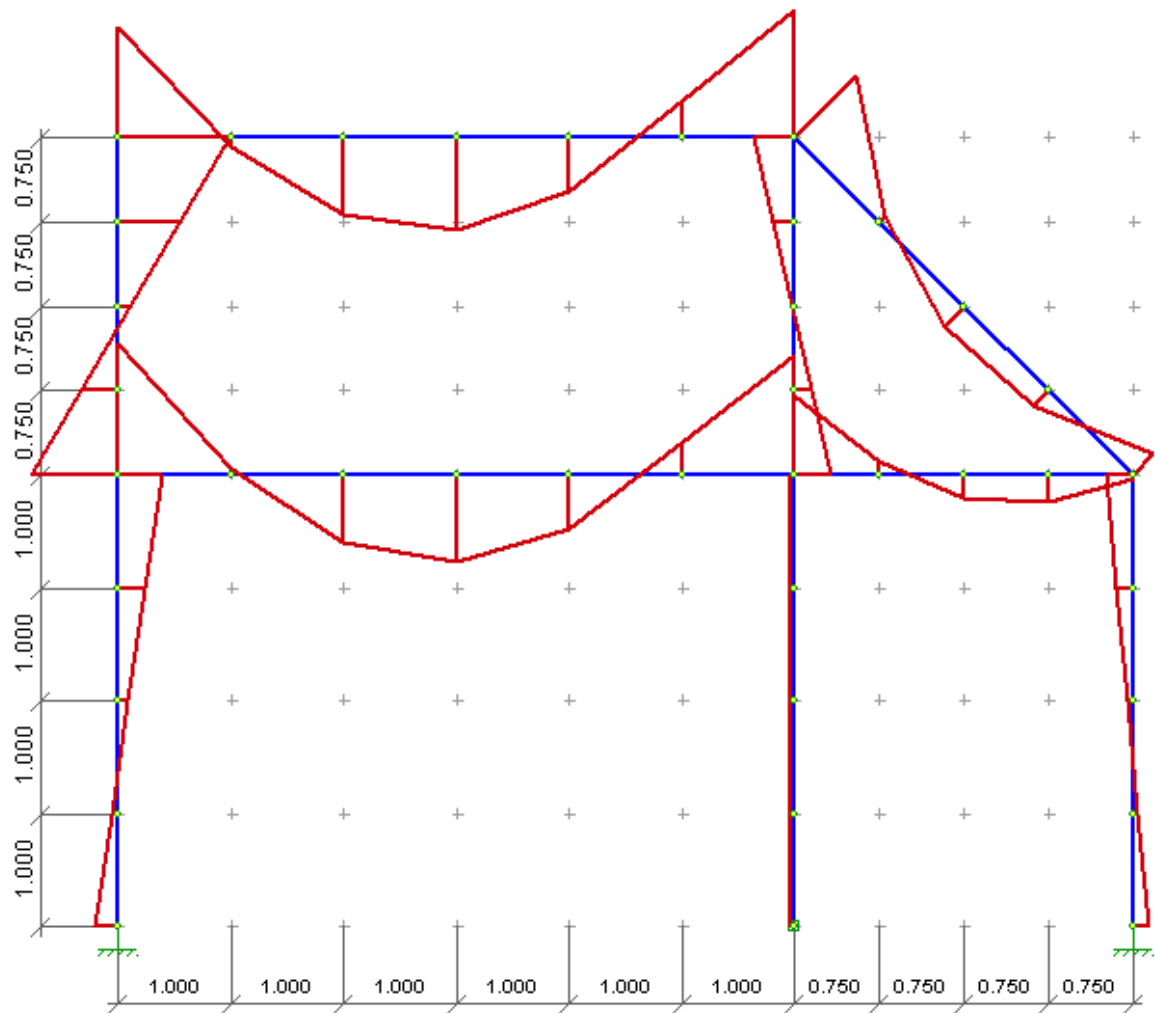


Figure 15.22 a) Diagram of warping moments B from load case 1

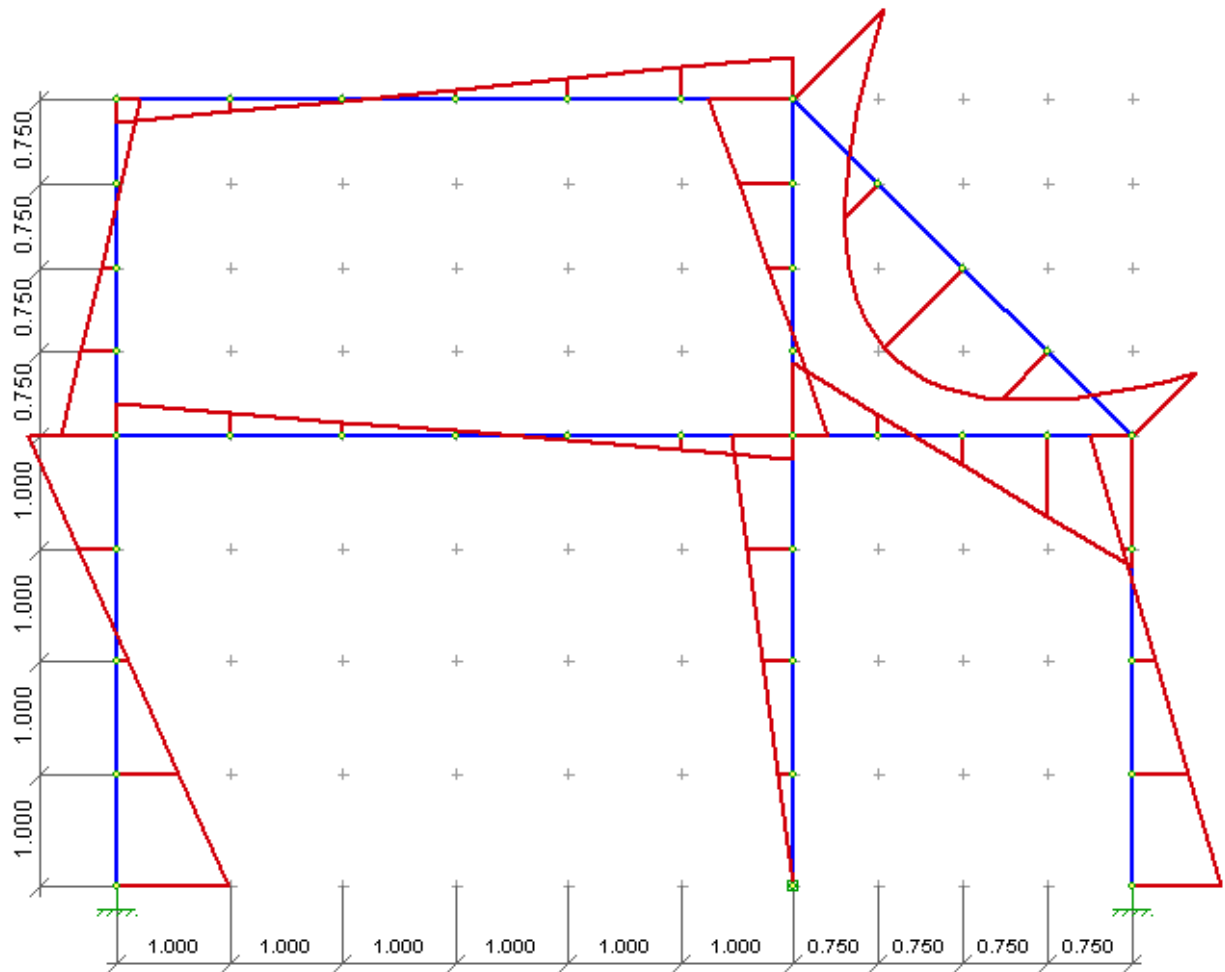




Figure 15.22 b) Moment diagram M_y from load case 2


To present numerical values of nodal displacements or forces in bars, on the MODEL menu, point to **Calculation**. Then point to **Tables** and click either **Nodal displacements** (button  on the toolbar) or **Internal forces at bar ends** (button  on the toolbar).

Displacement/Load case 1							
File							
N...	X (mm)	Y (mm)	Z (mm)	Ux(rad...	Uy (ra...	Uz(rad...	Ud(ra
1	0	0	0	0	0	0	0
2	2.26212	-6.29733	-0.125...	0.7173...	1.0736	0.7587...	-0.02...
3	0	0	0	0	0	0	0
4	2.19589	-1.22416	-0.129...	-0.045...	0.0575...	0.6082...	-0.03...
5	0	0	0	0	0	0	0
6	1.96547	-0.175...	-0.165...	-0.258...	0.5635...	0.37035	0.007...
7	0	0	0	0	0	0	0
8	1.00751	-6.20984	-0.055...	1.71536	0.79128	0.69958	-0.05...
9	0	0	0	0	0	0	0
10	0.9472...	-1.21499	-0.111...	0.56565	-0.107...	0.7544...	-0.04...
11	0	0	0	0	0	0	0

Figure 15.23 a)

Forces/Load case 1								
File								
Ele...	Sec...	N (tf)	Qy(tf)	Qz (tf)	Mx(tf*m)	My (tf...	Mz(tf*m)	B(tf*m2)
1	1	-9.67...	-5.84...	-0.95...	-0.50...	2.622...	-9.36...	-0.12...
1	2	-9.67...	-5.84...	-0.95...	-0.50...	-0.25...	8.160...	0.144...
2	1	-9.99...	-1.44...	-3.10...	-0.40...	4.717...	-2.1305	-0.09...
2	2	-9.99...	-1.44...	-3.10...	-0.40...	-4.59...	2.206...	0.124...
3	1	-12.7...	-0.62...	-1.64...	-0.24...	3.092...	-0.72...	-0.06...
3	2	-12.7...	-0.62...	-1.64...	-0.24...	-1.84...	1.161...	0.056...
4	1	-4.31...	-4.06...	0.263...	-0.47...	0.477...	-7.54...	-0.10...
4	2	-4.31...	-4.06...	0.263...	-0.47...	1.2687	4.664...	0.153...
5	1	-8.55...	-0.41...	-1.62...	-0.50...	2.326...	-1.08...	-0.11...
5	2	-8.55...	-0.41...	-1.62...	-0.50...	-2.56...	0.140...	0.157...
6	1	-10.6...	0.396...	-0.92...	-0.08...	1.645...	0.302...	-0.01...
6	2	-10.6...	0.396...	-0.92...	-0.08...	-1.13...	-0.88...	0.031...
7	1	-3.82...	-1.1041	2.700...	0.368...	0.127...	-2.11...	0.109...
7	2	-3.82...	-1.1041	-3.29...	0.368...	-4.07...	2.302...	-0.10...
8	1	-3.47...	-0.98...	3.286...	0.553...	-1.14...	-2.00...	0.150...
8	2	-3.47...	-0.98...	-2.71...	0.553...	-2.99...	1.935...	-0.15...
9	1	5.054...	0.784...	6.9758	0.126...	-7.79...	1.6063	0.034...
9	2	5.054...	0.784...	-1.0242	0.126...	4.1106	-1.5318	-0.00...
10	1	0.529	0.697	4.634	0.067	-3.42	1.3021	0.006

Figure 15.23 b)

Use the **Information about bar** button () to preview force values selectively, generate diagrams of longitudinal and transverse forces, moments and displacements.

Use the **Information about node** button () to preview nodal displacements selectively.

The figures below illustrate design model and analysis results.

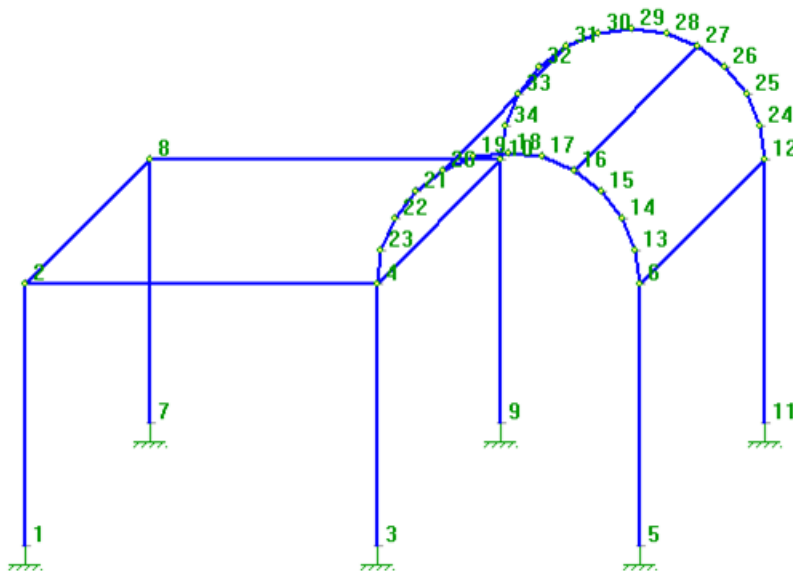


Figure 15.24. Nodes

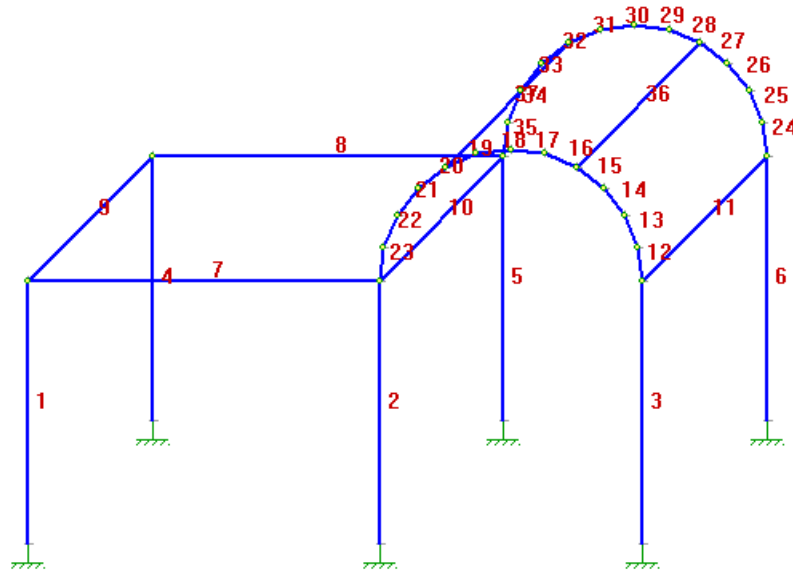


Figure 15.25. Elements

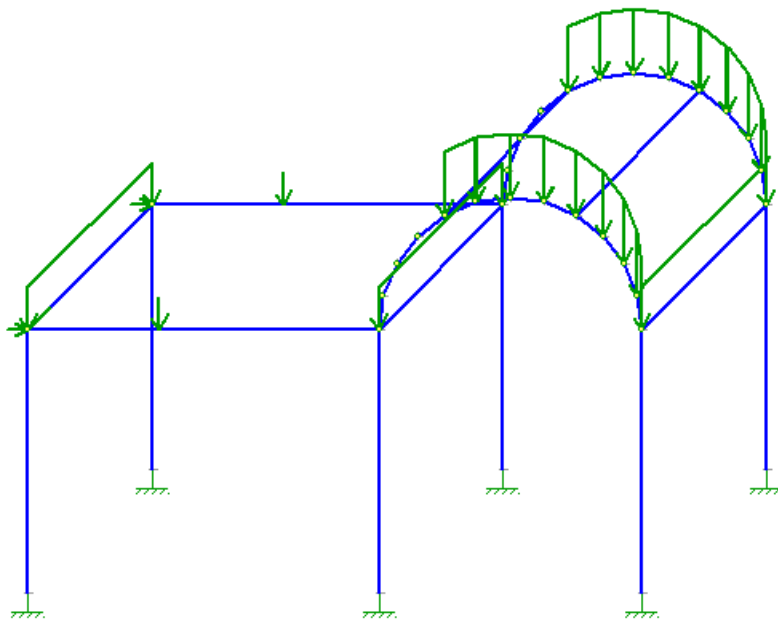


Figure 15.26. Loads


Thin-walled sections

Input data

Available templates

- ☒ C-shape
- ☐ Z-shape
- ☐ Omega-shape
- ☐ I-section
- ☐ H-section
- ☐ Cruciform

	Value, cm	Thickness, mm
hw	30	10
b1	25	10
b2	25	10
c1	15	10
c2	15	10
r1	0	0
r2	0	0
r3	0	0
r4	0	0

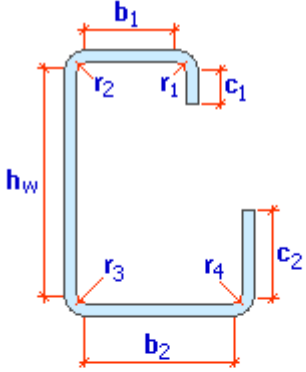


Modulus of elasticity: 206000 MPa

Poisson's ratio: 0.3

Density: 7.85 t/m³

Subdivision step: 0.1 cm



OK Cancel

Figure 15.27. Section

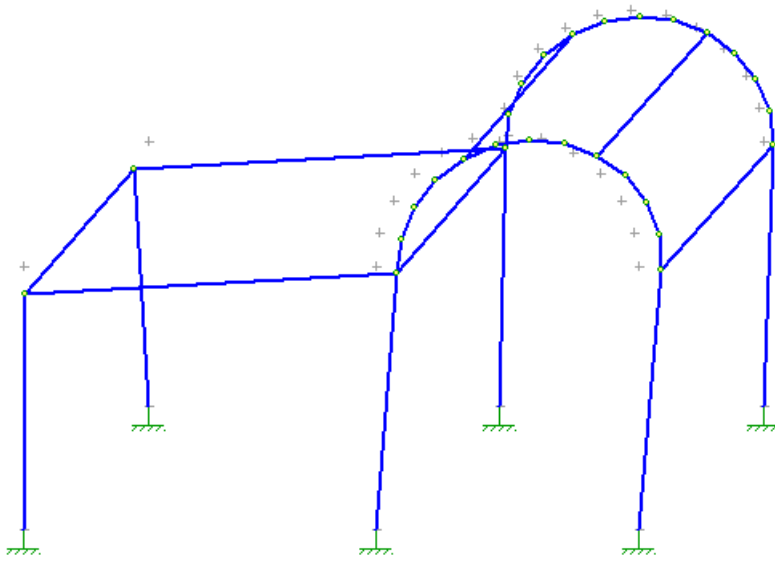


Figure 15.28. Deformed shape

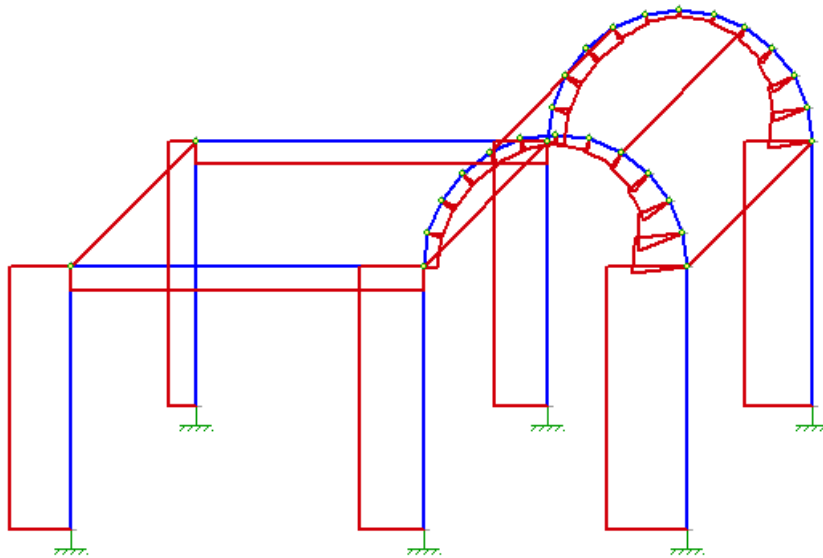


Figure 15.29. Diagram N

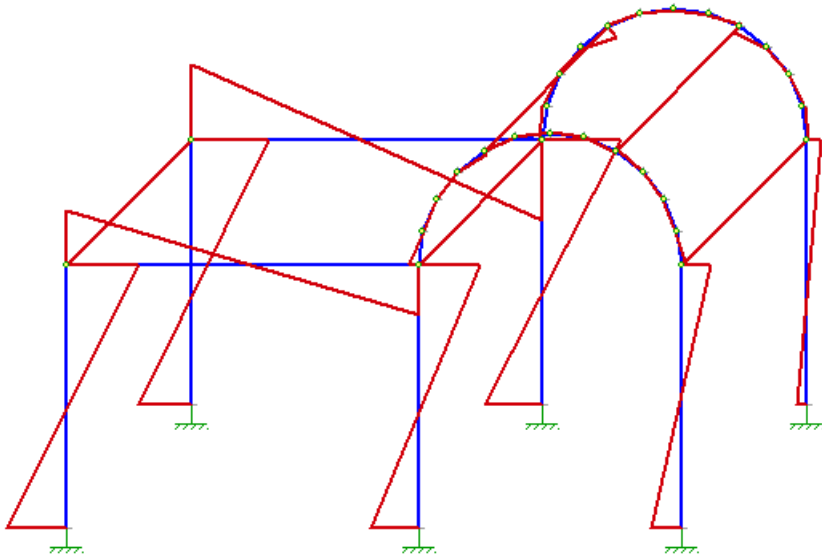


Figure 15.30. Diagram B

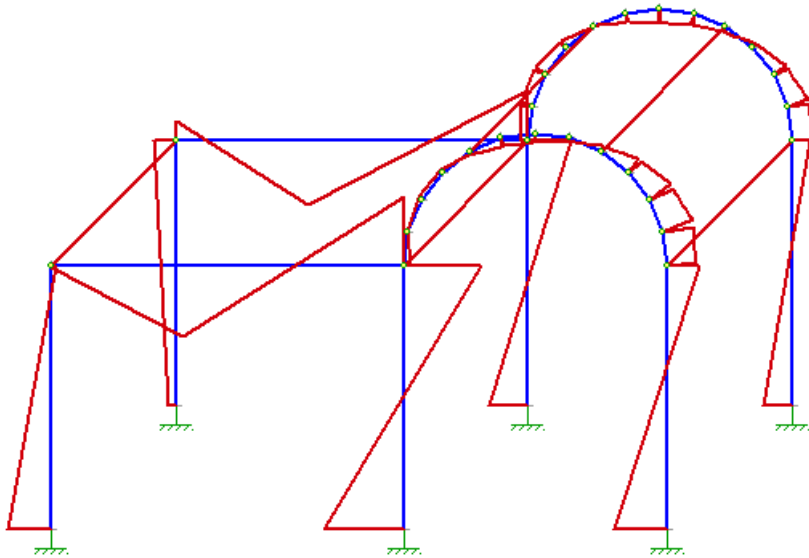


Figure 15.31. Diagram My

Sign convention

Sign convention for displacements

Linear translations (X , Y , Z) are considered positive if they are directed along appropriate axes.

Rotations (UX , UY , UZ) are considered positive if it rotates anti-clockwise when you look from the end of appropriate axis. Warping (Ud) is considered positive if positive rotation UX increases from beginning of the bar up to its end.

Sign convention for forces

Axial forces (N) is considered positive if the bar is in tension.

Sign convention for other forces relates to the bar section that belongs to its end:

- positive bending moment (M_x) rotates anti-clockwise when you look from the end of the X_1 -axis;
- positive bending moment (M_y) rotates anti-clockwise when you look from the end of the Y_1 -axis;
- positive bending moment (M_z) rotates anti-clockwise when you look from the end of the Z_1 -axis;
- positive shear force (Q_y) acts along the Y_1 -axis;
- positive shear force (Q_z) acts along the Z_1 -axis;
- positive warping moment (B) is presented with pair of moments $MB(\text{top})$ and $MB(\text{bot})$ that rotate about the Z_1 -axis; $MB(\text{top})$ is applied to the top (positive direction of the Z_1 -axis) edge of the section while $MB(\text{bot})$ is applied to the bottom (negative direction of the Z_1 -axis) edge; in this case $MB(\text{top})$ is directed anti-clockwise while $MB(\text{bot})$ - clockwise when you look from the end of the Z_1 -axis.

Prestressing

Prestressing (Chapter)

The chapter contains modules that enable you to analyse and check bearing capacity of sections of reinforced concrete bars with prestressed reinforcement.

[Prestressing](#)

[Analysis of RC support sections \(posts\)](#)

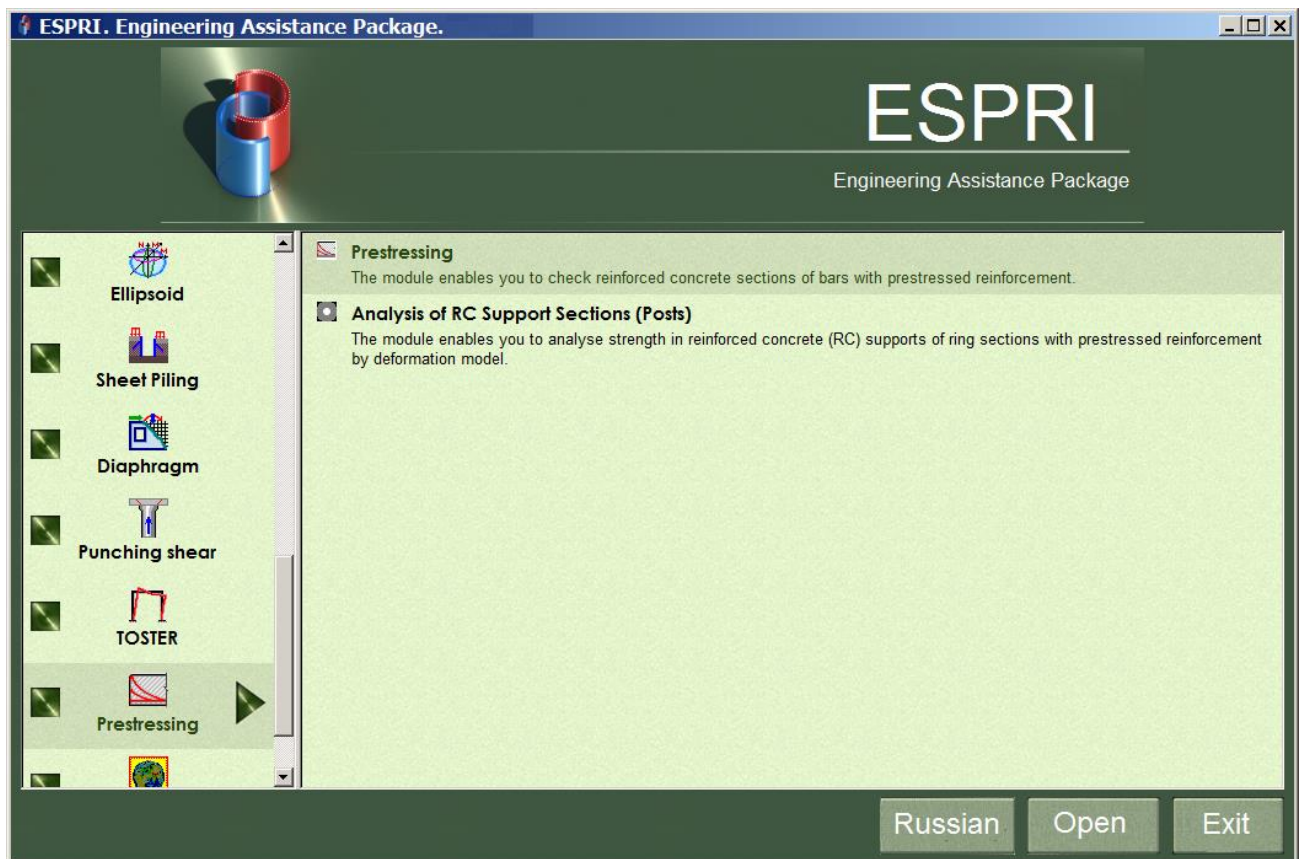


Figure 16.1

Prestressing

This module enables you to analyse and check bearing capacity of reinforced concrete sections of bars with prestressed reinforcement. In the *check* mode of the program it is possible to compute reserve factor for the section. In the *selection* mode of the program it is possible to determine area of lower and upper reinforcement and appropriate prestressing.

The following building codes are supported:

- SNIP 2.03.01-84* Concrete and reinforced concrete structures;
- SP 52-102-2004 Prestressed reinforced concrete structures;
- Eurocode 2 Design of concrete structures;
- SP 52-104-2006 Steel fiber reinforced concrete structures.

Available classes of concrete: B12,5 B15 B20 B25 B30 B35 B40 B45 B50 B55 B60.
For Eurocode: C12 C16 C20 C25 C30 C35 C40 C45 C50 C55 C60 C70 C80 C90.

Process of hardening - natural hardening or thermal treatment (steaming, autoclave hardening).

Service conditions - natural humidity, water saturation, alternately water saturation and drying.

Strength of concrete in transfer R_{bp} is assigned as equal not less than 11 MPa. For rebars of class AVI, reinforcing cables of classes K-7 and K-19 and wire reinforcement without battenheads - not less than 15,5 MPa. Moreover, strength of concrete in transfer should be not less than 50% of the strength for defined concrete class.

The following classes of reinforcement are available:

- A-I, A-II, A-III, A-IIIb (with monitoring elongation and stress) A-IIIb (with monitoring only elongation), A-IV, A-V, A-VI, Bp-I, B-II, Bp-II, K-7, K-19;
- A240, A300, A400, A500, A600, A800, A1000, B500, Bp1200, Bp1300, Bp1400, Bp1500, K1400, K1500.

Max diameter of reinforcement - 40 mm (for Eurocode - 50).

Distance to reinforcement - distance from gravity centre of reinforcement group up to the nearest side of section (lower reinforcement to the lower side, upper reinforcement - to the upper side).

Methods of prestress - mechanical, electrothermal, electrothermomechanical.

Only pretension of reinforcement onto stressing abutments is considered in the current version of the program.

Temperature drop is accepted as 65 degrees, if there is no accurate data.

Parameter d_l - buckling of an anchor, is taken as equal to 2 mm.

To take account of friction between the tendons and their sheathing, define parameters μ , κ , θ and χ (in SNIP μ corresponds to δ and κ corresponds to ω).

For calculation according to Eurocode, for prestressed reinforcement it is necessary to define shape, area of one rebar, characteristic tensile strength of prestressing steel f_{pk} , characteristic 0.1% proof-stress of prestressing steel $f_{p0,1k}$ and class, indicating the relaxation behaviour - ordinary or low relaxation.

The following classes of fiber are available:

- steel fiber, milled from slabs, according TU 0882-193-46854090.
- steel fiber, cut from sheet steel, according to TU 0991-123-53832025.
- steel fiber, chopped from wire, according to TU 1211-205-46854090.

Input data

The dialog box is presented in the figure below.

Prestressing

Section types and geometry

h 800 h1 0 h2 0 mm
b 400 b1 0 b2 0 mm

Beam length, mm 6000 Effective length at fabrication stage, mm 6400
Effective length of beam, mm 6000 dl 2 Redraw

Code SP 52-102-2004 Mode Check

Concrete

Concrete heavyweight
Concrete B40
Process of hardening thermal treatment
Service conditions natural humidity
Grade by average density D1000
Transfer strength (MPa), Rbp 25
Humidity, % 60

Reinforcement

	Class	Diameter	Number	Distance, mm	μ	θ	κ	χ
Prestressed upper reinforcement	A500 d	22	2	760	0	0	0	0
Prestressed lower reinforcement	A500 d	22	2	30	0	0	0	0
Nonprestressed upper	A240 d	14	6	770				
Nonprestressed lower	A240 d	14	6	40				

Method of mechanic Temperature 65 °
Prestress pre-tensioning

Design forces

	N, kN	M, kN*m	Mq, kN*m	Reserve factor
1	1287.	283.	277.	1.74
2	1124.	241.	194.	2.16
3	1400.	241.	445.	3.99
4	1347.	244.	275.	3.62
5	1034.	354.	143.	1.08
6				
7				

Partial safety factor for concrete 1
Prestressing force for lower reinforcement, kN 202
Force of prestress for upper reinforcement, kN 202
Load factor 1.15
Ultimate width of crack propagation, mm 0.2
Speed of increase in load, % 1

Save... Open... Calculate Results... Report Help Exit

Figure 16.2

In the dialog box define dimensions for section and structure, parameters of concrete and reinforcement, design forces, prestress for the reinforcement.

Define type of section – rectangle, T-section with flange at the top, T-section with flange at the bottom, I-section. Select appropriate building code. Then define dimensions for the section, length of beam, class of concrete, classes of prestressed and nonprestressed reinforcement, number of rebars, their diameters and distances to them.

To check T-section or I-section with trapezoidal flanges, define average heights of flange overhangs.

To display schematic presentation of the section according to specified dimensions, click **Redraw**.

Define design forces in the appropriate table. To convert to normative values, the load factor γ_f is applied in the program.

N - axial force applied at the gravity centre, kN;

M - moment from external forces, kN*m;

M_q - moment from dead weight of the structure in the section, kN*m.

Sign convention: positive moment corresponds to tension in lower fiber (according to schematic presentation of section), positive axial force corresponds to compression.

Partial safety factor for concrete γ_{b2} is defined depending on load type (by default 1).

Prestressing force is defined within the limits that depend on the class and area of reinforcement. In the mode of selecting prestressed reinforcement, recommended value of prestressing force for the certain reinforcement is determined by the program.

Speed of increase in load is required to determine reserve factor for the section. The speed shows which part of load should be added per one step. It is recommended to define the speed value within the limits 1-5%. If speed of increase in load is rather high, calculation accuracy of reserve factor for the section is reduced.

When the input data is defined, click **Calculate**.

Output data

Reserve factor for the section is displayed in the appropriate column in the **Design forces** table.

To display **Output data** for the calculation, click **Results**.

Output data

Properties of concrete and reinforcement

Concret class	Prestressed reinforcement	class	Es,MPa	Rs,MPa	Rsc,MPa	Rs,ser MPa	As,mm2
B40	upper	A500 d=6-40	180000	435	400	500	760.26542
Eb,MPa	lower	A500 d=6-40	180000	435	400	500	760.26542
Rb,MPa	Nonprestressed reinforcement	A240 d=6-40	180000	215	215	240	923.62823
Rb,ser MPa	upper	A240 d=6-40	180000	215	215	240	923.62823
Rbt,ser MPa	lower	A240 d=6-40	180000	215	215	240	923.62823

Ared 336383.830205 mm2 Ired 19042366427.5 mm4 Wred 49820121.8801 mm3 y0 382.22239 mm

Sigma_spn 265.69668 MPa Sigma_spv 265.69668 MPa

Losses of prestress

Sigma_spn1	Sigma_spv1	Sigma_spn2	Sigma_spv2
87.877013 MPa	87.877013 MPa	34.376387 MPa	42.877013 MPa

Strength analysis

kci_r	X	kci	Mu
0.3522939	107.339779487 mm	0.1394023	679.353384034 kNm

Analysis at compression stage

Ebp,MPa	Rbp,MPa	Rb,serp MPa	Rbt,serp MPa	kci_rp	kci_p	Mu(p)	ep	Np*ep
32500	15.95	18.5	1.55	0.3543997283	0.0461689431	319.54685774 kN*m	765 mm	-79.488019594 kN*m

Buckling analysis

Ncr	Ncr(p)
43851.851 kN	38541.666 kN

Analysis by serviceability limit states

Mcr	Mr	acrc	fm
161.27831 kN*m	200.85944 kN*m	0.1577492 mm	-4.775283 mm

Exit

Figure 16.3

To save the model in *.pna format, click **Save**.

To open the input data of the saved model, click **Open**. The calculation should be made once again.

To present a report document in HTML format, click **Report**.

Notation in output data:

Ared - area of equivalent section;

Ired - moment of inertia of equivalent section;

Wred - section modulus of equivalent section;

y0 - distance from lower fiber up to gravity centre of the section;

σspn - stress in lower prestressing reinforcement without account of losses;

σspv - stress in upper prestressing reinforcement without account of losses;

σspn1 - stress in lower prestressing reinforcement with account of immediate losses;

σspv1 - stress in upper prestressing reinforcement with account of immediate losses;

σspn2 - stress in lower prestressing reinforcement with account of all losses;

σspv2 - stress in upper prestressing reinforcement with account of all losses;

ξr - ultimate relative height of compression zone of concrete;

ξ - relative height of compression zone of concrete;

x - height of compression zone of concrete;

Mu - ultimate moment for the section;

Ncr - axial force in buckling;
Mcrc - moment in crack formation;
Mr - moment of external forces relative to the axis that is parallel to zero line and passes through the core;
acrc - max width of crack propagation;
 ξ_{rp} - ultimate relative height of compression zone at fabrication stage;
 ξ_p - relative height of compression zone at fabrication stage;
Mu(p) - bending moment that the section could take from prestressing;
Np*ep - max moment generated in the section during prestress;
ep - eccentricity of prestressing force;
Ncr(p) - critical prestressing force for reinforcement in buckling.

Analysis of RC support sections (posts)

The module enables you to analyse strength in reinforced concrete (RC) supports of ring sections with prestressed reinforcement.

The following building codes are supported:

- DBN V.2.6-98:2009 'Concrete and reinforced concrete structures. Basic provisions'.
- DSTU B V.2.6-156:2010 'Concrete and reinforced concrete structures from heavyweight three-component concrete'.

Materials

Concrete – heavyweight concrete of classes: C12/15, C16/20, C20/25, C25/30, C30/35, C32/40, C35/45, C40/50, C45/55, C50/60.

Prestressed reinforcement: A600, A600C, A600K, A800, A800K, A800CK, A1000, Bp1200, Bp1300, Bp1400, Bp1500, K1400 (K-7), K1500 (K-7), K1500 (K-19).

Nonprestressed reinforcement: A240, A400, A500, B500.

According to DSTU B.V.2.6-156:2010 sect.3.2.2.2 and sect.3.2.2.4, prestressed rebars may be applied as nonprestressed reinforcement.

Input data

Concrete: Class of concrete, strength of concrete at transfer **Rbp**, hardening process (natural hardening, thermal treatment) and stress-strain diagram for concrete.

Reinforcement: it is possible to define 2 reinforcement layers with different location for nonprestressed reinforcement and one reinforcement layer for prestressed reinforcement. For every layer, you define class of reinforcement, diameter of rebars, number of rebars, distance from rebar to external border of a pipe **a** and angle for distance relative to the Y-axis. For prestressed reinforcement it is necessary to define prestressing force.

Load: **N** – axial force (compression with sign '-'), **My** – bending moment relative to the Y-axis ('+' if the lower edge of section is in tension, '-' if the upper edge of section is in tension), **Mz** – bending moment relative to the Z-axis ('+' if the right edge of section is in

tension, '-' if the left edge of section is in tension). It is possible to save the input data to the file or open previously saved problem. To do this, use appropriate buttons.

To start calculation, click **Calculate**.

Output data

When calculation is complete, you will obtain the following results:

- height of compression zone of concrete x ,
- areas of nonprestressed **As** and prestressed **Ap** reinforcement,
- stress in reinforcement with account of all losses **Sigp**,
- short term and long term losses,
- width of crack propagation **a_crc**,
- distance between cracks **l_crc**.

The screenshot shows the ESPRI software interface with the following data:

Load

- N, kN: -1100
- My, kNm: 86
- Mz, kNm: 73

Output data

- x, mm: 840
- Sigp, MPa: 663.14559
- As, mm²: 6427.6985
- Losses1: 47.5
- Ap, mm²: 1809.5573
- Losses2: 97.327540
- a_crc, mm: 0
- l_crc, mm: 0

Concrete

- Class: C32/40
- Rbp, MPa: 1450
- Strain diagram: Bilinear
- D, mm: 840
- d, mm: 200
- L, mm: 8000
- Natural hardening

Reinforcement

	Nonprestressed	Diameter,	Number of rebars	Distance, mm	Angular distance
	A500	18	18	36	0
	A500	14	12	60	15
	Prestressed				
	Bp1200	12	16	40	22.5

Np, kN: 1200

Buttons: Save, Open, Calculate, Report, Help

Figure 16.4

To present a report document in HTML format, click **Report**.

The report contains physical and mechanical properties of materials as well as the output data:

Prestressing force, kN – **Np**

Short term losses, MPa

Long term losses, MPa

Stress in prestressed reinforcement with account of all losses, MPa – **Sigp**

Percentage of reinforcement for section, %

Relative height of compression zone of concrete – **ksi**

Height of compression zone of concrete, mm – **x**

Width of crack propagation, mm – **acrc**

Max depth of cracks, mm – **hcrc**

Distance between cracks, m – **lcrc**

Stress in extreme tensile reinforcement, MPa – **Sigma_kr**

Relative strain in extreme compressed fibre of concrete – **EpsBMax**

Soil

Soil (Chapter)

The module enables you to calculate settlements of slab and/or pile foundations and subgrade moduli C1, C2 of soil under arbitrary contour of foundation slab or pile foundation grillage.

[Moduli C1 and C2 according to soil model](#)

Soil

Foundation slab or pile foundation grillage are presented as uniformly distributed load that correspond to the slab shape and is applied to the specified contour of soil model. Load may be applied to the whole contour of the model and to its separate zones (zones may have arbitrary shape in plan).

Every applied load may be defined as the load from existing building. In this case, the program computes influence that the settlement of buildings under construction has on the settlement of existing buildings. It is also possible to compute skews of existing buildings.

Computation is made according to automatically generated soil model. To generate soil model, define data about location of boreholes and properties of soil layers (GE) in them.

Contour of soil model in plan is determined by location of boreholes, overall dimensions of load contours as well as specified grids of axes for existing buildings and buildings under construction. Grids of axes are the supplementary element for model generation and, as a rule, this element determines overall dimensions of the construction site.

If when you generate the soil model, point (where subgrade moduli and other parameters should be calculated) is located between the specified boreholes, then soil model is generated by interpolation. In this case, interpolation zone is determined with the polygon of the specified boreholes. If the point is located outside the polygon of specified boreholes, then soil model is generated by extrapolation. Extrapolation zone is determined with overall dimensions of grids and loads outside the polygon of specified boreholes. If grids or loads are partially or completely defined outside the polygon of specified boreholes, then when extrapolation zone is determined on plan, additional boreholes will appear automatically.

The following building codes are supported:

SNIP 2.02.01–83*,
SP 50-101-2004,
DBN V.2.1-10:2009,
SP 22.13330.2011,
SP 24.13330.2011.

Analysis of settlements is carried out by the model of linear elastic half-space.

Input data

Soil properties

On the MODEL menu, click **Soil properties** (button  on the toolbar).

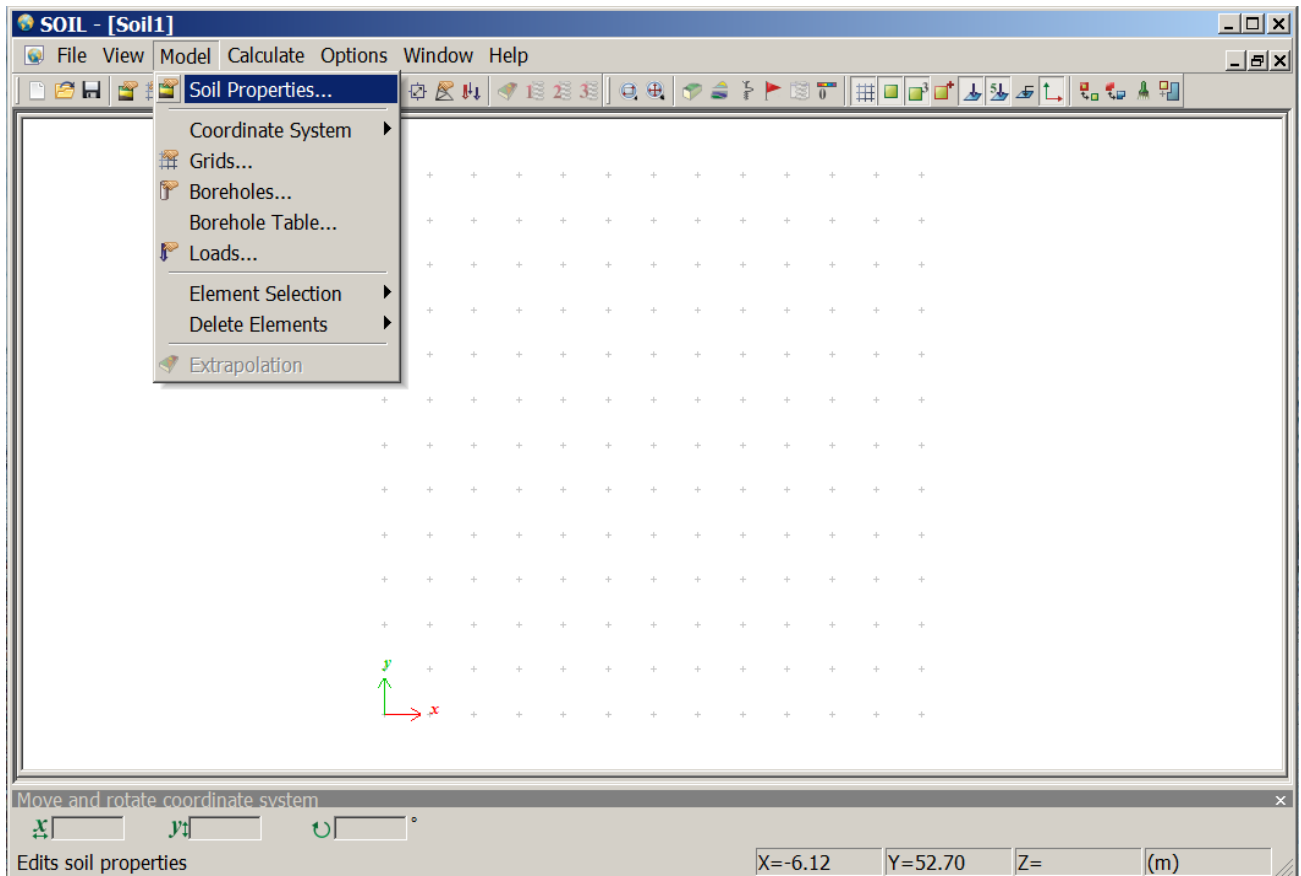


Figure 17.1

The **Soil properties** dialog box appears on the screen.


Soil properties														
Soil properties														
	A	B	C	D	E	F	G	H	I	J	K	L	N	T
1	GE	Legend	Name of soil	Colour	Modulus of elasticity t/m ²	Poisson's ratio	Soil unit weight, t/m ³	Conversion factor to 2nd modulus of elasticity	Natural moisture, parts	Yielding IL	Water Loess	Void ratio e	Angle of internal friction ϕ_i , °	
2	No.													
3														
4														
5														
6	1		Man-made		1000	0.3	1.8	5	0.05	0.2		0.7	16	
7	2		Sandy silt		1800	0.3	1.75	5	0.25		W	0.54	31	
8	3		Sand loam		2000	0.3	1.82	5	0.26	1.1	W	0.72	22	
9	4		Clay loam, low pl		1800	0.35	1.87	5	0.17	0.26		0.68	18	
10	5		Clay, semi-hard		2200	0.42	1.92	5	0.02	0.15		0.8	16	
11														

Note: Yielding values IL are not used in SOIL module


Figure 17.2

To edit the table with soil properties, use appropriate buttons above the table – cut, copy, paste, delete, select default value for constructed soil, select colour of soil, define presence of groundwater.

Grids

To generate polygonal contour, define the grid in appropriate dialog box – on the MODEL menu, click **Grids** (button  on the toolbar). When you start the program, the grid No.1 is already displayed in the working area of the screen. If required, it may be deleted.

In the **Grids** dialog box, do the following:

- in the **Grid No.** box, define the grid number (by default, grid No. 1 is already defined);
- define number of steps and their values along the X and Y-axes;
- if required, define grids relative to the vertical axis;
- click **Apply** .

Grids

Grid 2
☐ Upper
(m)

☒ First point

X 12.00
Y 12.00

Rotation angle 0.0 °

1

Along X-axis


Along Y-axis


Step value Steps Step value Steps

1.00 10 1.00 10

Figure 17.3


Boreholes

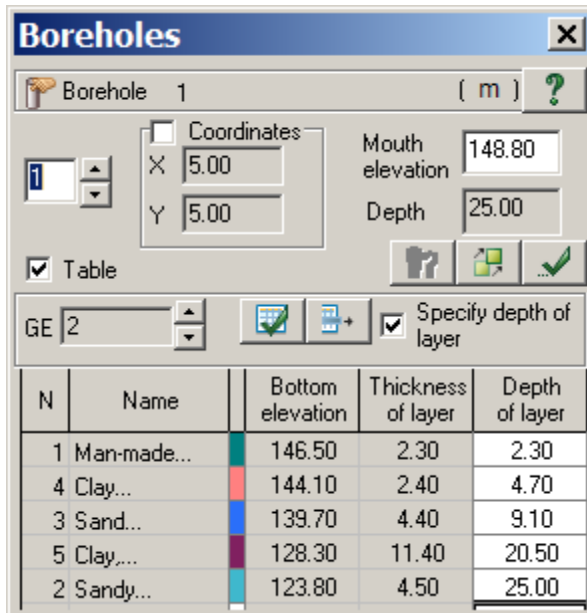To define boreholes, on the MODEL menu, click **Boreholes** (button  on the toolbar). Define number for the borehole in the appropriate box and coordinates of the borehole as well as mouth elevation. In the **GE** list, select certain number of soil from the table of soil properties and in the first row of the table define (if appropriate check box is selected) either depth of layer or bottom elevation, etc. Boreholes appear on the screen as you define them.



N	Name	Bottom elevation	Thickness of layer	Depth of layer
1	Man-made...	146.50	2.30	2.30
4	Clay...	144.10	2.40	4.70
3	Sand...	139.70	4.40	9.10
5	Clay...	128.30	11.40	20.50
2	Sandy...	123.80	4.50	25.00

Figure 17.4

To display numbers of boreholes, on the VIEW menu, point to **Show objects** and click **Borehole numbers** (button  on the toolbar).

Loads

To define loads, on the MODEL menu, click **Loads**. Appropriate dialog box appears on the screen.

Two types of load may be defined: rectangular load or arbitrary load.

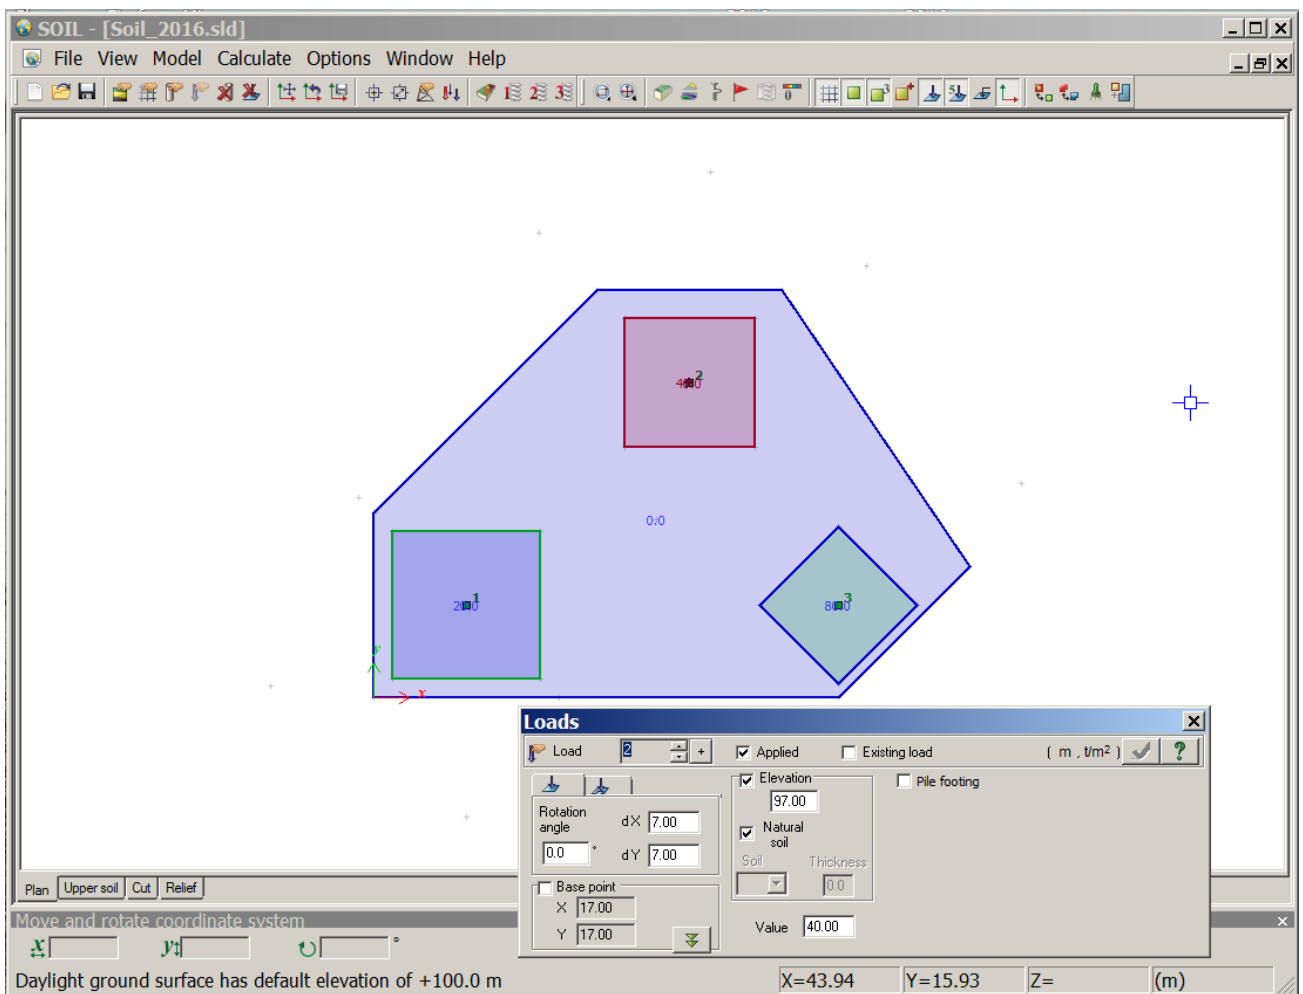




Figure 17.5

To define arbitrary contour of load, in the **Loads** dialog box, click the **Specify load on plan** button  and define (in sequence) grid nodes that generate required polygon. To close the contour, click its first node. It is possible to specify load by coordinates for vertices in the load contour.

To display the sketch in the dialog box, click the **Preview load and edit base point** button . In the extended area of the dialog box, click (if required) the base point of rectangular load as it is shown in the figure below.

To define rectangular load, click the  tab in the dialog box.

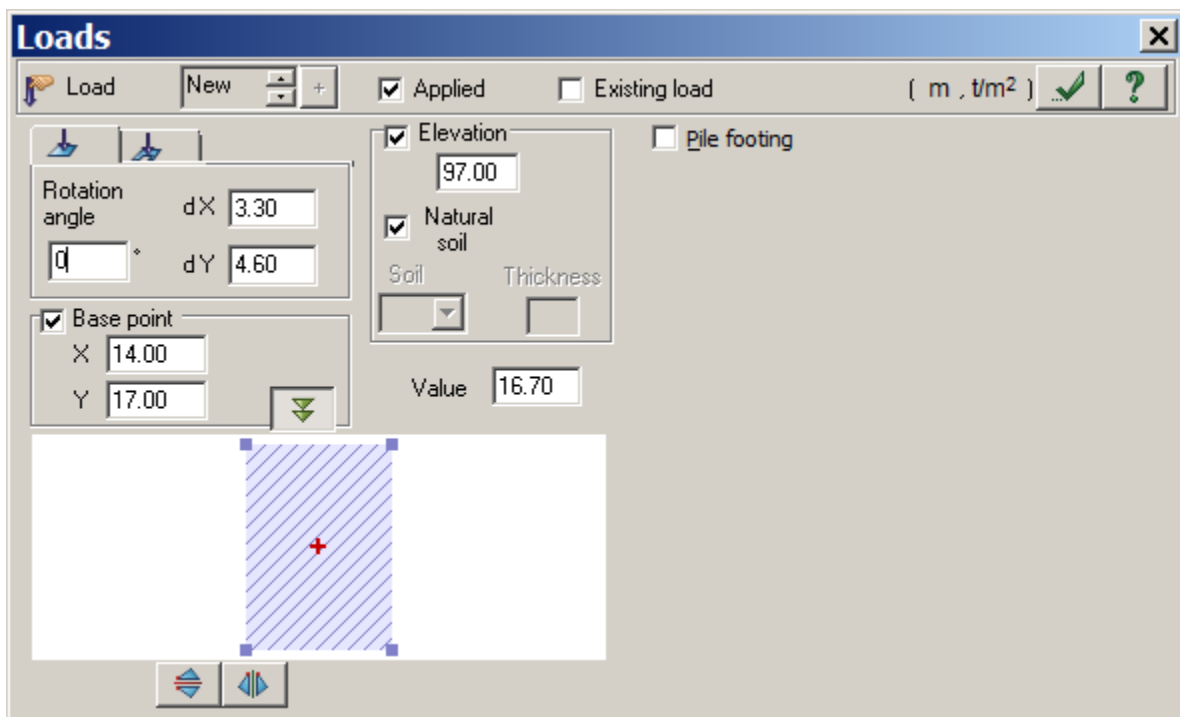


Figure 17.6

If the load is applied to the pile footing, then in the **Loads** dialog box, select appropriate check box and define required parameters.

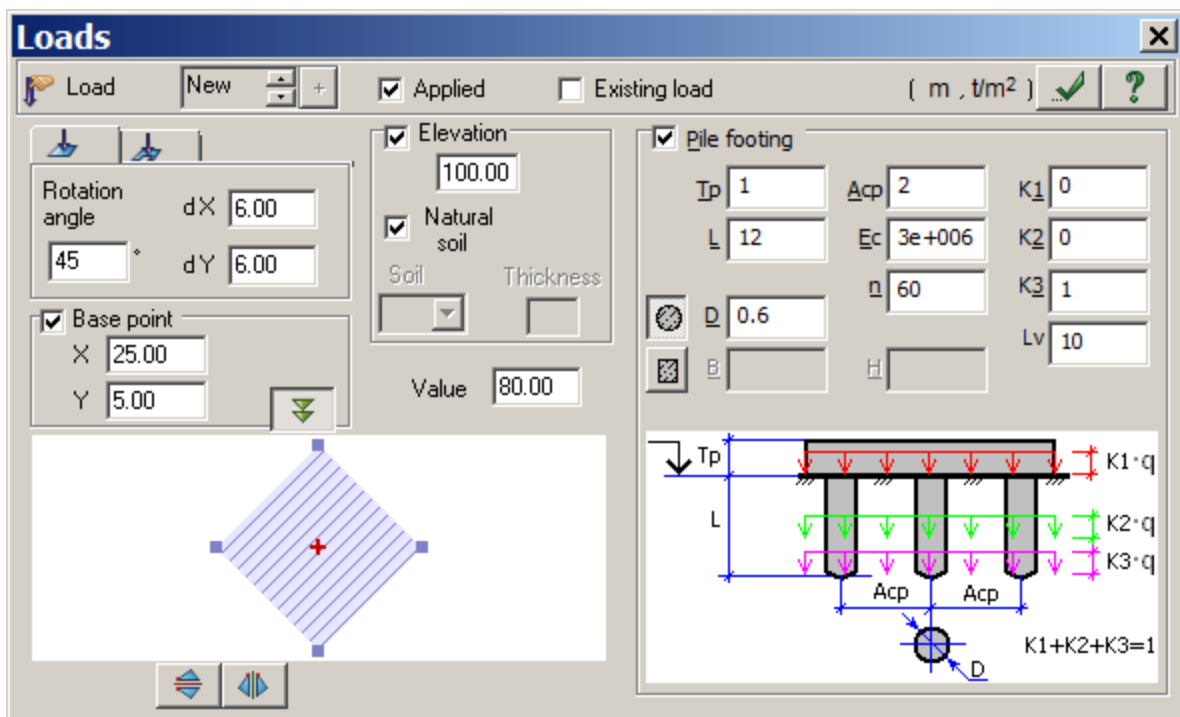


Figure 17.7

For analysis of pile footing, the following parameters should be defined:

T_p – thickness of foundation slab.

L – pile length.

D – diameter of piles with circular cross-section.

B, H – dimensions for square or rectangular cross-section of pile.

Acp – mean step of piles.

Ec – modulus of elasticity for pile material.

n – number of piles.

K1 – fraction of load transmitted to soil at base of foundation slab.

K2 – fraction of load transmitted to soil by friction along side surfaces of piles.

K3 – fraction of load transmitted to soil below the pile toe (at level L).

Lv – number of levels through which the load from friction along side surface of piles is transmitted. If K2=0, this value is not considered in analysis.

Analysis of pile footing as equivalent one in strict compliance with building code is carried out for K1 and K2 = 0 and K3 = 1. Another distribution of load is permitted, e.g. K1=0.05, K2=0.9, K3 = 0.05 (or other), that provides smooth accumulation of settlement from piles. In this case, K2 may be divided into **Lv** levels (e.g. Lv = 10). Then stress diagrams in soil will be of step-type and present elevations of application of appropriate load fractions.


In analysis according to SP 24.13330.2011, weight of soil is not considered in the volume of equivalent footing.

In analysis according to DBN V.2.1-10:2009, weight of soil is considered in the volume of equivalent footing.

Depth of compressible stratum Hc for pile footing is computed from the elevation of load application.

Visualization of soil model



When boreholes, GE, loads and grids are defined, on the MODEL menu, click **Extrapolation**. The soil model will be generated automatically. To visualize 3D model, on the VIEW menu, click **3D view**.

To present arbitrary soil profile, on the VIEW menu, click **Arbitrary soil profile** (button  on the toolbar). The soil profile will be presented in the floating box that is located (by default) in the lower part of the screen. To generate arbitrary soil profile, click the **Specify points on plan** button and then specify (in sequence) on model the beginning and the end of the soil profile line. Current soil profile and coordinates of the specified points will be displayed in the **Arbitrary soil profile** floating box.

You could also specify coordinates of the soil profile line. To do this, select appropriate check box and specify coordinates of two points in the current coordinate system.

When you right-click the sketch of the soil profile, you will see the ToolTip with the name of GE and its parameters – modulus of elasticity *E*, Poisson's ratio and soil density. When you move the pointer over the sketch in the **Arbitrary soil profile** floating box, coordinates of

the pointer location in the current coordinate system as well as elevation will be displayed in the right bottom corner of the box.

When you click **Vertical mark** button , you could specify arbitrary point on the soil profile. To do this, move the vertical line of the mark with the pointer and click it. Location of the point will be specified and indicated on the image with vertical dashed line of red colour. Click the **Display parameters of virtual borehole** button  to present the **Boreholes** floating box with parameters of virtual borehole, that is, borehole in the specified point of the soil profile. A new number will be assigned to this borehole.

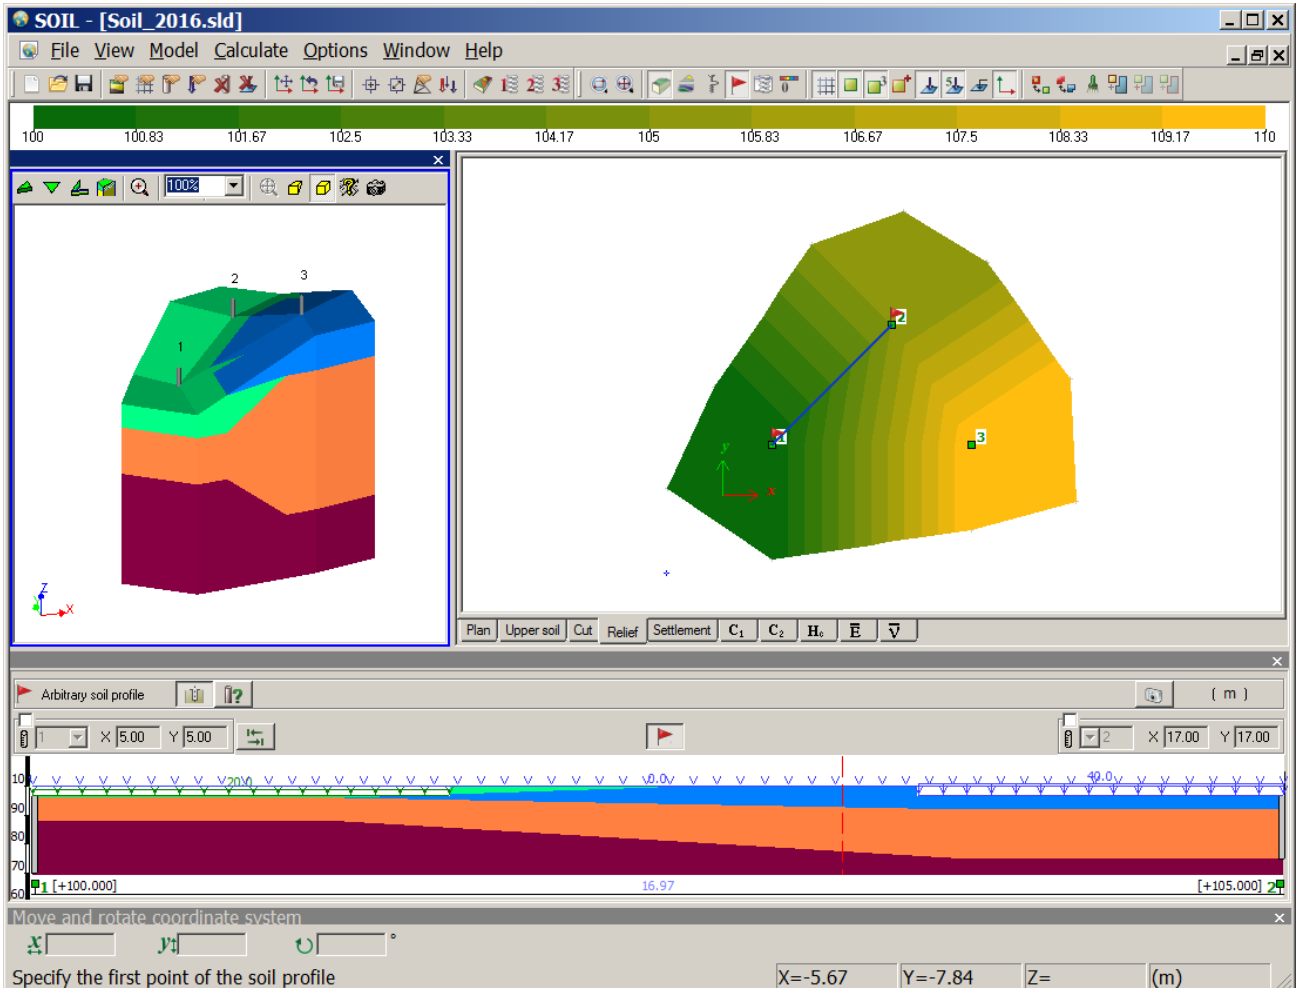


Figure 17.8

Analysis parameters

On the CALCULATE menu, click **Options**. In the **Calculation options** dialog box, select the building code for the calculation procedure.

In the appropriate boxes define the following values:




- coefficient for depth of compressible stratum (default value - 0.5);
- min depth of compressible stratum (default value - 5 m);

– additional stress invariable within compressible stratum along the whole depth (default value 0.0).

If it is necessary to consider weight of soil above elevation of load application, select appropriate check box. Difference between elevation of the soil surface and elevation of load application is the depth of foundation.

Define triangulation step of loads for generation of contour plots (by default, the step is equal to 20.). Calculation speed as well as accuracy in generation of contour plots for analysis results depend on the value of triangulation step.

Figure 17.9

To compute subgrade moduli by one of three methods (or by all methods), on the CALCULATE menu, click **By method 1, 2, 3** (buttons  ,  ,  on the toolbar).

Output data

Output data contains settlement, subgrade moduli C1 and C2, depth of compressible stratum Hc (according to allowed ratio of additional vertical stress to vertical stress from dead weight of soil), mean modulus of elasticity and Poisson's ratio.

Output data may be presented as contour plots when you click appropriate buttons at the bottom of the screen.

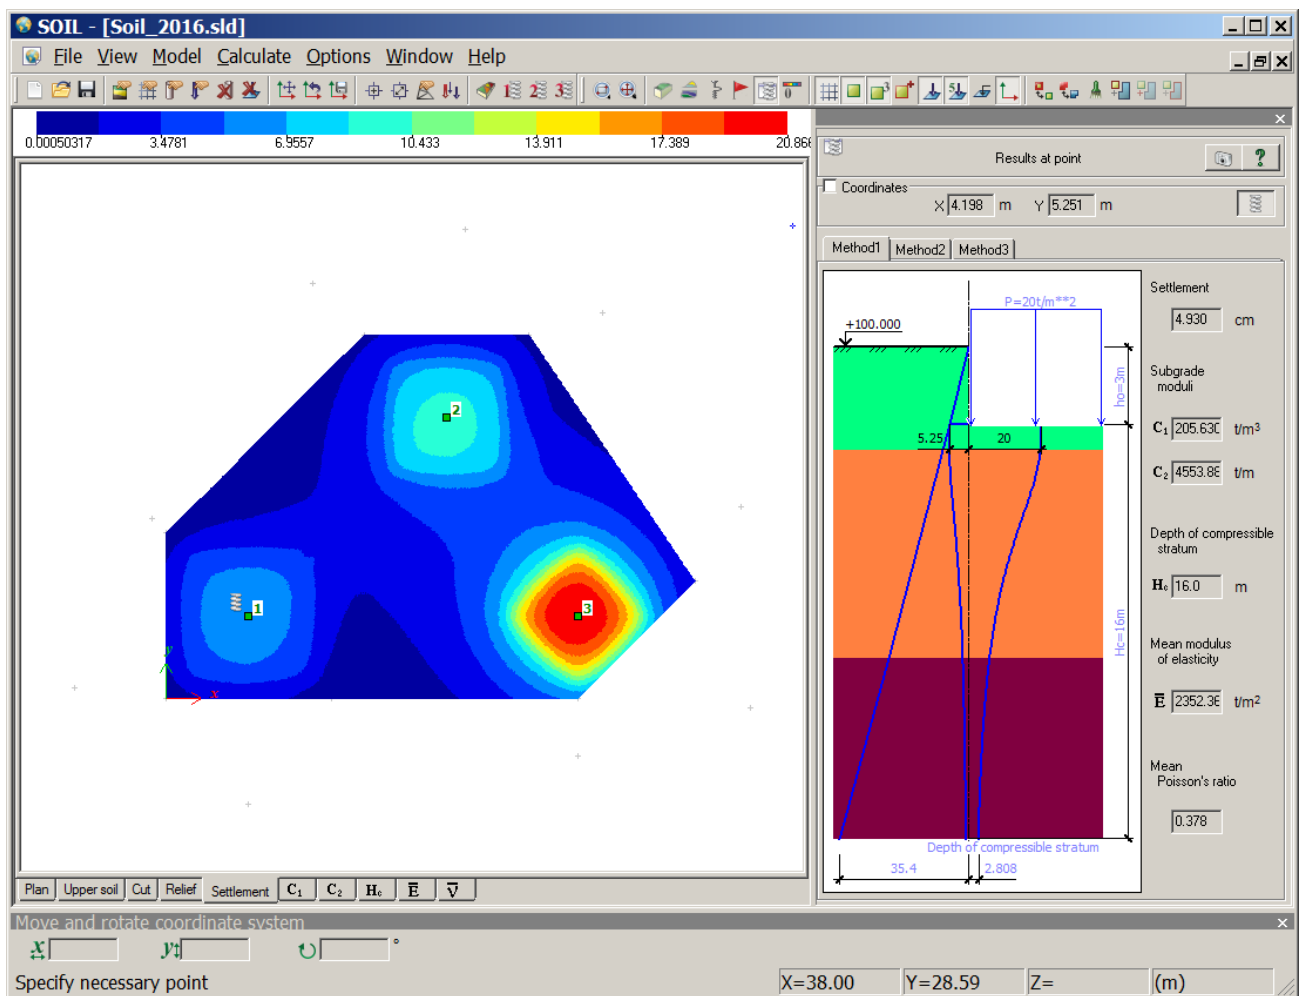


Figure 17.10

In the right part of the **Results** floating box you will see vertical elevation with applied loads and stress diagrams in soil along the vertical at the certain point on plan; values of computed parameters are displayed in appropriate boxes. Certain point on plan may be either defined with coordinates or specified on plan when you click the **Specify on plan** button.

It is also possible to display the plan with specified grids and loads (**Plan** tab) and plan view of the soil surface in colour (**Upper soil** tab). When you click the **Cut** tab, you will see the slider with depth levels. Use this slider to display colour palette of soil at the specified depth.

Click **Relief** tab to display relief of the soil surface (if boreholes with different mouth elevation are defined); in this case loads are not displayed.

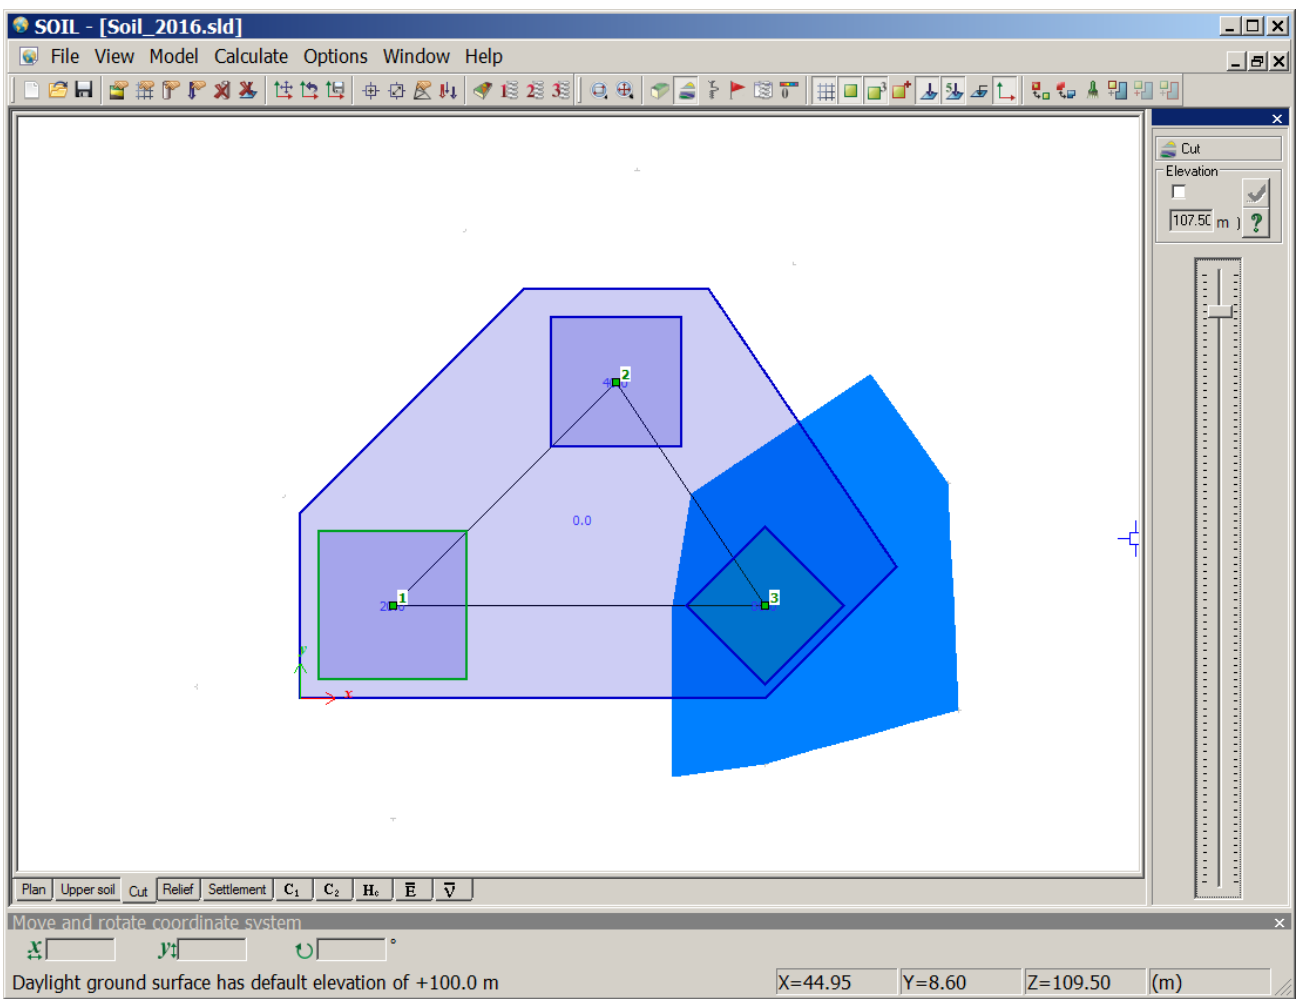


Figure 17.11 a)

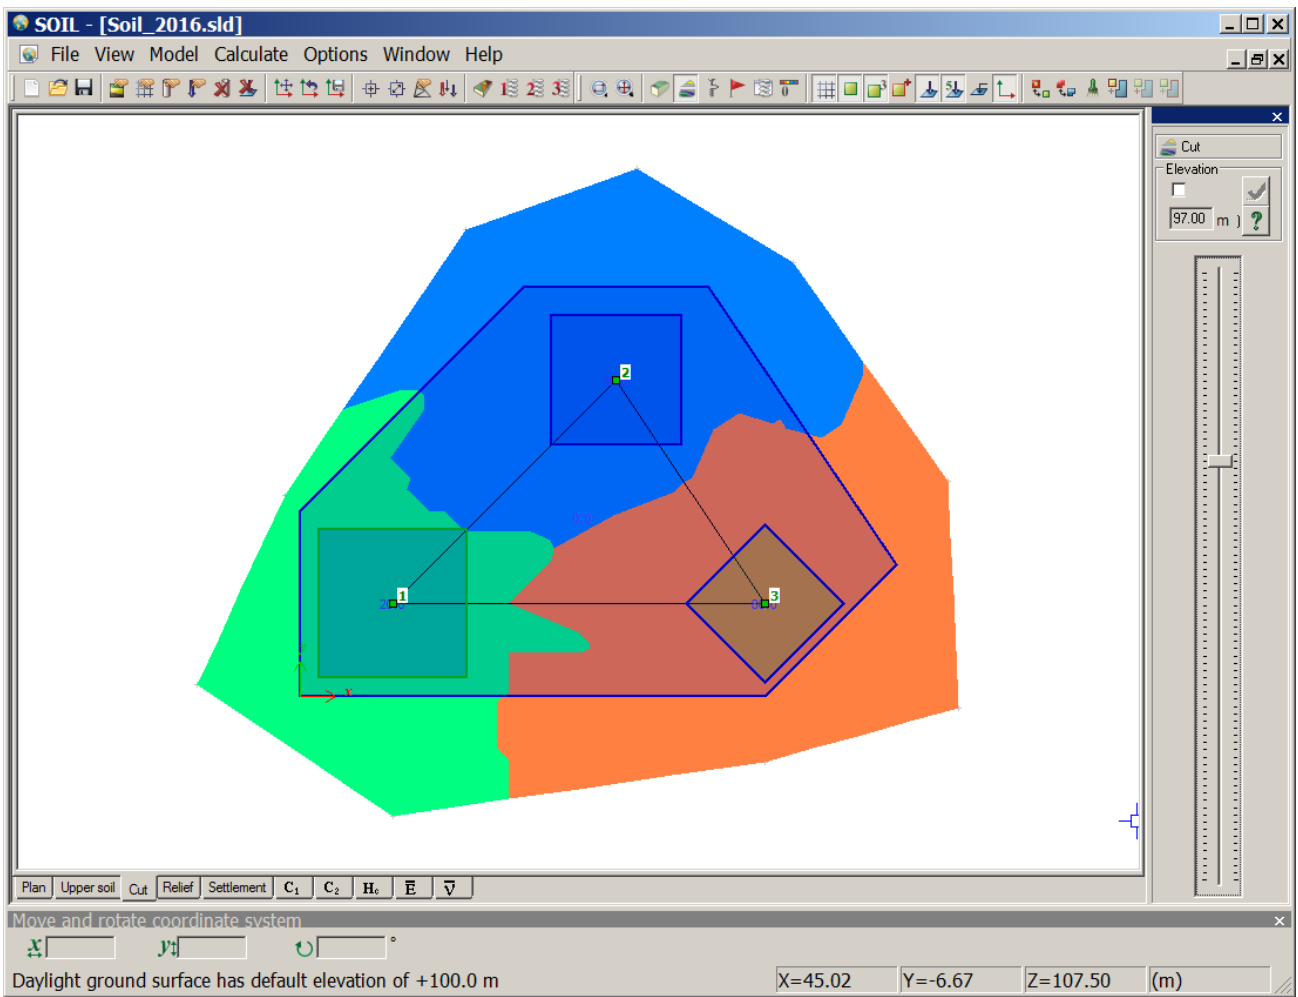


Figure 17.11 b)

Table of settlements

To generate table of settlements, on the CALCULATE menu, click **Table of settlements**. In the table define numbers or names of required points and their X, Y-coordinates. To add the specified data to the table, click **Add**. When complete data is defined, click **Apply**. The points mentioned in the table will be displayed on the screen. Click **Generate**. You will see the dialog box with the file name *NAME_Table_of_settlements.rpt*. When you click **Save**, the table will appear on the screen.

Notation in the table of settlements:

S1 – settlements in points in existing structures;

S2 – settlements in points in structures under construction;

Sr = S1 – S2 – difference of settlements.

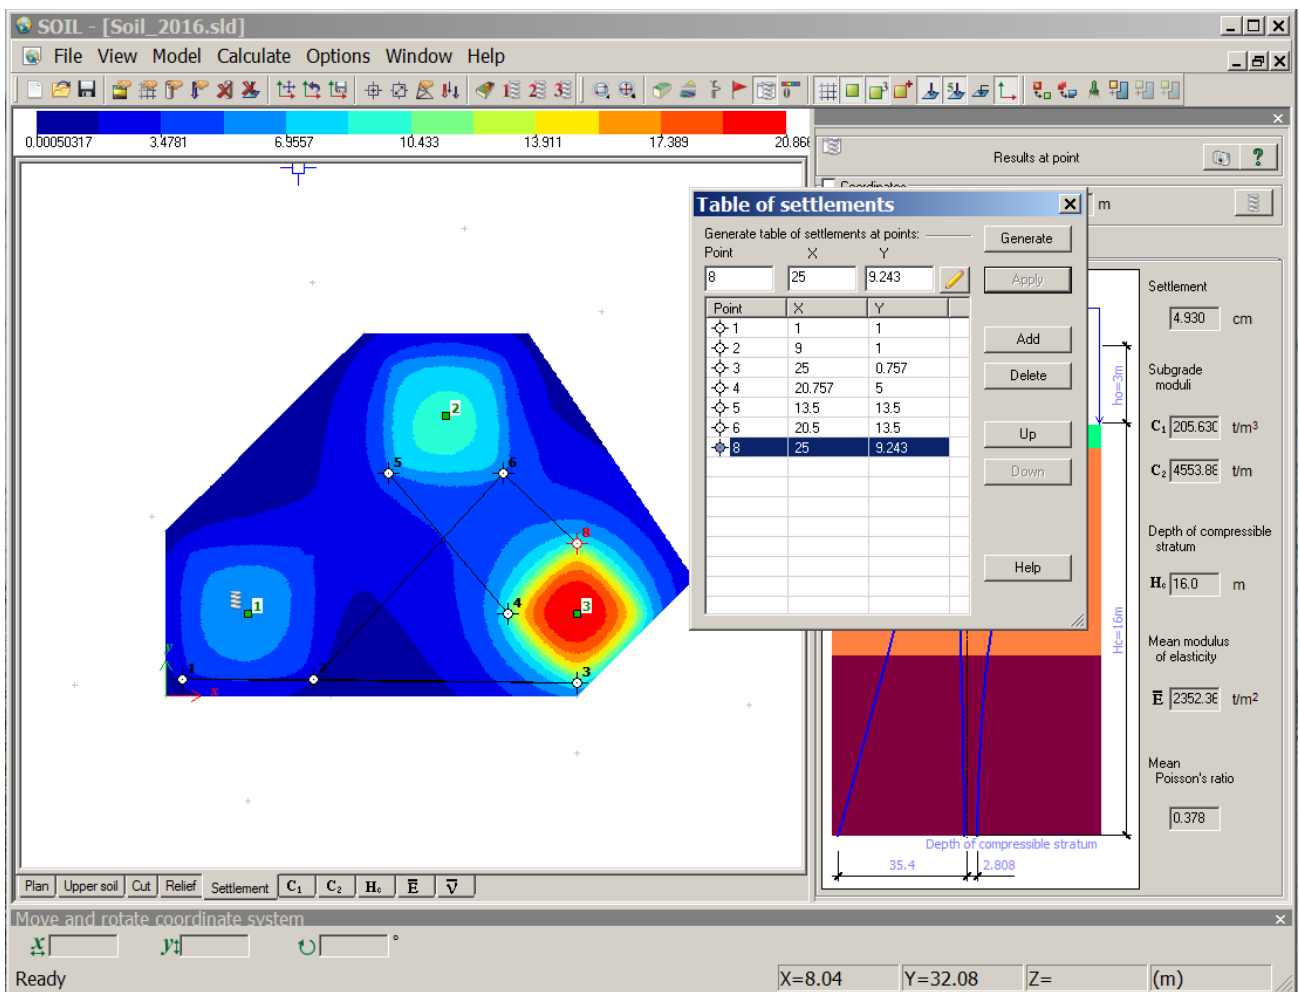


Figure 17.12

ESPRI 2016 SOIL. C:\PROGRAM FILES (X86)\LIRA SAPR\ESPRI 2016\MY_TESTS\SOIL_2016 TABLE OF SETTLEMENTS.RPT. 25 октябрь 2016

Table of settlements

Point	S1, cm	S2, cm	Sr, cm
1	1.66478	1.71682	0.0520419
2	1.325	1.46989	0.144896
3	8.12526e-006	8.47659	8.47659
4	5.17899e-005	9.46533	9.46528
5	0.0094309	4.12172	4.11229
6	0.000776228	4.60474	4.60397
8	1.0867e-005	9.35066	9.35065

Figure 17.13

Table of skews

To generate table of settlements, on the CALCULATE menu, click **Table of skews**. In the table define numbers or names for pairs of required points. To add the specified data to the table, click **Add**. When complete data is defined, click **Apply**. The points mentioned in the table will be connected on the screen with the line. Click **Generate**. You will see the dialog

box with the file name *NAME_Table_of_skews.rpt*. When you click **Save**, the table will appear on the screen.

Notation in table of skews:

i, j – numbers of the first and the second points between which different of settlements will be calculated;

$S_{r,i}$ – settlement at the i -th point;

$S_{r,j}$ – settlement at the j -th point;

$S_{r,j} - S_{r,i}$ – difference of these settlements;

$L_j - L_i$ – distance between points;

Skew is equal to $(S_{r,j} - S_{r,i}) / (L_j - L_i) \cdot 100\%$.

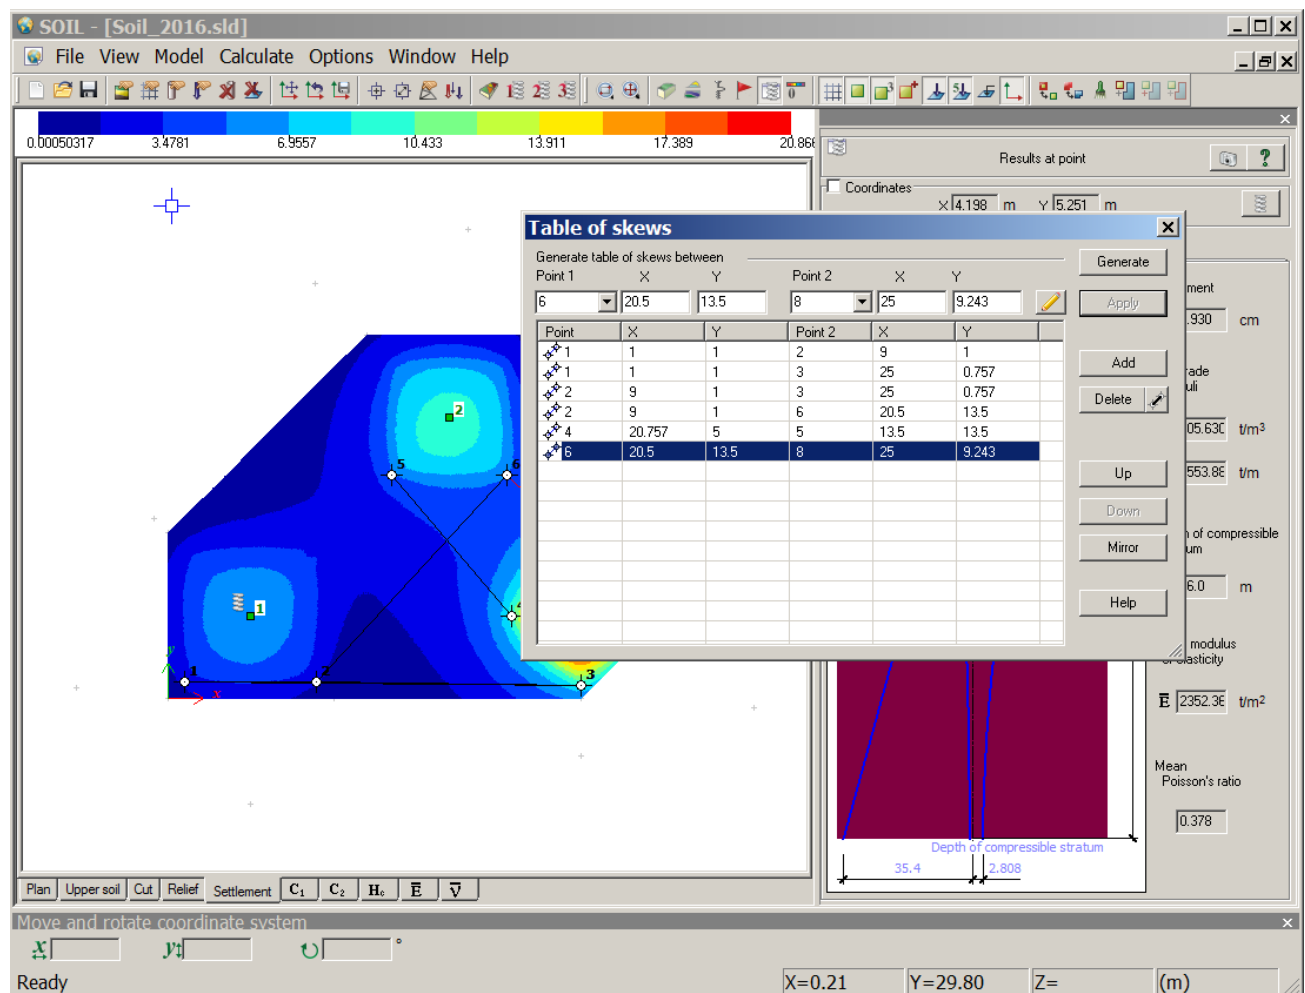


Figure 17.14

Table of skews

Point i	Sr,i, cm	Point j	Sr,j, cm	Sr,j - Sr,i, cm	Lij, cm	Skew
1	0.0520419	2	0.144896	0.0928536	800	0.0116067 %
1	0.0520419	3	8.47659	8.42454	2400.12	0.351005 %
2	0.144896	3	8.47659	8.33169	1600.18	0.520671 %
2	0.144896	6	4.60397	4.45907	1698.53	0.262526 %
4	9.46528	5	4.11229	-5.35299	1117.65	-0.47895 %
6	4.60397	8	9.35065	4.74668	619.452	0.766271 %

Figure 17.15

Calculation of subgrade moduli C1, C2 (summary)

Settlement (S) of foundation according to linear elastic half-space is calculated by layer-by-layer sum according to the formula:

$$S = 0.8W \quad (2)$$

$$W = \sum_{i=1}^n \frac{\sigma_{zp,i} h_i}{E_i} ; \quad (3)$$

where

h_i, E_i – thickness and modulus of elasticity of the i-th layer of soil (with account of its division into sublayers) respectively;

n – number of soil layers from the base of foundation up to the depth $Z = H_c$ with account of division into sublayers ($i=1 \sim n$).

Depth $Z = H_c$ is reached with the help of defined modulus of subgrade reaction.

The following components of settlement are calculated:

$$W_1 = \sum_1^n \frac{(\sigma_{zp,i} - \sigma_{zy,i}) h_i}{E_i} ;$$

$$W_2 = \sum_1^n \frac{\sigma_{zy,i} h_i}{E_{ei}} ;$$

$$W_3 = \sum_1^n \frac{\sigma_{zp,i} h_i}{E_{ei}}$$

where

where

E_i – modulus of elasticity of the i-th layer of soil along the loading path;

E_{ei} – modulus of elasticity of the i-th layer of soil along the unloading path;

by default $E_{ei} = E_i$;

$\sigma_{zp,i}$ – stress at the i-th layer of soil from external load;

$\sigma_{zy,i}$ – stress at the i-th layer of soil from dead weight.

If dead weight of soil at the level of foundation base is greater than mean pressure under the foundation base, then $W = W_3$, otherwise $W = W_1 + W_2$.

Mean (within the limits of fixed depth of compressible stratum H_c) values of modulus of elasticity E_{gr} and Poisson's ratio m_{gr} are used for calculation of subgrade moduli. These values are calculated according to formulas:

$$E_{gr} = \frac{\sum_{i=1}^n \sigma_{zp,i} h_i}{H_c}; \quad m_{gr} = \frac{\sum_{i=1}^n \nu_i h_i}{H_c}$$

Modulus of subgrade reaction C_1 is calculated by three methods.

Method 1. Subgrade modulus C_1 is calculated according to formula:

$$C_1 = \frac{E_{gr}}{H_c (1 - 2m_{gr}^2)}$$

Method 2. Subgrade modulus C_1 is calculated according to Winkler method:

$$C_1 = \frac{q}{S},$$

where

q – mean pressure under the base of foundation;

S – settlement of soil.

Method 3. Just as in method 1, formula (6) is used to determine subgrade modulus C_1 . The difference is that in this case correction factor u to modulus of elasticity of the i-th sublayer is introduced for calculation of mean modulus of elasticity. This factor varies from $u_1 = 1$ at the level of foundation base up to $u_n = 12$ at the level of calculated depth of compressible stratum. It is accepted that factor u varies according to parabola law:

$$u = \frac{11z^2}{H_c^2} + 1$$

Moreover, it is also accepted that additional vertical stress is distributed uniformly along the depth. Then

$$E_{gr3} = \frac{H_C}{\sum_{i=1}^n \frac{h_i}{u_i E_i}}$$

Method 3 is experimental and suggested in order to more precisely simulate changes in soil strength along the depth. In method 1, it is impossible to take into account that modulus of elasticity increases along the depth. It causes too high values of settlements and therefore too low values of subgrade modulus C1.

For methods 1 and 3, subgrade modulus C2 is calculated according to the formula:

$$C_2 = \frac{C_1 H_C^2 (1 - 2m_{gr}^2)}{6(1 + m_{gr})}$$

For method 2, subgrade modulus C2 is not calculated.

Design resistance of soil

To compute values of design resistance of soil R and total vertical stress Sz along the depth, in the **Loads** dialog box, select the **Compute R** check box.

In the appropriate boxes, define the following parameters:

b – width of load (dimension along horizontal), m;

L – length of load (dimension along vertical), m;

To compute b and L values automatically, select appropriate check boxes. In this case, defined load will be automatically inscribed into rectangle; dimensions of this rectangle will depend on b and L values.

For structures with rigid structural model and the ratio of structure (bay) length to its height L/H from 1.5 and greater, select the L/H check box and define the ratio. By default, the structure is considered to have flexible structural model.

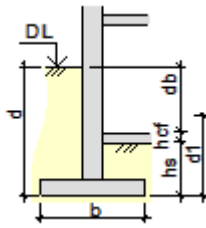
If there is a basement in the structure, select the **Basement** check box and define the following parameters for the basement:

db – depth of basement (distance from the soil level up to the basement floor), m;

hs – thickness of the soil layer above the foundation base from the side of basement, m;

hcf – thickness of the floor structures of the basement, m;

ycf – unit weight (design value) for the floor structures of the basement, t/m³.



Total vertical pressure S_z for SNIP 2.02.01-83 and SP 50-101-2004:

$$S_z = \sigma_z = \sigma_{zp} + \sigma_{zg}.$$

Total vertical pressure S_z for DBN B.2.1-10:2009 and SP 22.13330.2011:

$$S_z = \sigma_z = (\sigma_{zp} - \sigma_{zy}) + \sigma_{zg}.$$

When analysis of elastic foundation is carried out for the specified soil model and the **Compute R** check box is selected, apart from the **Settlement**, **Modulus of subgrade reaction C1**, **Modulus of subgrade reaction C2**, **Depth of compressible stratum Hc**, **Mean modulus of elasticity E**, **Mean value of Poisson's ratio ν** tabs, three more tabs will be displayed on the screen: **Total vertical pressure S_z** , **Design resistance of soil R**, **Ratio S_z/R** . On these tabs you will see the output data after computing design resistance of soil.

When you open the **Total vertical pressure S_z** , **Design resistance of soil R**, **Ratio S_z/R** tabs, in the **Results** floating box the diagram S_z (in red colour, to the left) and diagram R (in green colour, to the right) are generated from the level of foundation base (from the level where load is applied to) up to the border of compressible stratum. In the document window, contour plots S_z , R , S_z/R are displayed at zones of load application (depending on the tab that is active at the moment), values of parameters are presented on the colour palette.

Elevation may be defined in the **Horizontal cut** floating box that is presented when you activate above-mentioned tabs. In this box, with the **Cut** slider it is possible to trace the changes in S_z , R , S_z/R values along the depth. These changes will be also available in the document window on contour plots at zones of load application. When you activate the **Ratio S_z/R** tab, in the **Cut** slider area there is additional button **$S_z/R = \max$** . Use this button to generate contour plots of max values for the S_z/R ratio. Max value S_z/R for the point is selected from all pairs of values along the height of diagram generation and does not depend on the depth defined with the slider.

Bibliography

1. Designer's manual. Design-theoretical. In 2 books. M. Stroyizdat, 1972.
2. Warren C. Young. Roark's Formulas for Stress and Strain. Sixth Edition. McGraw-Hill Book Company, 1989. P. 348-355.
3. Manual on soil mechanics and dynamics of soil. V.Shvets, L.Ginzburg, etc. – K.: Budivel'nik, 1987. – 132 p.
4. SNIP 2.02.01-83. Foundation soils of buildings and structures. – M. Stroyizdat, 1985. – 40 p.
5. A.Shapoval. Algorithm optimization for analysis of slope stability. Master's research paper. PSACEA – 2004.
6. V.Alexandrov. Methods for determining dangerous combination of loads and their application to software for computer-aided design of building structures: Abstract of a thesis. ...PhD in Technical Sciences: 05.01.23. – L., 1973. – 30p.
7. E.Strelets-Streletsky. Methods for determining dangerous combination of stresses during evaluation of strength in elements of structure: Abstract of a thesis. ...PhD in Technical Sciences: 01.02.03. – M., 1987. – 22p.
8. Manual on design of residential buildings / TsNIIEPzhilishcha Goskomarhitectura. Issue 3. Structures of residential buildings (to SNIP 2.08.01-85).– M. Stroyizdat, 1989. – 304p.
9. Reinforced concrete walls in earthquake-proof buildings: Study and basis of design: Published by USSR-Greece / Edited by G.Ashkinadze, M.Sokolova. – M. Stroyizdat, 1988. – 504p.
10. SNIP 2.03.01-84. Concrete and reinforced concrete structures. – M.1985. – 79p.
11. Building code CEB-FIP (Euro-International Concrete Committee – International Federation for Prestressing) : For building codes for reinforced concrete (volume 2). – M.: NIIZHB Gosstroy USSR, 1984. – 284p.
12. A.Zolotkov. Earthquake resistance of monolithic buildings. – Kishinev, Moldova, 2000. – 283p.
13. Y.Izmajlov. Earthquake-resistant monolithic buildings. Kishinev, Moldova, 1989. – 253p.
15. Y.Izmajlov. Analysis of walls in frameless buildings in destruction along inclined section.- 'Building mechanics and analysis of structures', No.4, 1990 p.63-70.
16. Barda F.,Hanson J.M.,Corley W.G. Shear Strength of Low-Rise Walls with Boundary elements. Reinforced Concrete Structures in Seismic Zones. Publication SP-53 American Concrete Institute, Detroit, 1977.
17. Hernandez O.B., Zermeno M.E. Strength and Behaviour of Structural Walls with Shear Failure.Proc.7 WCCE, Istanbul, 1980.
18. Tassios T.P., Lefas J., Lulurgas S. Response Degradation and Hysteretic Damping of Reinforced Concrete Linear Elements and Shear Walls Under Large Cyclic Post Yielding Deformations, NTU Report, Athens, 1983.
19. V.Maximenko, Y.Voskresenskaya, N.Marjenkov. Engineering methods for evaluation of ultimate state in stiffness diaphragm in earthquake loads. 'Budivelni konstruktsii'. – Kiev: NDIBK, Issue 69, 2008, p.637–645.
20. SNIP 2.01.07-85*. Loads and actions.
21. SNIP 2.05.03-84*. Bridges and pipes.
22. SNIP II-23-81*. Steel structures.

23. SNIP II-7-81*. Construction in seismic areas.
24. SNIP 2.03.01-84*. Concrete and reinforced concrete structures.
25. SNIP 52-01-2003. Concrete and reinforced concrete structures.
26. SP 52-101-2003. Concrete and reinforced concrete structures.
27. TSN 102-00*. Reinforced concrete structures with rebars of classes A500C and A400C.
28. SNIP II-22-81*. Rock / reinforced masonry structures.
29. SNIP 2.03.01-84*. Concrete and reinforced concrete structures.
30. SNIP II-25-80. Timber structures.
31. SNIP 2.02.01-83*. Foundation soils of buildings and structures.
32. SP 50-101-2004. Foundations of buildings and structures.
33. SNIP 2.02.03-85. Pile foundations.
34. SP 50-102-2003. Design and construction of pile foundations.
35. MGSN 2.07-01. Footings, foundations and substructures.
36. SNIP II-3-79*. Construction heat engineering.
37. DSTU 3760-07. Reinforcing bars for reinforced concrete structures.
38. DSTU 3760:2006. Reinforcing bars for reinforced concrete structures.
39. Recommendations on use of reinforcing bars by DSTU 3760-07 in design and manufacturing of RC structures without prestress of rebars. – K.: Gospotrestandart of Ukraine, 2007.
40. Eurocode 2. Design of reinforced concrete structures.
41. Eurocode 3. Design of steel structures.
42. Manual on design of steel structures (to SNIP II-23-81*).
43. Manual on design of concrete and reinforced concrete structures from heavyweight and lightweight concrete without prestress of reinforcement (to SNIP 2.03.01-84).
44. Manual on design of pile foundations. – M. Stroyizdat, 1980.
45. P.Troitsky, I.Levitansky. Study on actual work of welded frame joint and recommendations on its analysis.//Materials on steel structures, issue 19, 1997.
46. Steel structures in 3 volumes. (Designer's manual)/Edited by V.Kuznetsov (TSNIIPSK named after N.Melnikov). — M.: ACB, 1998.
47. DBN 2.1.2-2:2006. Loads and actions.
48. DBN V.2.1-10:2009. Footings and foundations of structures.
49. DBN V.1.1-12:2006. Construction in seismic areas.
50. DBN V.2.3-14:2006. Transport facilities. Bridges and pipes. Design rules.
51. SP 16.13330.2011. Steel structures.
52. SP 22.13330.2011. Foundation soils of buildings and structures.
53. SP 24.13330.2011. Pile foundations.
54. SP 63.13330.2012. Concrete and reinforced concrete structures. General rules.
55. DBN V.2.6-162:2010. Rock / reinforced masonry structures.
56. SP 64.13330.2011. Timber structures.
57. SP 164. 1325800.2014. Strengthening of reinforced concrete structures with composite materials.
58. Eurocode 5. Design of timber structures.

Index

A

Advanced calculator ESPRI	16
Analysis of inelastic deflections	276
Analysis of RC support sections (posts)	375
Analysis of steel elements	105
Analysis parameters	387
Anchorage of reinforcement by DSTU 3760-07.....	135
Arbitrary plane frame	49
Areas and volumes.....	4

B

Bearing capacity of piles by field test results	243
Bibliography.....	399
Brick pier	176
Brick pier by DBN V.2.6-162 2010.....	186

C

Cable and string	90
Cable and string. Input data	94
Cable and string. Notation.....	96
Cable and string. Output data.....	94
Calculation of subgrade moduli C1, C2 (summary).....	395
Circular arc.....	350
Climatic thermal loads	263
Cold-formed shapes	125
Column strengthened with composed materials	166
Combined piled-raft foundation	244
Composite steel and concrete columns	161
Composite steel and concrete slabs...	168
Concrete pipe sections.....	158
Concrete sections with fibre-reinforced polymer (FRP) bars.....	154
Continuous beam	38

D

Dead weight of multi-layer coating	252
Deflections.....	275
Design compression strength in masonry	175
Diagram multiplication	6
Diaphragm.....	297

E

Effective lengths of steel structure elements.....	117
Ellipsoid	281
Ellipsoid. Bearing capacity of RC elements.....	281

F

Foundations and beddings.....	213
Function interpolation.....	14

G

General notes	332
---------------------	-----

H

Hazardous energy combinations of forces (EnergyCF).....	266
--	-----

I

Ice loads	261
Influence lines in continuous beam	97
Input data	380
Input data (Toster)	333

L

Linear algebra.....	8
Load factors	250
Loads and actions.....	249

M

Masonry and masonry reinforcing.....	175
Masonry in local compression.....	180
Mathematics for engineer	3
Mode shapes and frequencies of natural vibrations in cantilever.....	82
Mode shapes and frequencies of natural vibrations in continuous beam	87
Moduli of subgrade reaction C1, C2....	214
Moment of inertia in torsion.....	33

O

Options to edit and visualize the model	58
Options to edit the model	349
Options to visualize the model	349
Output data	59, 353, 388

P

Parametric joints of steel structures....	120
Parametric plane frame.....	45
Parametric sections	22
Parametric thin-walled sections	23
Pile under combined action of loads ...	228
Polynomial roots	12
Prestressing	369

Principal and equivalent stresses in reinforced concrete structures	146	Sign conventions for displacements and forces	60
Principal and equivalent stresses in soil	232	Single pile	224
Principal and equivalent stresses in steel structures	113	Slope stability	235
Properties of concrete	133	Snow loads	255
Punching shear	309	Soil	379
Punching shear analysis (Belarus)	326	Soil (Chapter)	379
Punching shear analysis (Eurocode) ..	319	Stability factors and buckling modes in cantilever	84
Punching shear for arbitrary contour ..	310	Stability of multi-layer slope	240
Punching shear for rectangular contour	314	Static and dynamic analyses, stability ..	37
R		Steel structures	101
Rectangular slab	64	Steel table	102
Rectangular slab on elastic foundation.	60	Step 1. Generate model geometry	51
Reinforced concrete (RC) structures ..	131	Step 2. Define boundary conditions (restraints) and hinges	52
Reinforced concrete shell	140	Step 3. Define cross-sections for bars ..	53
Reinforced concrete slab	144	Step 4. Define loads on design model ..	54
Reinforced concrete wall-beam	142	Strength of RC diaphragm in earthquake loads	297
Resonance check for wind turbulence	272	Strength of reinforced concrete butt joint in shear	152
S		Strengthening with composite materials	148
Sections	21	T	
Sections of composite timber	209	Table of reinforcement	134
Sections of glued timber	208	Timber structures	205
Sections of RC elements	137	Toster (Chapter)	331
Sections of solid timber	206	Truss	41
Separate sections as single unit	26	V	
Settlement of equivalent footing	230	Visualization of soil model	386
Sheet piling	287	W	
Sheet piling (module)	289	Wall-beam	68
Shell on circular plan	77	Wind loads	258
Shell on rectangular plan	72		
Sign convention	367		